



Instruction Manual

Online Instruction Manual



[www.simplepureclean.com](http://www.simplepureclean.com)

# Assembly

Remove all parts from the packaging and assemble in this order



Align handle (1)  
with first aluminum  
pole (2). Then  
insert parts (1) and  
(2) into pole (3)



Insert so that  
labels match



Insert complete  
handle assembly  
into the incredi-  
mop base  
assembly



---

Battery Specifications :

Lithium Battery: 2500mAh  
Working Time: Approx. 45 mins

---

Charger Specifications:

Input: 100-240v 50/60Hz 0.35A  
Output: 13.2V \_\_\_\_\_ .5A  
Charging Time: Approx. 4 Hours

---

Spray Tank Capacity:

6.8 oz.

### Mopping

Assemble and charge incredi-mop. Fill mop reservoir with water or a mild solution such as “Actually Cleans Bare Floors” by SPC. Use mop as you would normally use a mop to spray bare floor surfaces and clean

### Polishing

1) Mist a fine spray of Simple. Pure. Clean’s Freaking Fantastic Floor Polish onto tile, laminate, linoleum, marble, slate, wood, or LVP

2) Run incredi-mop with thoroughly dry pads onto polish and allow the pads to buff the surface to a high-gloss shine

3) Remove pads from machine and thoroughly clean by hand with a mild detergent in a sink. Do not reuse until completely dry

**NEVER PLACE ANYTHING OTHER THAN  
WATER OR MILD FLOOR CLEANER INTO  
THE RED SPRAY PORT ON THE MACHINE**

### Spot Remover

The incredi-mop can also be used as a spot cleaner on area rugs. We recommend SPA's "Carpet and Rug Shampoo with Brightener" in order to use the mop as a spot cleaner.

- 1) Pre-treat the spot with a stain remover such as Piss-Off or Bye Felicia! by SPA
- 2) Use sprayer to thoroughly saturate spot with a DRY FOAM cleaner such as our Carpet and Rug Shampoo with Brightener
- 3) Immediately allow incredi-mop to agitate the spot on the rug and create a dry foam
- 4) Vacuum foam after drying and thoroughly rinse and dry pads before reusing

**NEVER PLACE ANYTHING OTHER THAN  
WATER OR MILD FLOOR CLEANER INTO  
THE RED SPRAY PORT ON THE MACHINE**


## Package Contents

Mop Body	Measuring Cup
Cleaning Bucket	Charger
2 Aluminum Poles	Disassembly Needle
Handle	
Instruction Book	

## Operating Instructions

1. Add water to mop: Open the red water tank cover on top of the mop and add water or a mild cleaner using the measuring cup.

Red Water Tank Port

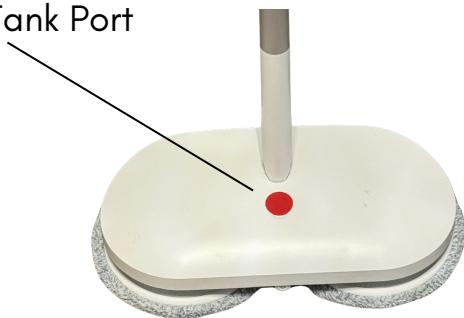

# Operating Instructions

## 2. TURN MOP ON

Pull the handle backwards and wait for the blue indicator light to light up. The mop will enter "standby" mode.


Blue Indicator Light display on back of mop




## 3. START THE MOP

Press the start button while mop is in the standby state, the mop heads will counter-rotate. Press the start button again to stop the mop. While mop is turned on, press and hold the SPRAY button. Release the SPRAY button to stop spraying water.

Start Button

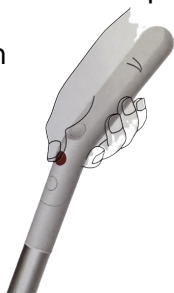

Spray Button

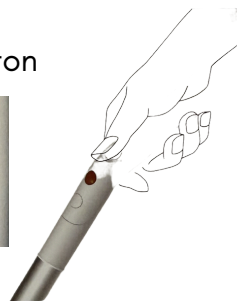

# Operating Instructions

## 4. Automatic Cleaning/Drying

### Option A: Dry Mop Cleaning


Place mop in upright state on the top of the cleaning bucket. Press the self-clean button and the mop will automatically cycle through the cleaning mode. This option allows the mop to dry quickly.

### Option B: Wet Mop

Add water to the level indicated in the cleaning bucket. Place the mop on the bucket in an upright state. Press the self-clean button, the mop will automatically clean and dry the pads.



Self-Clean Button

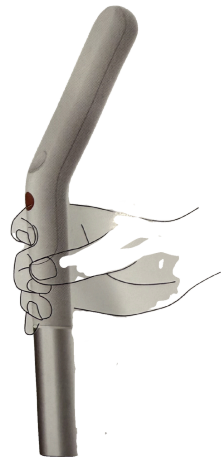


## Charging Instructions

The blue indicator light will flash to indicate that the power is running low.

Plug the power cord into the charging port and plug the power cord into an electrical outlet. A flashing RED light indicates that the incredi-mop is now charging. After charging, the indicator light will turn solid blue



Charging Port

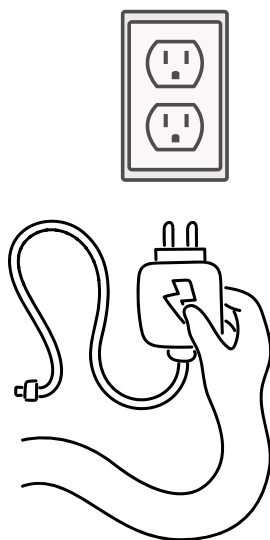



# Maintenance

Under normal circumstances, the pads should never need to be washed. If oils or excessive mud are on pads, they may be washed gently in warm water and soap. Allow to dry thoroughly before placing them back onto the incredi-mop


## General maintenance of cleaning bucket



Remove self-cleaning roller assembly from bucket



Use a small screwdriver to remove the roller assemblies

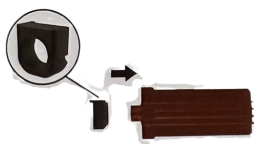

After cleaning rollers, replace rollers in the exact way that they were removed



The white roller brushes go on the WASH side and the red roller brushes go on the DRY side



Place self-cleaning roller assembly back into the bucket

## Troubleshooting

### Problem

### Solution

No Power

Make sure mop is charged fully. If it cannot be powered on, pull the handle back and push the RED start button.

No Charging

Make sure power cable is plugged into the back of the mop correctly. Make sure charger is plugged into wall outlet.

Mopping feels  
"heavy"

Check to make sure mop is fully charged.

Water stops  
spraying

Check to make sure that there is water and/or cleaning solution in tank.

Water stains on  
floor

Ensure that you are not spraying out too much solution onto floor

No water spray  
when first  
mopping

Press spray button until air from pump is expelled

# Precautions

Daily Use: Use the battery to maintain a certain amount of power. When not in use for a longer period of time, store mop in a cool, dry place while fully charged. Charge mop at least once every 3 months, this will extend the battery life

---

Regularly check the charger and power cord for damage to prevent fire or electric shock. If damaged, replace immediately

---

Before cleaning or maintaining mop, be sure to unplug from charger

---

If there is an abnormal noise, smell or smoke, shut down mop immediately. Continued use may cause a short circuit resulting in fire or product damage

---

After mopping, drain remaining water in tank as much as possible. This may be done so by holding mop over a sink and pressing sprayer until liquid no longer comes out of spray outlet. Long-term water residue stored in tank can cause the water sprayer to block

---

Do NOT use with water exceeding 122 degrees Fahrenheit

---

Do not place mop close to a magnet, it will malfunction

---

Do not drop the product, it will damage mop

---

When using the cleaning bucket with the mop, water CANNOT pass the bottom of the mop head. If this happens, damage can occur to the machine

---

Use the following precautions when handling products with lithium batteries:

- a) DO NOT store or use this product in freezing temperatures
- b) If you are not using product for an extended period of time, charge fully before storing
- c) When discarding this product and packaging, send it to a relevant recycling center. The battery must be removed separately for recycling.
- d) Children are prohibited from playing with this product or its accessories  
To avoid injury, children must use this product under adult supervision

## Warranty

Simple. Pure. Clean Inc. backs the incredi-mop with a full 6 month warranty. This warranty covers both magnetic motors, the spray pump, and the electrical handle. The incredi-mop is guaranteed to be delivered to you in brand new, working condition

### Warranty Exclusions:

Damage by user from impact, dropping product, or mishandling

Damage to battery from using improper charger

Damage to pump from using a product other than

Simple. Pure. Clean "Actually Cleans Bare Floors"

Damage to floor pads from excessive washing or washing inside of a washing machine

Use of any detergent or polishing formula inside of tank on mop

In order to receive warranty service:

You may bring your incredi-mop to the dealer from which you purchased for examination, or you may mail your incredi-mop to 735 Saturn Parkway, Suite 100 Columbia, SC 29212

\*\*incredi-mop must be returned in the original packaging with all parts included. Mops sent without all parts are void of warranty\*\*