




<u>Measurement Guide</u>

(Units can be installed 2 ways)

- "Surface" mount (on the face of the building or wall)
 Surface mount Above Picture (left)
- 2) "Trapped or Buck" mount (within the opening)
 Trapped mount Above Picture (right)

Exact measurements are extremely important. Custom-made units cannot be adjusted.

Please double & triple check all measurements before ordering.

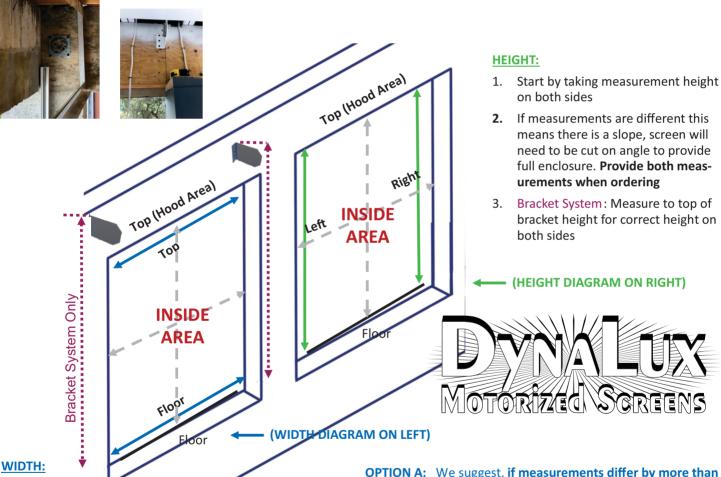

- 1. Start by taking first measurement from the floor inside the structure you will be enclosing .
- 2. Take second measurement from top, inside of structure you will be enclosing.
- If both width measurements are within 1/2" use top measurement (closest to hood/top) as final measurement width (ensure hood size is correct).
- 4. If width measurements difference is larger than 1/2", this means structure is not square, and unit will not work as is. SEE OPTION A or OPTION B.

OPTION A: We suggest, **if measurements differ by more than 1"** and if it is possible, **use surface mount**. This will allow you to install on the outside face of the uneven structure.

For surface mount: Use the largest width measurement as final measurement

OPTION B: If unable to use surface mount:, <u>use trap mount with</u> the following instructions below:

- For trap mount: Use the smallest width measurement as the final measurement. Additional further configuring step below needed.
- You will use receiving channel when installing allowing adjustability to square the tracks with the unit on both sides. This will ensure proper unit function.