



UNIVERSAL TENTS UP



www.pfbereg.com

CONTENT

Introduction.....	2
Specifications and equipment.....	3
Precautions and recommendations / Setup.....	4
Setup of the vestibule connector.....	5
Setup of metal inserts for the chimney exit.....	6
Tent features / Care and storage.....	7
Warranty.....	9
Accessories.....	10

CONGRATULATIONS ON THE PURCHASE OF THE BEREG UNIVERSAL TENT


The Production Factory Bereg team, which consists of hundreds of people involved in the creation of our equipment, thank you for the opportunity to do what they love the most.

Our mission is to create universal, reliable equipment that can withstand any weather conditions. These products that open up a new way of traveling with maximum comfort.

You are the main experts of the company. Your honesty and passion for adventure make our work special, and your feedback inspires us to create and improve our products! We are certain that with your support we will continue to innovate and provide top quality equipment. We promise not to stop there and implement new ideas that can expand the horizons of your travels.

Please write to us more often: you have a power in your hands that you don't even know you have! Your emails help the company grow and develop.

Thank you for inspiring us!

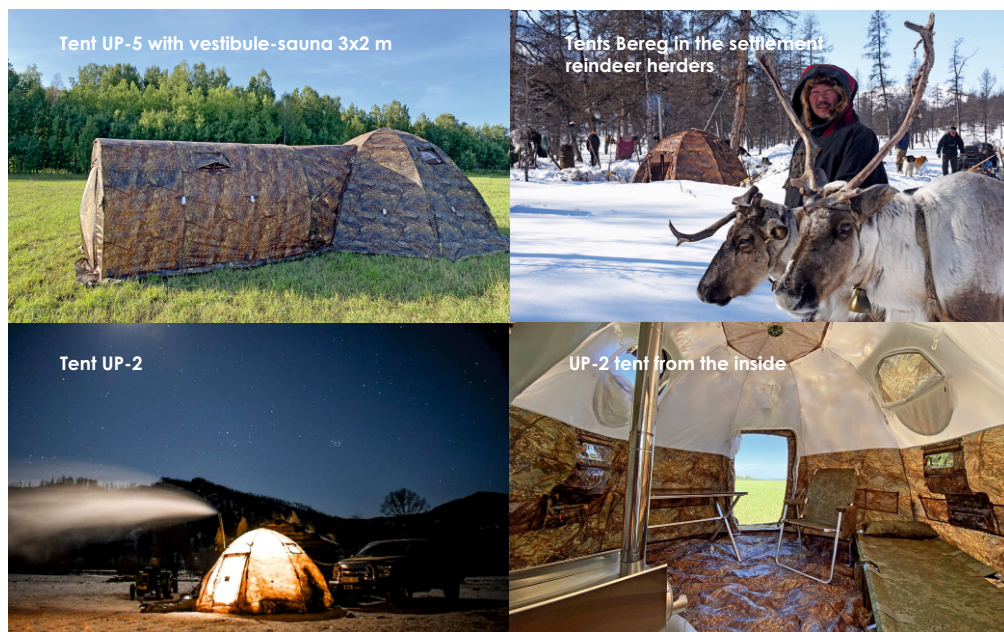

Since 2009 production Factory Bereg has accumulated a wealth of experience in the development, creation and testing of tents. The best ideas and materials are implemented in the UP series:



Use in all climatic zones under all temperature conditions.



Quick installation. The fly and the frame of the tent are a single structure. Umbrella type assembly mechanism.



The range of tents can accommodate from 3 to 14 people.



The possibility of creating a mobile camp.



Unique patented frame door.



Built in Stove Jack.



The frame is made of high-strength aviation alloy B95T1.



Water resistance. Outer fly - PU 4000 mm, inner fly - PU 2000.

	UP-2 mini	UP-2	UP-2 Deluxe	UP-5	UP-5 Deluxe	UP-7	Sputnik-3	Winter-Summer
Diameter x Height, m	2,7 x 1,8	3,4 x 1,9		4,4 x 2,2		5 x 2,3	2 x 1,55	2,5 x 1,55
Weight, kg	16	24	32	31,5	40	39	11	13,5
Fly, pcs	2	2	2	2	2	2	2	2
Entrances, pcs	1	2	5	2	5	2	1	1
Vestibule connector			+		+			
Windows, pcs	2							
Floor	+	+	+	+	+	+	+	+
Partition					+			
Capacity (max.), persons	4	7	7	11	11	14	3	3
Packed size, m	1,35x0,25 x0,25	1,3x0,3x0,3		1,3x0,3 x0,3	1,3x0,4 x0,4	1,45x0,4 x0,4	1,05x0,25 x0,25	1,35x0,25 x0,25
Frame	Aviation aluminum alloy B95T1							
Rod diameter, mm	8	10	10	10	10	10	8	8
Waterproof (outer /inner fly)	Oxford 300 PU 4000 / 210 PU 2000							

EQUIPMENT

Tent.....	1pc	Fireproof removable panel.....	1pc
Frame door(except Winter-Summer and Sputnik-3).....	1pc	Transparent panel(for the «Deluxe»).....	4 pcs
Pegs.....	1set	Spare parts kit*.....	1 pc
Rope.....	1set	Bag.....	1 pc
Transparent window with velcro.....	2 pcs	Instruction and warranty card.....	1 pc

***Repair kit includes:**

fixing bolt, bolts and nuts (instead of rivets in frame bends), fabric for tent repair.



Universal use: winter living tent, fishing tent, hunting tent, summer tent.



Entrances and windows are equipped with a mosquito net.



Efficient ventilation system.



Convenient transport.



Seams of the outer fly and floor processed with a sealing tape.



Wind resistance. Reinforced wind braces are connected to the frame.



A wide range of additional accessories.



The warranty on the frame and fly - 2 years.

!! PRECAUTIONS AND RECOMMENDATIONS

4

- When installing and reassembling the tent, be careful with the frame elements to avoid injury.
- Secure the tent with guy lines to the pull loops on the tent.
- In windy weather, do not place the tent near trees.
- Do not use the tent when the wind is above 17 m/s.
- Ensure continuous ventilation in the tent.
- Provide an unobstructed exit from the tent.
- Do not use gas, gas equipment and liquid fuel devices in the tent!
- Do not use open sources of fire in the tent.
- When setting up the tent, keep it a safe distance from open sources i.e. campfires.
- Do not allow the use of persons under the influence of any substance.
- Do not allow children to use without adult supervision.

The users are personally responsible for their safety.

TENT SETUP

Visual inspection.

Make sure the tent is not damaged.

1. Preparing for setup. Spread the tent dome up and spread the rods out to the sides.

! There is a nut in the central part of the dome.

2. Open the entrance zipper and enter the tent.

3. Lift the tent as high as possible using the handle.

4. Pull the guide bar vertically downwards until it clicks into place (fixing the mechanism).

5. Secure the tent with the rope to the lanyards and stakes. Sprinkle the skirt with soil or snow.

! After setting up the tent, replace the guide bar with the fixing bolt.


FRAME DOOR SETUP

1. Place the door face down on a flat surface. Press down on the central mechanism until the door assumes the working position.

2. Fasten the door to the tent using a velcro located to the right of the entrance.

3. To seal the tent, tuck the door under the windproof edging.

At the end of use, close the zippers of windows, doors and fold the tent in reverse order.

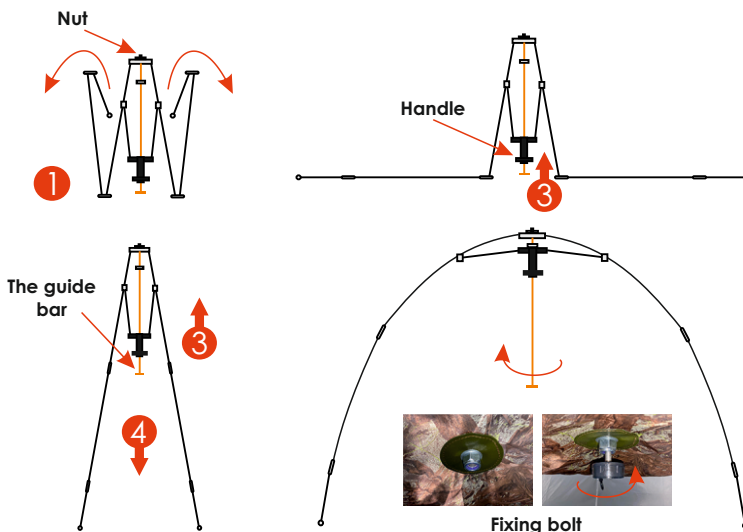

Zippered entrance with mosquito net



Detachable zipper for installing the arc



Spacer



Reflective guy wire




Zipper for attaching to the UP tent

Sling-tie

Skirt with loops for stakes



Velcro for connection with the vestibule-sauna

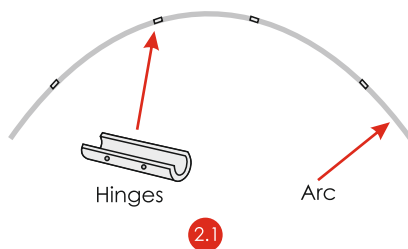

1. Fasten the vestibule to the UP tent with a zipper.
2. Install the arc of the frame in the pockets of the vestibule zipper.
- 2.1 The hinges of the arc should be directed with the open side outwards.
3. Fasten the zipper with an arc.
4. Fasten the sling to fix the frame.
5. Install the spacers in the special pockets on the sidewalls.
6. Fix the vestibule with the guy wire and skirt.
7. Use Velcros around the perimeter of the frame to connect to the sauna tent (optional).

***Additional option, purchased separately.**

SETUP OF METAL INSERTS FOR THE CHIMNEY EXIT

6

The chimney exit is intended for the chimney pipes of the wood stove. The Bereg tents are equipped with 1 chimney section.

The chimney exit is completed with one or two metal inserts - one for the inner tent and one for the outer tent.

- The inserts are removable, so they do not damage the tent material during long-term storage, transportation and frequent assembly and disassembly.
- The insert also helps maintain an airtight connection with the pipe, which reduces the precipitation into the tent.

1.

When you install the tent, you will find that there is no metal ring in the chimney exit - metal inserts are **included for the use with the stove.**

2.

To fully use the wood stove, **you need to install a metal insert in the opening on both the inner and outer tent.** This is necessary for the safe use of a wood stove.

3.

Installation on the inner tent. There is a hole in the upper part of the chimney pocket. Slide the insert inside the pocket so that the hole in the insert matches the hole in the fabric as much as possible. Repeat the procedure on the outer tent.

4.

After completion of use, remove the metal inserts from the outer and inner tents, and store them in the tent bag.





OUTER FEATURES

1. Entrance is a rectangular shape and comes with a hinged frame door attached with velcro.

2. The vestibule-connector is attached with a zipper over the main entrance to the tent, it is a link for connecting to an optional vestibule.

3. The vestibule is equipped with a frame, mosquito nets and braces (option).

4. Built in Stove Jack to use wood stove.

5. Multifunctional viewing windows with a mosquito net and a clear cold resistant pvc window which attached with velcro.

6. Ventilation window for fresh air.

7. Tie-down points connected to the tent frame. Equipped with reflective elements and pockets to store the guy lines.

8. Amplify windscreen braces. Connected to the frame. Equipped with reflective elements.

9. The tents series «Deluxe» are equipped with 4 additional arched entrances oversized.

INNER FEATURES

10. Shelf-mesh. Useful device for installing a flashlight and drying things (except for the UP-7 tent).

11. Organizers with velcro (option).

12. Zippered floor. It is installed at a height of 10 cm. Interchangeable with PVC floor (option).

13. Spring hooks for attaching equipment.

14. Pockets on the walls.



CARE AND STORAGE

Tent



It is recommended to clean the fly and frame from sand and dirt after use. Do not use abrasive or hard brushes.



Dry after use.



Store in a dry place.

Flies



The flies are attached to the frame with velcro and ties. Undo the tent if necessary.



Hand wash only. Do not rub, do not squeeze.



Cold water wash, max. temperature 30°.

Do not iron.

REPAIR



Tent flies: fabric and glue.



The restore seam seal: PU-based adhesive.



WARRANTY CARD

☐

UP-2 mini

☐

UP-2

☐

UP-5

☐

Winter-Summer

Options

☐UP-2
«Deluxe»☐UP-5
«Deluxe»☐

UP-7

☐

Sputnik-3

☐

PVC Floor

Seamstress

_____/____

Sewing date

“ ____ ” ____ 20

Date of manufacture

“ ____ ” ____ 20

S.P.

Specialist of the TCD

_____/____

Master of the TCD

_____/____

Seller

_____/____

Date of sale

“ ____ ” ____ 20

S.P.

The manufacturer offers a 2-year warranty for flies and for frame free repair in case of defects due to manufacturing issues.

The warranty does not cover damage caused by improper and careless storage or operation or non-compliance with care instructions and precautions.

The manufacturer is not responsible for damage to the product that occurred during its transportation to the sale location, or for any damage from normal wear and tear or natural disasters (sudden exposure to natural phenomena and mechanical effects of unforeseen physical forces).

The warranty provided is in the form of a warranty card and a delivery note with a seal.

The manufacturer of the goods reserves the right to make changes in the characteristics and equipment of the goods without prior notice to the buyer. **The data on the site is for informational purposes only and are not a public offer.**

Insulated floor is designed to provide additional insulation from the cold and create comfort.

PVC floor provide 100% waterproof. Interchangeable with standard floor.

The arctic cape is designed for extra warmth. The recommended operating temperature is below -20 °C. The cape consists of 2 layers: Oxford 300 PU 4000 and insulation - geosynthetic fiber. The cover completely duplicates the outer fly of the tent.

Vestibule-saunas are presented in sizes 2x2 m, 3x2 m, 4x2 m. Compatible with all tents of the UP series. Materials used: fly - Oxford 300 PU 4000, frame - 8 mm bar made of aviation aluminum alloy B95T1. Vestibule is used as an additional living or storage space, a separate living module, a camping bath, a fishing tent.



Insulated floor for UP-2 mini



PVC floor for UP-5



Arctic cape for UP-2

MORE PRODUCTS



Cube tents



Wood-burning stoves



Sauna tents



Marquee tents



Airboats, boats PVC



Camping furniture



www.pfbereg.com
sale@pfbereg.com
service@pfbereg.com