ARMORDILLO GUARDS FUEL CAP GUARD INSTALL GUIDE













ARMORDILLO GUARDS FUEL CAP GUARD INSTALL GUIDE

- Guard should be installed with slide latches loosely attached
- See latch orientation in photos for reference of upper and lower placement during installation
- Hold guard in position as shown and slide latches into upper and lower slots as far as latch will engage
 - It will be necessary to move guard up and down as required to allow latches to engage properly
- Sufficiently tighten all bolts until lock washer is fully engaged



