


PARTS SHEET
FOR
BIN UNLOADING AUGER BUAD

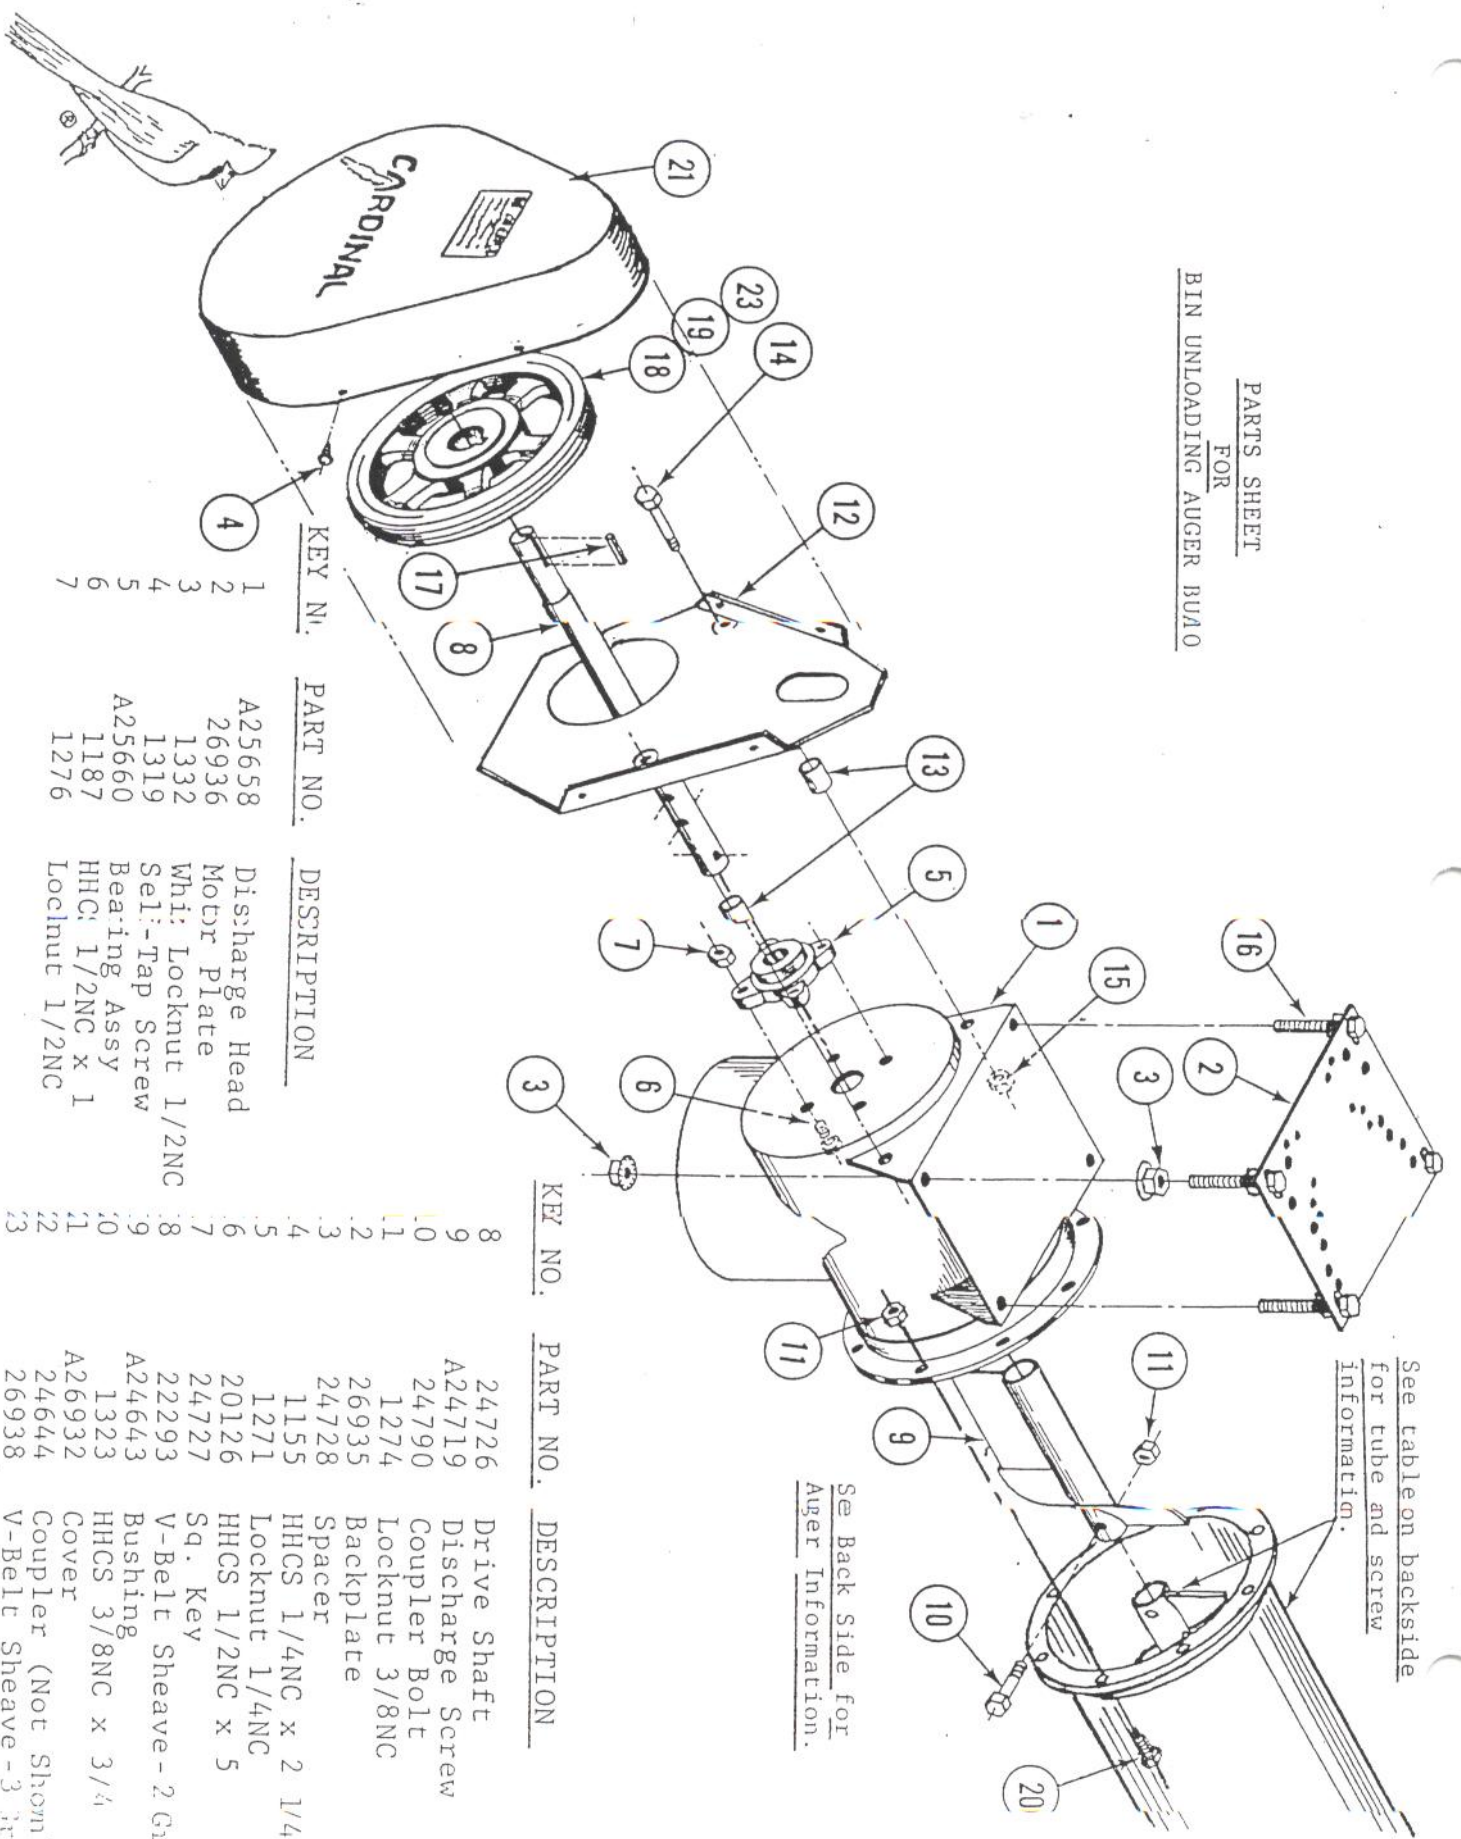

KEY NO.	PART NO.	DESCRIPTION
1	A25658	Discharge Head
2	26936	Motor Plate
3	1332	Whit: Locknut 1/2NC
4	1319	Self-Tap Screw
5	A25660	Bearing Assy
6	1187	HHCS 1/2NC x 1
7	1276	Locknut 1/2NC

KEY NO.	PART NO.	DESCRIPTION
8	24726	Drive Shaft
9	A24719	Discharge Screw
10	24790	Coupler Bolt
11	1274	Locknut 3/8NC
2	26935	Backplate
3	24728	Spacer
4	1155	HHCS 1/4NC x 2 1/4
5	1271	Locknut 1/4NC
6	20126	HHCS 1/2NC x 5
7	24727	Sq. Key
8	22293	V-Belt Sheave - 2 Gr
9	A24643	Bushing
10	1323	HHCS 3/8NC x 3/4
11	A26932	Cover
12	24644	Coupler (Not Shown)
13	26938	V-Belt Sheave - 3 Gr