 


1. Install, connect and run the software

Copy software 'SDA-15B PC control software' to the computer which you want to control the transmitter.

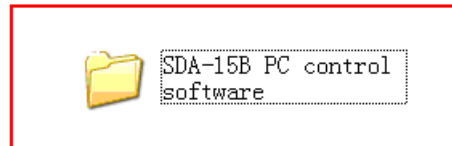

- (1) Use USB (male to male) cable to connect transmitter PC Control port with computer USB port. The computer will identify the transmitter and link with it.

Note. If the transmitter can not be identified, please install 'PC Control USB Driver'.

 
- (2) Open the executable file (SDA-15B PC Control) in the file folder, function keys on front panel are locked. It indicates the transmitter is successfully connected and it can be controlled by software.




Note. The transmitter can be disconnected/re-connected by clicking ON/OFF button with the computer while operating.

2. Software Main Interface

- (1) Main Interface

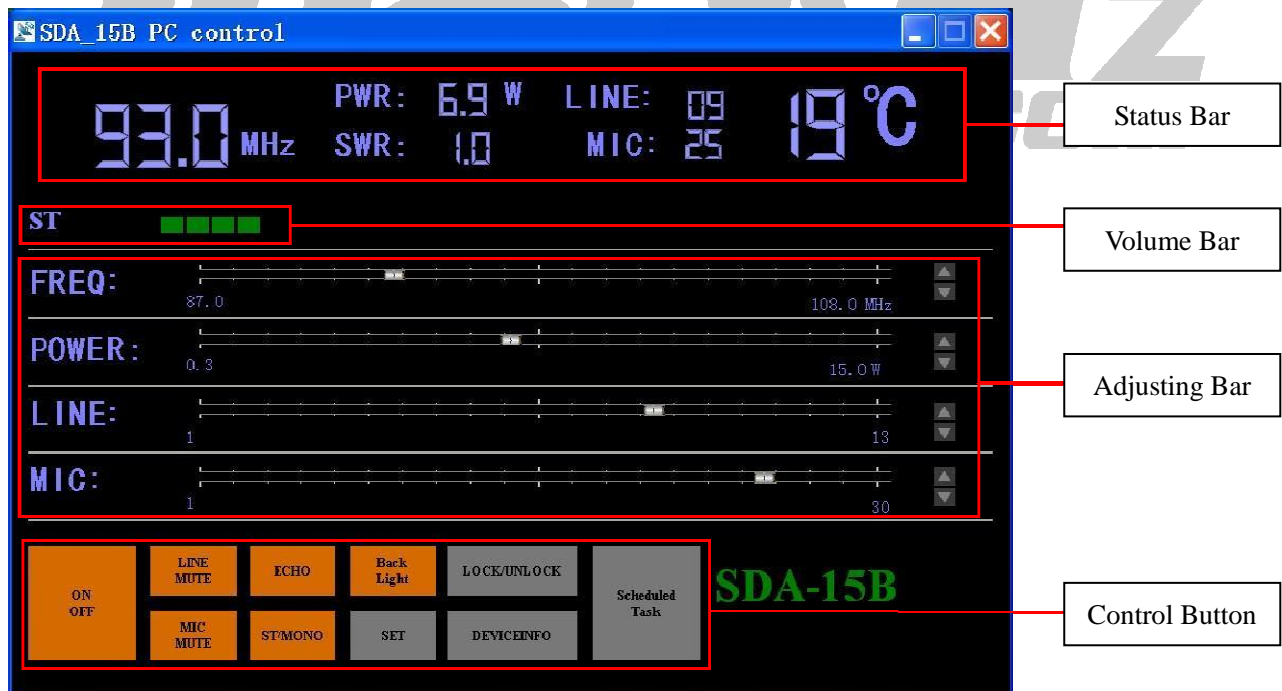


- (2) Status Bar

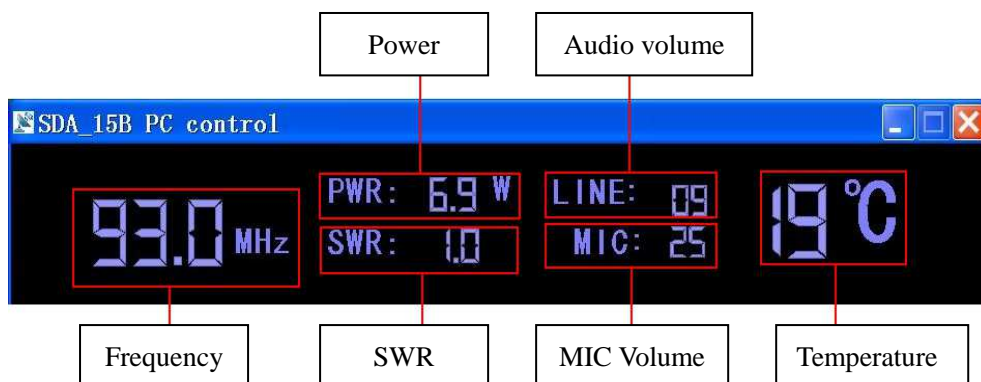


3. Software Operating instructions

 (1) Operating Status Bar

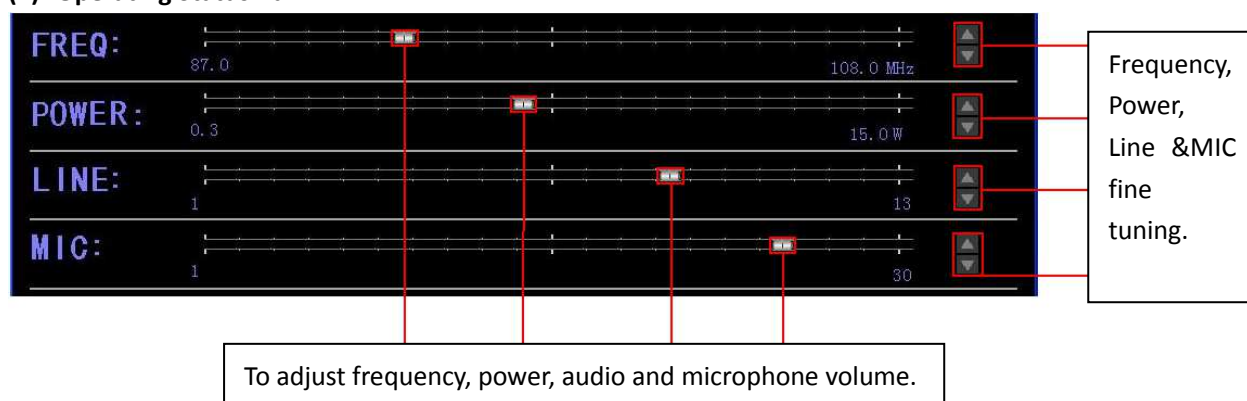

(2) Control buttons

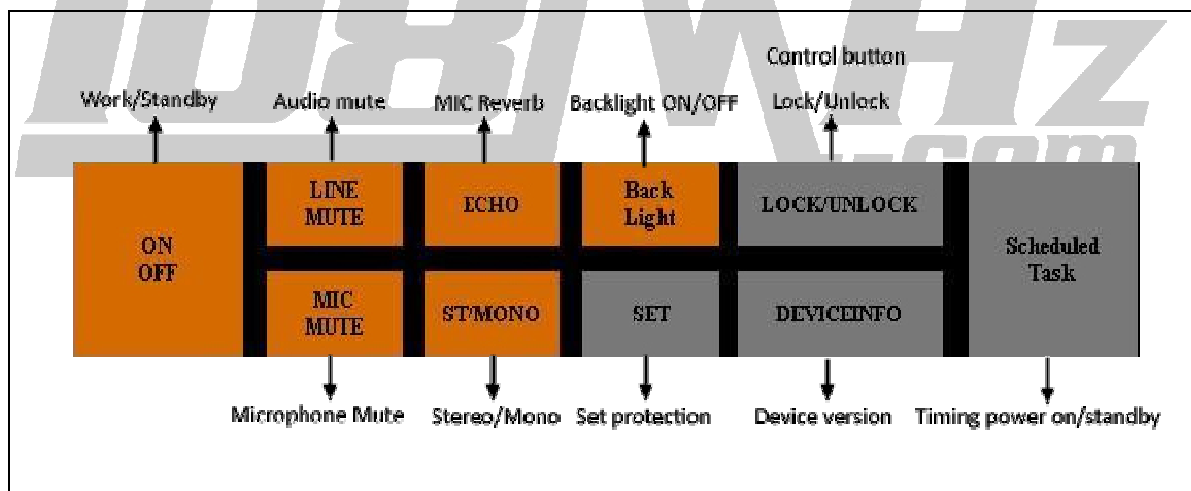

a) ON/OFF

At working status, press [ON/OFF], the transmitter stops working and enters into standby. Press ON/OFF again, the transmitter restore to previous state before standby.

b) LINE MUTE

Press [LINE MUTE] to enable/disable line input.

c) MIC MUTE

SDA-15B PC Control FM Transmitter Software Guides

Press [MIC MUTE] to enable/disable microphone.

d) ECHO

Press [ECHO] to enable/disable microphone reverberation.

e) ST/MONO

Press [ST/MONO], the transmitter will work in stereo or mono.

f) Back Light

 
Press [Back Light], the back light will be turned ON/OFF.

g) LOCK/UNLOCK

Press [LOCK/UNLOCK], all control buttons are locked/unlocked (except LOCK/UNLOCK button).


h) SET

Press [SET] to enter into protection configuration menu, SWR and Temperature protection can be set,

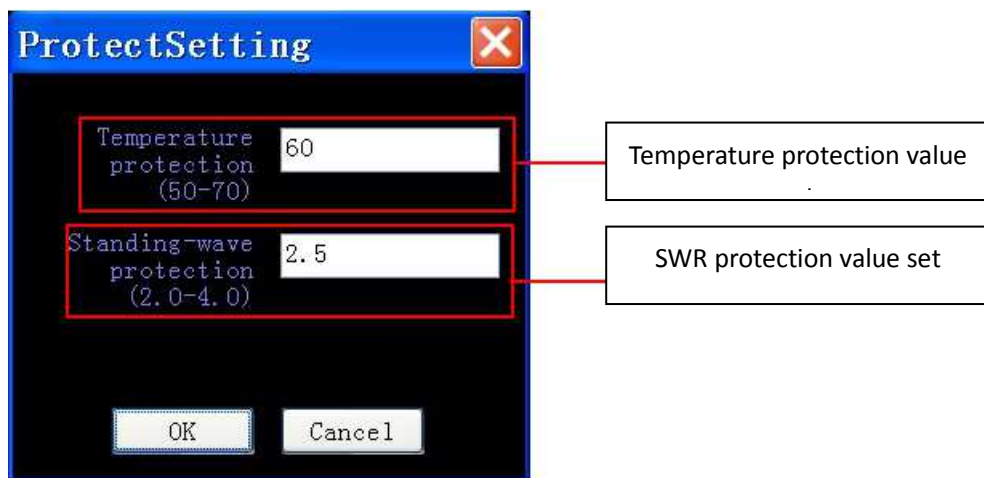

i) Scheduled Task

 Press [Scheduled Task] to enter into schedule task menu, startup and shutdown time can be set.

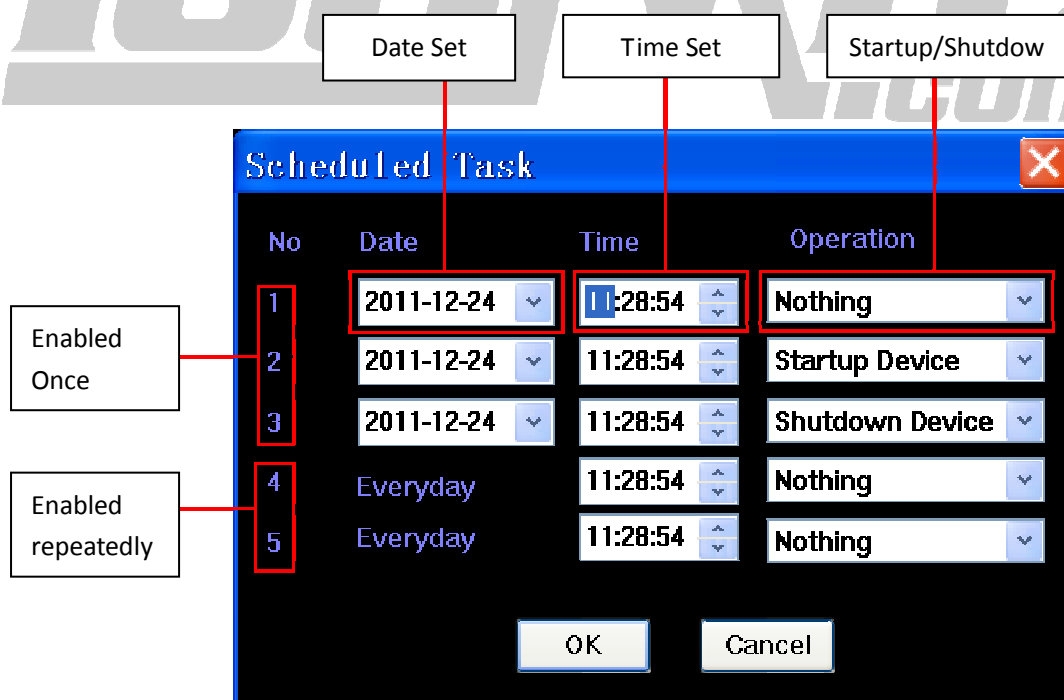

j) DEVICEINFO

Press [DEVICEINFO] to obtain serial number and other information about this product.

4. Software Trouble shooting

No.	Fault	Fault source
1	Can't communicate with computer	1. Computer USB port is not applicable. 2. USB driver is not installed.
2	Sometimes the link is cut off with computer.	1. Indoor antenna can not be used when controlled by software. 2. USB cable is contact defective.

5. About Us.

We are a professional company focus on RF technology research and development, specialized in professional fm transmitter! Our fm transmitters are ideal equipments to build your own broadcast station, especially used in campus, factories, farms etc. Please be assured, we provide you after-all services and technical supports! Any questions can be sent to: littleshirely@gmail.com.

(The end.)

