MODEL 112 Control Panel

Single phase, simplex motor contactor control.

The Model 112 control panel provides a reliable means of controlling one 120, 208, or 240 VAC single phase pump in pump chambers, sump pump basins, irrigation systems and lift stations. Two control switches activate a magnetic motor contactor to turn the pump on and off. If an alarm condition occurs, an additional alarm switch activates the audio/visual alarm system.

PANEL COMPONENTS

1. Enclosure measures 8 x 8 x 4 inches (20.32 X 20.32 X 10.16 cm). Choice of NEMA 1 (steel for indoor use), or NEMA 4X (ultraviolet stabilized thermoplastic with removable mounting feet for outdoor or indoor use).

* Options selected may increase enclosure size and change component layout.

- 2. Magnetic Motor Contactor controls pump by switching electrical lines.
- 3. HOA Switch for manual pump control (mounted on circuit board).
- 4. Green Pump Run Indicator Light (mounted on circuit board).
- 5. Float Switch Terminal Block (mounted on circuit board).
- 6. Alarm and Control Fuses (mounted on circuit board).
- 7. Alarm and Control Power Indicators (mounted on circuit board).
- 8. Ground Lug
- 9. Circuit Breaker (optional) provides pump disconnect and branch circuit protection.

STANDARD ALARM PACKAGE

- Red Alarm Beacon provides 360° visual check of alarm condition. Note: NEMA 1 style utilizes a door mounted indicator in lieu of a beacon.
- **11.** Alarm Horn provides audio warning of alarm condition (83 to 85 decibel rating).

Note: NEMA 1 style utilizes an internally mounted buzzer in lieu of horn.

- **12. Exterior Alarm Test/Normal/Silence Switch** allows horn and light to be tested and horn to be silenced in an alarm condition. Alarm automatically resets once alarm condition has been cleared.
- 13. Horn Silence Relay (mounted on circuit board).

NOTE: other options available.


FEATURES

- Entire control system (panel and switches) is UL Listed to meet and/or exceed industry safety standards
- Dual safety certification for the United States and Canada
- Standard package includes three 20' control switches or EZconnex[®] float system
- Complete with step-by-step installation instructions
- Five-year limited warranty

OPTIONAL FEATURE

34" (86.36cm) Panel Mounting Post (Factory Installed). Includes Simplex Installation Kit (Enclosure upsized to 10" x 8" x 6" (25.4 x 20.32 x 15.24 cm). Max. Enclosure size14" x 12" x 6" (35.56 x 30.48 x 15.24 cm)

SEE BACKSIDE FOR COMPLETE LISTING OF AVAILABLE OPTIONS. SEE PRICE BOOK FOR LIST PRICE.

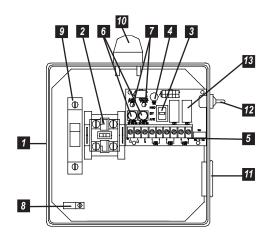

Model Shown 1121W914X





PO Box 1708, Detroit Lakes, MN 56502 1-888-DIAL-SJE • 1-218-847-1317 1-218-847-4617 Fax email: customer.service@sjerhombus.com www.sjerhombus.com B.37

112		
MODEL 112		
0 = select options or no alarm package		
1 = alarm package (includes test/normal/silence switch,	fuse, red lig	ht, horn & float)
ENCLOSURE RATING		
I = Indoor, NEMA 1 (metal)		
W = Weatherproof, NEMA 4X (engineered thermoplastic)	
1 = magnetic motor contactor 120/208/240V 9 = magnetic motor contactor 120V only		
PUMP FULL LOAD AMPS 0 = 0-7 FLA		
1 = 7.15 FLA		
2 = 15-20 FLA		
3 = 20-30 FLA (Enclosure Upsize required)		
PUMP DISCONNECTS		
0 = no pump disconnect	ution O obou	
4 = circuit breaker 120V (select STARTING DEVICE o 120/208/240V (select STARTING D		
FLOAT SWITCH APPLICATION — H or L = pump down or pump up (select 17 option)		
$E = EZconnex^{\circ}$ float switch system (select 33 or 34 option)	n)	
WITH alarm package		
WITHOUT alarm package X = no floats		
WITH alarm package		
WITHOUT alarm package		
OPTIONS Listed below		
ENCLOSURE UPSIZE - If you selected 3 or more of the *	options, or o	ne ★★ option
1A Red beacon only / no audio (must select 1E if floats included)	COD	E DESCRIPTION
1C Horn only / no visual	<u> </u> ★★15/	Control / alarm circuit breaker
(must select 1E if floats included)		A 10' cord in lieu of 20' (per float)
1E Alarm float	1 6E	3 15' cord in lieu of 20' (per float)
1E Alarm float 3A Alarm flasher	16E	u ,
1E Alarm float		 3 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) ASJE SignalMaster[®] / mounting strap ● (per float)
1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★★4A Redundant off (select option 4D if floats included)	16E 16C 16C 16C 17/ 177	 3 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) A SJE SignalMaster[®] / mounting strap ● (per float) B SJE SignalMaster[®] / externally weighted ● (per float)
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★★4A Redundant off (select option 4D if floats included) ★★4B Red redundant off indicator & alarm 	16E 16C 16C 16C 17/ 17E 17C	 3 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) A SJE SignalMaster® / mounting strap ● (per float) B SJE SignalMaster® / externally weighted ● (per float) C Sensor Float® / internally weighted ▲ (per float)
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★★4A Redundant off (select option 4D if floats included) ★★4B Red redundant off indicator & alarm (must select 4A also) 	16E 16C 16C 16E 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/	 3 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) A SJE SignalMaster[®] / mounting strap ● (per float) B SJE SignalMaster[®] / externally weighted ● (per float)
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★★4A Redundant off (select option 4D if floats included) ★★4B Red redundant off indicator & alarm 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177	 3 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / externally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float)
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★★4A Redundant off (select option 4D if floats included) ★★4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177	 3 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / externally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float)
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ ★4A Redundant off (select option 4D if floats included) ★ ★4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177	 3 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / externally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float)
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★★4A Redundant off (select option 4D if floats included) ★★4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 197	 3 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter 	16E 16C 16C 16C 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 19' 19U	 I5' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster[®] / mounting strap ● (per float) SJE SignalMaster[®] / externally weighted ● (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] / externally weighted ▲ (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] Mini / pipe clamp ▲ (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] Mini / pipe clamp ▲ (per float) Sensor Float[®] / internally weighted ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter 	16E 16C 16C 16C 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 19' 19U 19)	 I5' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster[®] / mounting strap ● (per float) SJE SignalMaster[®] / externally weighted ● (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] / externally weighted ▲ (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] / pipe clamp ▲ (per float) Sensor Float[®] / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ ★ 9_A Pump overload 	16E 16C 16C 16C 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 19' 19U 192 21/	 I5' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster[®] / mounting strap ● (per float) SJE SignalMaster[®] / externally weighted ● (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] / externally weighted ▲ (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] Mini / pipe clamp ▲ (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] Mini / pipe clamp ▲ (per float) Sensor Float[®] / internally weighted ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter 	16E 16C 16C 16C 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 19' 19 19 21/ 210 210	 I5' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster[®] / mounting strap ● (per float) SJE SignalMaster[®] / externally weighted ● (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] / externally weighted ▲ (per float) Sensor Float[®] / internally weighted ▲ (per float) Sensor Float[®] / ippe clamp ▲ (per float) Sensor Float[®] / ippe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator SJE PumpMaster[®] in lieu of on/off switches ● Super Single[®] in lieu of on/off switches ▲
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ ★ 9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0 -25 FLA 	16E 16C 16C 16C 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 19' 190 21/ 210 330	 I5' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Sonor mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ EZconnex® 3-Port, 25', w/10' floats (3) /pipe clamp *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8C Event (cycle) counter ★ ★9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0-25 FLA ★ ★ 25-30 FLA 	16E 16C 16C 16C 16C 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 19' 190 21/ 210 33C 33E	 3 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Dor mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ EZconnex® 3-Port, 25', w/10' floats (3) /pipe clamp *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ ★9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 25-30 FLA 10E Lockable latch - NEMA 4X 	16E 16C 16C 16C 16C 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 19' 190 21/ 210 211 33E 33C	 I5' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Sonor mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ EZconnex® 3-Port, 25', w/10' floats (3) /pipe clamp *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8C Event (cycle) counter ★ ★9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0-25 FLA ★ ★ 25-30 FLA 	16E 16C 16C 16C 16C 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 17/ 19' 190 21/ 210 211 33E 33C 33C 33C	 I5' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Dor mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ EZconnex® 3-Port, 25', w/10' floats (3) /pipe clamp * EZconnex® 3-Port, 25', w/20' floats (3) /pipe clamp *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ *9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0-25 FLA 10E Lockable latch - NEMA 4X 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10K Anti-condensation heater 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 191 191 210 211 210 211 211 3316 3326 3336 3340	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Ezconnex® 3-Port, 25', w/10' floats (3) /pipe clamp * Ezconnex® 3-Port, 50', w/20' floats (3) /pipe clamp * Ezconnex® 4-Port, 25', w/10' floats (3) /pipe clamp, sealing plug *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ *9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0-25 FLA 10E Lockable latch - NEMA 4X 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10P Panel Mounting Post (Factory Installed.Includes Simplex Install. Kit) 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 191 191 210 211 210 211 211 3316 3326 3336 3340	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float) Sensor Float® Mini / externally weighted ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Double Float® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Ezconnex® 3-Port, 25', w/10' floats (3) /pipe clamp ★ Ezconnex® 4-Port, 25', w/20' floats (3) /pipe clamp ★ Ezconnex® 4-Port, 50', w/10' floats (3) /pipe clamp, sealing plug ★ Ezconnex® 4-Port, 50', w/10' floats (3) /pipe clamp,
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ *9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0-25 FLA 10E Lockable latch - NEMA 4X 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10P Panel Mounting Post (Factory Installed.Includes Simplex Install. Kit) (Encl. upsized to 10x8x6.Max 14x12x6) 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 197 191 191 211 211 211 212 3310 3320 3340 341	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / externally weighted ▲ (per float) Sensor Float® / externally weighted ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Ezconnex® 3-Port, 25', w/10' floats (3) /pipe clamp * Ezconnex® 3-Port, 25', w/20' floats (3) /pipe clamp * Ezconnex® 4-Port, 25', w/10' floats (3) /pipe clamp, sealing plug *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ *9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 25-30 FLA 10E Lockable latch - NEMA 4X 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10F Anti-condensation heater ★ *10P Panel Mounting Post (Factory Installed.Includes Simplex Install. Kit) (Encl. upsized to 10x8x6.Max 14x12x6) 11C NEMA 1 alarm panel (must select option 6A) 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 197 191 192 210 211 210 211 210 211 212 331 331 3340 340 340	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Ezconnex® 3-Port, 25', w/10' floats (3) /pipe clamp * EZconnex® 4-Port, 25', w/10' floats (3) /pipe clamp * EZconnex® 4-Port, 50', w/10' floats (3) /pipe clamp, sealing plug * EZconnex® 4-Port, 25', w/20' floats (3) /pipe clamp, sealing plug *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ *9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0-25 FLA 10E Lockable latch - NEMA 4X 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10P Panel Mounting Post (Factory Installed.Includes Simplex Install. Kit) (Encl. upsized to 10x8x6.Max 14x12x6) 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 197 191 192 210 211 210 211 210 211 212 331 331 3340 340 340	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / externally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Ezconnex® 3-Port, 25', w/10' floats (3) /pipe clamp * Ezconnex® 4-Port, 25', w/20' floats (3) /pipe clamp * Ezconnex® 4-Port, 50', w/10' floats (3) /pipe clamp, sealing plug * Ezconnex® 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug * Ezconnex® 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ *9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ * 0-25 FLA ★ 10E Lockable latch - NEMA 4X 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10P Panel Mounting Post (Factory Installed.Includes Simplex Install. Kit) (Encl. upsized to 10x8x6.Max 14x12x6) 11C NEMA 1 alarm panel (must select option 6A) 11D NEMA 4X alarm panel (must select option 6A) ★ *14B Main disconnect (rotary style, mounted through door, non-fused, padlockable in the OFF-position, door interlock 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 197 191 192 210 211 210 211 210 211 212 331 331 3340 340 340	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Ezconnex® 3-Port, 25', w/10' floats (3) /pipe clamp * EZconnex® 4-Port, 25', w/10' floats (3) /pipe clamp * EZconnex® 4-Port, 50', w/10' floats (3) /pipe clamp, sealing plug * EZconnex® 4-Port, 25', w/20' floats (3) /pipe clamp, sealing plug *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ *9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0-25 FLA ★ 10E Lockable latch - NEMA 1 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10K Anti-condensation heater ★ *10P Panel Mounting Post (Factory Installed.Includes Simplex Install. Kit) (Encl. upsized to 10x8x6.Max 14x12x6) 11C NEMA 1 alarm panel (must select option 6A) 11D NEMA 4X alarm panel (must select option 6A) ★ *14B Main disconnect (rotary style, mounted through door, non-fused, padlockable in the OFF-position, door interlock in the ON-position) 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 197 191 192 210 211 210 211 210 211 212 331 331 3340 340 340	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / externally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Ezconnex® 3-Port, 25', w/10' floats (3) /pipe clamp * Ezconnex® 4-Port, 25', w/20' floats (3) /pipe clamp * Ezconnex® 4-Port, 50', w/10' floats (3) /pipe clamp, sealing plug * Ezconnex® 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug * Ezconnex® 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ 4B Red redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ *9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ * 0-25 FLA ★ 10E Lockable latch - NEMA 4X 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10P Panel Mounting Post (Factory Installed.Includes Simplex Install. Kit) (Encl. upsized to 10x8x6.Max 14x12x6) 11C NEMA 1 alarm panel (must select option 6A) 11D NEMA 4X alarm panel (must select option 6A) ★ *14B Main disconnect (rotary style, mounted through door, non-fused, padlockable in the OFF-position, door interlock 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 197 191 192 210 211 210 211 210 211 212 331 331 3340 340 340	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / externally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Ezconnex® 3-Port, 25', w/10' floats (3) /pipe clamp * Ezconnex® 4-Port, 25', w/20' floats (3) /pipe clamp * Ezconnex® 4-Port, 50', w/10' floats (3) /pipe clamp, sealing plug * Ezconnex® 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug * Ezconnex® 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug *
 1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★ 4A Redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★ 5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ 9 A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0-25 FLA ★ 10E Lockable latch - NEMA 4X 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10K Anti-condensation heater ★ ★ 10E NemA 1 alarm panel (must select option 6A) 11D NEMA 4X alarm panel (must select option 6A) 11D NEMA 4X alarm panel (must select option 6A) ★ 14B Main disconnect (rotary style, mounted through door, non-fused, padlockable in the OFF-position, door interlock in the ON-position) (must select circuit breaker) 	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 197 191 192 210 211 210 211 210 211 212 331 331 3340 340 340	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster® / mounting strap ● (per float) SJE SignalMaster® / externally weighted ● (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® / externally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / internally weighted ▲ (per float) Sensor Float® Mini / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) Sensor Float® / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator SJE PumpMaster® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Double Float® in lieu of on/off switches ▲ Ezconnex® 3-Port, 25', w/10' floats (3) /pipe clamp * Ezconnex® 4-Port, 25', w/20' floats (3) /pipe clamp * Ezconnex® 4-Port, 50', w/10' floats (3) /pipe clamp, sealing plug * Ezconnex® 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug * Ezconnex® 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug *
1E Alarm float 3A Alarm flasher ★ 3B Manual alarm reset ★ 4A Redundant off (select option 4D if floats included) ★ ★4A Redundant off indicator & alarm (must select 4A also) 4D Redundant off float (select 4A option) (select 17 option) ★ 5A Thermal cutout/heat sensor auto reset (for pumps w/thermal switch leads) ★ ★5E Seal failure circuit & red indicator (2 wire) 6A Auxiliary alarm contact, form C ★ 8A Elapsed time meter ★ 8C Event (cycle) counter ★ *9_A Pump overload specify amperage after number 9 followed by letter "A". Example: 912A = 12 amp pump. ★ ★ 0-25 FLA ★ 10E Lockable latch - NEMA 4X 10E Lockable latch - NEMA 1 ★ 10F Lightning arrestor (select pump circuit breaker) ★ 10K Anti-condensation heater ★ *10P Panel Mounting Post (Factory Installed.Includes Simplex Install. Kit) (Encl. upsized to 10x8x6.Max 14x12x6) 11C NEMA 1 alarm panel (must select option 6A) 11D NEMA 4X a	16E 16C 16C 16C 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 177 197 191 191 211 210 211 210 211 211 211 212 331 331 332 334E 34E 34E 34F	 15' cord in lieu of 20' (per float) 30' cord in lieu of 20' (per float) 40' cord in lieu of 20' (per float) SJE SignalMaster[®] / mounting strap ● (per float) SJE SignalMaster[®] / externally weighted ▲ (per float) Sensor Float[®] / externally weighted ▲ (per float) Sensor Float[®] / externally weighted ▲ (per float) Sensor Float[®] / pipe clamp ▲ (per float) TOA (Test/Off/Automatic) switch and pump run light through door mounted HOA (Hand/Off/Automatic) switch and pump run light through door mounted Door mounted pump run indicator Super Single[®] in lieu of on/off switches ▲ Double Float[®] in lieu of on/off switches ▲ Ezconnex[®] 3-Port, 25', w/10' floats (3) /pipe clamp * EZconnex[®] 4-Port, 50', w/20' floats (3) /pipe clamp * EZconnex[®] 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug * EZconnex[®] 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug * EZconnex[®] 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug * EZconnex[®] 4-Port, 50', w/20' floats (3) /pipe clamp, sealing plug *