

<b>NO</b>	<b>Make</b>	<b>Part No</b>	<b>Qty</b>	<b>Description</b>
1	Bosch	00141056	1	Genuine Spare Part
2	Bosch	00141124	1	Genuine Spare Part
3	Bosch	00141349	2	Genuine Spare Part
4	Bosch	00141952	2	Genuine Spare Part
5	Bosch	00142142	19	Genuine Spare Part
6	Bosch	00142146	2	Genuine Spare Part
7	Bosch	00145426	1	Genuine Spare Part
8	Bosch	00149139	1	Genuine Spare Part
9	Haier	0020300523	1	Genuine Spare Part
10	Bosch	00215564	1	Genuine Spare Part
11	Bosch	00218986	1	Genuine Spare Part
12	Haier	0024000208A	2	Genuine Spare Part
13	Bosch	00240505	2	Genuine Spare Part
14	Bosch	00267738	2	Genuine Spare Part
15	Bosch	00267741	2	Genuine Spare Part
16	Bosch	00267773	12	Genuine Spare Part
17	Bosch	00281835	1	Genuine Spare Part
18	Bosch	00296514	1	Genuine Spare Part
19	Bosch	00355104	2	Genuine Spare Part
20	Bosch	00358480	2	Genuine Spare Part
21	Bosch	00437144	2	Genuine Spare Part
22	Bosch	00437153	2	Genuine Spare Part
23	Bosch	00437267	1	Genuine Spare Part
24	Bosch	00470081	1	Genuine Spare Part
25	Bosch	00473603	1	Genuine Spare Part
26	Bosch	00475383	1	Genuine Spare Part
27	Bosch	00476665	1	Genuine Spare Part
28	Bosch	00489651	1	Genuine Spare Part
29	Bosch	00490982	1	Genuine Spare Part
30	Bosch	00494767	7	Genuine Spare Part
31	Haier	0060800072	2	Fridge Freezer Drawer
32	Bosch	00660089	1	Genuine Spare Part
33	Bosch	00660837	1	Genuine Spare Part
34	Bosch	00664909	1	Genuine Spare Part
35	Bosch	00680453	1	Genuine Spare Part

36	BOMM	00689566	1	Genuine Spare Part
37	Bosch	00710950	1	Genuine Spare Part
38	Glen Dimplex	011561400	1	Genuine Spare Part
39	Glen Dimplex	012899099	1	Genuine Spare Part
40	NAR	020205009907R	1	Genuine Spare Part
41	Merloni	020884	1	Genuine Spare Part
42	Candy	04315000	1	Genuine Spare Part
43	Candy	04315016	1	064300019
44	Candy	07017198	1	Genuine Spare Part
45	Candy	07030239	2	Genuine Spare Part
46	Glen Dimplex	082010702	2	Genuine Spare Part
47	BST	082300557	1	Genuine Spare Part
48		082601295	1	Replacement
49	Glen Dimplex	082603372	2	Genuine Belling Oven Main Glass 082603372, C00156585
50	Glen Dimplex	082603497	1	Genuine Spare Part
51	Glen Dimplex	082616694	41	Replacement
52	Glen Dimplex	0826611751	1	Replacement
53	Electrolux	1108590504	2	3790201606
54	Electrolux	1240831030	1	Genuine Spare Part
55	Electrolux	1246450009	1	Genuine Spare Part
56		12570032	1	Genuine Spare Part
57	Electrolux	1321446203	1	Genuine Spare Part
58	Electrolux	1323243442	1	Genuine Spare Part
59	Hotpoint	1603509	3	Genuine Spare Part
60	Electrolux	2081847101	1	Glass Shelf 518.5x400
61	Electrolux	2087571036	1	Genuine Spare Part
62	Electrolux	2088869124	1	Genuine Spare Part
63	Electrolux	2145500704	1	Genuine Spare Part
64	Electrolux	2248016186	1	Genuine Spare Part
65	Electrolux	2270055011	1	Genuine Spare Part
66	Electrolux	2425088321	2	Genuine Spare Part
67	Electrolux	2426448417	1	Genuine Spare Part
68	Electrolux	2651040012	3	Genuine Spare Part
69	Gorenje	280111	13	Replacement
70	Gorenje	280111	16	Replacement
71	Beko	2804840100	1	Genuine Spare Part
72	Beko	2804840100	1	Genuine Spare Part

73	Beko	2828119279	3	Genuine Spare Part
74	Beko	300150069	1	Genuine Spare Part
75	Beko	300150511	1	Genuine Spare Part
76	Beko	300150511	4	Genuine Spare Part
77	Electrolux	3112183078	1	Minor scratches
78	Electrolux	3113930394	1	Genuine Spare Part
79	Electrolux	3113930394	2	Genuine Spare Part
80	Electrolux	3114452653	1	59.3cm x 46.2 cm
81	Electrolux	3114682655	1	Genuine Spare Part
82	Electrolux	3490983016	1	Genuine Spare Part
83	Miele	3567861	2	Genuine Spare Part
84	Electrolux	3570076038	1	Genuine Spare Part
85	Electrolux	3570355010	2	Genuine Spare Part
86	Electrolux	3579312012	1	Genuine Spare Part
87	Daewoo	3612327200	1	Genuine Spare Part
88	Electrolux	3872542091	1	Genuine Spare Part
89	Electrolux	3876300769	1	Genuine Spare Part
90	Electrolux	4006092300	2	Genuine Spare Part
91	Electrolux	4071348264	2	Genuine Spare Part
92	Candy	41015305	1	Genuine Spare Part
93	Candy	41022208	1	Genuine Spare Part
94	Candy	41023825	1	Genuine Spare Part
95	Beko	410920313	1	Genuine Spare Part
96	Beko	4146141600	1	Genuine Spare Part
97	Beko	418920789	92	Genuine Spare Part
98	MEN	42712546	1	Genuine Spare Part
99	Candy	42804501	3	Genuine Spare Part
100	Beko	4324858000	1	Genuine Spare Part
101	Beko	4351500300	1	Genuine Spare Part
102	Candy	44003315	1	Genuine Spare Part
103	Beko	4546851000	1	Genuine Spare Part
104	ILVA	45802	1	Replacement
105	Beko	4616140500	1	Genuine Spare Part
106	Whirlpool	480111100362	2	Genuine Spare Part
107	Whirlpool	480111101428	8	Genuine Spare Part
108	Whirlpool	480111104499	1	Genuine Spare Part
109	Beko	4802890100	14	Genuine Spare Part

110	Whirlpool	481221479736	3	Genuine Spare Part
111	Whirlpool	481221838233	4	Genuine Spare Part
112	Whirlpool	481223958061	1	Genuine Spare Part
113	Whirlpool	481225998405	4	Genuine Spare Part
114	Whirlpool	481228219399	1	Genuine Spare Part
115	Whirlpool	481236118461	1	Genuine Spare Part
116	Whirlpool	481236158148	1	New Other
117	Whirlpool	481236158393	4	Genuine Spare Part
118	Whirlpool	481241610566	1	C00312052
119	Whirlpool	481244010779	124	Washing Machine Kickplate
120	Whirlpool	481244078265	1	C00374052
121	Whirlpool	481245058414	1	Genuine Spare Part
122	Whirlpool	481245059488	3	Genuine Spare Part, C00314136
123	Whirlpool	481245059674	1	Genuine Spare Part
124	Whirlpool	481245059922	1	C00373898
125	Whirlpool	481245059981	1	C00314353
126	Whirlpool	481246068627	1	C00311728
127	Whirlpool	481246469397	1	Genuine Spare Part
128	Whirlpool	481246668557	7	Genuine Spare Part
129	Whirlpool	481246668784	2	C00311191
130	Whirlpool	481246668785	1	C00313179
131	Whirlpool	481246668941	2	C00311563
132	Whirlpool	481246688828	1	C00311680
133	Whirlpool	481246818065	1	C00312786
134	Whirlpool	481281718825	1	EMT22HLP
135	Whirlpool	481281719366	1	Genuine Spare Part
136	Whirlpool	481936018129	2	Genuine Spare Part
137	Whirlpool	481936158259	4	Genuine Spare Part
138	Whirlpool	481944239501	1	7787584587
139	Whirlpool	481946678161	3	C00374287
140	Whirlpool	481946678445	2	Genuine Spare Part
141	Whirlpool	481946818197	1	C00267105
142	Whirlpool	481953029035	7	Genuine Spare Part
143	Whirlpool	481953029035	20	Genuine Spare Part
144	Beko	4832830100	1	Genuine Spare Part
145	Whirlpool	484000008471	1	EMYe70HEP
146	Candy	49017733	1	Genuine Spare Part

147	Beko	490920071	2	Genuine Spare Part
148	ARD	493086900	1	Genuine Spare Part
149	Sarena	49558800	4	Genuine Spare Part
150	Electrolux	50026282009	1	Replacement
151	Electrolux	50294653006	1	Genuine Spare Part
152	ARD	512002501	1	Genuine Spare Part
153		524021800	1	Genuine Spare Part
154	Brandt	55X7186	1	Genuine Spare Part
155	Gorenje	631950	4	TLX6KK Compressor
156	Gorenje	634748	1	Genuine Spare Part
157	Servis	651008467	1	Genuine Spare Part
158	Servis	651008686	1	Genuine Spare Part
159	Servis	651008694	2	Genuine Spare Part
160	Servis	651008709	1	Genuine Spare Part
161	ARD	651015829	1	Genuine Spare Part
162	MID	672050250055	1	Genuine Spare Part
163	Servis	720237600	1	Genuine Servis Fridge Freezer Flap 720237600
164	Terim	790315	1	Genuine Spare Part
165	Candy	91201102	4	Genuine Spare Part
166	Candy	91213421	1	Genuine Spare Part
167	Candy	91616789	1	Genuine Candy Refrigeration Glass Crisper Shelf 91617019, 91616789
168	Candy	91620027	1	Genuine Spare Part
169	Beko	9187628006	1	Genuine Spare Part
170	Candy	91942039	1	Genuine Spare Part
171	Candy	91943382	2	Genuine Spare Part
172	Candy	92741040	1	Genuine Spare Part
173	Candy	92980408	2	Genuine Spare Part
174		9303371400	1	Replacement
175	Candy	9371027	1	Replacement
176	Range Master	A036803	1	Genuine Spare Part
177		AG18102	1	Genuine Spare Part
178		BE14106	1	Replacement
179		BN1802	11	Replacement
180	Universal	BS14104	1	Genuine Spare Part
181	Universal	BS14106	2	Genuine Spare Part
182		BS14107	1	Replacement
183		BS14121	1	Replacement

184		BS3404	1	Replacement
185	Universal	BS51124	1	Replacement
186	Balay	BY1402	1	Replacement
187	Hotpoint	C00032850	1	Genuine Spare Part
188	Hotpoint	C00035772	2	Genuine Spare Part
189	Hotpoint	C00059960	1	Genuine Spare Part
190	Hotpoint	C00065005	2	Genuine Spare Part
191	Hotpoint	C00093711	1	Genuine Spare Part
192	Hotpoint	C00093772	1	Genuine Spare Part
193	Hotpoint	C00094091	1	Genuine Spare Part
194	Hotpoint	C00114617	1	Genuine Spare Part
195	Hotpoint	C00114660	1	Genuine Spare Part
196	Hotpoint	C00115566	1	Genuine Spare Part
197	Hotpoint	C00116111	1	Genuine Spare Part
198	Hotpoint	C00117019	2	Genuine Spare Part
199	Hotpoint	C00117760	1	Genuine Spare Part
200	Hotpoint	C00119215	1	Genuine Spare Part
201	Hotpoint	C00125780	4	Genuine Spare Part
202	Hotpoint	C00141740	1	Genuine Spare Part
203	Hotpoint	C00143067	1	Genuine Spare Part
204	Hotpoint	C00143424	1	Genuine Spare Part
205	Hotpoint	C00143448	1	Genuine Spare Part
206	Hotpoint	C00143522	2	Genuine Spare Part
207	Hotpoint	C00145745	2	Genuine Spare Part
208	Hotpoint	C00156945	2	Replacement
209	Hotpoint	C00193675	1	Genuine Spare Part
210	Hotpoint	C00196995	2	Genuine Spare Part
211	Hotpoint	C00201464	1	Genuine Spare Part
212	Hotpoint	C00202344	1	Genuine Spare Part
213	Hotpoint	C00203468	1	Genuine Spare Part
214	Hotpoint	C00216500	1	Genuine Spare Part
215	Hotpoint	C00223790	1	Genuine Spare Part
216	Hotpoint	C00224564	1	Genuine Spare Part
217	Hotpoint	C00224566	1	Genuine Spare Part
218	Hotpoint	C00224568	1	Genuine Spare Part
219	Hotpoint	C00225042	1	Genuine Spare Part
220	Hotpoint	C00225540	1	Genuine Spare Part

221	Hotpoint	C00225643	1	Genuine Spare Part
222	Hotpoint	C00225660	2	Genuine Spare Part
223	Hotpoint	C00225661	1	Genuine Spare Part
224	Hotpoint	C00225680	1	Genuine Spare Part
225	Hotpoint	C00225715	3	SMG696135933
226	Hotpoint	C00225727	2	Genuine Spare Part
227	Hotpoint	C00228154	1	Genuine Spare Part
228	Hotpoint	C00229437	1	Genuine Spare Part
229	Hotpoint	C00240405	1	Genuine Spare Part
230	Hotpoint	C00240627	1	Genuine Spare Part
231	Hotpoint	C00240981	1	Genuine Spare Part
232	Hotpoint	C00254217	14	Genuine Spare Part
233	Hotpoint	C00259345	1	Genuine Spare Part
234	Hotpoint	C00263721	1	Genuine Spare Part
235	Hotpoint	C00264095	1	Genuine Spare Part
236	Hotpoint	C00275538	1	C00193323
237	Hotpoint	C00277054	3	Genuine Spare Part
238	Hotpoint	C00279545	1	Genuine Spare Part
239	Hotpoint	C00280888	2	Genuine Spare Part
240	Hotpoint	C00280890	1	Genuine Spare Part
241	Hotpoint	C00281261	1	Genuine Spare Part
242	Hotpoint	C00282364	2	Genuine Spare Part
243	Hotpoint	C00282577	1	Genuine Spare Part
244	Hotpoint	C00284073	1	Genuine Spare Part
245	Hotpoint	C00285378	1	Genuine Spare Part
246	Hotpoint	C00286718	1	Genuine Spare Part
247	Hotpoint	C00286959	2	Genuine Spare Part
248	Hotpoint	C00287451	1	Genuine Spare Part
249	Hotpoint	C00292490	1	Genuine Spare Part
250	Hotpoint	C00298477	1	Genuine Spare Part
251	Hotpoint	C00311677	1	481946818316
252	Hotpoint	C00312856	1	481946818162
253	Hotpoint	C00315639	1	Genuine Spare Part
254		CR14113	3	Replacement
255		DL14101	14	Replacement
256		DL14106	1	Replacement
257	Universal	EL14100	1	Genuine Spare Part

258		EL14106	2	Replacement
259		EL14120	1	Replacement
260		GE7502	1	Replacement
261		HV18101	13	Genuine Spare Part
262	MDL	IN14101	1	Replacement
263		IN18115	1	Genuine Spare Part
264		IN34100	1	Replacement
265		ML18106	1	Replacement
266	Range Master	P025863	6	Replacement
267	Range Master	P094906	4	Genuine Spare Part
268	Universal	PH5103	1	Genuine Spare Part
269	Universal	PS1492	5	Genuine Spare Part
270		SA18101	2	Replacement
271		SM14107	1	Replacement
272		SV14100	1	Replacement
273		SV18102	2	Genuine Spare Part
274		TB14102	26	Replacement
275		TB14103	9	Replacement
276		TB14104	44	Replacement
277		TEK03140301	9	Replacement
278		TEK03140305	2	Replacement
279		TER482069	1	Replacement
280		TER482325	7	Replacement
281		TY14117	2	Replacement
282		TY14124	1	Replacement
283		UN14111	4	Replacement
284	Universal	UN5102	3	Genuine Spare Part
285	Universal	UN53605	26	Universal Fan Motor MSP63S13/2T
286	Embraco	UNE6187Z	1	Genuine Spare Part
287	Universal	VCP0927WEB	5	Genuine Spare Part
288	Universal	VCP0940WEB	6	Genuine Spare Part
289	Universal	VCP2704WEB	1	Genuine Spare Part
290	Universal	VCP3305WEB	3	Genuine Spare Part
291	Universal	VCP3901WEB	1	Genuine Spare Part
292	Universal	VCP3902WEB	6	Genuine Spare Part
293	Universal	VCP4501WEB	4	Genuine Spare Part
294		WP14103	1	Replacement



295		ZN1421	1	Replacement
296		ZN34112	1	Replacement