

#32

#67008_{AP} #67708_{AP} #67108_{AP}



2" 4'x6' BACK FOLDING METAL HOCKEY GOAL

No.	Sketch	Description	Part #	Qty
1		Front End Swedged Top Rail	5038551 331	1
2	<u>B</u>	Front End Plain Top Rail	5038551 332	1
3		Left Upper Front corner	5038552 303	1
4		Right Upper Front corner	5038552 307	1
5		Red Folding Leg	5038552304	2
6	6	Left Base Bend	5038551 351	1
7	6	Right Base Bend	5038551 352	1
8		Rear base with two swedges	5038551 341	1
9	.9	Rear base with one swedge	5038551 342	1
10	(1 :	Upper Back Support With Holes	5038551 311	1
11	<u> </u>	Lower Back Support With Pin	5038551 309	1
12		Top Shelf Left Corner	5038551 321	1
13		Top Shelf Right Corner	5038551 322	1
14		White Lacing Rope	9141	2
15		Hockey Net 4'x6'	69115	1
16		8mm Folding section bolt	5310	2
17	6	8mm Self locking nut	008	3
18	0	Pull Pin 60mm 2-3/8"	6592	2
19		Allen wrench	018	1
20		Wrench	017	1

Installation Instructions

Please read instructions COMPLETELY before assembly.



DO NOT RETURN PRODUCT TO THE STORE

Missing Parts, Need Replacements, or Help with Assembly

> Please Contact Customer Service:

Service@ezgoal.net 203 591 9032 WATERBURY, CT 06710, U.S.A.



Note: Precision Connections will fit snugly. Use a rubber mallet or block of wood if needed.


Follow the directions


Connect the folding section and base parts together. Part 304 to parts 351 and 352. The folding section bolts should be on the inside and in front.

The nuts should be on the outside. Do not over tighten the nuts.

The pull pins should be in the back of the folding section.

- 1. Begin assembly at the base of the goal and work upwards. Follow the diagram. Note: Pull pins from both folding legs and unfold. Reinsert pins to lock position prior to assembly.
- 2. Drape Hockey net over goal frame. Align the red tab in the center of the top and the green tab with the bottom back. Secure the six corners to align the net.
- 3. Starting at the red tab on top. Tie off one end of the rope to the welded wire. Lace only one loop through each square box of the goal net. Tie off with a good knots.

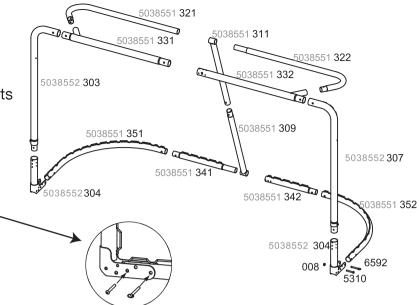


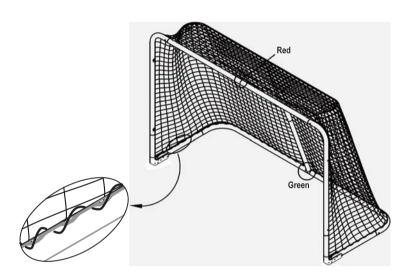


Folding & Storage

Folding & Storing goal with net attached:

- **1.** Release the button the back bar support and pull apart.
- 2. Pull the pins on both folding legs
- **3.** Press the 4 buttons on the top rail and the top shelf will fold down.
- **4.** Lift base up and into the front of the goal. Reinsert pins on the top hole to secure base so the folded section will stay in the up position.

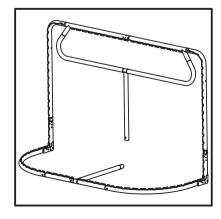


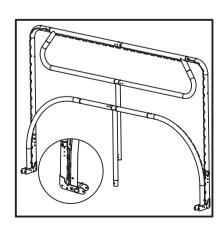





#69109

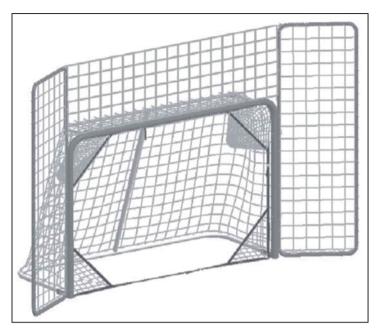

BACKSTOP KIT WITH TARGETS FOR 4'x6' GOAL

No.	Sketch	Description	Part #	Qty
1		Bottom U Tube	PS46251 111	2
2		Top U Tube	PS46251 002	2
3		Lower Inside Upright	PS46252 003	2
4		Upper Inside Upright	PS46252 004	2
5		Outside Upright	PS46251 005	4
6		Bolts 8 x 75mm	B875	2
7		Bolts 8 x 30mm	B830	2
8	8	Butterfly Nuts	N80	3
9	\otimes	15' Black Rope	9142	4
10	\sim	5' Black Rope	9143	2
11	\sim	15" Black Rope	9144	6
12		Side Backstop Net	9175	2
13		Top Backstop Net	9176	1
14		4x6 Hockey 4 Pocket Target Nets	69101	1

Installation Instructions

Please read instructions
COMPLETELY
before assembly.



DO NOT RETURN PRODUCT TO THE STORE

Missing Parts, Need Replacements, or Help with Assembly

Please Contact Customer Service:

Service@ezgoal.net 203 591 9032 WATERBURY, CT 06710, U.S.A.



NOTE:Precision connection will fit snuggly, use a rubber mallet or block of wood if needed.

Figure 1 Assemble 2 panels according to the diagram. Note:the corner loops on each panel should face each other and the down tube loops face back.

Figure 2 Side panel Assembly Lacing Secure the 4 corners of the net, so it is easy to lace. Then labels should be on top. The lacing Should be snug. Start at the bottom in the middle of the wiggle wire. Use the 15' black ropes. See Details

- 1) B Corners, lace every square box.
- 2) C Side and top, lace every other square box.
- 3) D Bottom, lace every square box Tie off with good Knots.

Figure 3 Bolting the side panels If you have an Ezgoal Hockey net, the holes are predrilled to secure the side panels.

use (2) 75mm bolts and the 2 butterfly nuts on the top two holes.

(2) 30mm bolts on the bottom two-holes . every square box Figure (E) & (I)

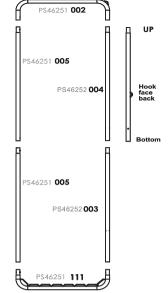


Figure 1


 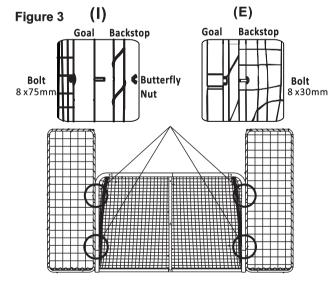


Figure 2 Fasten tight every other square with the cordage

B Corner lacing - lace every square box

C Side lacing - lace every other square box

D Bottom lacing - every square box



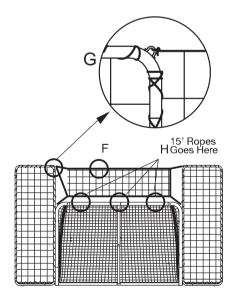


Figure 4 backstop top net connection

The thick black rope and label must be on top.(Detail F.) Using thin short rope corner ties, attach the top net to the 4 corner steel loops. Secure the heavy main rope on one panel to the steel loop, pull tight and secure the main rope to the oppositeside panel. See(Detail G.)and the front of the color box. Repeat for the bottom rope ,Use the 5'ropes to the lace the top net to the side panels. See detail (G) and Figure 4. Use the 15"rope ,Tie bow knots, to secure the top net to the goal in a few locations (Detail H.)

Folding and storing:

Note: This Backstop is designed to fold up infront of goal To do this you need to find the button on the bottom back of the side uprights of the Ezgoal goal. Press the button in. This will enable the ring on the goal to rotate to the front of the goal with the backstop. See figure 5(1) (2) (3). This will make it so you can swing the backstop infront of the goal for storing.

Warning !!! Do not fold the backstop forward for storing FORWARD without pressing the button Step 2

Note: For a none Ezgoal goal that is bolted , you will need to take the backstop off for storage.

See figure 5 (1) (2) (3).




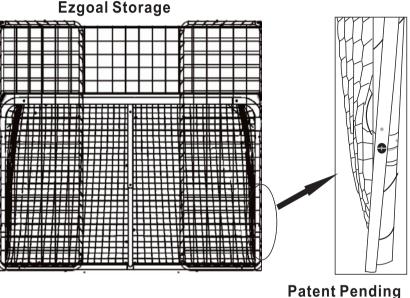


Figure 6. Fold panels forward, this will help stabilize the unit in windy conditions. Note: never leave the unit unattended within 10' from vehicles, boats, homes, or any structure which may incur damage from the backstop or cause damage to the backstop.

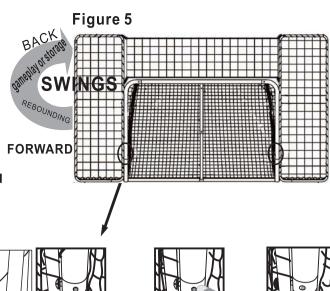

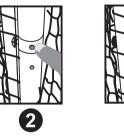

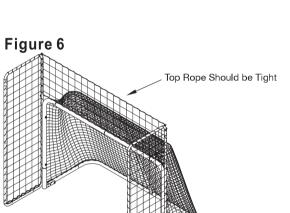

To Order the Backstop Rebounder Visit **ezgoal.net CUSTOMER ASSISTANCE**

For help, replacement parts, questions or concerns about your EZ Goal Products, EMAIL or Call

EZ Goal Sports Customer Service: WATERBURY, CT 06710, U.S.A.

Service@Ezgoal.net or 203 591 9032

SAFETY PRECAUTIONS



- Manufacturer suggests wearing safety goggles for net assembly, to protect against bungee cords hitting eye.
- As with any play equipment, children MUST be supervised at all times.
- Use product on a level surface.
- Never use near steps or stairs.
- For outdoor use only.
- Allow 8 feet from structures such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Use common sense, and all the same precautions as you would when playing sports.
- Secure unit, so high winds do not blow it over.



WARNING

- NEVER allow anyone (people or pets) to stand behind the net or in any possible path of a ball or puck should you miss the net or should the ball or puck go through the net.
- Inspect unit before and during each use. Replace any warn or damaged parts.
- Never allow children to stand on unit. This could cause damage to unit and result in an injury.
- Do not use bungees for any other purposes other than to apply net.
- As with any sporting activity, always wear the recommended safety equipment.
- · Never leave children unattended.
- · Use protective eyewear when securing bungees.




#69101

4'x6' 4 Pocket Target Nets Installation

Figure 2

Step 1 Lay out the EZ Goal target pockets in front Fig. 1 of the goal. Align the colored tabs in each pocket with the appropriate corner **BROWN** upper right **BLUE** upper left **ORANGE** lower right

RED lower left

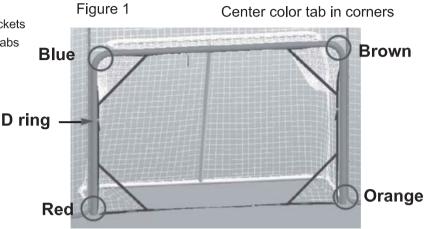

Step 2 Hook the 2 hooks on the back of the wire frame separated by about 4" or one wire loop. (see Figure 2) Keep the color tab in the middle of the corner while adjusting, leaving slack in the line for final adjustment with the D rings.


Color Tab

Step 3 Attach each bottom pocket by inserting hook through the lower bracket hole from the inside. (NOTE: you may also secure the hook in the bottom of the tube). Keep the color tabs in the four corners for the purpose of alignment. Fig. 3.

Step 4 Remove the slack from the straps by tightening the D-rings to a snug fit. (NOTE: adjust the straps so that the pocket and color tabs are centered in the corners).



Figure 3

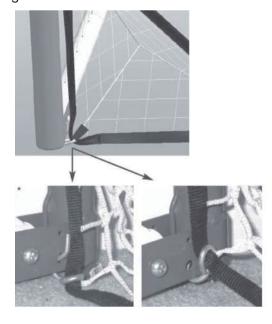

Backstop Rebounder Kit (Fits all goals) Make a good player a better one!

#65121 #65511



To Order the Backstop Rebounder Visit **ezgoal.net CUSTOMER ASSISTANCE**

For help, replacement parts, questions or concerns about your EZ Goal Products, EMAIL or Call

EZ Goal Sports Customer Service: WATERBURY, CT 06710, U.S.A.

Service@Ezgoal.net or 203 591 9032

SAFETY PRECAUTIONS



WARNING

- Manufacturer suggests wearing safety goggles for net assembly, to protect against bungee cords hitting eye.
- As with any play equipment, children MUST be supervised at all times.
- Use product on a level surface.
- Never use near steps or stairs.
- For outdoor use only.
- Allow 8 feet from structures such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires
- Use common sense, and all the same precautions as you would when playing sports.
- · Secure unit, so high winds do not blow it over.



WARNING

- NEVER allow anyone (people or pets) to stand behind the net or in any possible path of a ball or puck should you miss the net or should the ball or puck go through the net.
- Inspect unit before and during each use. Replace any warn or damaged parts.
- Never allow children to stand on unit. This could cause damage to unit and result in an injury.
- Do not use bungees for any other purposes other than to apply net.
- As with any sporting activity, always wear the recommended safety equipment.
- Never leave children unattended.
- · Use protective eyewear when securing bungees.

65121_65511 05/25/10 REV. 600-1