

**Please read all instructions before use!!!**

**New and Improved Expandable and Original Drill Paddle**



**Patent # 8808044 & # 9457884**

**Trademark # 97450220**

**This “DRILL PADDLE” is provided as is without any guarantees or warranty. In association with the product, Idea’z LLC makes no warranties of any kind, either express or implied, including but not limited to warranties of merchantability, fitness for a particular purpose, of title, or noninfringement of third-party rights!**

**Use of the product by user is at user’s risk!**

## **PROPER DRILL PADDLE USAGE**

**PLEASE READ THESE PROPER USAGE INSTRUCTIONS CAREFULLY.**

We want you to enjoy your new Drill Paddle for as long as possible.

### **ASSEMBLY OF THE DRILL PADDLE**

1. The EXTENDABLE version of the Drill Paddle has threaded end caps for removal and repair. Always check after each use to make sure they are tight and secure. A few drops of vegetable oil occasionally, on prop and drill ends, will extend the life of the Drill Paddle.
2. Insert the Drive Shaft end into the chuck on your selected battery powered drill.
3. Tighten chuck to securely hold the Drive Shaft
4. Your Drill Paddle is now ready for operation.
5. Always contract EXTENDABLE version to smallest position when not in use.

### **USAGE OF THE DRILL PADDLE**

1. If using an EXTENDABLE version of the Drill Paddle, use the twist lock mechanism (left to loosen, right to tighten) to extend and lock at the desired length.
2. Firmly secure one hand on your selected battery powered drill. This will be your direction hand.
3. With your other hand, hold the Blue Foam handgrip. This will be your pivoting hand.
4. Lower the propeller end of the Drill Paddle into the water while keeping the Drive Shaft at an angle.
5. Keeping your pivot hand stationary, move your direction hand in the opposite direction that you want to you move your watercraft. This will put the propeller in the proper alignment to move the watercraft in the desired direction.

## PROPELLER REPLACEMENT

**CAUTION:** Disconnect the power source from the Drill Paddle before beginning any propeller work or maintenance.

1. Disconnect the power source from the Drill Paddle prior to changing the propeller.
2. Hold the propeller and loosen the Prop Nut with pliers or a wrench.
3. Remove the Prop Nut. If the Shear Pin is sheared or broken, you will need to hold the Drive Shaft stationary with pliers or leave in the drill with battery disconnected.
4. Turn the old prop to horizontal and pull it straight off. If Shear Pin falls out, put it back in.
5. Align the new propeller with the Shear Pin.
6. Install the Prop Washer and Prop Nut.
7. Tighten the Prop Nut 1/4 turn past snug. Do not over tighten as this can damage the propeller.

## TROUBLESHOOTING & REPAIR

1. If your Drill Paddle fails to run or lacks power, check the battery of your cordless power drill for proper full charge and make sure that propeller is free from debris that could restrict movement and/ or cause damage.
2. If your Drill Paddle loses power after a short running time, check the battery charge of your cordless power drill. If low, restore to proper full charge.
3. If you experience prop vibration during normal operation, remove and rotate the prop 180°.
4. Recommended voltage for Drill Paddle operation is 18-24v. Any higher voltage may bend or damage the product!

## REMEMBER TO KEEP YOUR ORIGINAL RECEIPT

**ATTENTION:** Never run the Drill Paddle out of the water, as this may result in injuries from the rotating propeller. The Drill Paddle should be disconnected from the power source when it is not in use or is off the water. Disregarding these safety precautions may result in electric shorts of your power source and/or injury to you or others. Always disconnect the power source from the Drill Paddle before cleaning or checking the propeller.

**CAUTION:** Take care that neither you nor other people approach the turning propeller too closely, neither with body parts nor with objects. The propeller is powerful and may endanger or injure you or others. While the propeller is running, watch out for people swimming and for floating objects. Persons whose ability to run the drill or whose reactions are impaired by alcohol, drugs, medication, or other substances are not permitted to use this device. Any misuse or alteration of this product voids all liability and warranties. This product is not suitable for use in strong currents.

**30-DAY LIMITED WARRANTY**  
**WARRANTY ON DRILL PADDLE**

Idea'z, LLC. extends the following limited warranty to the original retail purchaser only. Warranty coverage is not transferable.

**DRILL PADDLE 30-DAY LIMITED WARRANTY ON THE ENTIRE PRODUCT**

Idea'z, LLC. warrants to the original retail purchaser only that the purchaser's new Drill Paddle will be materially free from defects in materials and workmanship appearing within 30 days (about 4 and a half weeks) after the date of purchase. Idea'z, LLC. will (at its option) either repair or replace, free of charge, any parts found by Idea'z, LLC. to be defective during the term of this warranty. Such repair or replacement shall be the sole and exclusive liability of Idea'z, LLC. and the sole and exclusive remedy of the purchaser for the breach of the warranty.

**EXCLUSIONS & LIMITATIONS**

This limited warranty does not apply to products that have been used commercially or for rental purposes. This limited warranty does not cover normal wear and tear, blemishes that do not affect the operation of the product, or damage caused by accidents, abuse, alteration, modification, shipping damage, acts of God, negligence of the user or misuse, improper, or insufficient care or maintenance. **DAMAGE CAUSED BY THE USE OF OTHER REPLACEMENT PARTS NOT MEETING THE DESIGN SPECIFICATIONS OF THE ORIGINAL PARTS WILL NOT BE COVERED BY THIS LIMITED WARRANTY.** The cost of normal maintenance or replacement parts which are not in breach of the limited warranty are the responsibility of the purchaser. Prior to using the products, the purchaser shall determine the suitability of the product for the intended use and assume all related risk and liability. Any assistance Idea'z, LLC. provides to or procures for the purchaser outside the terms, limitations or exclusions of this limited warranty will not constitute a waiver of the terms, limitations, or exclusions, nor will such assistance extend or revive the warranty. Idea'z, LLC. will not reimburse the purchaser for any expenses incurred by the purchaser in repairing, correcting, or replacing any defective product or parts. Idea'z, LLC. **AGGREGATE LIABILITY WITH RESPECT TO THE COVERED PRODUCT IS LIMITED TO AN AMOUNT EQUAL TO THE PURCHASER'S ORIGINAL PURCHASE PRICE PAID FOR SUCH PRODUCT. THERE ARE NO EXPRESSED WARRANTIES OTHER THAN THESE LIMITED WARRANTIES. IN NO EVENT SHALL ANY IMPLIED**

**WARRANTIES INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE, EXTEND BEYOND THE DURATION OF THE RELEVANT EXPRESS LIMITED WARRANTY. IN NO EVENT SHALL Idea'z, LLC. BE LIABLE FOR PUNITIVE, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES.**

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations and/or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

**ANY ALTERCATION OR MISUSE, INCLUDING HIGHER VOLTAGE WILL VOID ALL WARRENTIES AND LIABILITIES!**

**USE OF THE "DRILL PADDLE" BY USER IS AT USERS RISK!**