

9022042A,9930642A

### Basic Operation

- Connect the power adapter to the product. Do **not** unplug the power cord while the device is powered on.
- Ensure your hands are dry when handling the power adapter or device.
- Insert the DC voltage end of the power adapter into the power input port on the device. Then connect the other end to an AC power source rated between 100-240V.
- Do not unplug the power cord by pulling it forcefully.

### Wireless Mode

- After powering on the device, open the wireless pairing interface on your mobile phone.
- Search for **"Wireless Connection"** and initiate pairing. Once paired successfully, you can stream audio from your mobile device.
- **Note:** Wireless mode supports only one device connection at a time. If a device is already connected, others will be unable to pair.
- To quickly disconnect the current wireless connection, press and hold the wireless/networking button for 3 seconds. This will allow other devices to connect.

### Incoming Calls

- When music is playing and an incoming call is received, playback will pause automatically.
- The ringtone and call audio will **not** be transmitted through the device.

### Device Function & Networking Multiple Chairs

