

MAINTENANCE INSTRUCTIONS


If you are not completely familiar with automotive lift maintenance procedures; **STOP**: Contact factory for instructions. To avoid personal injury, permit only qualified personnel to perform maintenance on this equipment.

- **Always** keep bolts tight. Check periodically.
- Always keep lift components clean.
- **Always** if oil leakage is observed, call local service representative.
- Always if electrical problems develop, call local service representative.
- **Daily:** Check cables and sheaves for wear. Replace worn parts as required with genuine Rotary parts.

- **Daily:** Inspect adapters for damage or excessive wear. Replace as required with genuine Rotary parts.
- Monthly: Check equalizer cable tension. Adjust per lift installation instructions.
- **Monthly:** Lubricate locking latch shafts. Push latch handle several times for oil to penetrate pivot points.
- Every 3 Months: Check anchor bolts for tightness. Anchors should be torqued to 90 ft/lbs.
- **Semi-Annually:** Check fluid level of lift power unit and refill if required per lift installation instructions.
- **Replace** all caution, warning or safety related decals on the lift if unable to read or missing. Reorder labels from Rotary Lift.

INSPECTION and MAINTENANCE See ANSI/ALI ALOIM booklet for



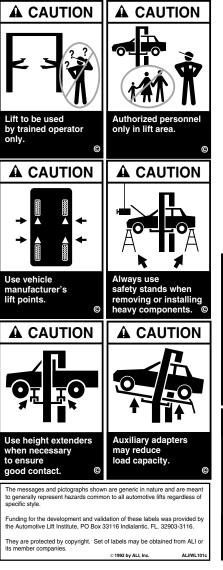

periodic inspection checklist and maintenance log sheet. SAFETY SAFETY INSTRUCTIONS INSTRUCTIONS Read operating and safety manuals before using lift. SAFETY INSTRUCTIONS



its member companies

Funding for the development and validation of these labels was provide the Automotive Lift Institute, PO Box 33116 Indialantic, FL. 32903-3116

They are protected by copyright. Set of labels may be obtained from ALI or

© 1992 by ALI, Inc.