



RAILFAN'S GUIDE

www.railfan.com.au

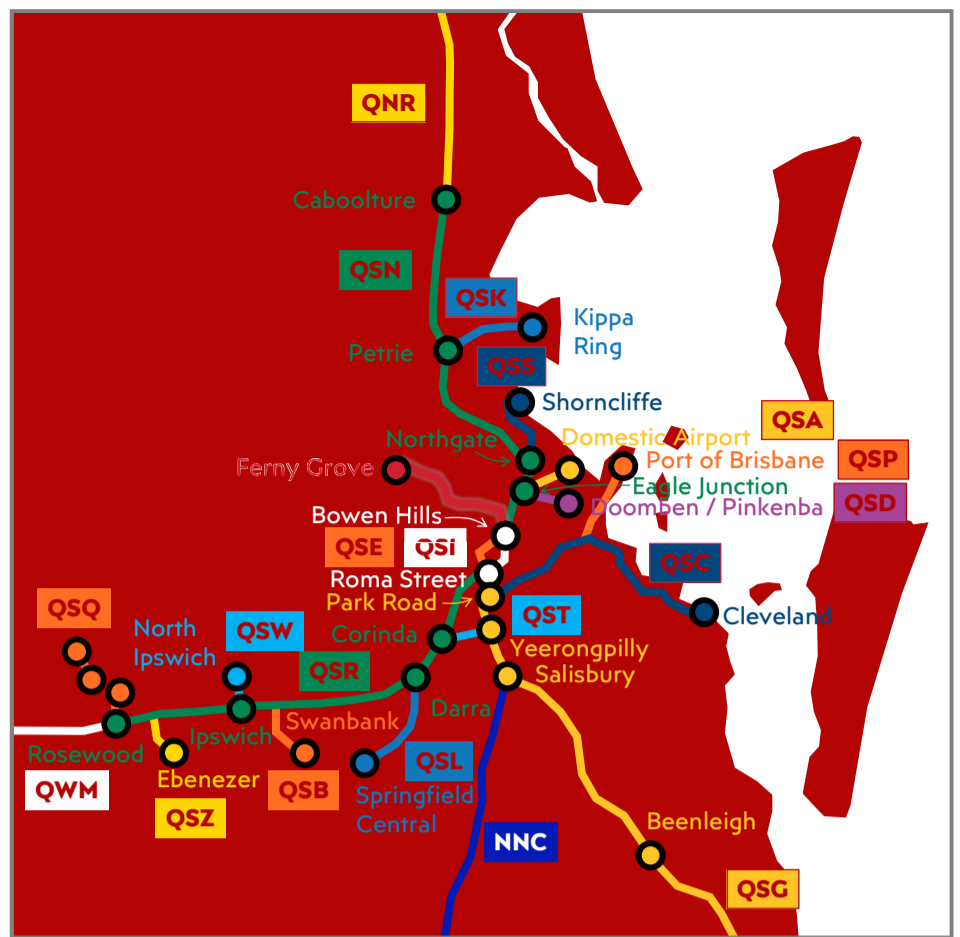

Inset – South East Queensland

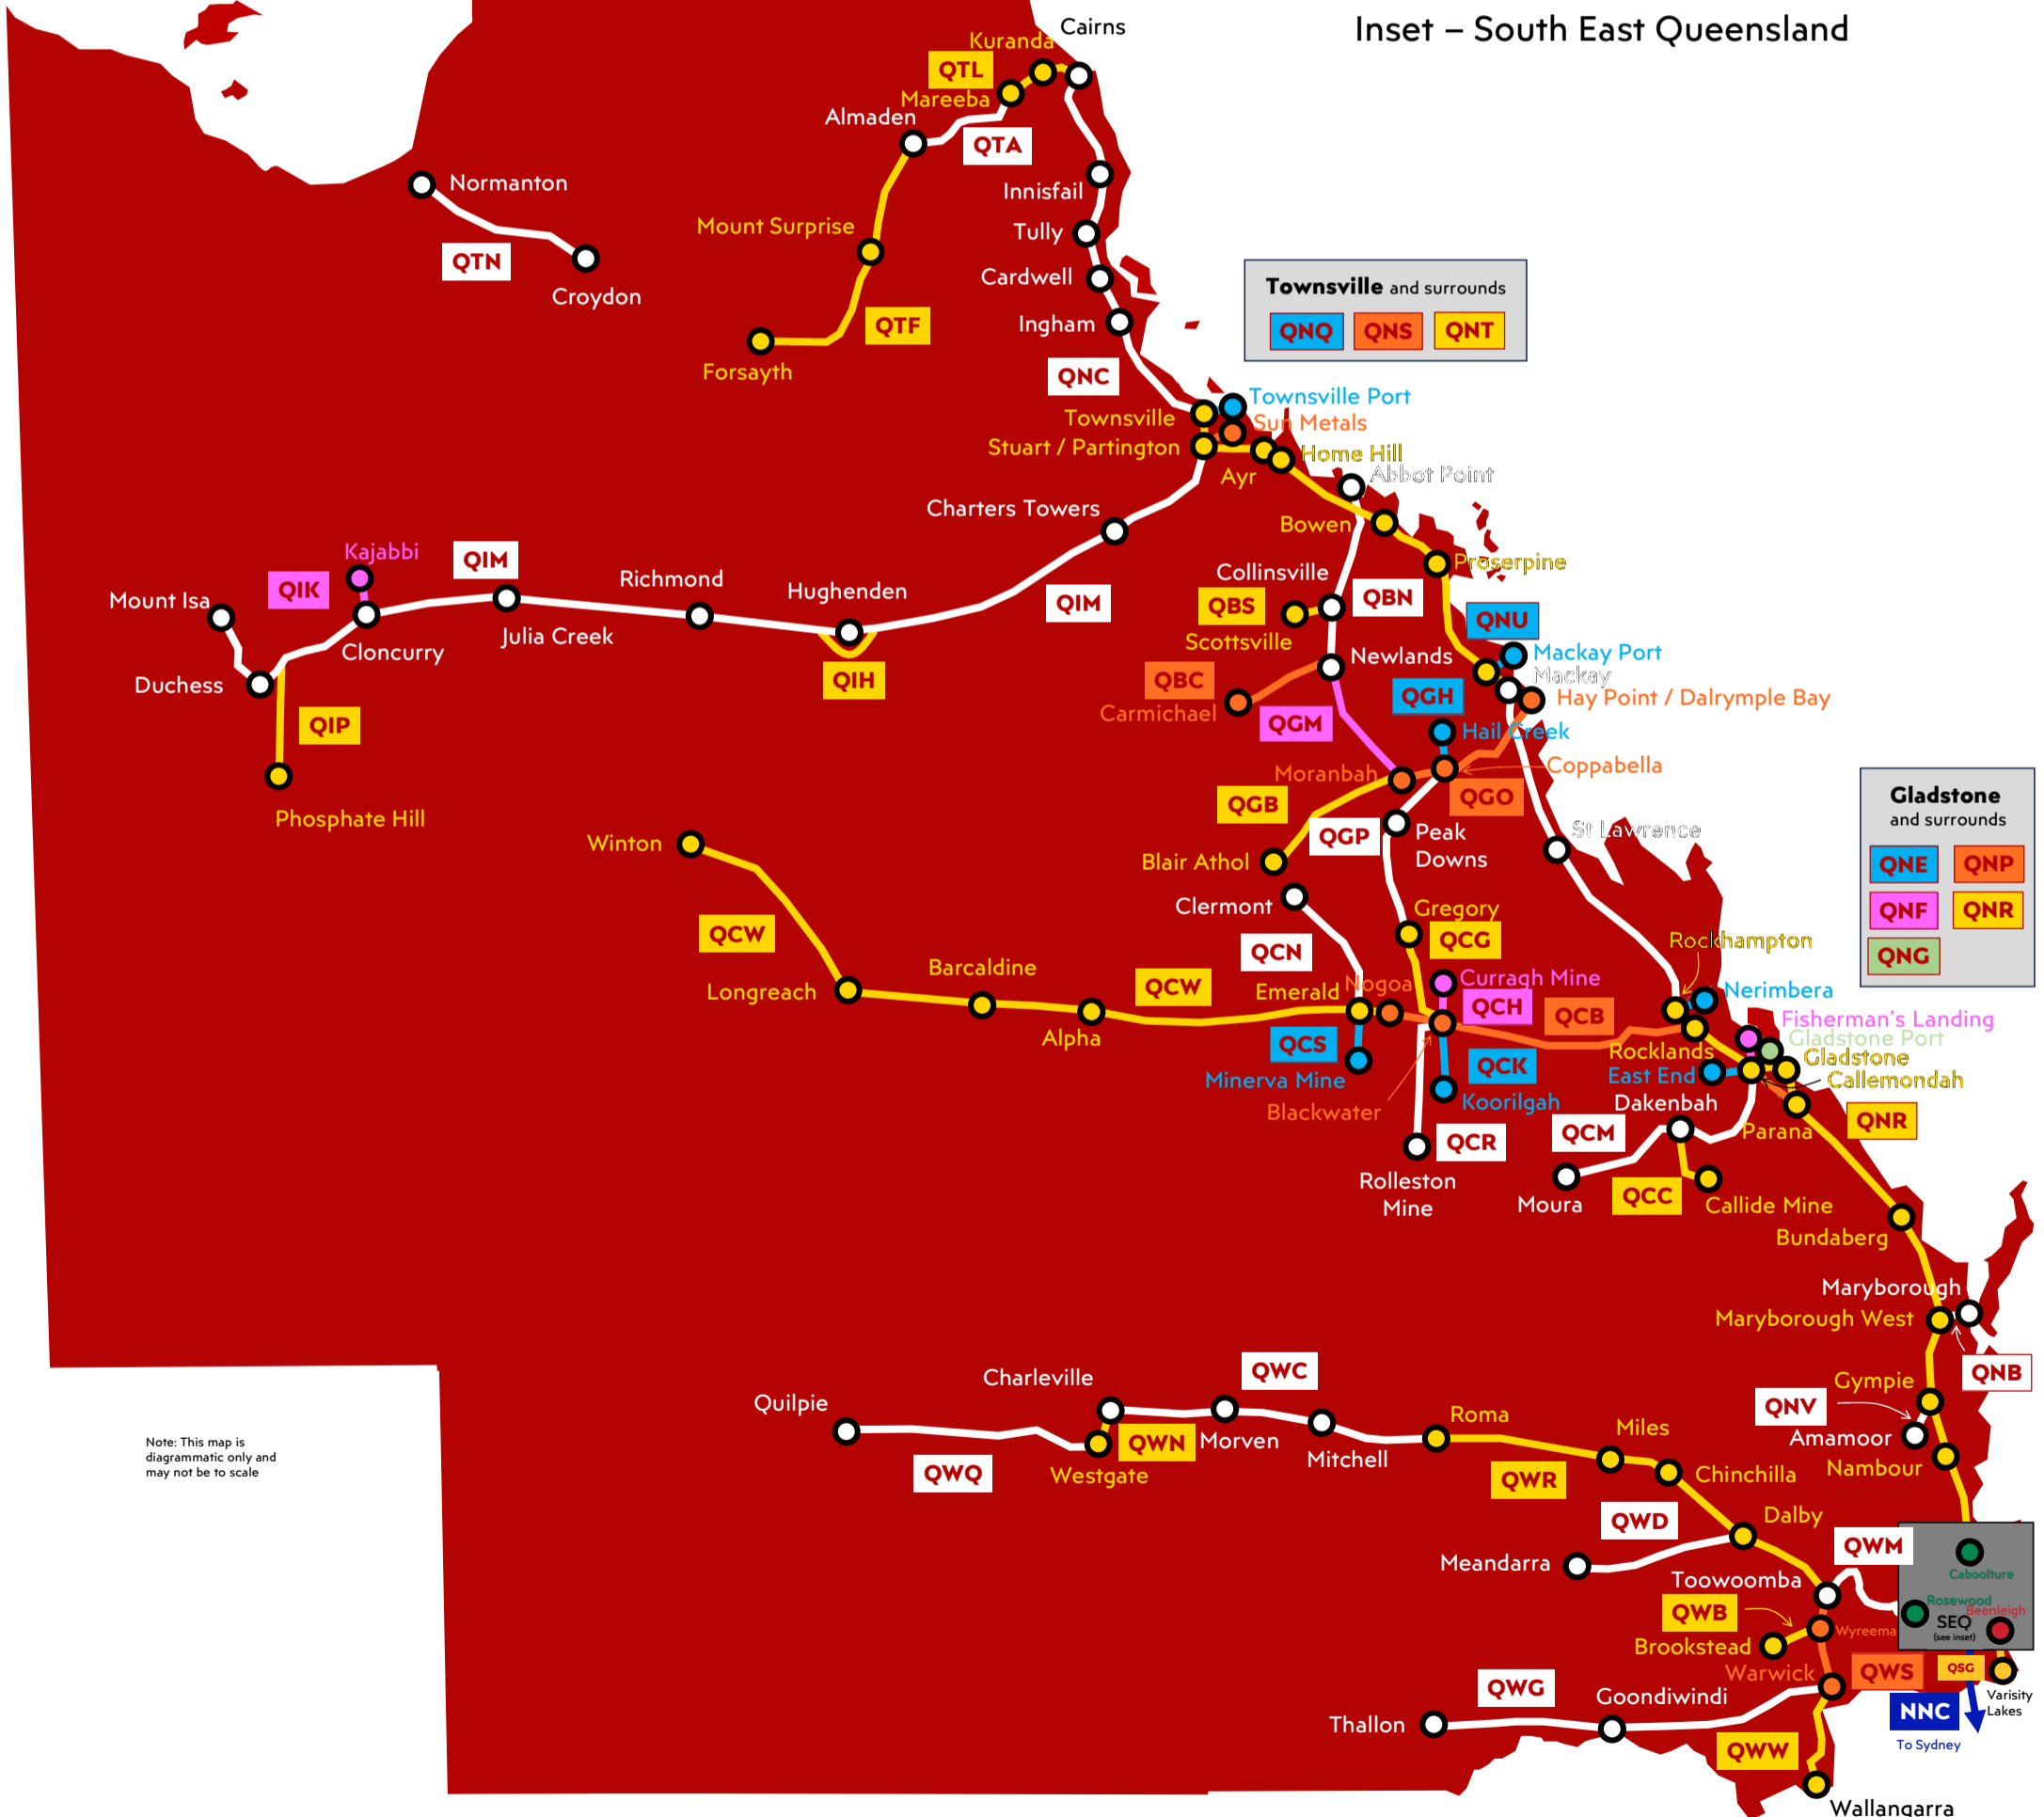

Note: This map is diagrammatic only and may not be to scale

RAILWAYS OF QUEENSLAND

Version 4 | June 2025

RAILWAYS OF QUEENSLAND
Line List

RFN Line Code	Line Name	Dir 1	Dir 2
QBC	Queensland - Newlands System - Carmichael Branch	East	West
QBN	Queensland - Newlands System - Abbot Point to Newlands	North	South
QBS	Queensland - Newlands System - Scottville Branch	East	West
QCB	Queensland - Central - Rockhampton to Nogo	East	West
QCC	Queensland - Central - Dakenba to Callide	North	South
QCG	Queensland - Central - Gregory Branch	North	South
QCH	Queensland - Central - Curragh Branch	North	South
QCK	Queensland - Central - Koorilgah Branch	North	South
QCM	Queensland - Central - Moura Line	East	West
QCN	Queensland - Central - Clermont Branch	North	South
QCR	Queensland - Central - Rolleston Branch	North	South
QCS	Queensland - Central - Springsure Branch (to Minerva Mine)	North	South
QCW	Queensland - Central - Nogo to Winton	East	West
QGB	Queensland - Goonyella System - Moranbah to Blair Athol	East	West
QGH	Queensland - Goonyella System - Hail Creek and South Walker	North	South
QGM	Queensland - Goonyella System - Moranbah North	North	South
QGO	Queensland - Goonyella System - Hay Point / Dalrymple Bay to Moranbah	East	West
QGP	Queensland - Goonyella System - Peak Downs and Beyond	North	South
QIH	Queensland - North Western - Hughenden Deviation	East	West
QIK	Queensland - North-Western - Kjabbi	North	South
QIM	Queensland - North Western - Townsville to Mount Isa	East	West
QIP	Queensland - North Western - Phosphate Hill Line	North	South
QNB	Queensland - Northern Branch Lines - Maryborough Branch / EDI Rail	East	West
QNC	Queensland - North Coast Line - Townsville to Cairns	North	South
QNE	Queensland - Northern Branch Lines - East End Branch	East	West
QNF	Queensland - Northern Branch Lines - Fisherman's Landing	North	South
QNG	Queensland - Northern Branches - Gladstone Various		
QNM	Queensland - North Coast Line - Rockhampton to Mackay	North	South
QNP	Queensland - North Coast Line - Parana Diversion	North	South
QNO	Queensland - Northern Branch Lines - Townsville Port	North	South
QNR	Queensland - North Coast Line - Caboolture to Rockhampton	North	South
QNS	Queensland - Northern Branch Lines - Sun Metals	North	South
QNT	Queensland - North Coast Line - Mackay to Townsville	North	South
QNU	Queensland - Northern Branch Lines - Mackay Port	East	West
QNV	Queensland - Northern Branch Lines - Mary Valley	North	South
QNY	Queensland - Northern Branch Lines - Yeppoon Line (to Nerimbera)	East	West
QSA	Queensland - Brisbane - Eagle Junction to Domestic Airport	East	West
QSB	Queensland - Brisbane - Swanbank (QPSR)	North	South
QSC	Queensland - Brisbane - Park Road to Cleveland	East	West
QSD	Queensland - Brisbane - Eagle Junction to Doomben / Pinkenba	East	West
QSE	Queensland - Brisbane - Exhibition	North	South
QSF	Queensland - Brisbane - Bowen Hills to Ferny Grove	East	West
QSG	Queensland - Brisbane - Roma Street to Varsity Lakes	North	South
QSI	Queensland - Brisbane - Inner City	North	South
QSK	Queensland - Brisbane - Petrie to Kippa Ring	East	West
QSL	Queensland - Brisbane - Darra to Springfield Central	North	South
QSN	Queensland - Brisbane - Bowen Hills to Caboolture	North	South
QSP	Queensland - Brisbane - Fisherman Islands	North	South
QSQ	Queensland - Brisbane - Rosewood (ARHSQ)	North	South
QSR	Queensland - Brisbane - Roma Street to Rosewood	East	West
QSS	Queensland - Brisbane - Northgate to Shorncliffe	North	South
QST	Queensland - Brisbane - Tennyson	East	West

RAILWAYS OF QUEENSLAND
Line List

RFN Line Code	Line Name	Dir 1	Dir 2
QSW	Queensland - Brisbane - Ipswich Workshops	North	South
QSZ	Queensland - Brisbane - Ebenezer	North	South
QTA	Queensland - Tablelands - Mareeba to Almaden	East	West
QTF	Queensland - Tablelands - Almaden to Forsyth	East	West
QTL	Queensland - Tablelands - Cairns to Mareeba	East	West
QTN	Queensland - Tablelands - Croydon to Normanton	East	West
QWB	Queensland - South Western - Brookstead	East	West
QWC	Queensland - South Western - Roma to Charleville	East	West
QWD	Queensland - South Western - Dalby to Meandarra	East	West
QWG	Queensland - South Western - Warwick to Goondiwindi and Thallon	East	West
QWM	Queensland - South Western - Main Line - Rosewood to Toowoomba	East	West
QWN	Queensland - South Western - Charleville to Westgate	North	South
QWQ	Queensland - South Western - Westgate to Quilpie	East	West
QWR	Queensland - South Western - Toowoomba to Roma	East	West
QWS	Queensland - South Western - Warwick to Toowoomba	North	South
QWW	Queensland - South Western - Warwick to Wallangarra	North	South
QYW	Queensland - Cape York - Weipa	North	South