

# Bespoke Power

## Turn Signal Troubleshooting Guide

Symptom	Possible Causes
No Lights	<ol style="list-style-type: none"><li>1. Bad Fuse</li><li>2. Bad turn signal switch</li><li>3. Bad Connectors</li><li>4. Bad Flasher</li></ol>
No Light on Right (or Left) only	<ol style="list-style-type: none"><li>1. Check Diagnostic LEDs on sequencer (should be lit for the appropriate side)</li><li>2. Bad turn signal switch</li><li>3. Bad connector</li></ol>
No Light on Right (or Left) only but diagnostic LEDs light up.	<ol style="list-style-type: none"><li>1.</li></ol>
Inner bulbs lit but no center or outer bulbs	<ol style="list-style-type: none"><li>1. Check Diagnostic LEDs on sequencer (should be lit)</li><li>2. Bad bulbs</li><li>3. Bad connection to Bulb</li><li>4. Shorted sockets</li></ol>
No Brake lights	<ol style="list-style-type: none"><li>1. Check Diagnostic Brake LED on sequencer</li><li>2.</li></ol>