



600 3rd Ave, Laval, QC, H7R 4J4
 Tel: (514)631-2173
 Fax:(450)627-2199
 email: info@aeroneuf.com



ATR-42 CAPABILITY LISTING

Part Number	Manufacturer	Description	Aircraft
1826-1	Avtech	D.C. Lamp Dimmer	ATR-42
2136-315-80-11	Sextant	Ammeter Indicator	ATR-42
2136-430-80-11	Sextant	De-Icing Monitoring Indicator	ATR-42
2593379-1	Honeywell/Sperry	Dual Remote Compensator	ATR-42
2593379-2	Honeywell/Sperry	Dual Remote Compensator	ATR-42
2794-901-00-11	Sextant	Power Generation Display Panel	ATR-42
2CM9AXX Series	AMETEK/GE	Tachometer Generator	ATR-42
30005-0000-XX	Simmonds Precision	Torque Signal Conditioner	ATR-42
4031609-9XX	Honeywell/Sperry	TAS/Temp Indicator	ATR-42
4679-750-80-11	Sextant	Flap Position Indicator	ATR-42
4679-751-80-11	Sextant	Flap Position Indicator	ATR-42
4679-752-80-10	Sextant	Flap Position Indicator	ATR-42
4679-753-80-10	Sextant	Flap Position Indicator	ATR-42
4679-754-80-10	Sextant	Flap Position Indicator	ATR-42
4679-764-80-10	Sextant	Flap Position Indicator	ATR-42
4863-501-80-11	Sextant	Trim Indicator	ATR-42
4863-502-80-10	Sextant	Trim Indicator	ATR-42
4863-503-80-10	Sextant	Trim Indicator	ATR-42
4863-504-80-11	Sextant	Trim Indicator	ATR-42
49310-31	Sextant	Pressurization Indicator	ATR-42
501-1318-01	J.E.T.	Static Converter	ATR-42
5018-753-00-00	Sextant	Mixing Audio Amplifier	ATR-42
5126-220-80-11	Sextant	Fuel Temp. Indicator	ATR-42
5126-223-80-11	Sextant	Fuel Temp. Indicator	ATR-42
5427-404-80-10	Sextant	COMPT/Duct Indicator	ATR-42
5677-406-80-13	Sextant	Dual Oil Press/ Temp. Indicator	ATR-42
5677-407-80-14	Sextant	Dual Oil Press/ Temp. Indicator	ATR-42
5677-409-80-10	Sextant	Dual Oil Press/ Temp. Indicator	ATR-42
5677-420-80-10	Sextant	Dual Oil Press/ Temp. Indicator	ATR-42
5677-421-80-10	Sextant	Dual Oil Press/ Temp. Indicator	ATR-42
5677-705-80-10	Sextant	NH, NL Speed Indicator	ATR-42
5677-750-80-12	Sextant	Torque Indicator	ATR-42
5677-755-80-11	Sextant	Torque Indicator	ATR-42
5677-756-80-10	Sextant	Torque Indicator	ATR-42
5677-765-80-10	Sextant	Torque Indicator	ATR-42
5677-766-80-10	Sextant	Torque Indicator	ATR-42
5678-553-80-12	Sextant	Turbine Temp. Indicator	ATR-42
5678-555-80-10	Sextant	Turbine Temp. Indicator	ATR-42
5678-559-80-10	Sextant	Turbine Temp. Indicator	ATR-42
5678-704-80-11	Sextant	NH Indicator	ATR-42
5678-705-80-12	Sextant	NH Indicator	ATR-42
5678-710-80-12	Sextant	NP Indicator	ATR-42
5678-711-80-10	Sextant	NP Indicator	ATR-42

5678-713-80-10	Sextant	NP Indicator	ATR-42
5678-715-80-10	Sextant	NP Indicator	ATR-42
5678-716-80-10	Sextant	NP Indicator	ATR-42
64050-660-1	Sextant	Airspeed Indicator	ATR-42
64050-661-1	Sextant	Airspeed Indicator	ATR-42
64050-662-1	Sextant	Airspeed Indicator	ATR-42
64050-663-1	Sextant	Airspeed Indicator	ATR-42
64131-560-1	Sextant	Counter Pointer Altimeter	ATR-42
64131-760-1	Sextant	Counter Pointer Altimeter	ATR-42
656-767	Honeywell/Sperry	Compensator	ATR-42
7002638-9XX	Honeywell/Sperry	TAS/Temp Indicator	ATR-42
748-465-4	Intertechnique	Fuel Quantity Indicator	ATR-42
748-465-5	Intertechnique	Fuel Quantity Indicator	ATR-42
748-522-1	Intertechnique	Fuel Quantity Indicator	ATR-42
748-522-2	Intertechnique	Fuel Quantity Indicator	ATR-42
748-681-1	Intertechnique	Fuel Quantity Indicator	ATR-42
748-681-2	Intertechnique	Fuel Quantity Indicator	ATR-42
748-682-1	Intertechnique	Fuel Quantity Indicator	ATR-42
748-682-2	Intertechnique	Fuel Quantity Indicator	ATR-42
748-722	Intertechnique	Repeater Indicator	ATR-42
748-724	Intertechnique	Repeater Indicator	ATR-42
749-158	Intertechnique	Fuel Quantity Indicator	ATR-42
749-159	Intertechnique	Fuel Quantity Indicator	ATR-42
749-160	Intertechnique	Fuel Quantity Indicator	ATR-42
749-161	Intertechnique	Fuel Quantity Indicator	ATR-42
749188	Intertechnique	Triple Pressure Indicator	ATR-42
749757	Intertechnique	Fuel Quantity Indicator	ATR-42
749758	Intertechnique	Fuel Quantity Indicator	ATR-42
749759	Intertechnique	Fuel Quantity Indicator	ATR-42
749760	Intertechnique	Fuel Quantity Indicator	ATR-42
8107-110-00-10	MORS	Engine Oil Pressure Sensor	ATR-42
940605-31	Faure Herman	Flow Meter Indicator	ATR-42
940605-32	Faure Herman	Flow Meter Indicator	ATR-42
940605-41	Faure Herman	Flow Meter Indicator	ATR-42
940605-42	Faure Herman	Flow Meter Indicator	ATR-42
940-638-X	Faure Herman	Fuel Flow Meter Indicator	ATR-42
940-639-X	Faure Herman	Fuel Flow Meter Indicator	ATR-42
AI-804	J.E.T.	Attitude Indicator	ATR-42
C14129BA	Sextant	Altimeter	ATR-42
C14130AA	Sextant	Altimeter	ATR-42
C16222AA01	Sextant	Torque Indicator	ATR-42
PC-251	Marathon Flite-Tronics	250 VA Static Inverter	ATR-42
SC-841A	J.E.T.	Static Converter	ATR-42
WL1001KCA1	S.I.R.S.	Standby Compass	ATR-42



600 3rd Ave, Laval, QC, H7R 4J4
 Tel: (514)631-2173
 Fax:(450)627-2199
 email: info@aeroneuf.com



ATR-72 CAPABILITY LISTING

Part Number	Manufacturer	Description	Aircraft
1826-1	Avtech	D.C. Lamp Dimmer	ATR-72
2136-315-80-11	Sextant	Ammeter Indicator	ATR-72
2136-430-80-11	Sextant	De-Icing Monitoring Indicator	ATR-72
2593379-1	Honeywell/Sperry	Dual Remote Compensator	ATR-72
2593379-2	Honeywell/Sperry	Dual Remote Compensator	ATR-72
2794-901-00-11	Sextant	Power Generation Display Panel	ATR-72
2CM9AXX Series	AMETEK/GE	Tachometer Generator	ATR-72
30005-0000-XX	Simmonds	Torque Signal Conditioner	ATR-72
4031609-9XX	Honeywell/Sperry	TAS/Temp Indicator	ATR-72
4679-750-80-11	Sextant	Flap Position Indicator	ATR-72
4679-751-80-11	Sextant	Flap Position Indicator	ATR-72
4679-752-80-10	Sextant	Flap Position Indicator	ATR-72
4679-753-80-10	Sextant	Flap Position Indicator	ATR-72
4679-754-80-10	Sextant	Flap Position Indicator	ATR-72
4679-764-80-10	Sextant	Flap Position Indicator	ATR-72
4863-501-80-11	Sextant	Trim Indicator	ATR-72
4863-502-80-10	Sextant	Trim Indicator	ATR-72
4863-503-80-10	Sextant	Trim Indicator	ATR-72
4863-504-80-11	Sextant	Trim Indicator	ATR-72
49310-31	Sextant	Pressurization Indicator	ATR-72
501-1318-01	J.E.T.	Static Converter	ATR-72
5018-753-00-00	Sextant	Mixing Audio Amplifier	ATR-72
5126-220-80-11	Sextant	Fuel Temp. Indicator	ATR-72
5126-223-80-11	Sextant	Fuel Temp. Indicator	ATR-72
5427-404-80-10	Sextant	COMPT/Duct Indicator	ATR-72
5677-406-80-13	Sextant	Dual Oil Press/ Temp. Indicator	ATR-72
5677-407-80-14	Sextant	Dual Oil Press/ Temp. Indicator	ATR-72
5677-409-80-10	Sextant	Dual Oil Press/ Temp. Indicator	ATR-72
5677-420-80-10	Sextant	Dual Oil Press/ Temp. Indicator	ATR-72
5677-421-80-10	Sextant	Dual Oil Press/ Temp. Indicator	ATR-72
5677-705-80-10	Sextant	NH, NL Speed Indicator	ATR-72
5677-750-80-12	Sextant	Torque Indicator	ATR-72
5677-755-80-11	Sextant	Torque Indicator	ATR-72
5677-756-80-10	Sextant	Torque Indicator	ATR-72
5677-765-80-10	Sextant	Torque Indicator	ATR-72
5677-766-80-10	Sextant	Torque Indicator	ATR-72
5678-553-80-12	Sextant	Turbine Temp. Indicator	ATR-72
5678-555-80-10	Sextant	Turbine Temp. Indicator	ATR-72
5678-559-80-10	Sextant	Turbine Temp. Indicator	ATR-72
5678-704-80-11	Sextant	NH Indicator	ATR-72
5678-705-80-12	Sextant	NH Indicator	ATR-72
5678-710-80-12	Sextant	NP Indicator	ATR-72
5678-711-80-10	Sextant	NP Indicator	ATR-72

5678-713-80-10	Sextant	NP Indicator	ATR-72
5678-715-80-10	Sextant	NP Indicator	ATR-72
5678-716-80-10	Sextant	NP Indicator	ATR-72
64050-660-1	Sextant	Airspeed Indicator	ATR-72
64050-661-1	Sextant	Airspeed Indicator	ATR-72
64050-662-1	Sextant	Airspeed Indicator	ATR-72
64050-663-1	Sextant	Airspeed Indicator	ATR-72
64131-560-1	Sextant	Counter Pointer Altimeter	ATR-72
64131-760-1	Sextant	Counter Pointer Altimeter	ATR-72
656-767	Honeywell/Sperry	Compensator	ATR-72
7002638-9XX	Honeywell/Sperry	TAS/Temp Indicator	ATR-72
748-465-4	Intertechnique	Fuel Quantity Indicator	ATR-72
748-465-5	Intertechnique	Fuel Quantity Indicator	ATR-72
748-522-1	Intertechnique	Fuel Quantity Indicator	ATR-72
748-522-2	Intertechnique	Fuel Quantity Indicator	ATR-72
748-681-1	Intertechnique	Fuel Quantity Indicator	ATR-72
748-681-2	Intertechnique	Fuel Quantity Indicator	ATR-72
748-682-1	Intertechnique	Fuel Quantity Indicator	ATR-72
748-682-2	Intertechnique	Fuel Quantity Indicator	ATR-72
748-722	Intertechnique	Repeater Indicator	ATR-72
748-724	Intertechnique	Repeater Indicator	ATR-72
749-158	Intertechnique	Fuel Quantity Indicator	ATR-72
749-159	Intertechnique	Fuel Quantity Indicator	ATR-72
749-160	Intertechnique	Fuel Quantity Indicator	ATR-72
749-161	Intertechnique	Fuel Quantity Indicator	ATR-72
749188	Intertechnique	Triple Pressure Indicator	ATR-72
749757	Intertechnique	Fuel Quantity Indicator	ATR-72
749758	Intertechnique	Fuel Quantity Indicator	ATR-72
749759	Intertechnique	Fuel Quantity Indicator	ATR-72
749760	Intertechnique	Fuel Quantity Indicator	ATR-72
8107-110-00-10	MORS	Engine Oil Pressure Sensor	ATR-72
940605-31	Faure Herman	Flow Meter Indicator	ATR-72
940605-32	Faure Herman	Flow Meter Indicator	ATR-72
940605-41	Faure Herman	Flow Meter Indicator	ATR-72
940605-42	Faure Herman	Flow Meter Indicator	ATR-72
940-638-X	Faure Herman	Fuel Flow Meter Indicator	ATR-72
940-639-X	Faure Herman	Fuel Flow Meter Indicator	ATR-72
AI-804	J.E.T.	Attitude Indicator	ATR-72
C14129BA	Sextant	Altimeter	ATR-72
C14130AA	Sextant	Altimeter	ATR-72
C16222AA01	Sextant	Torque Indicator	ATR-72
PC-251	Marathon Flite-	250 VA Static Inverter	ATR-72
SC-841A	J.E.T.	Static Converter	ATR-72
WL1001KCA1	S.I.R.S.	Standby Compass	ATR-72