

ITEM	FUNCTION REQUIRED	WEEKLY	3 MONTHS OR 3,000 MILES	6 MONTHS OR 6,000 MILES	12 MONTHS OR 12,000 MILES
Brakes	Test that they are operational.	At Every Use			
Brake Adjustment	Adjust to proper operating clearance (not required with Nev-R-Adjust® brakes).		X		
Brake Magnets	Inspect for wear and current draw.			X	
Brake Linings	Inspect for wear or contamination				X
Brake Controller	Check for correct amperage and modulation.			X	
Brake Cylinders	Check for leaks, sticking.				X
Brake Lines	Inspect for cracks, leaks, kinks.				X

Trailer Brake Wiring	Inspect wiring for bare spots, fray, etc.				X
Breakaway System	Check battery charge and switch operation.	At Every Use			
Hub/Drum	Inspect for abnormal wear or scoring.				X
Wheel Bearings and Cups	Inspect for corrosion or wear. Clean and repack.				X
Seals	Inspect for leakage. Replace if removed.				X
Springs	Inspect for wear, loss of arch.				X
Suspension Parts	Inspect for bending, loose fasteners and wear.			X	

Suspension Wet Bolts & Equalizers	Grease.		X		
Extreme Duty Bushings	Grease.		X		
Hangers	Inspect welds.				X
Wheel Nuts and Bolts	Tighten to specified torque values.		X		
Wheels	Inspect for cracks, dents, or distortion.			X	
Tire Inflation Pressure	Inflate tires to mfg's. specifications.	X			
Tire Condition	Inspect for cuts, wear, bulging, etc.		X		