

Operation Instructions

1. Make sure deep cycle battery is fully charged. Before clamping wobbler and trap alligator clips to battery, make sure the thrower toggle switch on the trap is set to off.
2. Connect foot pedal to the corded 3 prong plug coming out of the trap. ****NEVER PLUG THIS INTO A WALL.**
3. Connect red alligator clips to the positive battery post and the black alligator clips to the negative battery post.
4. Flip the thrower toggle switch on the trap up to "disarm." Once arm moves to 12 o'clock position, turn the machine back off and load STANDARD SIZE CLAYS ONLY into the stacker tube assembly. Once the trap is loaded, you can flip the thrower toggle switch down to "on." The arm will rotate counterclockwise and automatically load a clay onto the throwing arm. **THE TRAP IS NOW COCKED. PLEASE USE EXTREME CAUTION.**
5. To turn the wobbler on, flip the wobbler toggle switch to on. The wobbler will begin moving the trap head side to side until it is manually turned off.
6. ALWAYS set thrower up in designated areas throwing to the north. **NEVER ADJUST TRAP WHEN COCKED AND IN FIRING POSITION!!!**
7. With the shooter/bystanders standing to the left or behind the trap, press the foot pedal to throw the clay!
8. When you are done shooting, switch the thrower toggle switch to disarm, hold the foot pedal down until the throwing arm reaches 12 o'clock, and turn the thrower toggle switch to off. To turn the wobbler off, flip the wobbler toggle switch to "off". The trap is now safe to unload/move.

