

HURRICANE 200Pro

电启动大两轮车图册



FIG. 1 FRAME GROUP

NO	CODE	DESCRIPTION		QTY
1-1	57100-LC	车架焊接总成	FRAME BODY COMP.	1
1-2	58001-PL	左装饰板	DUMMY PLATE. L	1
1-3	58002-PL	右装饰板	DUMMY PLATE. R	1
1-4	618710000125	M10*1.25自锁螺母, GB6187	LOCKING NUT M10*1.25, GB6187	7
1-5	578910020125	螺栓M10*1.25*20, GB5789	BOLT M10*1.25*20, GB5789	1
1-6	44105-LC	刹车固定板	RR. BRAKE CONNECTING ROD	1
1-8	57891006012505	M10*1.25*60螺栓, GB5789	FLANGE BOLT M10*1.25*60, GB5789	2
1-9	58210-LC	后摆臂	REAR SWING ARM	1
1-10	7.020.077	减震套 $\Phi 10 \times \Phi 30 \times 30/35$	SHOCK ABSORBING BUSHING $\Phi 10 \times \Phi 30 \times 30/35$	6
1-11	578906016125	M6*16螺栓, GB5789	FLANGE BOLT M6*16, GB5789	6
1-12	58401-L	单撑弹簧	SIDE STAND SPRING	1
1-13	58410--PL	单撑	SIDE STAND	1
1-14	58402-L	单撑螺栓	SIDE STAND BOLT	1
1-15	96000600000002	GB96 $\Phi 6$ 平垫	WASHER $\Phi 6$, GB96	4
1-16	58510-L	脚踏组件	PEDAL	2
1-17	T8826003500002	圆柱销 $\Phi 6 \times 35$, GB/T882	PIN $\Phi 6 \times 35$, GB/T882	4
1-18	58040-LC	发动机吊架	ENGINE LIFTING BRACKET	1
1-19	58011-LA	发动机支架轴套 $\Phi 10 \times \Phi 17-75$	SPACER, ENGINE BRACKET	1
1-20	578910170125	GB5789 M10*1.25*170螺栓	FLANGE BOLT M10*1.25*170, GB5789	4
1-21	58050-LC	发动机吊架固定座	ENGINE PYLON FIXED	1
1-22	58520-LB	左后脚蹬组件	PEDAL. RR. L	1
1-23	GB911502000002	开口销 $\Phi 1.5 \times 20$	COTTER PIN $\Phi 1.5 \times 20$	4
1-24	58530-LB	右后脚蹬组件	PEDAL. RR. R	1

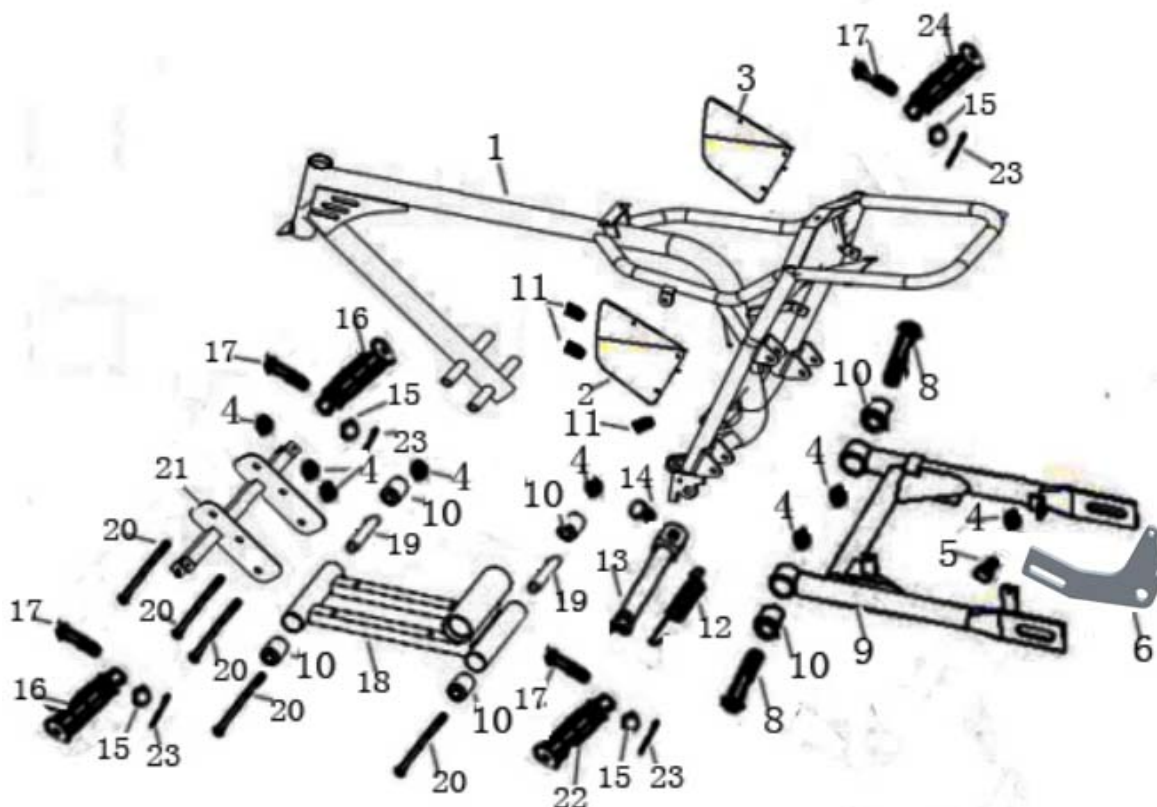


FIG. 2 DRIVE ASSY

NO	CODE	DESCRIPTION		QTY
2-1	58210-LB	离合器罩安装板(上)	CLUTCH COVER MOUNTING PLATE (UP)	1
2-2	58220-LC	离合器罩安装板(下)	CLUTCH COVER MOUNTING PLATE (DOWN)	1
2-3	578908016125	M8*16螺栓, GB5789	FLANGE BOLT M8*16, GB5789	4
2-4	6004-2RS	6004轴承	BEARING 6004-2RS	2
2-5	8. 011. 057-LA	传动轴(6004轴承状态)	TRANSITIONAL SHAFT	1
2-6	8011077080G000	输出链轮 (小齿轮)9齿-420	OUTPUT GEAR 9T-420	1
2-7	618716000150	M16*1. 5自锁螺母, GB6187	LOCKING NUT M16X1. 5, GB6187	1
2-8	58209-PL1	平键5*5-65	KEY 5*5-65	1
2-9	420-106	106节420链条	DRIVE CHAIN 420-106	1
2-10	420-10	420链条接头组件	420 CHAIN MASTER LINK	1
2-11	578906012100	M6*12螺栓	FLANGE BOLT M6*12	2
2-12	58003-LC	链罩	CHAIN COVER	1
2-13	94571400015005	GB9457 M14*1. 5开槽螺母	CASTLE NUT M14*1. 5, GB9457	1
2-14	GB912502500002	GB91 Φ 2. 5*25开口销	COTTER PIN Φ 2. 5*25, GB91	1

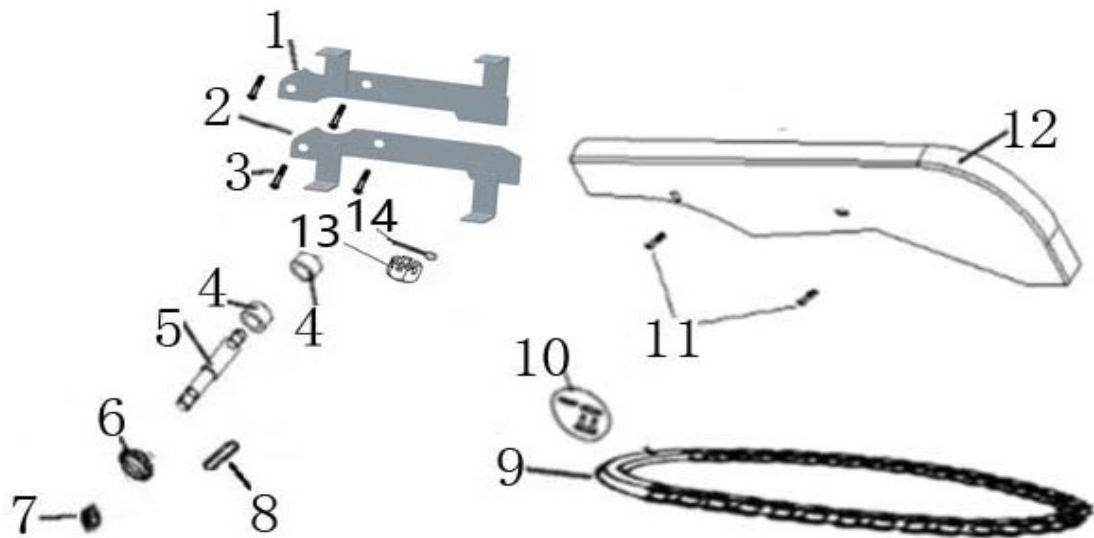


FIG. 3 REAR ABSORBER ASSY

NO.	CODE	DESCRIPTION		QTY.
3-1	63100-LA	后减震器 (L=250mm)	SHOCK ABSORBER ASSY. RR	2
3-2	578710040125	螺栓M10*1.25*40, GB5787	FLANGE BOLT M10*1.25*40, GB5787	4
3-3	618710000125	M10*1.25自锁螺母, GB6187	LOCKING NUT M10*1.25, GB6187	4

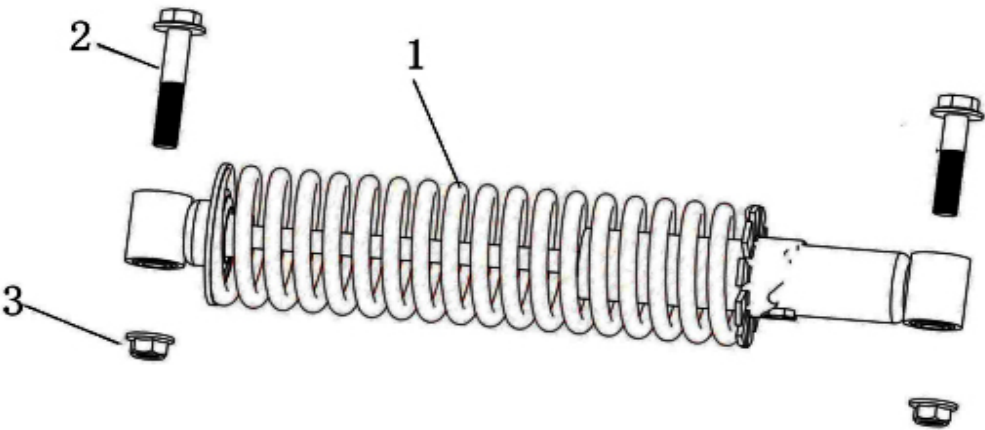


FIG. 4 ERING SHAFT ASSY

NO.	CODE	DESCRIPTION		QTY.
4-1	5789108030125	M10*27*1.25普通螺栓, GB5789	BOLT M10*27*1.25, GB5789	2
4-2	40510-L	油门座组件	THROTTLE BRACKET COMP.	1
4-3	60120-L	油门线组件	THROTTLE CABLE COMP.	1
4-4	58193-N	左把套	GRIP L.	1
4-5	40101-L	方向把	HANDLEBAR	1
4-6	43014-L	方向把固定上座	HANDLEBAR UPPER FIXED SEAT	2
4-7	578708035125	螺栓M8*35, GB5787	FLANGE BOLT M8*35, GB5787	4
4-8	43015-L	方向把固定下座	HANDLEBAR LOWER FIXED SEAT	2
4-9	45200-YL	后液刹	BRAKE ASSY	1
4-10	44200-YL	前液刹	BRAKE ASSY	1
4-11	40520-L	右把套组件	GRIP R.	1
4-12	618710000125	M10*1.25自锁螺母, GB6187	LOCKING NUT M10*1.25, GB6187	2
4-14	45220-YL	后制动蹄片 (副)	REAR BRAKE PADS. RR. (OUTSIDE、INSIDE)	2
4-15	578708025125	M8*25螺栓, GB5787	BOLT M8*25, GB5787	4
4-16	930008000000	Φ8弹垫, GB93	WASHER Φ8, GB93	4
4-17	970008000000	Φ8平垫, GB97	WASHER PLATE Φ8, GB97	4
4-18	44220-YL	前制动蹄片 (副)	FRONT BRAKE PADS. RR. (OUTSIDE、INSIDE)	1
4-19	80010-LC	组合开关 (不带喇叭)	Start switch	1
4-20	90001-LC	电门锁安装板	KEY BRACKET	1
4-21	90010-LC	电门锁	KEY	1

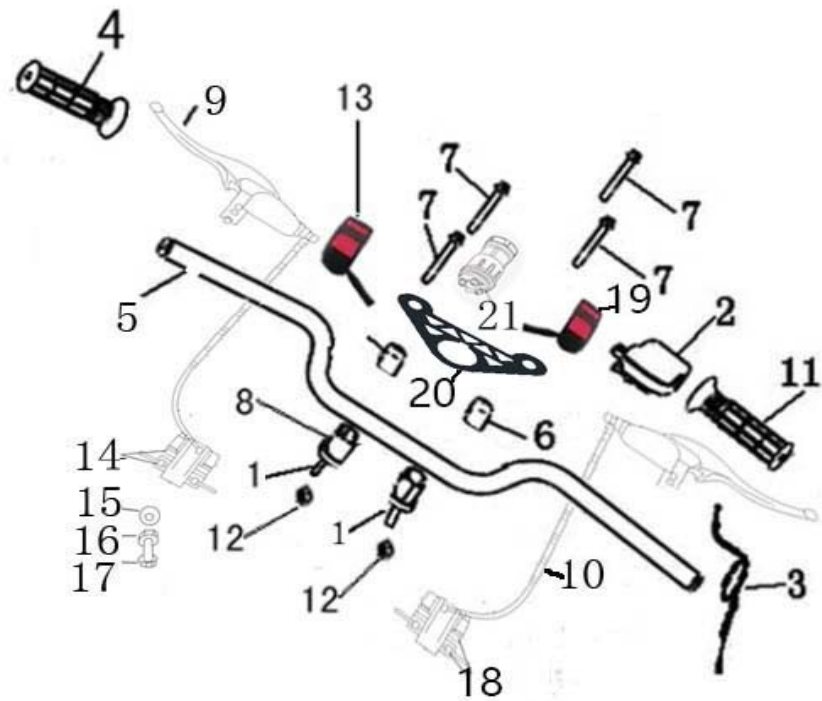


FIG. 5 FRONT FORK ASSY

NO.	CODE	DESCRIPTION		QTY.
5-1	40330-YL	前减震器组件(前液刹)	SHOCK ABSORBER ASSY. FR	1
5-2	578710035125	螺栓M10*1.25*35, GB5787	FLANGE BOLT M10*1.25*35, GB5787	2
5-3	43100-PL	前叉焊接组件	FRONT FORK WELDING COMP.	1
5-4	43004-L	下轴承下钢碗 (QJ50QT-2)	LOWER BEARING STEEL BOWL	1
5-5	43003-L	下轴承上钢碗 (QJ50QT-2)	LOWER BEARING PROCURED BOWL	1
5-6	43002-L	上轴承下钢碗 (QJ50QT-2)	UPPER BEARING STEEL BOWL	1
5-7	43005-L	钢珠 (QJ50QT-2)	BALL BEARING	2
5-8	43001-L	上轴承上钢碗 (QJ50QT-2)	UPPER BEARING PROCURED BOWL	1
5-9	43008-L	并紧螺母 M25* (QJ50QT-2)	FRONT FORK BOLT M25*1	1
5-10	58001-L	方向柱垫片	STEERING SHAFT WASHER	1
5-11	43102-L	(上) 连板	CONNECTING PLATE	4
5-12	57891002512505	螺栓M10*1.5*25, GB5789	FLANGE BOLT M10*1.5*25, GB5789	2
5-13	43008-L	并紧螺母M25*1 (QJ50QT-2)	FRONT FORK BOLT M25*1	1
5-14	40320-PL	前减震器组件	SHOCK ABSORBER ASSY. FR	1

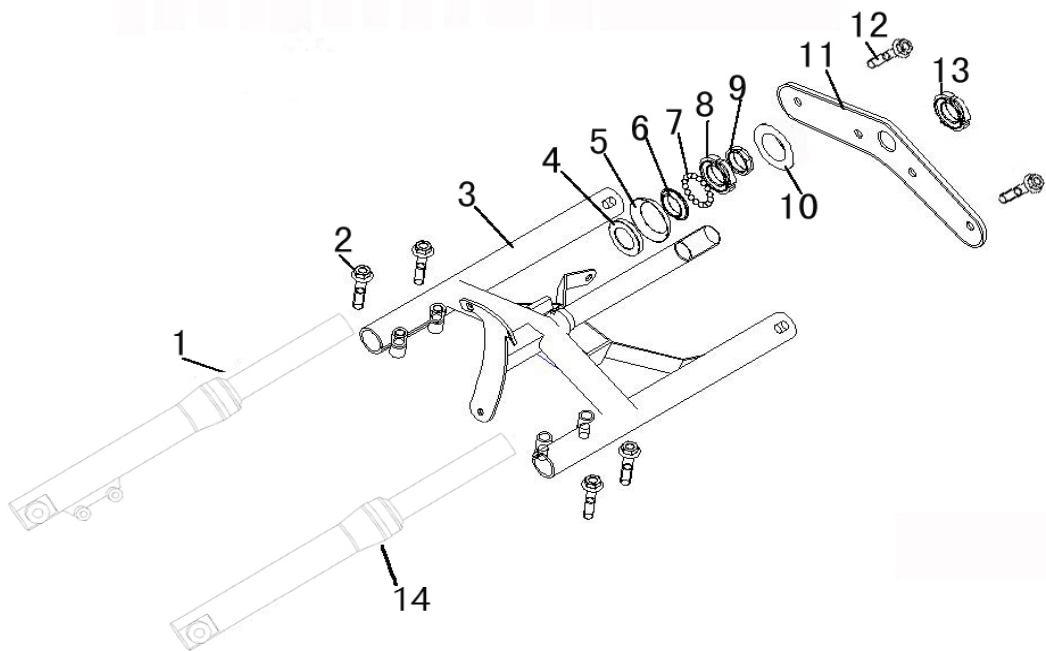


FIG. 6 COVER PLASTIC

NO.	CODE	DESCRIPTION		QTY.
6-1	65001-PL	前泥板 (塑料)	FRONT FENDER (PLASTIC)	1
6-2	578906016100	M6*16螺栓, GB5789	FLANGE BOLT M6*16, GB5789	6
6-2A	578906020100	M6*20螺栓, GB5789	FLANGE BOLT M6*20, GB5789	2
6-3	282342012000	GB2823 ST4. 2*12自攻螺丝	GB2823 ST4. 2*12 Tapping screw	2
6-4	65002-L	装饰盖 (塑料)	DUMMY FUEL TANK CAP	1
6-5	65003-LA	装饰油箱 (塑料/加安装孔)	DUMMY FUEL TANK	1
6-6	51000-PL	座垫组件	SEAT COMP.	1
6-7	578906012100	M6*12螺栓, GB5789	FLANGE BOLT M6*12, GB5789	5
6-8	65001-PL	后泥板 (塑料)	REAR FENDER (PLASTIC)	1
6-9	65008-PL	离合器罩	CLUTCH COVER	1
6-10	617706000100	M6法兰螺母, GB6177	FLANGE NUT M6, GB6177	10
6-11	57101-LB	油箱左侧杆	FUEL TANK SIDE BAR ,L	1
6-12	57102-LB	油箱右侧杆	FUEL TANK SIDE BAR ,R	1
6-13	90746601200005	GB9074.6 组合螺栓M6*12	BOLT M6*12, GB9074.6	4
6-14	GB96	垫片 $\Phi 6$ 平垫, GB96	WASHER $\Phi 6$, GB96	3
6-15	618706000125	M6自锁螺母, GB6187	LOCKING NUT M6, GB6187	1

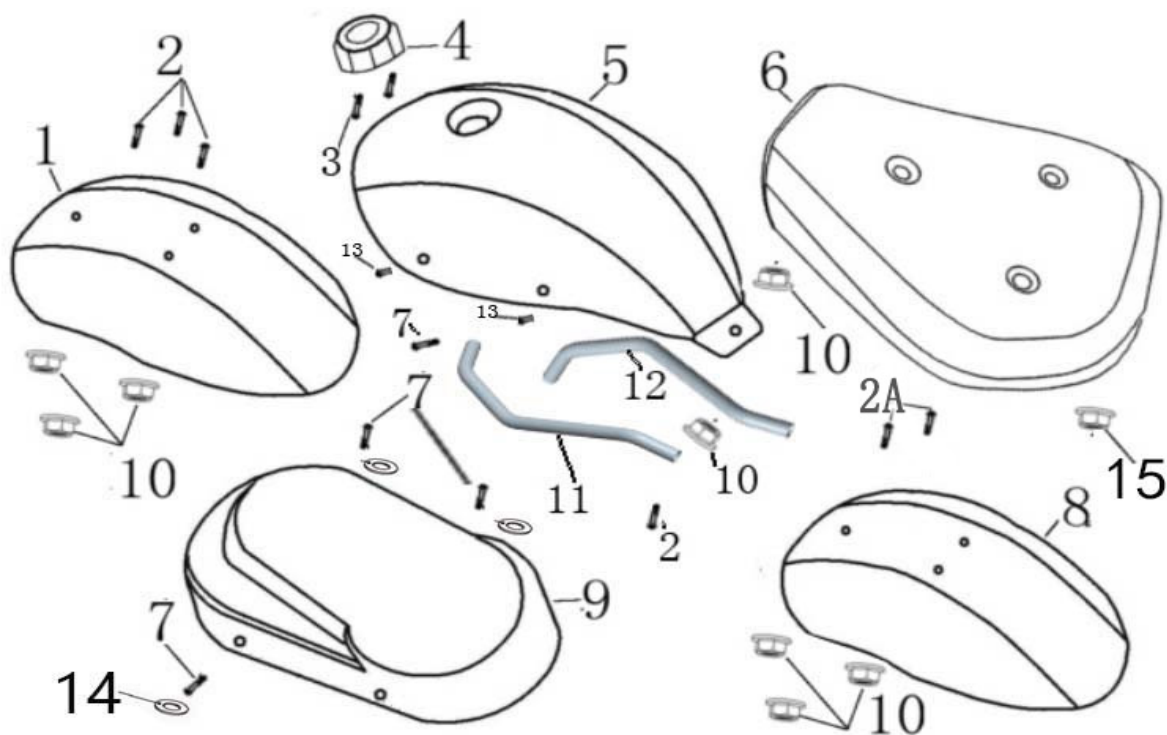


FIG. 7 FRONT WHEEL

NO.	CODE	DESCRIPTION		QTY.
7-1	44110-YL	前轮钢圈(前液刹)	FRONT RIM	1
7-2	44003-L	前轮外胎19*7-8	FRONT TIRE 19*7-8	1
7-3	44100-YL	前轮总成	FRONT WHEEL ASSY	1
7-4	44001-L	前轮轴M14*1.5*310(螺纹20MM)	FRONT AXLE M14*1.5*310	1
7-5	44005-YL	刹车盘螺栓(刹车自带)	FLANGE BOLT	3
7-6	618708000125	M8自锁螺母, GB6187	LOCKING NUT M8, GB6187	4
7-7	44007-YL	前刹车盘	BRAKE DISCS, FR	1
7-8	6202-2RS	轴承6202	BEARING 6202-2RS	2
7-9	44010-L	气门嘴	AIR VALVE	1
7-10	44002-L	前轮隔套	FRONT SPACER BUSHING	1
7-11	618714000150	M14*1.5自锁螺母, GB6187	LOCKING NUT M14*1.5, GB6187	1

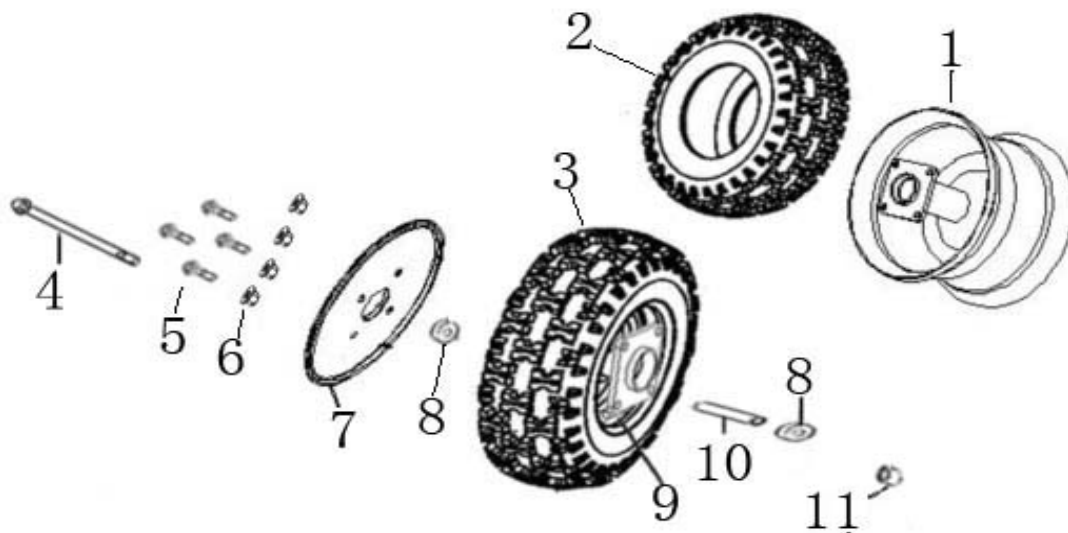


FIG. 8 REAR WHEEL

NO.	CODE	DESCRIPTION		QTY
8-1	54110-L	后轮圈组件	REAR RIM	1
8-2	44003-L	后轮胎19*7-8	REAR TIRE 19*7-8	1
8-3	54100-L	后轮总成	REAR WHEEL ASSY.	1
8-4	54001-LA	后轮轴M14*1.5-345(螺纹25)	REAR AXLE M14*1.5-345	1
8-5	54004-YL	后轮右隔套1Φ16*Φ22-10.5	REAR WHEEL SPACER BUSHING R Φ16*Φ22-10.5	1
8-6	54005-YL	后轮右隔套2Φ16*Φ22-17.5	REAR WHEEL SPACER BUSHING R Φ16*Φ22-17.5	1
8-7	54007-YL	后刹车盘	BRAKE DISCS, RR	1
8-8	6202-2RS	6202轴承	BEARING 6202-2RS	2
8-9	44010-L	气门嘴	AIR VALVE	1
8-10	54011-YL	后轮轴承隔套	REAR WHEEL BEARING SPACER BUSHING	1
8-11	54006-L	46齿链轮-420	GEAR-46T-420	1
8-12	578908025125	螺栓M8*25, GB5789	FLANGE BOLT M8*25, GB5789	8
8-13	54006-PL	后轮左隔套Φ16*Φ22-36	REAR WHEEL SPACER BUSHING L Φ16*Φ22-36	1
8-14	618708000150	螺母M14*1.5, GB6187	LOCKING NUT M14*1.5, GB6187	1
8-15	54030-L	链条调节器组件	CHAIN ADJUSTER COMP.	2
8-16	618708000125	M8自锁螺母, GB6187	LOCKING NUT M8, GB6187	4
8-17	57830802012505	螺栓M8*20, GB5783	FLANGE BOLT M8*20, GB5783	4

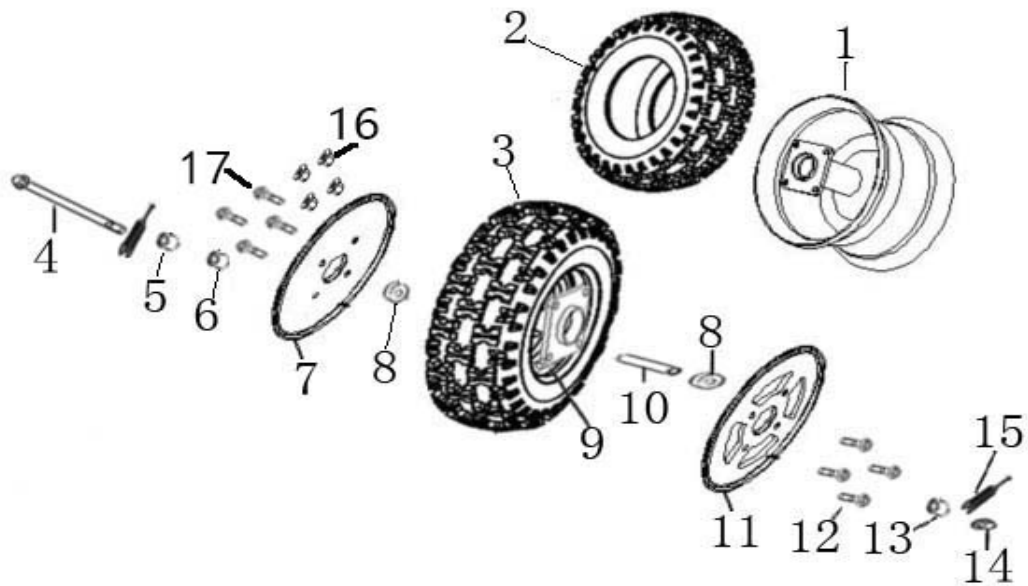


FIG. 9 ENGINE

NO.	CODE	DESCRIPTION		QTY.
9-1	10000-LC	发动机总成 (带启动马达)	ENGINE COMP.	1
9-2	578708055125	M8*55螺栓, GB5787	FLANGE BOLT M8*55, GB5787	4
9-3	930008000000	Φ8弹垫, GB93	LOCKING WASHER Φ8, GB93	4
9-4	970008000000	Φ8平垫, GB97	FLAT WASHER Φ8, GB97	4
9-5	618708000125	M8自锁螺母, GB6187	LOCKING NUT M8, GB6187	4
9-8	50001-80	油箱橡胶垫 Φ10*Φ22*4	FUEL TANK CUSHION Φ10*Φ22*4	2
9-9	617706000100	M6螺母, GB6177	FLANGE NUT M6, GB6177	2
9-10	81100-L	大灯总成	HEADLIGHT COMP	1
9-11	81101-L	大灯灯泡 (LED灯泡)	HEADLIGHT BULB	1
9-12	50100-LB	油箱总成	FUEL TANK COMP.	1
9-13	80025-LC	电缆 (电启动状态)	CABLE	1
9-14	JF168-N-08	油箱开关 (含O型圈)	FUEL TANK SWITCH	1
9-15	6.000.145-LB	油箱盖	FUEL TANK CAP	1
9-16	57890601610005	法兰螺栓M6*16, GB5789	GB818 BLOT M6*16, GB5789	2
9-17	618706000100	自锁螺母M6, GB6187	LOCKING FLANGE NUT M6, GB6187	2
9-18	80036-K5	稳压器 (整流器)	voltage regulator	1
9-19	80020-LC	电瓶 (12V7Ah)	BATTERY 12V 7AH	1
9-20	58127-LC	电瓶压条	BATTERY COVER	1
9-21	58128-LC	电瓶压条挂钩	BATTERY BEAD HOOK	1
9-22	57890601610005	GB5789法兰螺栓M6*16	BOLT M6*16, GB5789	1
9-23	80019-K5	电瓶盖	BATTERY COVER	1
9-24	80018-K5	电瓶垫	LOWER BATTERY CUSHION	1
9-25	80022-LC	尾灯	TAILLIGHT	1
9-26	970005000000	Φ5平垫, GB97	GB97 WASHER Φ5, GB97	1
9-27	617005000100	GB6170六角螺母M5	GB6170 NUT M5	1
9-28	57199-LC	尾灯安装板 (K1尾灯)	TAILLIGHT MOUNTING PLATE	1

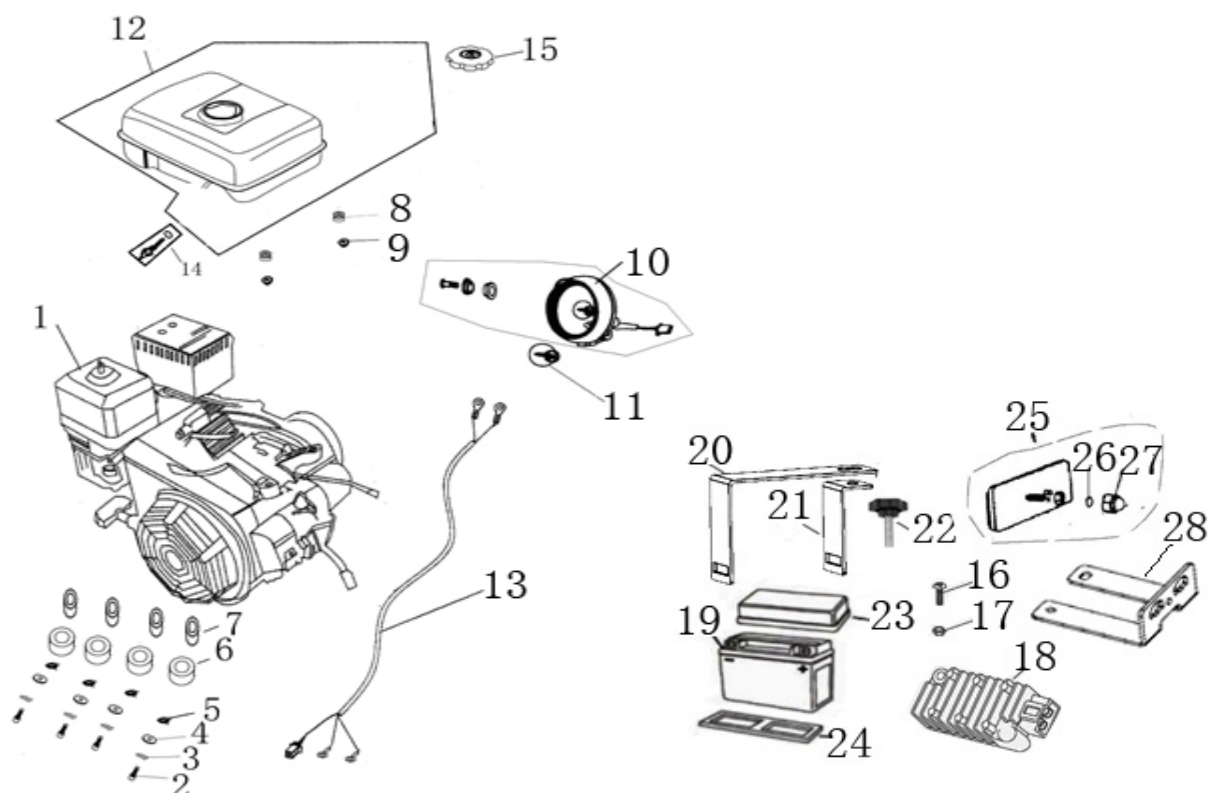


FIG. 10 CVT

NO	CODE	DESCRIPTION		QTY
10-1	9. 500. 001	前离合器总成（带轴承）	FRONT CLUTCH 80T	1
10-3	10012-LA	前离合器调整垫片	WASHER $\Phi 30*\Phi 20*1$	2
10-4	9. 300. 008	压紧衬套	BUSHING BOLCK	1
10-5	57870804012505	GB5787法兰面螺栓M8*40	BOLT, M8*40, GB5787	1
10-6	9. 100. 018	皮带	BELT	1
10-7	9. 500. 010	后离合器	DRIVEN PULLEY	1

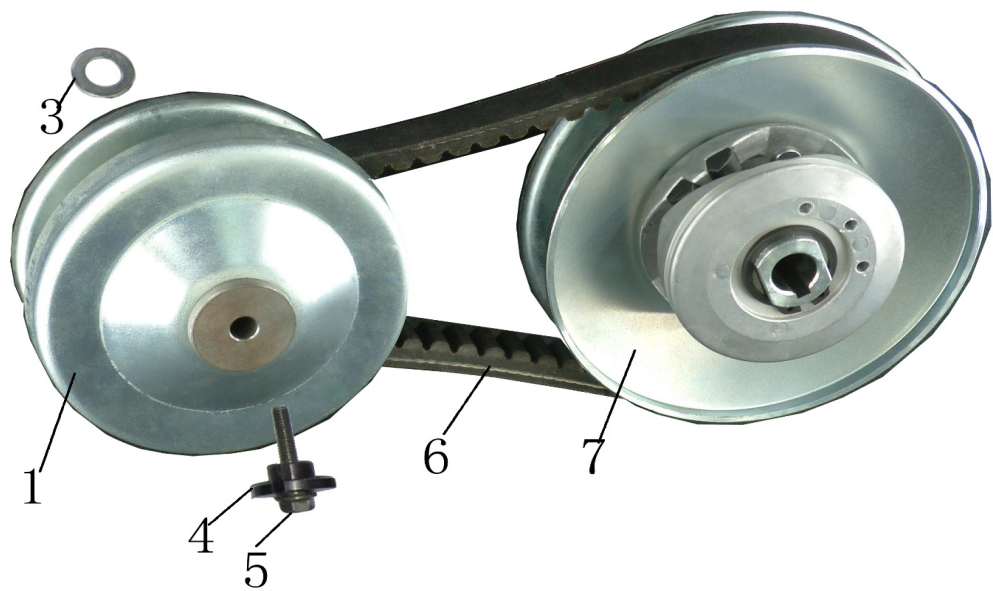


FIG. 11 ARNING STICKERS

NO.	CODE	DESCRIPTION		QTY.
11-1	90002-50L	警告贴花1	LABEL. WARNING 1	1
11-2	90007-50L	警告贴花2	LABEL. WARNING 2	1
11-3	90001-50L	警告贴花3	LABEL. WARNING 3	1
11-4	90006-50L	警告贴花4	LABEL. WARNING 4	1
11-5	90004-50L	警告贴花5	LABEL. WARNING 5	1
11-6	90003-50L	警告贴花6	LABEL. WARNING 6	1
11-7	90010-LC	商标贴花	Trademark decals	1

2



6




5



3



1

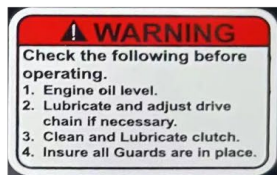

4

