


# How to Read the iPERL® Quick Guide

## REGISTER DISPLAY

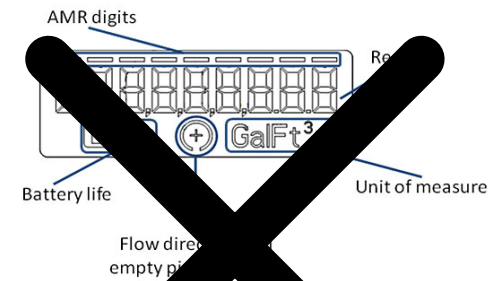

**AMR digits:** (4 to 8 Digits) The AMR digit bar shows which digits will be read when the meter is read through the communications interface.


**Battery Icon:** The battery icon will turn on when the battery is low. The meter is near the end of line.

**Flow direction:** The flow direction is indicated by the flow arrow. The empty pipe icon is displayed when the pipe is empty.


Flow direction	Display
Positive Flow	Circle with +
Negative Flow	Circle with -
Low Flow Cut off	Circle with X
Empty Pipe	Empty circle

**Unit of Measure\*:** Gallon (GAL), Feet (FT³), or Cubic Meter (M³)


### Gallons 5/8", 3/4" and 1"

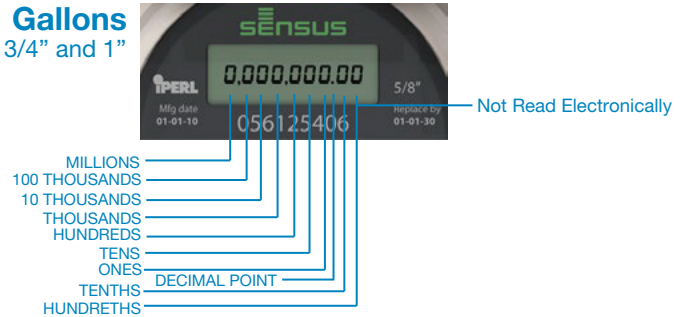

### Cubic Feet 5/8", 3/4" and 1"

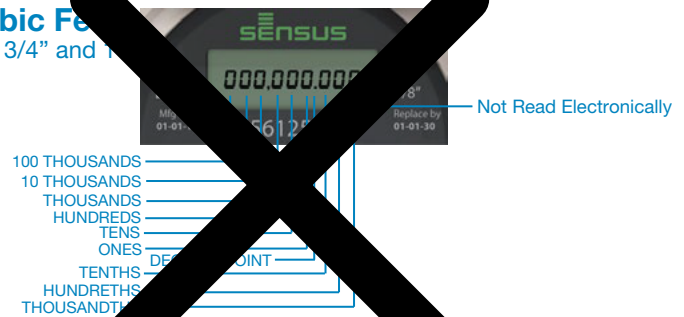

### Cubic Meters 5/8", 3/4" and 1"

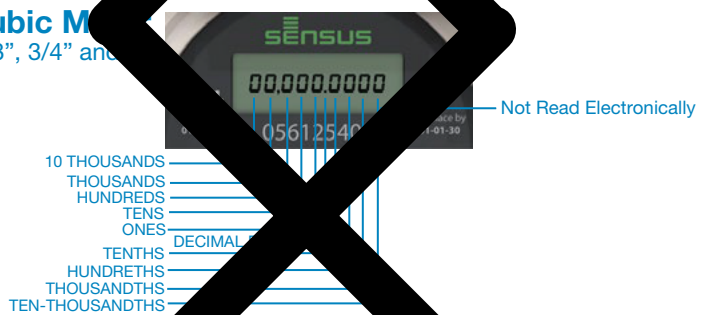

\*AMR/AMI resolution and units of measure are programmable.

© 2016 Sensus. All products purchased and services performed are subject to Sensus' terms of sale, available at either; <http://na.sensus.com/TC/TermsConditions.pdf> or 1-800-638-3748. Sensus reserves the right to modify these terms and conditions in its own discretion without notice to the customer. The Sensus logo is a registered trademark of Sensus.

This document is for informational purposes only, and SENSUS MAKES NO EXPRESS WARRANTIES IN THIS DOCUMENT. FURTHERMORE, THERE ARE NO IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES AS TO FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY. ANY USE OF THE PRODUCTS THAT IS NOT SPECIFICALLY PERMITTED HEREIN IS PROHIBITED.