

PREDATOR

PARTS MANUAL



PENDPAC

Made In U.S.A.

SERIAL NUMBER:

VB: _____

MFG. DATE: _____

0600-007-3-2007

WARRANTY

There must be in the file of Pendpac within ten (10) days after delivery of an Predator Unit (The "Product"), a valid warranty registration card which the customer should fill out immediately after the "Product" is sold. The warranty card is enclosed in the Parts Manual. Pendpac will not be obligated to warranty the unit unless this registration is on file.

Pendpac warrants the "Product" sold to be free from defects in material and workmanship under normal use and service for six (6) months after the date of delivery to the initial user, subject to the following provisions:

I. This warranty is limited to the repair or replacement of parts such as shall appear to an PENDPAC representative upon inspection to have been defective in material or workmanship. A Warranty Authorization number must be issued by a Pendpac representative before warranty work is to proceed. (Failure to get authorization may result in non-reimbursement.) There must be a warranty claim form (supplied by Pendpac) properly filled out and mailed to Pendpac within thirty (30) days of the date of failure. Parts needing to be returned must have a return authorization number and must be returned to Pendpac within thirty (30) days for inspection before credit can be given. Warranty parts shall be shipped to the factory pre-paid motor freight or standard U.P.S. Warranty parts will be shipped from the factory motor freight or standard U.P.S.

II. Warranty with respect to optional equipment is subject to warranty by their respective manufacturer. Such warranties shall be handled direct through the respective manufacturer or their distributor.

This warranty is in lieu of and excludes all other representations or warranties expressed or implied and does not apply where alterations or structural repair has been made to the "Product" without written authorization by a Pendpac representative. Pendpac's obligation under this warranty does not apply in case of any alterations, accidents, misuse, abuse, neglect, or if maintained or operated in other manner than recommended or approved in the PENDPAC Owners Manual

THERE IS NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE NOR IS THERE ANY OTHER WARRANTY, EXPRESS OR IMPLIED, EXCEPT AS SPECIFICALLY STATED HERIN. PENDPAC SHALL IN NO EVENT BE LIABLE FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES OR CLAIMS OF ANY THIRD PARTY AGAINST CUSTOMER.

IMPROVEMENTS

Pendpac reserves the right to make changes in design and improvements whenever it is believed the efficiency of the products will be improved, but without incurring any obligation to incorporate such improvements in any product which has been shipped or is in service.



1700 North Main
Fairview, Oklahoma 73737

WARRANTY REGISTRATION FORM

NOTE: COMPLETE AND RETURN WITHIN TEN (10) DAYS OF DELIVERY TO VALIDATE WARRANTY.

DEALER: _____
ADDRESS: _____

PURCHASER: _____
ADDRESS: _____

UNIT DESCRIPTION: _____

BODY MODEL NO. : _____
BODY SERIAL NO. : _____
MAST MODEL NO. : _____
MAST SERIAL NO. : _____
GRABBER MODEL NO. : _____
GRABBER SERIAL NO. : _____

DATE PURCHASED: _____
CHASSIS VIN NO. : _____

Mail to:

Pendpac
1700 N. Main
Fairview, OK 73737-2722

TO OUR CUSTOMERS

This manual provides you with the necessary information for the proper parts ordering for your Predator unit plus basic options.

If special schematics are required for the option ordered, they will be inserted in the option section as "special options".

Any questions or problems concerning the electrical or hydraulic schematic should be discussed with Pendpac's service department before changing or modifying.

IMPORTANT

The data and information listed herein is correct to the best of our knowledge and belief. Having been compiled from reliable and official information. However, we cannot assume any responsibility for possible error.

TABLE OF CONTENTS

WARRANTY	PAGE I
WARRANTY REGISTRATION FORM	PAGE II
"TO OUR CUSTOMERS"	PAGE III
TABLE OF CONTENTS	PAGE IV
OPERATING INSTRUCTIONS	PAGE V
PARTS	SECTION 1
HYDRAULICS	SECTION 2
ELECTRICAL	SECTION 3
AIR	SECTION 4
OPTIONS	SECTION 5

OPERATING INSTRUCTIONS

BLOWER OPERATION:

1. Do not operate the blower unit until you have read the Operations Manual that comes with the blower your unit is equipped with.
2. To operate the blower unit the System must be turned on and the access door must be closed and latched.
3. If the access door is opened while the blower motor is running the system is wired to immediately kill the blower motor. Do not alter or disable this feature or bodily injury or death can result.
4. Report any problems to your supervisor and DO NOT OPERATE this unit if not functioning properly. Contact PENDPAC if new switches or safety decals are needed.



CAUTION

NEVER OPEN ACCESS DOOR
WHILE BLOWER UNIT IS RUNNING.
TO OPERATE BLOWER MOTOR
—CLOSE ACCESS DOOR AND LATCH—
—PREDATOR SYSTEM MUST BE ON—
& TRUCK ENGINE MUST BE RUNNING.

0605-770
PENDPAC



CAUTION: ACCESS DOOR MUST BE CLOSED AND LATCHED FOR BLOWER UNIT TO ACTIVATE. BODILY INJURY OR DEATH WILL RESULT IF PROXIMITY SWITCH IS DE-ACTIVATED!

SECTION 1
PARTS


CAUTION	1-1
ENDGATE	1-2
ACCESS DOOR	1-3
MOUNTING BRACKETS	1-4
PACKER	1-5
DECALS	1-6

CAUTION

Unauthorized substitution of parts may affect the performance of this Predator unit possibly resulting in malfunction and leading to damage to equipment or injury to personnel. Only approved replacement parts should be used in the repair of this unit.


Pendpac conducts a continuing program of product improvement that can result in changes or additions of parts. We also maintain multiple sources for many of the parts and components we purchase. When ordering replacement parts, specify the serial and model numbers of the unit being repaired so we can assure that the proper part is sent.

END GATE

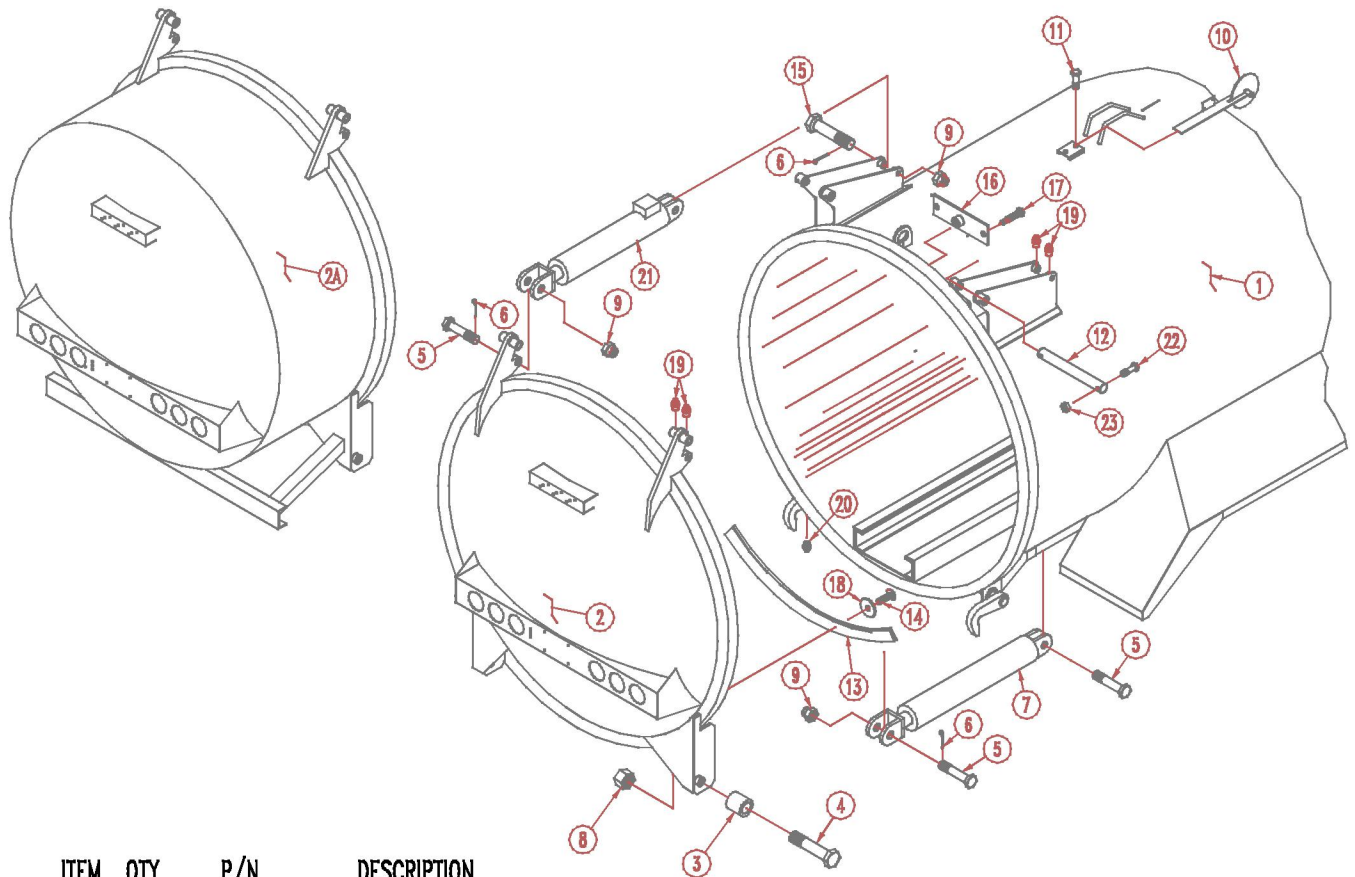


ITEM	QTY	P/N	DESCRIPTION
1	1	(REF.)	TANK STRUCTURE
2	1	0601-003	STANDARD TAIL GATE STRUCTURE
2A	1	0601-011	BUBBLE TAIL GATE STRUCTURE
3	2	0604-059	BUSHING
4	2	0064-917	CAPSCREW, 1.25-8NC X 6.50
5	4	0602-795	DRILLED CAPSCREW
6	10	0040-504	COTTER PIN, .19 X 1.50
7	1	0020-112	HYDRAULIC CYLINDER
8	2	0065-282	HEX NUT, 1.25-8NC NYLOCK
9	6	0065-763	HEX NUT, 1.00-14NF SLOTTED
10	1	0600-661	UPPER LIMITING WHEEL STRUCTURE
11	2	0060-388	CAPSCREW, .38-16NC X 1.00
12	2	0604-393	PIN
13	1	0604-207	HOSE, MCL 1.25 GENERAL PURPOSE X 96.00
14	13	0064-909	CAPSCREW, .38-16NC X 1.25 FLANGED BUTTON HEAD
15	2	0604-382	DRILLED CAPSCREW
16	2	0604-401	COUPLER STRUCTURE
17	4	0064-224	SELF TAPPING SCREW, .38-16NC X 1.00
18	13	0066-033	.38 FLATWASHER
19	8	0041-107	LUBE FITTING, .31 DRIVE
20	4	0041-005	LUBE FITTING, .13 STRAIGHT
21	2	0020-150	HYDRAULIC CYLINDER
22	4	0060-445	CAPSCREW, .38-16NC X 1.00
23	4	0065-180	HEX NUT, .38-16NC NYLOCK

ACCESS DOOR

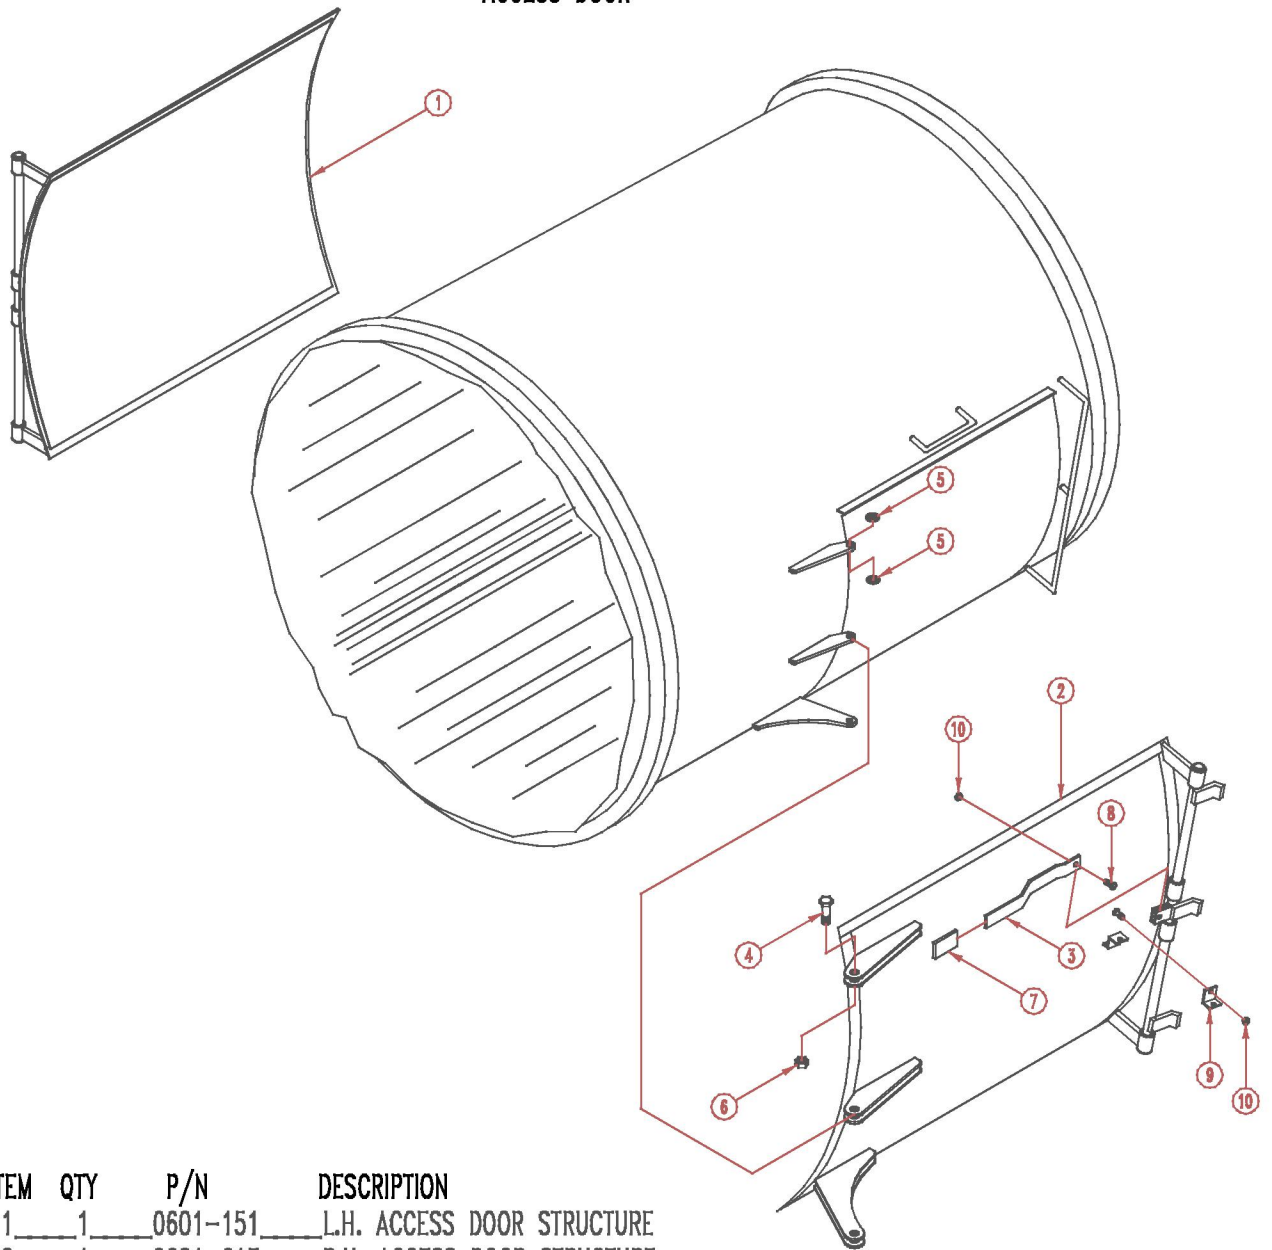


ITEM	QTY	P/N	DESCRIPTION
1	1	0601-151	L.H. ACCESS DOOR STRUCTURE
2	1	0601-613	R.H. ACCESS DOOR STRUCTURE
3	1	0601-231	FORMED FLAT
4	3	0061-419	CAPSCREW, .75-10NC x 2.50
5	6	0066-089	FLATWASHER, .75
6	3	0065-233	HEX NUT, .75-10NC NYLOC
7	1	0044-082	2" VINYL HANDLE GRIP
8	1	0060-388	CAPSCREW, .38-16NC x 1.00
9	1	0601-822	FORMED FLAT
10	2	0065-032	HEX NUT, .38-16NC

MOUNTING BRACKETS

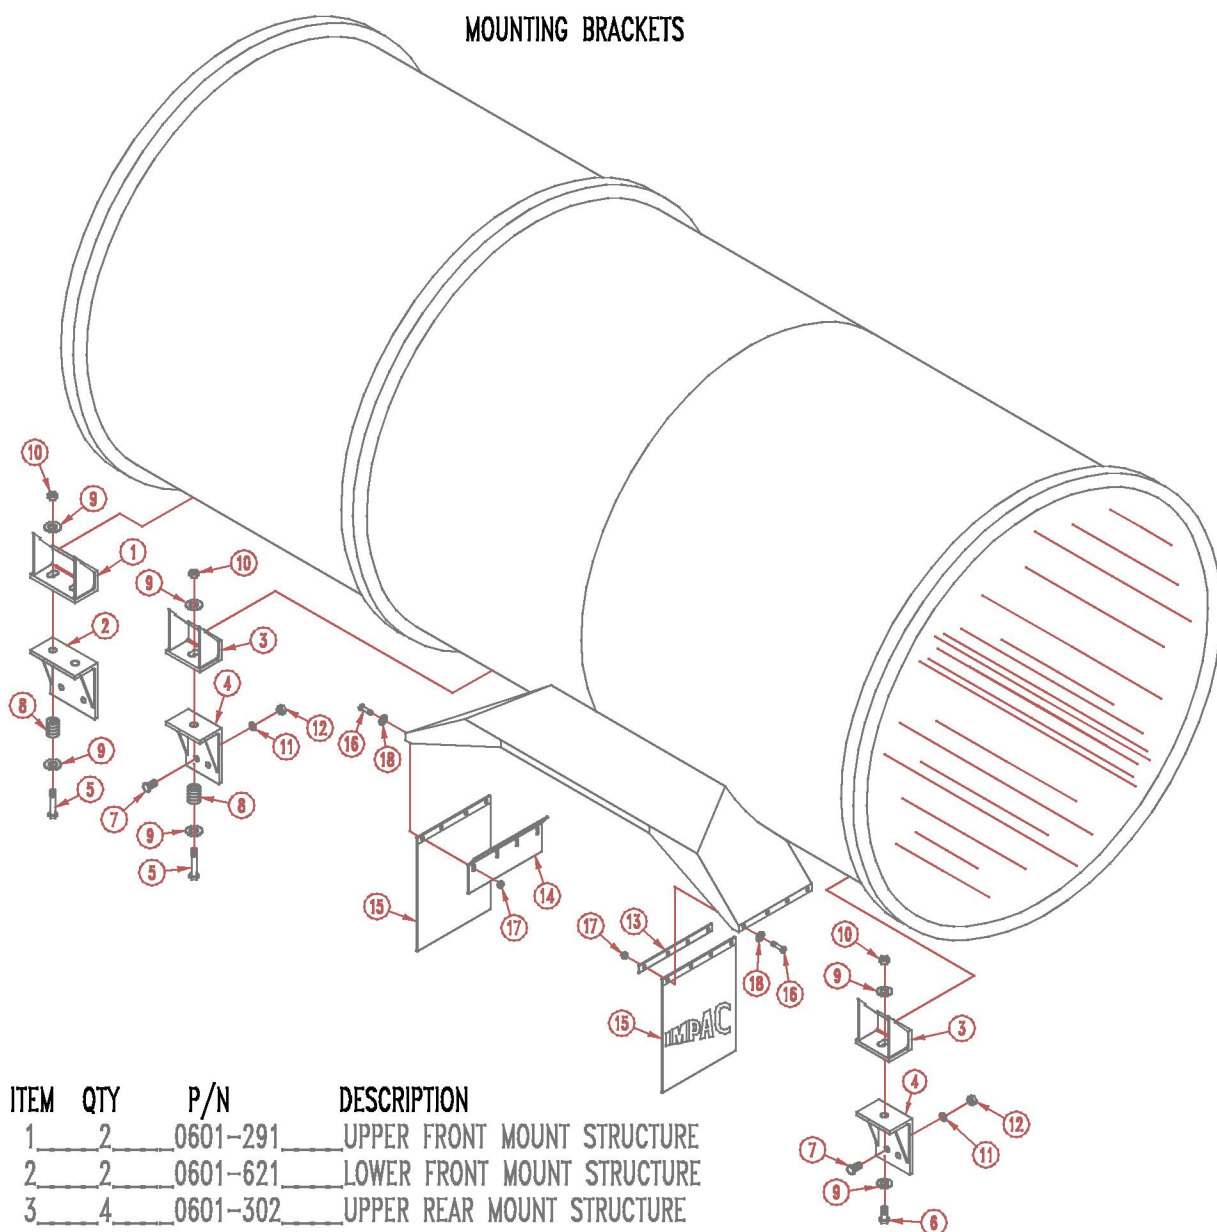

ITEM	QTY	P/N	DESCRIPTION
1	2	0601-291	UPPER FRONT MOUNT STRUCTURE
2	2	0601-621	LOWER FRONT MOUNT STRUCTURE
3	4	0601-302	UPPER REAR MOUNT STRUCTURE
4	4	0601-639	LOWER REAR MOUNT STRUCTURE
5	6	0064-273	CAPSCREW, .88-9NC X 7.00 (GR. 8)
6	2	0064-284	CAPSCREW, .88-9NC X 3.50 (GR. 8)
7	24	0061-158	CAPSCREW, .63-11NC X 2.00
8	6	0044-127	SPRING
9	16	0066-090	.88 FLATWASHER
10	8	0065-247	HEX NUT, .88-9NC NYLOCK
11	24	0067-072	.63 LOCKWASHER
12	24	0065-070	HEX NUT, .63-11NC
13	2	0244-031	MUD FLAP STRAP
14	2	0602-703	MUD FLAP SUPPORT
15	4	0605-148	IMPAC MUD FLAP
16	20	0060-047	CAPSCREW, .25-20NC X 1.25
17	20	0065-312	HEX NUT, .25-20NC WHIZ
18	20	0066-014	.25 FLATWASHER

PACKER

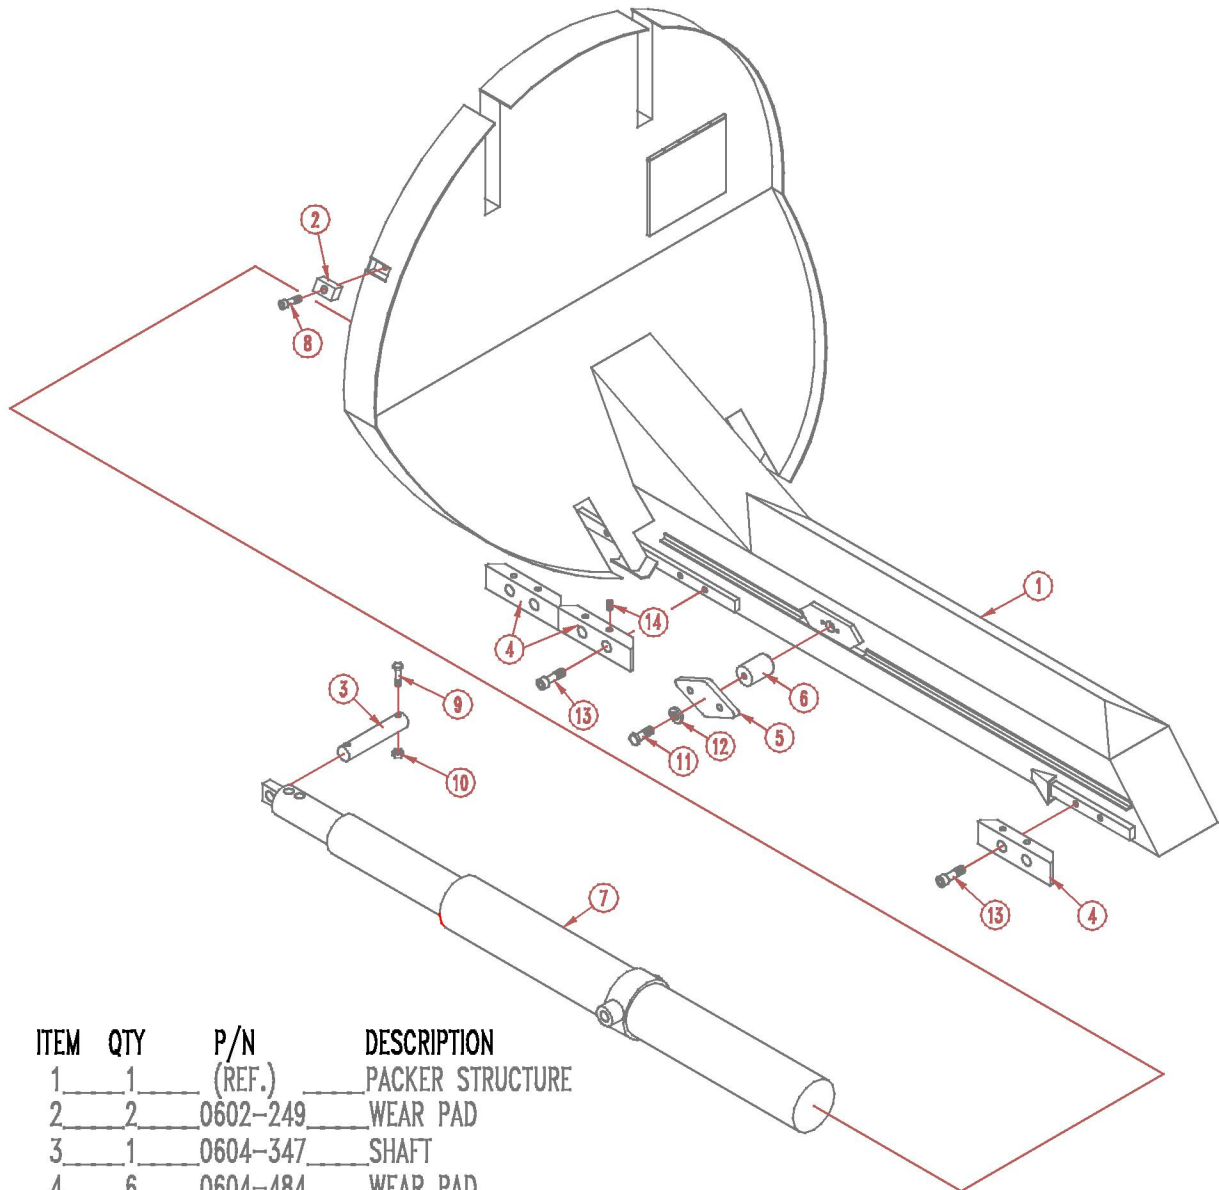

ITEM	QTY	P/N	DESCRIPTION
1	1	(REF.)	PACKER STRUCTURE
2	2	0602-249	WEAR PAD
3	1	0604-347	SHAFT
4	6	0604-484	WEAR PAD
5	2	0604-291	COVER
6	2	0601-696	PIN
7	1	(REF.)	HYDRAULIC CYLINDER
8	2	0064-232	CAPSCREW, .50-13NC X 1.50 SOCKET HEAD
9	2	0060-426	CAPSCREW, .38-16NC X 2.00
10	2	0065-180	HEX NUT, .38-16NC NYLOCK
11	4	0060-388	CAPSCREW, .38-16NC X 1.00
12	4	0067-034	.38 LOCKWASHER
13	12	0064-246	CAPSCREW, .75-10NC X 1.50 SOCKETHEAD
14	12	0064-633	SETSCREW, .38-16NC X .50 (INTERNAL HEX)

DECALS


ITEM	QTY	P/N	DESCRIPTION	LOCATION
1	2	0605-758	PINCH POINT	1-EACH SIDE, REAR OF TANK
2	2	0605-766	ENTER BODY	LEFT OF ACCESS DOOR
3	2	0605-774	STAND CLEAR PACKER	BELOW ITEM #2
4	2	0605-782	CLOSE ACCESS DOOR	BELOW ITEM #3
5	2	0605-793	STAND CLEAR TAILGATE	BELOW ITEM #1
6	1	0605-801	PRECAUTIONS	DASH (INSIDE CAB)
7	3	0605-770	CAUTION BLOWER	BLOWER UNIT (CONTROL PANEL) ACCESS DOORS

SECTION 2

HYDRAULICS

DRIVE LINE	2-1
CONTROL VALVE	2-2
HYDRAULIC TANK	2-3, 2-4
HYDRAULIC SYSTEM	2-5, 2-7
END GATE HYDRAULICS	2-8
PACKER CYLINDER	2-9
GATE LATCH CYLINDER	2-10
GATE LIFT CYLINDER	2-11

DRIVE LINE

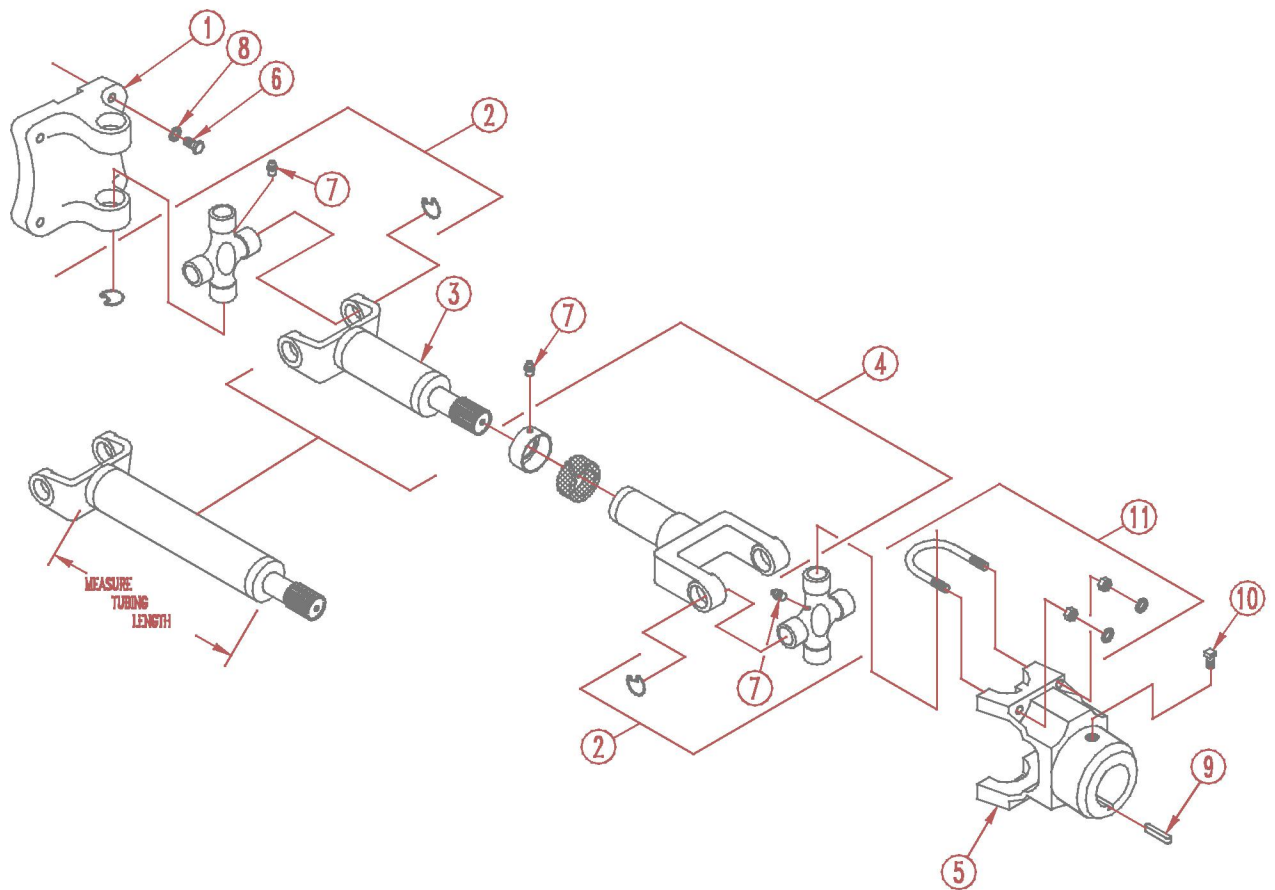


ITEM	QTY	P/N	DESCRIPTION
* 1	1	0093-003	FLANGE YOKE
* 2	2	0093-011	U-JOINT
* 3	1	0093-029	YOKE & SHAFT STR.
* 4	1	0093-030	FEMALE SLIP YOKE
* 5	1	0093-041	YOKE
	6	0064-606	CAPSCREW, .44-20NF X 1.00
** 7	3	0041-032	LUBE FITTING
	8	0067-045	.44 LOCKWASHER
	9	0019-959	KEY
	10	0064-622	SET SCREW, .38-16NC X .75
* 11	1	0093-043	U-BOLT KIT

* RECEIVED IN DRIVE LINE KIT (P/N 0605-002)


** 1 COMES WITH EACH 0093-011 "U-JOINT" & 0093-030 "FEMALE SLIP YOKE"

CONTROL VALVE 0024-005

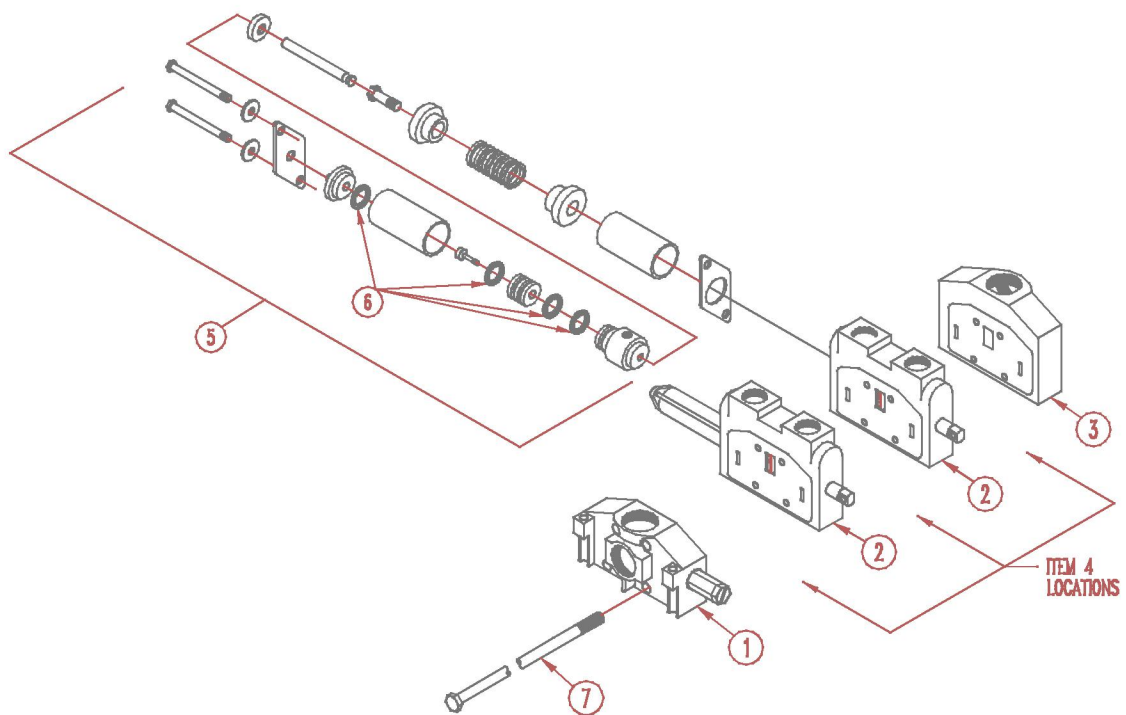

ITEM	QTY	P/N	DESCRIPTION
1	1	0026-041	INLET
2	2	0026-097	VALVE SECTION
3	1	0026-105	OUTLET
4	3	0026-125	SEAL KIT
5	1	0026-143	PNEUMATIC ACTIVATOR ASSEMBLY
6	1	0026-144	PNEUMATIC ACTIVATOR SEAL KIT
7	4	0026-152	STUD ASSEMBLY

HYDRAULIC TANK

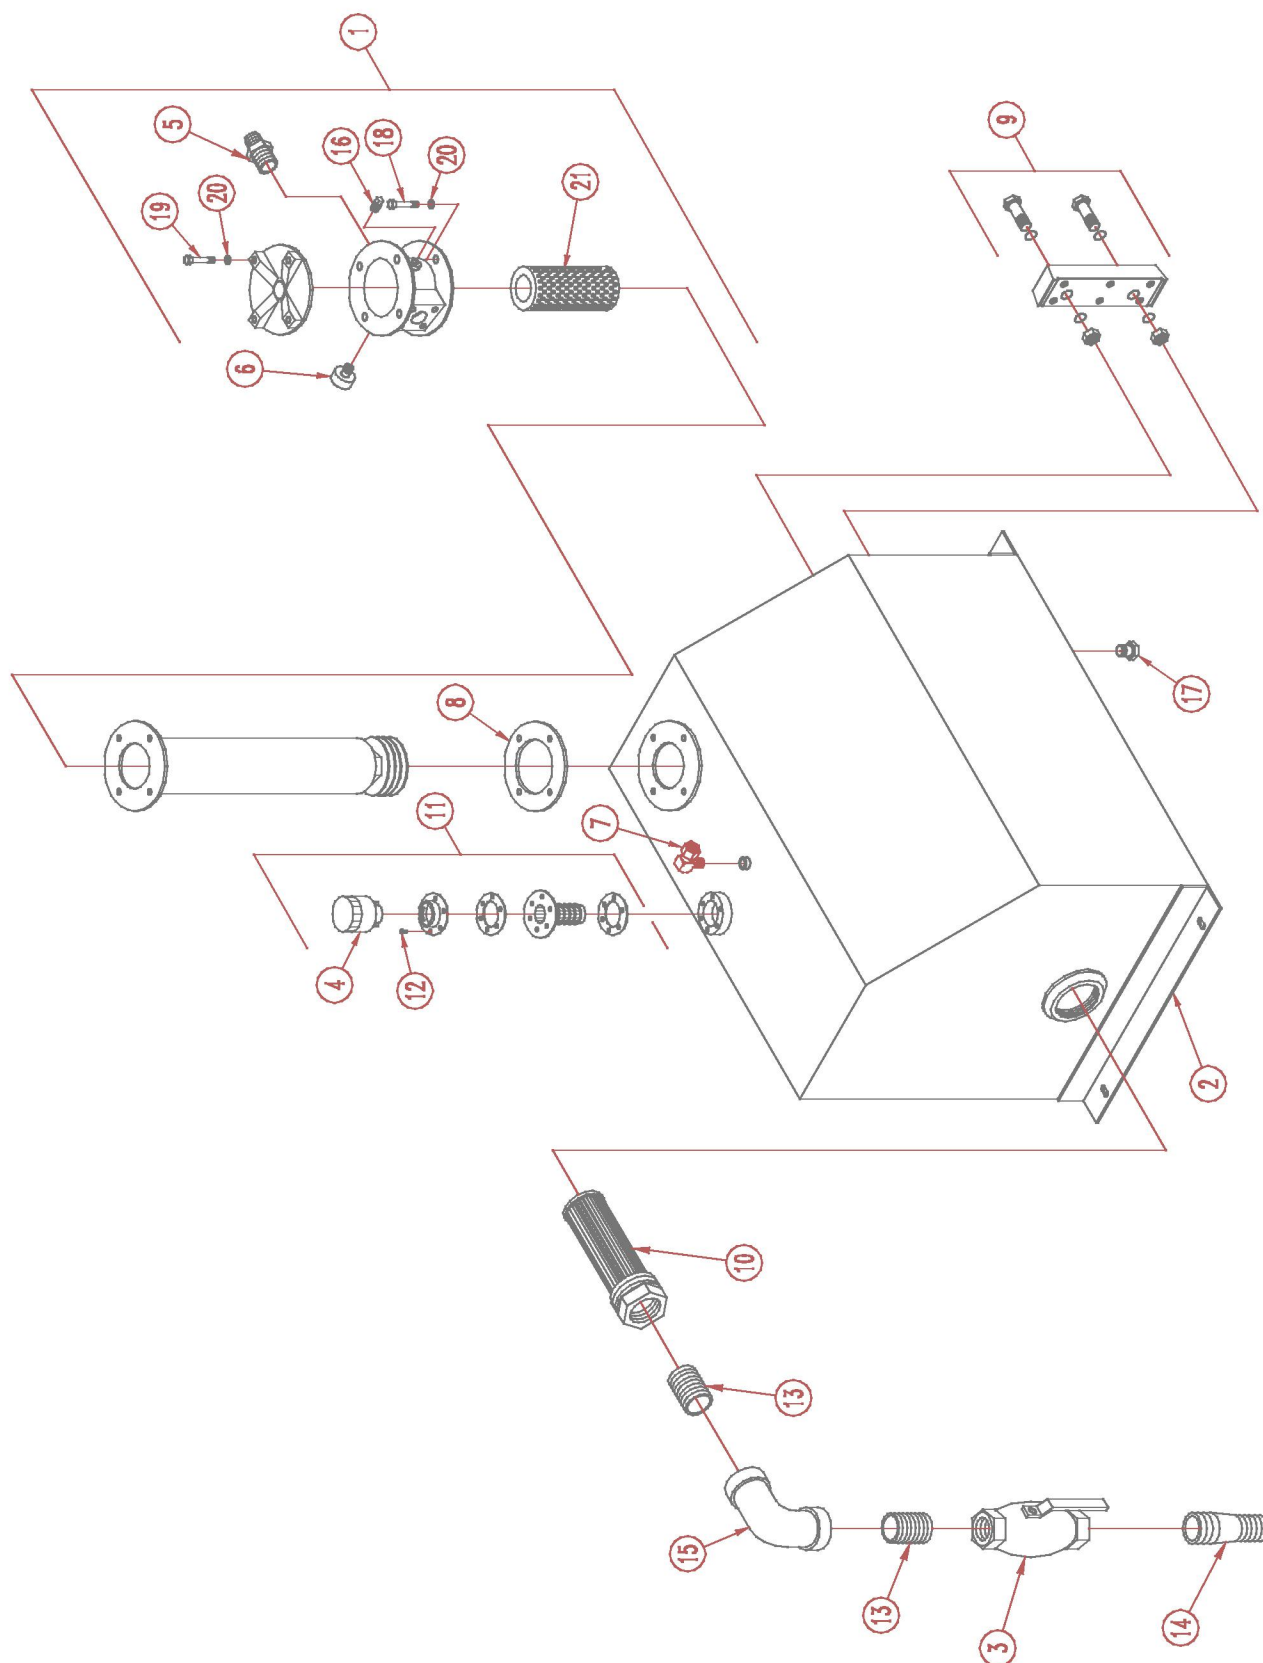


HYDRAULIC TANK

ITEM	QTY	P/N	DESCRIPTION
1	1	0039-023	RETURN FILTER
2	1	0605-210	L.H. HYDRAULIC TANK STRUCTURE (FOR R.H. UNITS)
3	1	0024-042	BALL VALVE
** 4	1	0039-133	BREATHER CAP
5	1	0032-788	ADAPTER
* 6	1	0039-041	GAUGE
7	1	0034-908	ADAPTER
8	1	0039-011	GASKET
9	1	0039-078	SIGHT GAUGE
10	1	0039-121	SUCTION STRAINER (NON-PRESSURIZED)
11	1	0039-132	BREATHER ASSEMBLY
** 12	6	0064-413	SCREW, #10-32NF X .50 PAN HEAD
13	2	0041-808	2.00 NIPPLE
14	1	0041-846	2.00 COMBO NIPPLE
15	1	0042-124	2.00 ELL
16	1	0042-264	.13 PLUG
17	1	0042-325	1.25 PLUG
18	4	0060-399	CAPSCREW, .38-16NC X 1.25
19	4	0060-407	CAPSCREW, .38-16NC X 1.50
20	8	0067-034	.38 LOCKWASHER
* 21	2	0039-024	ELEMENT

* SERVICE PART FOR 0039-023 RETURN FILTER

** SERVICE PART FOR 0039-132 BREATHER ASSEMBLY

HYDRAULIC SYSTEM

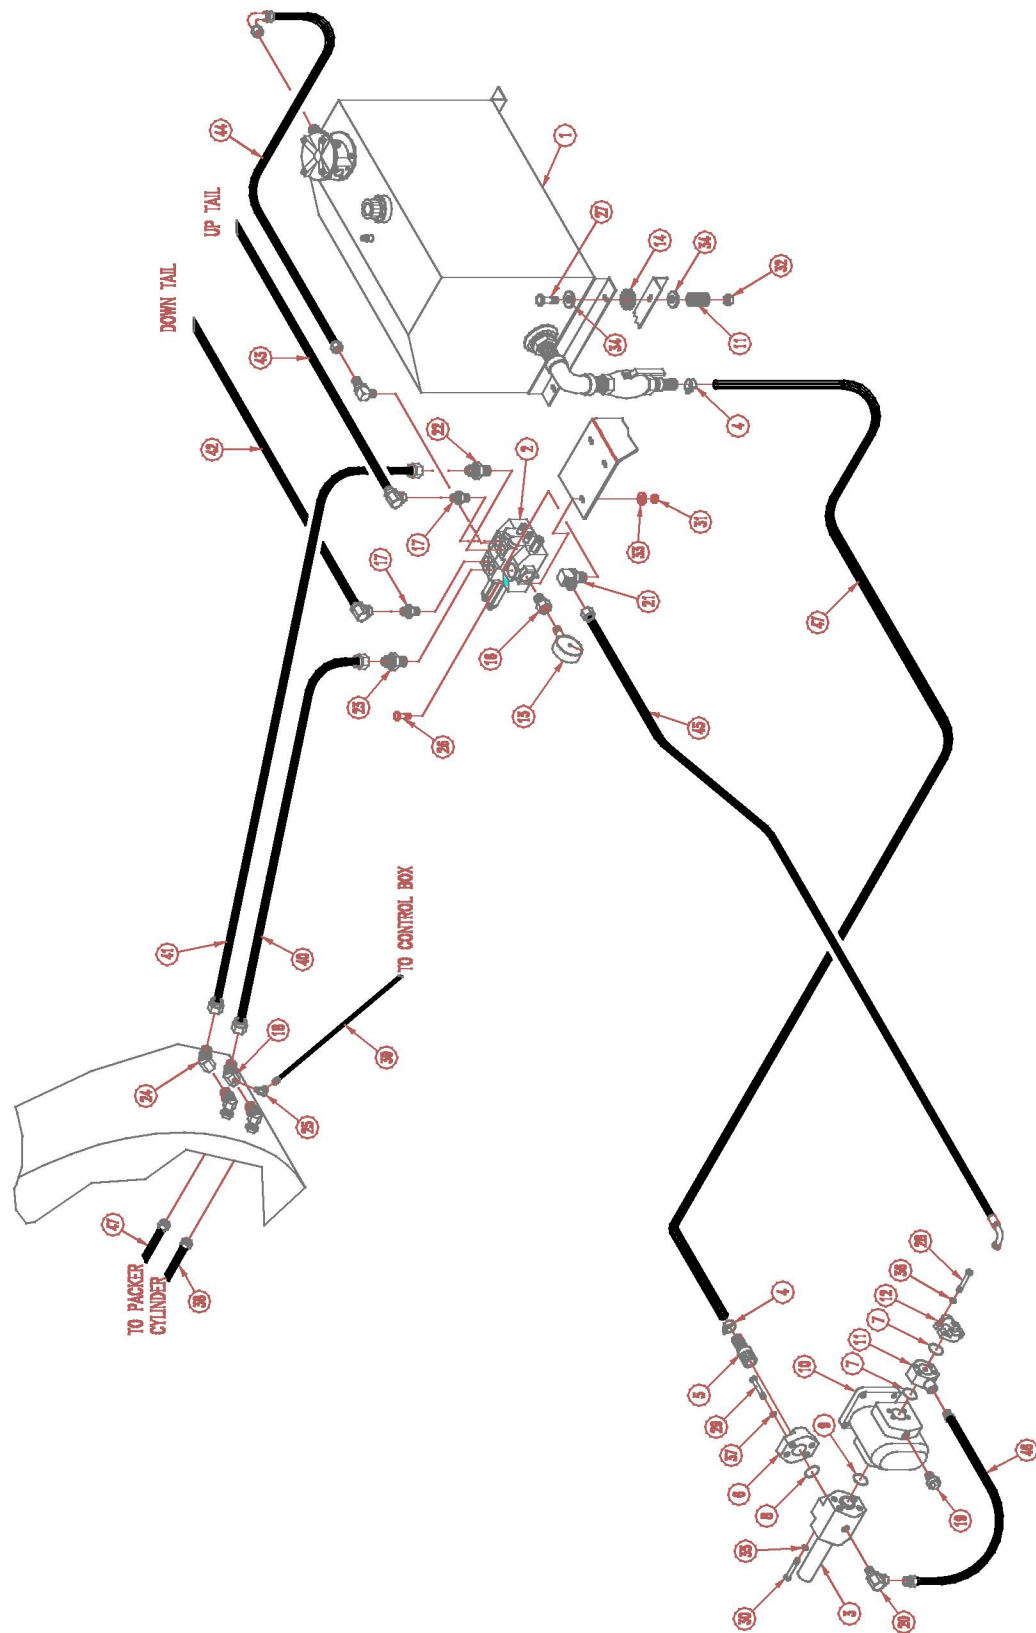

HYDRAULIC SYSTEM


ITEM	QTY	P/N	DESCRIPTION
1	1	0605-210	L.H. HYDRAULIC TANK ASSEMBLY
2	1	0024-005	VALVE
3	1	0024-032	DRY VALVE
4	2	0045-102	HOSE CLAMP
5	1	0041-846	COMBO NIPPLE
6	1	0037-421	FLANGE PAD
7	2	0027-285	O-RING
8	1	0027-310	O-RING
9	1	0027-508	O-RING
10	1	0028-019	PUMP
11	1	0030-007	FLOW CONTROL
12	1	0037-443	SPLIT FLANGE
13	4	0045-200	COIL SPRING
14	4	0045-212	RUBBER PAD
15	1	0039-041	GAUGE
16	1	0605-125	MODIFIED FITTING
17	2	0605-126	MODIFIED FITTING
18	1	0605-127	MODIFIED FITTING
19	1	0036-283	PLUG
20	1	0034-981	ADAPTER
21	2	0035-653	ADAPTER
22	1	0033-585	ADAPTER
23	1	0033-623	ADAPTER
24	1	0034-545	ADAPTER
25	1	0034-878	ADAPTER
26	3	0060-509	CAPSCREW, .38-16NC X 4.00
27	4	0060-840	CAPSCREW, .50-13NC X 3.50
28	4	0064-524	CAPSCREW, .44-14NC X 3.50 SOCKETHEAD
29	4	0064-531	CAPSCREW, .50-13NC X 2.00 SOCKETHEAD
30	4	0064-542	CAPSCREW, .50-13NC X 4.75 GR. 8
31	3	0065-180	HEX NUT, .38-16NC NYLOCK
32	4	0065-209	HEX NUT, .50-13NC NYLOCK
33	3	0066-032	.38 FLATWASHER
34	8	0066-055	.50 FLATWASHER

(CONT.)

HYDRAULIC SYSTEM (CONT.)

ITEM	QTY	P/N	DESCRIPTION
35	4	0067-056	.50 LOCKWASHER
36	4	0067-147	.44 LOCKWASHER HI-COLLAR
37	4	0067-155	.50 LOCKWASHER HI-COLLAR
38	1	0090-147	HYDRAULIC HOSE
39	1	0090-148	HYDRAULIC HOSE
40	1	0090-149	HYDRAULIC HOSE
41	1	0090-150	HYDRAULIC HOSE
42	1	0090-151	HYDRAULIC HOSE
43	1	0090-152	HYDRAULIC HOSE
44	1	0090-153	HYDRAULIC HOSE
45	1	0090-156	HYDRAULIC HOSE
46	1	0090-182	HYDRAULIC HOSE
47	1	0090-193	HYDRAULIC HOSE
48	1	0600-198	HYDRAULIC HOSE

END GATE HYDRAULICS

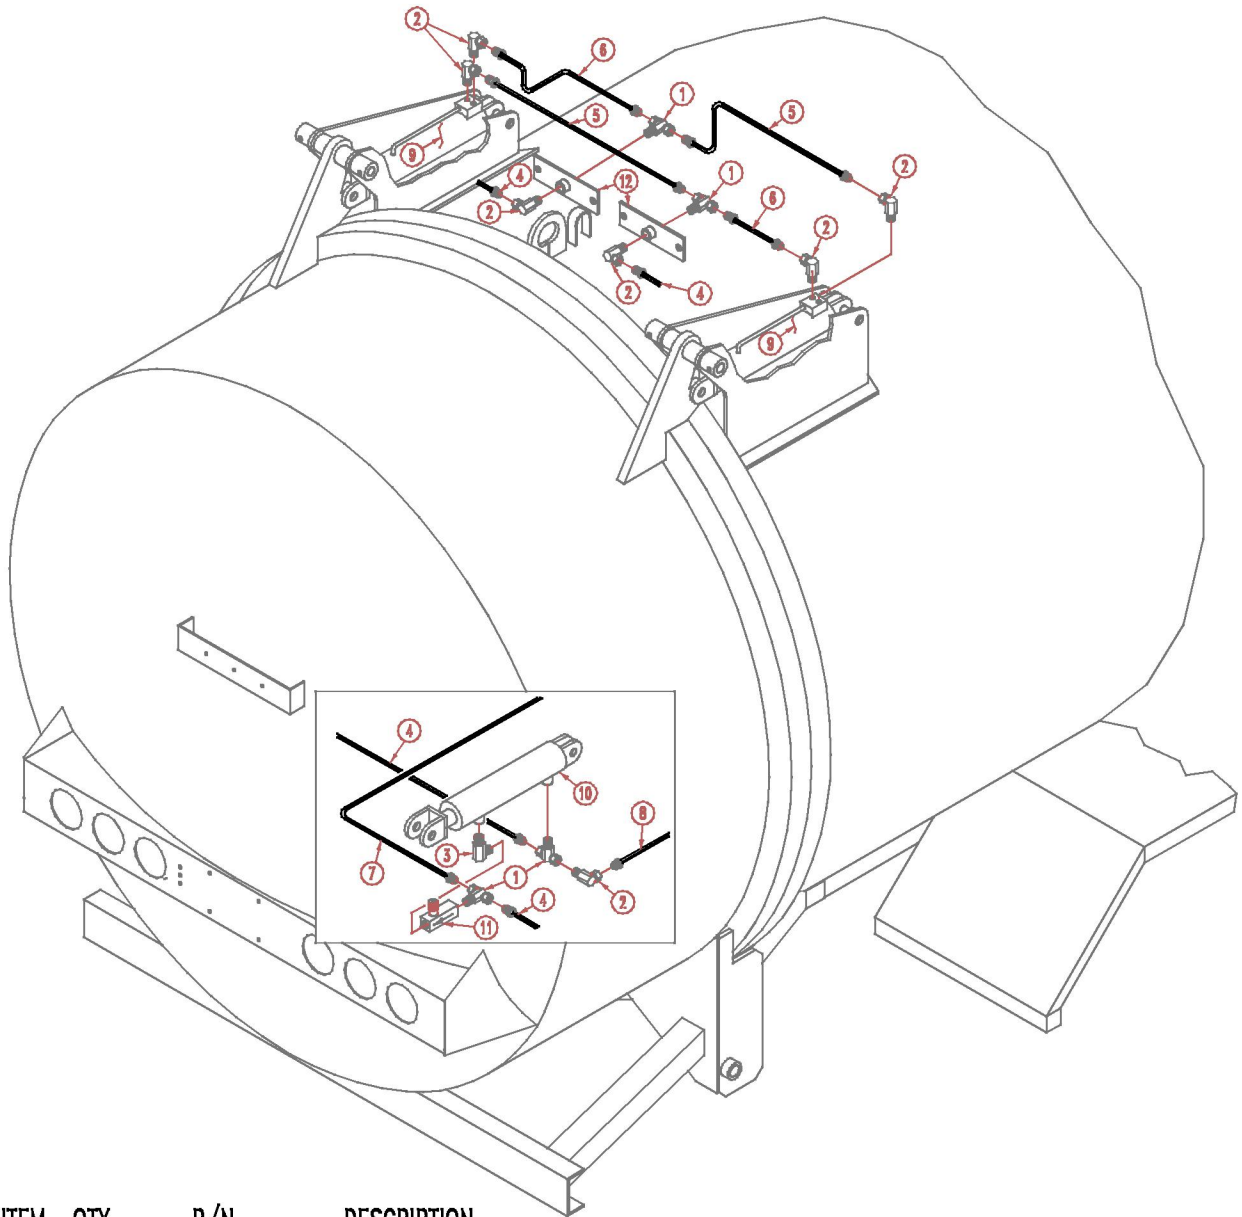

ITEM	QTY	P/N	DESCRIPTION
1	4	0036-627	ADAPTER
2	6	0034-946	ADAPTER
3	1	0035-895	ADAPTER
4	2	0090-018	HYDRAULIC HOSE
5	2	0090-101	HYDRAULIC HOSE
6	2	0090-085	HYDRAULIC HOSE
7	1	0090-109	HYDRAULIC HOSE
8	1	0090-117	HYDRAULIC HOSE
9	2	0020-150	HYDRAULIC CYLINDER
10	1	0020-112	HYDRAULIC CYLINDER
11	1	0024-098	FLOW CONTROL
12	2	(REF.)	COUPLER STRUCTURE


PACKER CYLINDER
(C.H.)

P/N 0020-009 (186")
P/N 0020-018 (210")
P/N 0020-029 (234")




USE REPLACEMENT SEAL KIT: MINOR # 0022-429
MAJOR # 0022-430

GATE LATCH CYLINDER
P/N 0020-112

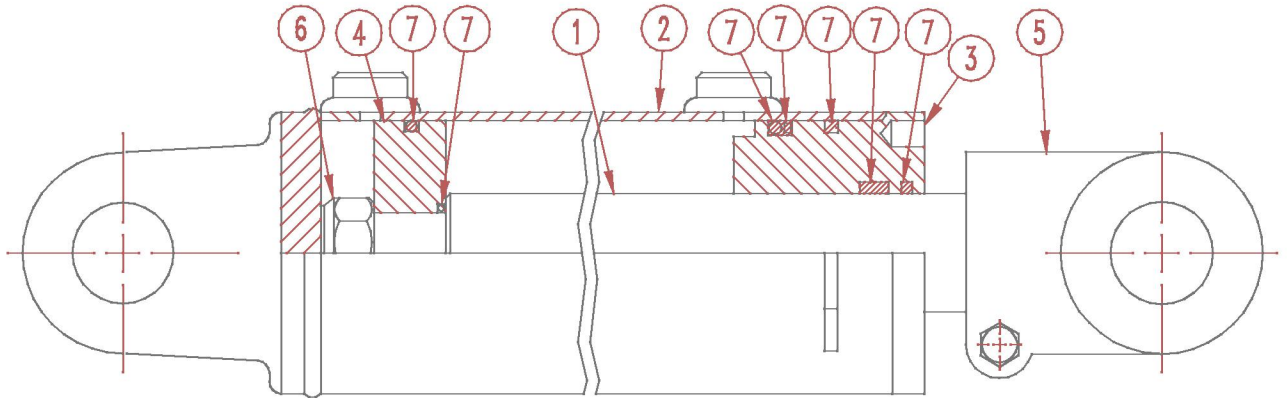

ITEM	QTY	P/N	DESCRIPTION
1	1	0022-077	CYLINDER ROD
2	1	0022-085	TUBE STRUCTURE
3	1	0022-096	GLAND
4	1	0022-104	PISTON
5	1	0022-112	CLEVIS ASSEMBLY
6	1	0022-131	LOCKNUT
7	1	0022-142	SEAL KIT

GATE LIFT CYLINDER
P/N 0020-150

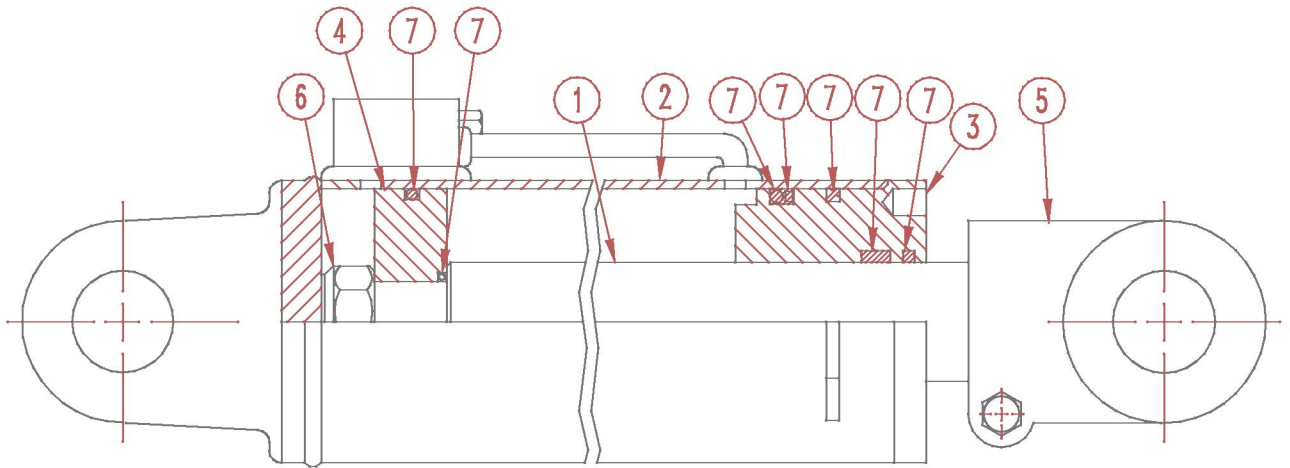

ITEM	QTY	P/N	DESCRIPTION
1	1	0022-077	CYLINDER ROD
2	1	0022-455	TUBE STRUCTURE
3	1	0022-096	GLAND
4	1	0022-104	PISTON
5	1	0022-112	CLEVIS ASSEMBLY
6	1	0022-131	LOCKNUT
7	1	0022-142	SEAL KIT


SECTION 3

ELECTRICAL


ELECTRICAL SCHEMATICS

CHASSIS (EXT.) MOUNTED CONTROL BOX	3-1
CAB MOUNTED CONTROL BOX	3-2
WIRING HARNESES (BODY)	3-3
REAR BODY LIGHT HARNESS KIT	3-4
ELECTRICAL PARTS	3-5, 3-6,
COMPLETE CONTROL BOX ASSEMBLIES	3-7
LIGHTS	3-8

 ELECTRICAL SCHEMATIC




ELECTRICAL SCHEMATIC
CAB MOUNTED CONTROL BOX P.N. 0602-912

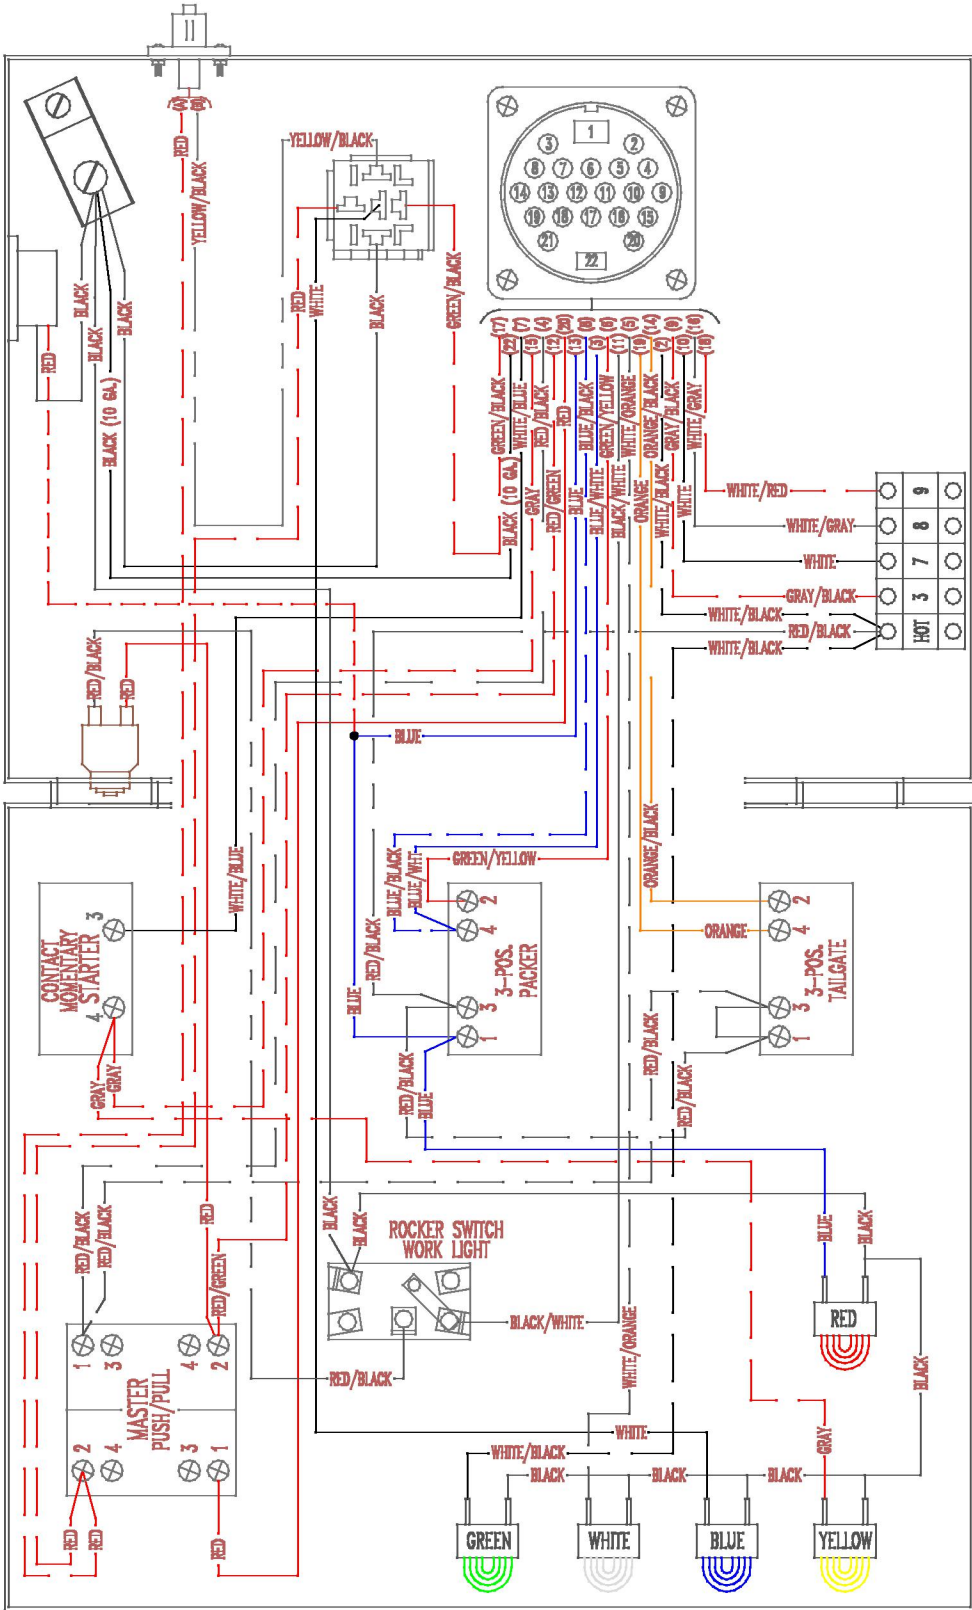


ELECTRICAL SCHEMATIC
LARGE (MAJOR) HARNESS P.N. 0602-792

WIRE # TO WIRE COLOR REFERENCE		
1	==	RED 10 GA.
2	==	BLACK 10 GA.
5	==	WHITE/BLACK
6	==	BLUE/WHITE
7	==	RED/BLACK
8	==	WHITE/ORANGE
9	==	GREEN/YELLOW
10	==	WHITE/BLUE
11	==	BLUE/BLACK
12	==	GRAY/BLACK
13	==	WHITE
14	==	BLACK/WHITE
15	==	RED/GREEN
16	==	BLUE
17	==	ORANGE/BLACK
19	==	GRAY
21	==	WHITE/GRAY
22	==	GREEN/BLACK
25	==	WHITE/RED
26	==	ORANGE
28	==	RED
WHITE	==	YELLOW/BLACK

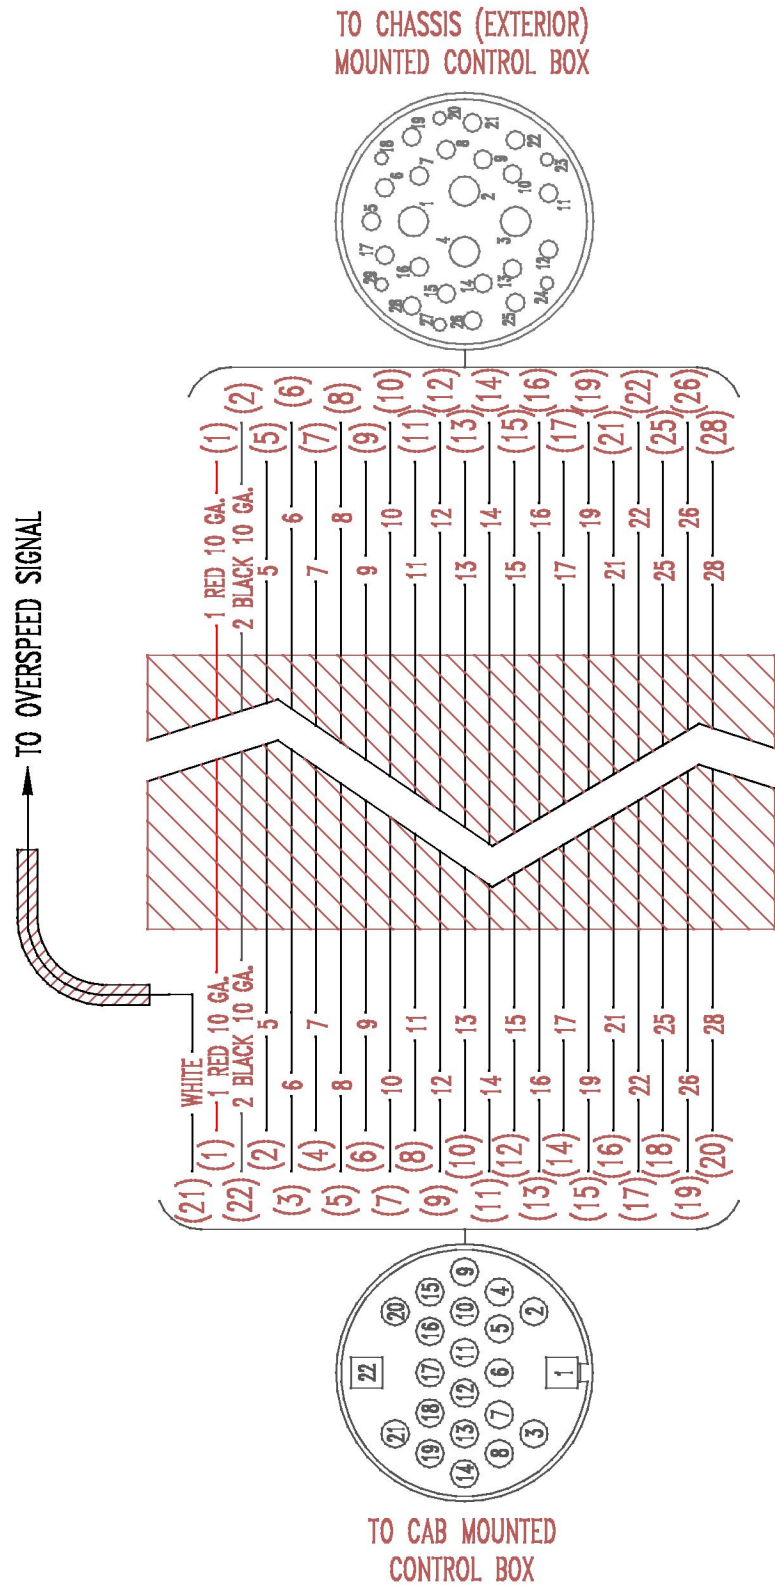


REAR BODY LIGHT HARNESS KIT
 STD. TAILGATE KIT 0602-858
 BUBBLE TAILGATE KIT 0602-857

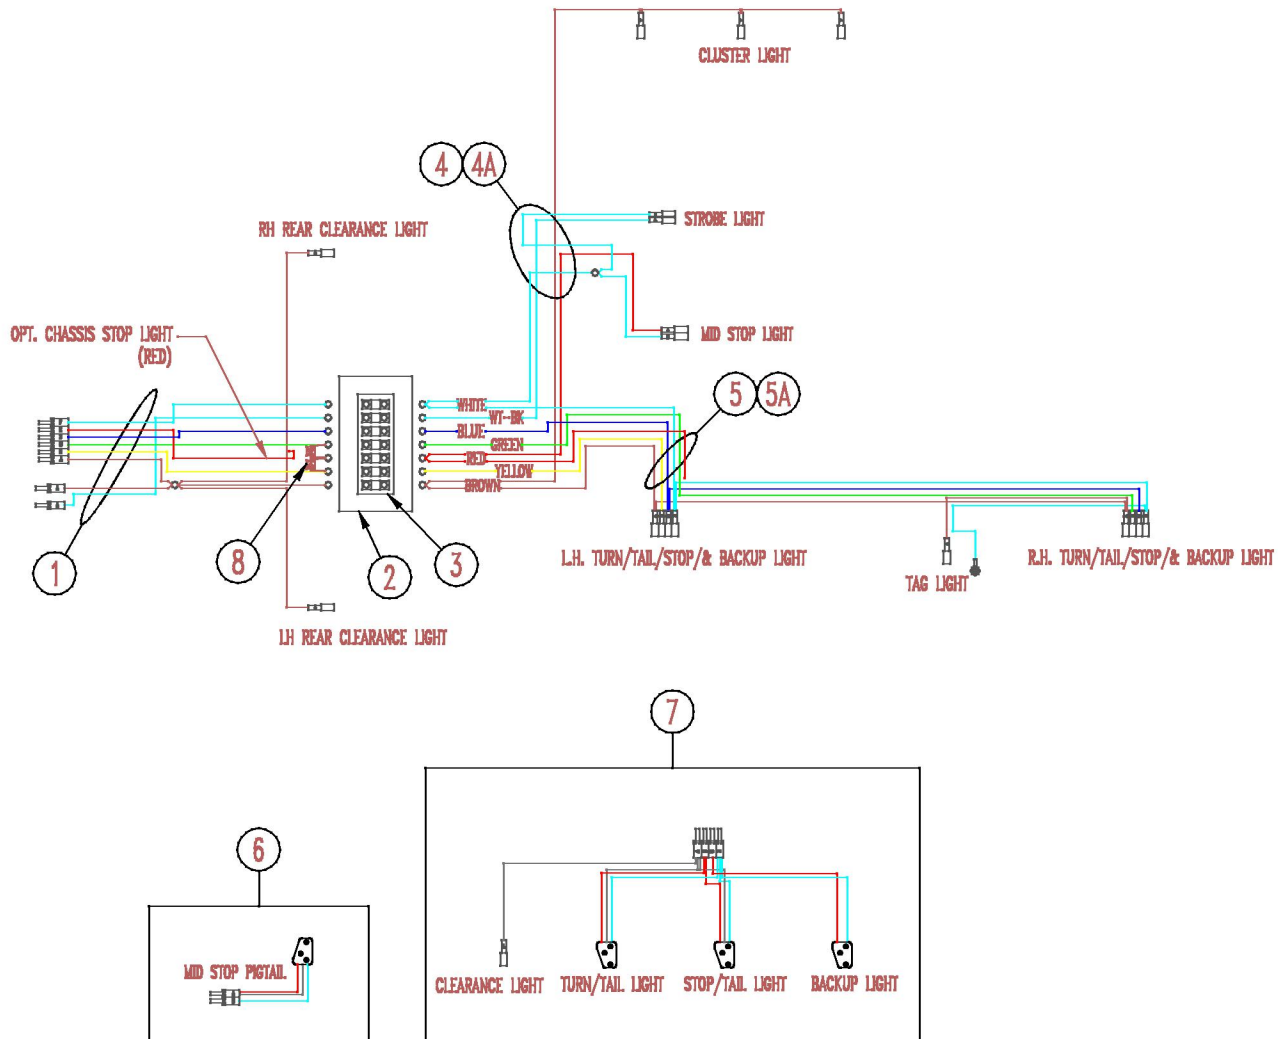

ITEM	QTY	P/N	DESCRIPTION
1	1	0602-863	REAR BODY CONNECTING HARNESS
2	1	0059-248	BERG BOX (LOCATED REAR TOP OF BODY)
3	1	0053-417	10 TERMINAL BLOCK SECTION
4	1	0602-862	TAILGATE CLUSTER/BRAKE/STROBE HARNESS (STD.)
4A	1	0602-864	TAILGATE CLUSTER/BRAKE/STROBE HARNESS (BUBBLE)
5	1	0602-860	TAILGATE LIGHTBAR HARNESS (STD.)
5A	1	0602-861	TAILGATE LIGHTBAR HARNESS (BUBBLE)
6	1	0055-402	STOP LAMP PIGTAIL ASSEMBLY
7	2	0055-403	TURN/TAI/STOP/& BACKUP PIGTAIL ASSEMBLY
8	1	0055-399	DIODE ASSEMBLY (NOT REQ. IF CHASSIS EQUIPPED STOP LIGHT)


ELECTRICAL PARTS

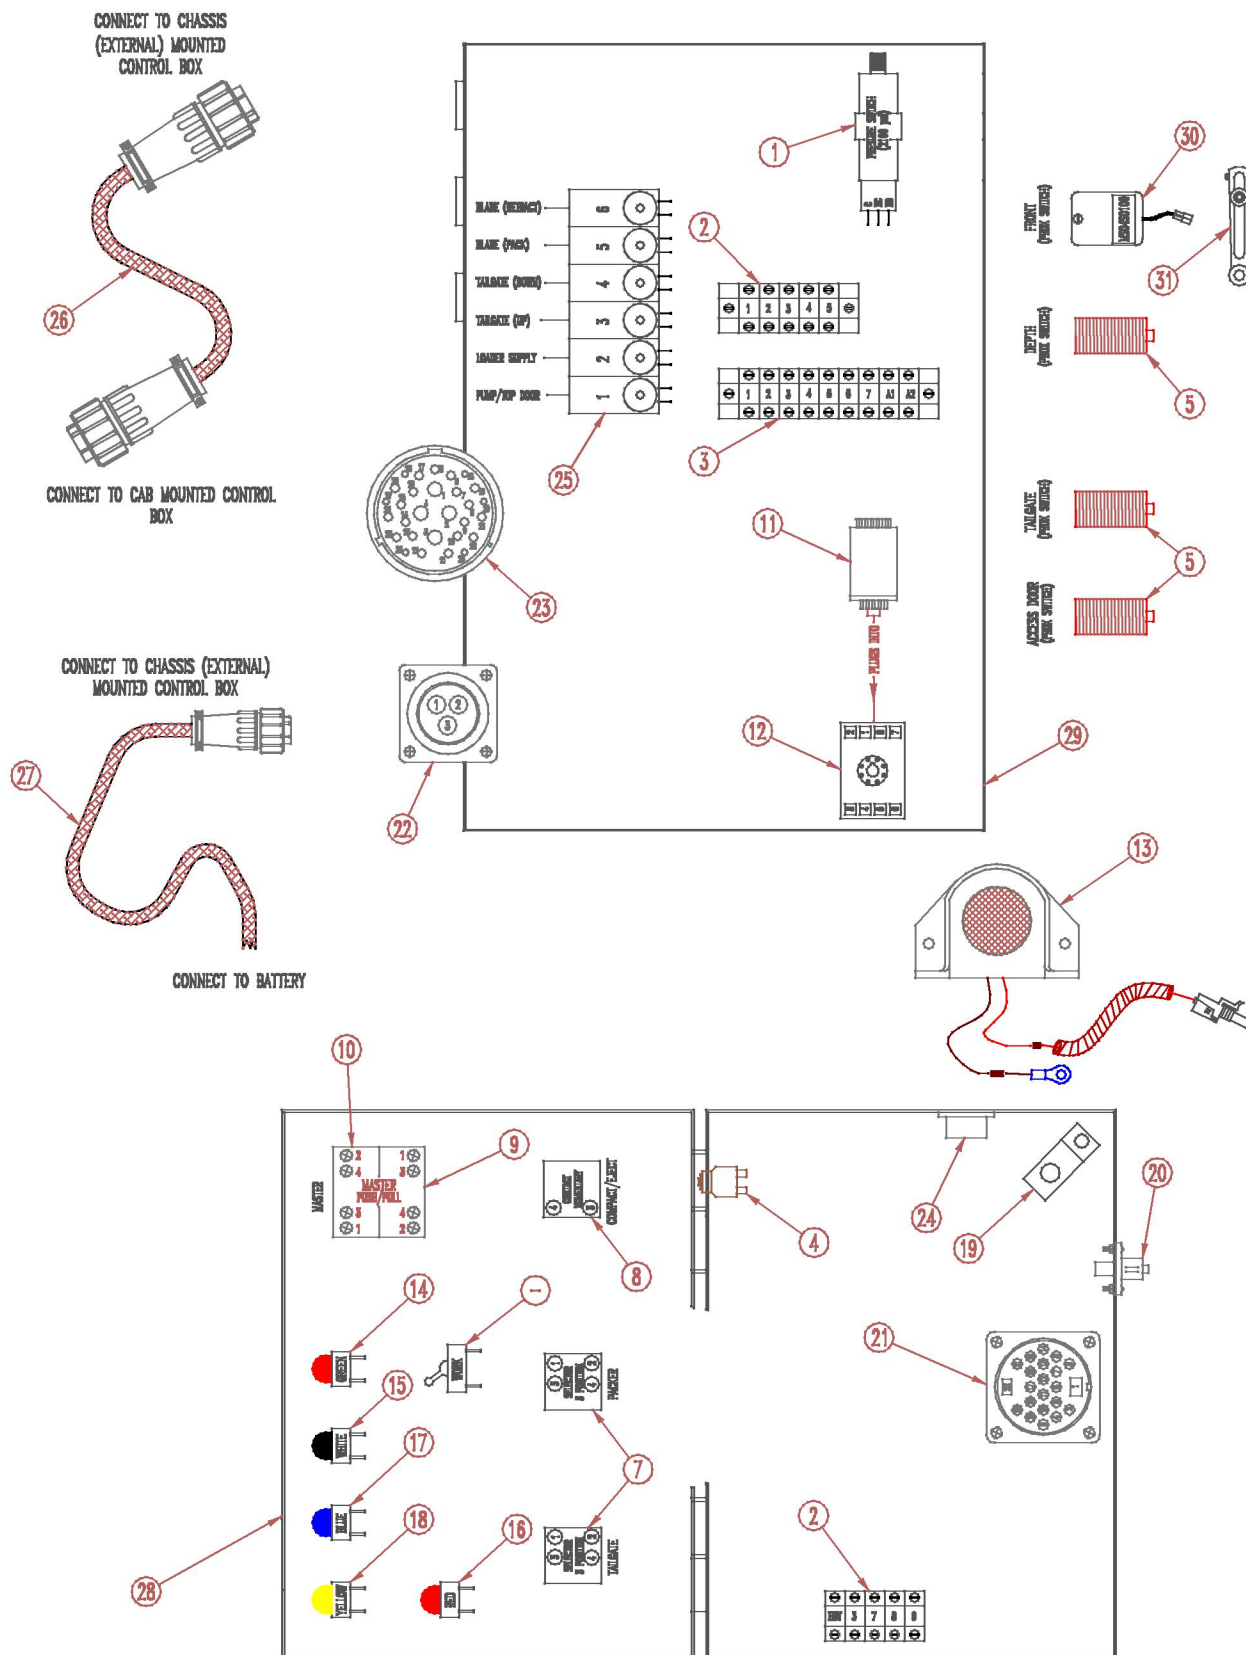

ELECTRICAL PARTS
(CONTD.)


ITEM	QTY	P/N	DESCRIPTION
1	1	0039-098	PRESSURE SWITCH
2	2	0053-414	5 TERMINAL BLOCK SECTION
3	1	0053-417	10 TERMINAL BLOCK SECTION
4	1	0053-545	CIRCUIT BREAKER W/RESET SWITCH (10 AMP)
5	4	0054-005	SWITCH, PROX (N.O.)
6	1	0054-008	ROCKER SWITCH, LIGHTED
7	2	0054-049	SWITCH, 3 POSITION MOMENTARY SELECTION
8	1	0054-050	SWITCH, MOMENTARY CONTACT 2.25 BLACK MUSHROOM
9	1	0054-068	SWITCH, MAINTAINED CONTACT 2.25 RED MUSHROOM
10	1	0054-076	CONTACT BLOCK
11	1	0054-096	TIMER, ELECTRONIC
12	1	0054-131	SOCKET, TIMER
13	1	0055-201	BACK-UP ALARM ASSEMBLY
14	1	0059-109	LIGHT, PILOT - GREEN LENS
15	1	0059-113	LIGHT, PILOT - WHITE LENS
16	1	0059-117	LIGHT, PILOT - RED LENS
17	1	0059-133	LIGHT, PILOT - BLUE LENS
18	1	0059-144	LIGHT, PILOT - YELLOW LENS
19	1	0059-257	UNIVERSAL LUG
20	1	0059-392	PIN RECEPTACLE, 3 CONTACT DT SERIES
21	1	0059-409	SQUARE FLANGE RECEPTACLE, SERIES 4
22	1	0059-440	SQUARE FLANGE RECEPTACLE, SERIES 5 17-3
23	1	0059-437	RECEPTACLE, PIN, SERIES HDP20
24	1	0059-632	BUZZER
25	1	0085-205	6 STATION VALVE BANK
26	1	0602-792	WIRING HARNESS, EXTERIOR BOX TO CAB MOUNTED CONTROL BOX
27	1	0602-843	OUTSIDE POWER CABLE ASSEMBLY
28	1	0602-912	INSIDE CONTROL BOX ASSEMBLY
29	1	0602-911	OUTSIDE CONTROL BOX
30	1	0055-950	LIMIT SWITCH ASSEMBLY
31	1	0059-235	ADJUSTABLE LEVER ARM

COMPLETE CONTROL
BOX ASSEMBLIES

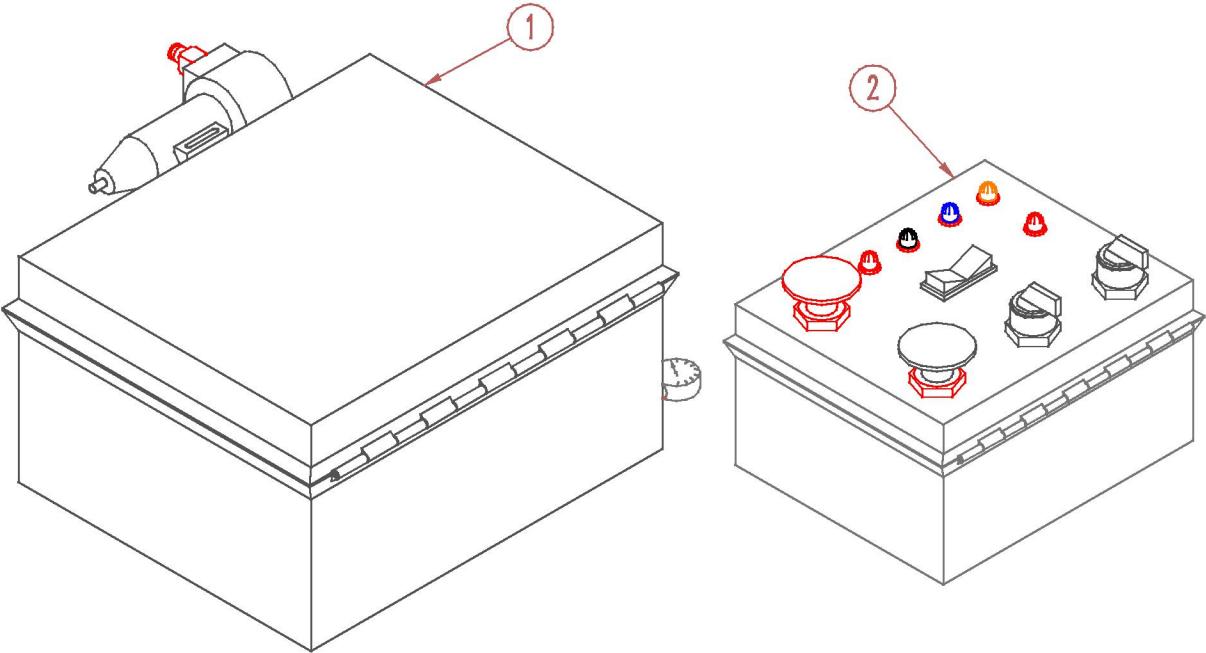

ITEM	QTY	P/N	DESCRIPTION
1	1	0602-911	OUTSIDE CONTROL BOX ASSEMBLY
2	1	0602-912	INSIDE CONTROL BOX ASSEMBLY

LIGHTS

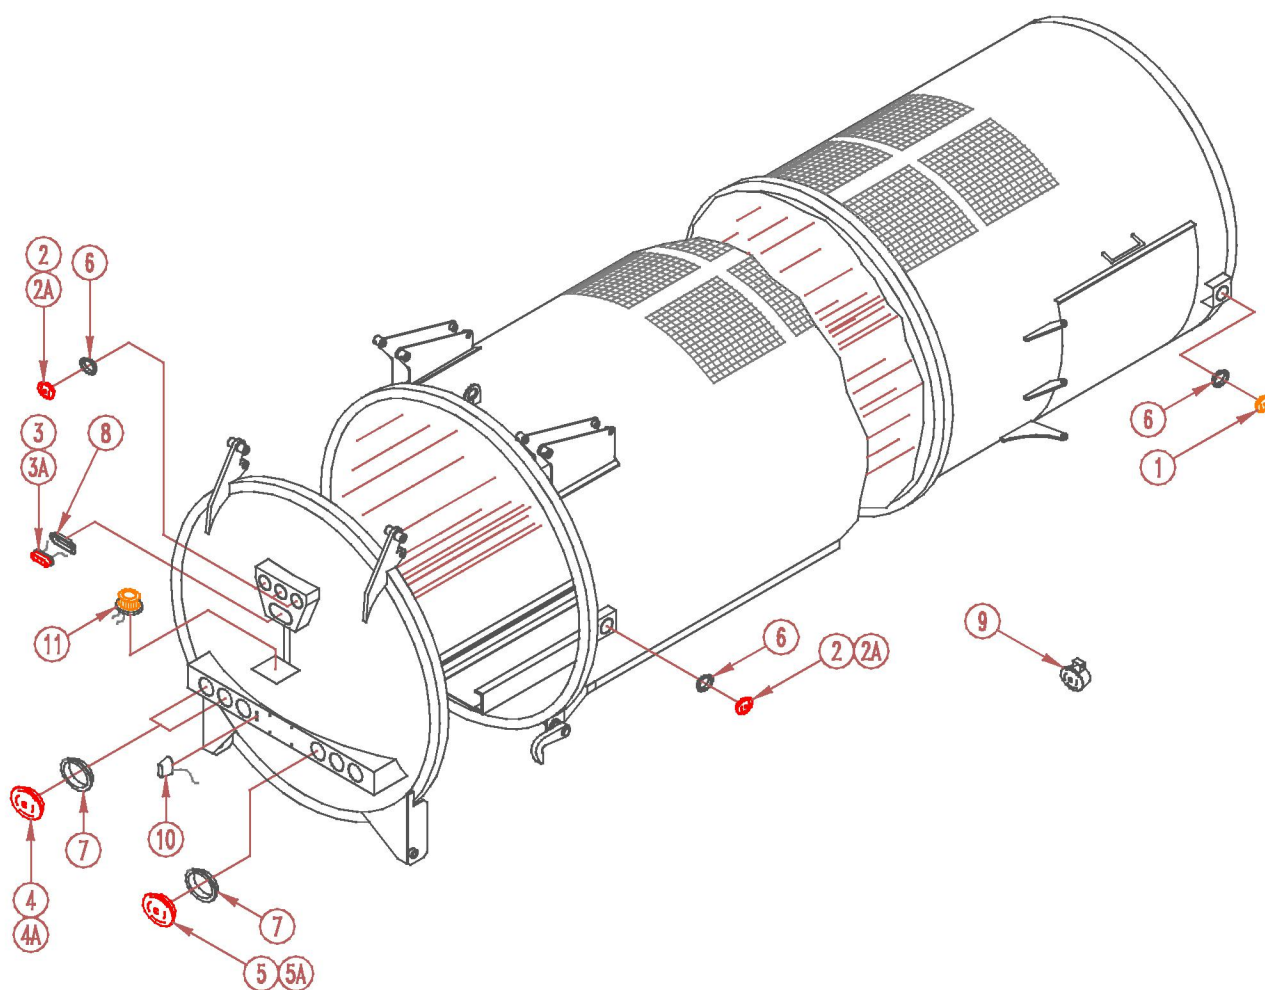

ITEM	QTY	P/N	DESCRIPTION
1	2	0050-017	CLEARANCE LIGHT, AMBER LED
2	5	0050-007	CLEARANCE LIGHT ASSEMBLY, RED (INCLUDES GROMMET)
2A	5	0050-018	CLEARANCE LIGHT, RED LED
3	1	0050-116	STOP LAMP ASSEMBLY, OVAL (INCLUDES GROMMET)
3A	1	0050-022	STOP LAMP, OVAL LED
4	4	0050-135	STOP/TURN LAMP ASSEMBLY (INCLUDES GROMMET)
4A	4	0050-112	STOP/TURN LAMP LED
5	2	0050-181	BACKUP LAMP ASSEMBLY (INCLUDES GROMMET)
5A	2	0050-185	BACKUP LAMP LED
6	7	0050-350	GROMMET KIT, 2.50 RECESSED
7	6	0050-351	GROMMET, 4.25 RECESSED
8	1	0050-353	GROMMET, 2.25 x 6.50 OVAL RECESSED
9	-	0055-003	WORKLIGHT ASSEMBLY (OPTIONAL)
10	1	0055-004	TAG LIGHT ASSEMBLY
11	1	0055-005	STROBE LIGHT ASSEMBLY


SECTION 4

AIR

AIR SYSTEM

4-1, 4-2

AIR SYSTEM

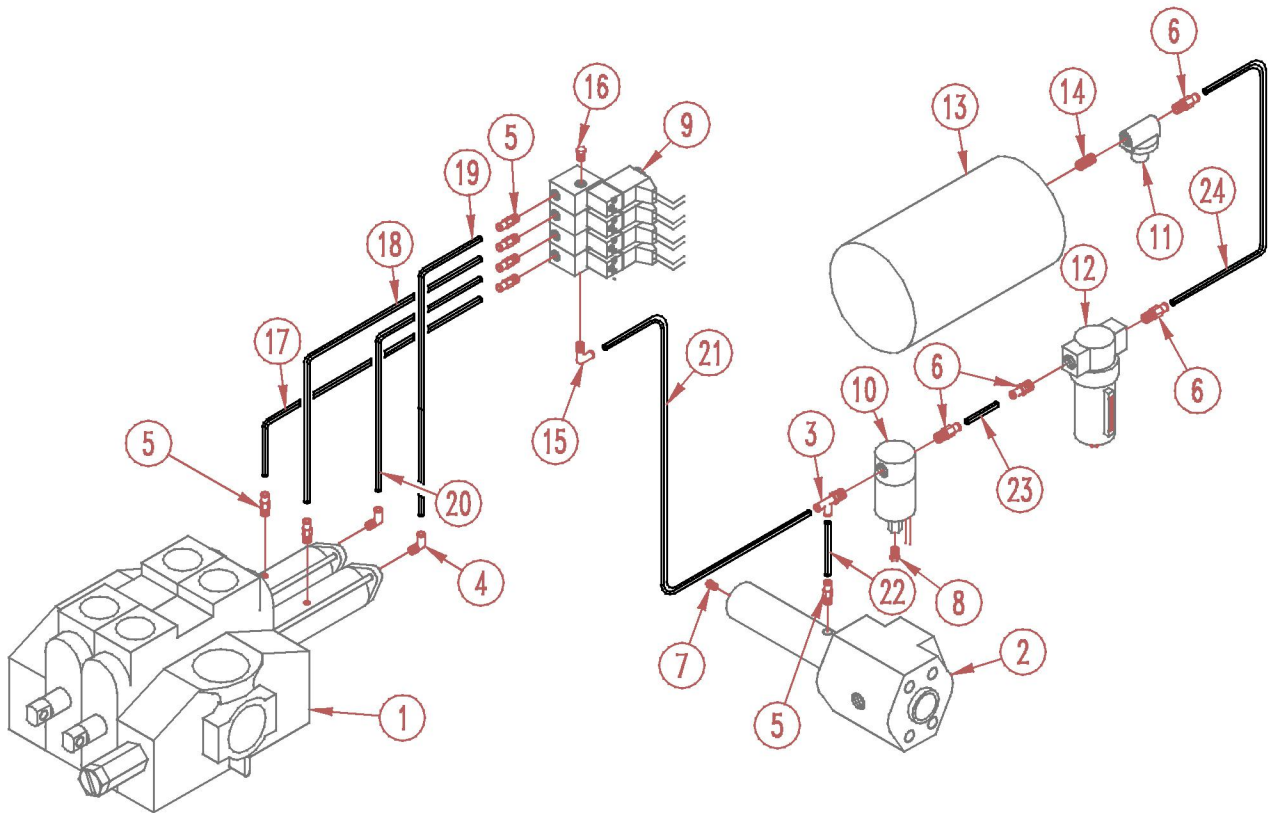

ITEM	QTY	P/N	DESCRIPTION
1	1	0024-005	VALVE BLOCK
2	1	0024-032	DRY VALVE
3	1	0085-029	ADAPTER
4	2	0085-037	ADAPTER
5	7	0085-059	ADAPTER
6	4	0085-067	ADAPTER
7	2	0085-083	BREATHER VENT PLUG
8	1	0085-094	BREATHER VENT PLUG
9	1	0085-206	4 STATION VALVE BANK
10	1	0085-279	SOLENOID
11	1	0085-526	ONE WAY CHECK VALVE
12	1	0085-534	AUTO DRAIN AIR FILTER

AIR SYSTEM

ITEM	QTY	P/N	DESCRIPTION
13	1	(REF.)	AIR TANK
14	1	0041-763	.25 NIPPLE
15	1	0085-075	ADAPTER
16	1	0042-264	.13NPT PLUG
17	1	-	AIR BRAKE TUBING
18	1	-	AIR BRAKE TUBING
19	1	-	AIR BRAKE TUBING
20	1	-	AIR BRAKE TUBING
21	1	-	AIR BRAKE TUBING
22	1	-	AIR BRAKE TUBING
23	1	-	AIR BRAKE TUBING
24	1	-	AIR BRAKE TUBING

