

PSL MULTI-PURPOSE SELF LOADING TRACTOR SPREADER



The PSL is built to be mounted on the tractor's three-point linkage and its construction as a loading bucket means that when the spreader is lowered, it can be filled by reversing directly into the spreading material. The tractor then pulls the spreader into the upright position and it is ready to work. It is hydraulically driven off the tractor's hydraulic system.

Standard features:

- Spring base and spring base adjustment
- Delivery roller for cams
- 5 mm cams
- Rubber base for salt
- Hydraulic system (without remote control) for double hydraulic connection to tractor

Capacity	600 litres	21.2 cubic feet
Total Width	1980 mm	78 inches
Spreading Width	1770 mm	70 inches
Weight	315 kg	210 lbs.