

## Directions for changing the scale display type/model number

To configure the scale type/model number:

Push ESC until VIEW WEIGHTS is blinking. Press down arrow until PRINT, SETUP (or SETUP, DIAGN for QuickLoad) is blinking. Press ENTER.

If necessary, Press down arrow until SYSTEM SETUP is blinking, press ENTER.

Press down arrow until SYS CONFIG is blinking, press ENTER.

Press down arrow until SCALE TYPE (or MODEL NUMBER for QuickLoad) is blinking, press ENTER.

Scale displays a cautionary warning. Push ENTER to continue.

Use the up arrow to change scale type to the correct number, press ENTER. Scale flashes "ACCEPTED"

Press ESC repeatedly until back to main weight screen.

Scale configuration for this truck:

Scale Type	Axle	Sensor Type	Sensor Port
5801	Dual Drive Sensors	AP AP	Sensor A Sensor B
5800	Drive Steer	AP	Sensor A Calculated

Sensor type – AP = Air Pressure, DS = Deflection Sensor

Phone Air-Weigh Support if you have any questions – (888) 459-3247