
 


SET FREQUENCIES - QLXD

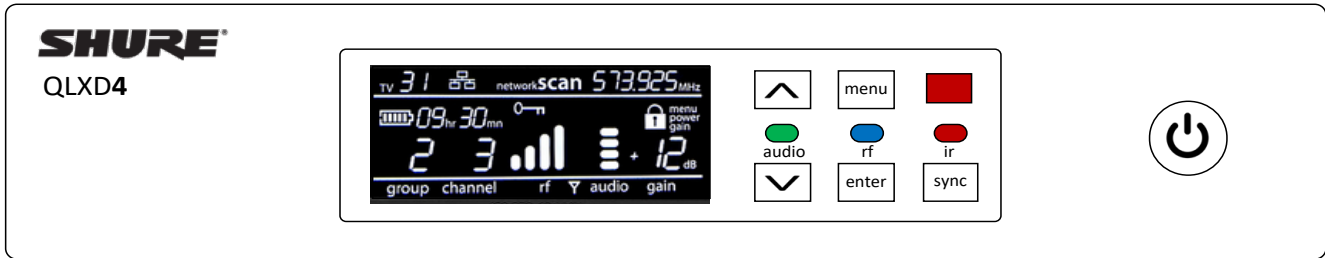


- 1 power **ON** all QLXD4 receivers
- 2 turn **OFF** all QLXD transmitters
- 3 turn **ON** all other wireless equipment in use in the space (other wireless, in-ear monitors, wireless DMX)
- 4 push **MENU** button ONCE



display will show **SCAN**



- 5 push **ENTER** button ONCE

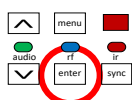


Scan will start - the SCAN icon will flash while scanning

when scan is complete, the selected group and channel will show on the display



- 6 turn **ON** first transmitter
- 7 align the transmitter's IR sync window (under display) to the IR transmitter window of the QLXD receiver - about 4-6" apart

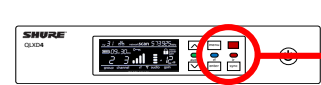

- 8 push the **SYNC** button ONCE - red IR LED will start to flash, then go steady when the IR windows align when scan is complete the receivers display will show the word GOOD and the blue "rf" LED will light



- 9 put this transmitter aside but leave it **ON**
- 10 repeat steps 4 thru 9 for each receiver transmitter set

GAIN ADJUSTMENT

Note: The audio level meters should show at least 3 bars when someone is speaking at normal stage level
 Increase gain if 2 or fewer bars illuminate, reduce gain if distortion is audible
 The up and down arrows change the gain setting on the receiver



LOCK TRANSMITTER CONTROLS

NOTE: When locked the transmitter cannot be turned OFF or the frequency changed

- 1 power **ON** transmitter
- 2 press **MENU** button four (4) times to get to LOCK menu
- 3 press **UP** (^) or **DOWN** button to change status

