

CREDIT SALE

1. Enter transaction amount and press OK.
2. Swipe/Insert/Tap card on Present Card screen or start typing card number for manual entry.
3. Sign and Tip if prompted.
4. Select receipt delivery method

DEBIT SALE

1. Tap Credit until Debit is displayed.
2. Enter transaction amount and press OK.
3. Swipe/Insert/Tap card on Present Card screen or start typing card number for manual entry.
4. Enter PIN number and Tip if prompted
5. Follow prompts until receipt prompt - select receipt delivery method.

CREDIT VOID

1. Tap Sale until Void is displayed. Press OK and enter password.
2. Transaction will appear on screen. Press OK to void transaction.
3. Select Tran Number or Card Number.
 - If Tran Number, enter transaction number.
 - If Card Number, enter last 4 digits of card.
4. Select receipt delivery method.

CREDIT REFUND

1. Tap Sale until Refund is displayed. Enter Refund amount and press OK.
 - Enter password if prompted.
2. Swipe/Insert/Tap card on Present Card screen or start typing card number for manual entry.
3. Select receipt delivery method.

CREDIT PREAUTH

1. Tap Sale until PreAuth is displayed. Enter dollar amount and press OK.
2. Swipe/Insert/Tap card on Present Card screen or start typing card number for manual entry.
3. Select receipt delivery method.

CAPTURE PREAUTH (CREDIT)

1. Tap Sale until Ticket is displayed. Enter dollar amount, press OK and enter password.
2. Select Tran Number or Card Number based on information you have.
 - If Tran Number, enter transaction number.
 - If Card Number, enter last 4 digits of card.
3. Sign and Tip if prompted.
4. Select receipt delivery method.

 
PRE-SALE TICKET

1. Tap the Main Menu icon tap the ≡ Page Down icon and select Host Utility.
2. Enter the password and select Pre-Sale Ticket.
3. Enter dollar amount, press the OK button and the pre-sale ticket will
4. be printed

** Default password is last 4 digits of the EPI*

FAVORITES MENU

- 1 Reprint Receipt**
Prints the receipt for last transaction performed.
- 2 Settlement**
Option for you to settle their current batch.
- 3 Tip Adjust**
Adjust the tip amount on transactions performed within current batch.
- 4 Reports**
See summary reports for current open batch, the last settled batch, and the detailed reports for the last 5 batches settled.
- 5 Change Password**
Set one general password OR create custom passwords for settlements, voids/refunds, & removing custom fee.
- 6 Download Package**
Used to apply parameter changes or update the version on the device.
- 7 Comm Config**
Configure or change your internet connection type
- 8 Reboot**
Power cycles device.
- 9 Remote Diagnostics**
Allows ISO to perform troubleshooting on the device.

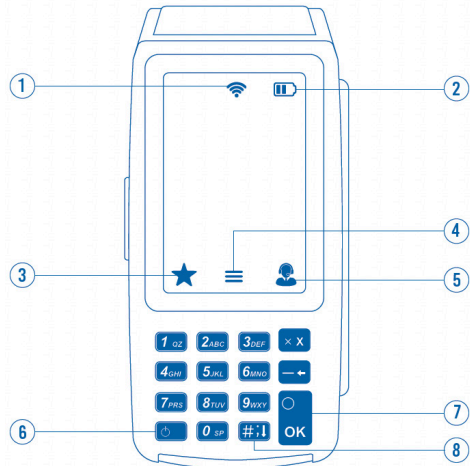

- | | |
|--------------------------------------|------------------------------------|
| 1 Connection Icon | 6 Power / Paper Feed |
| 2 Battery Level (VLT110 Only) | -Hold to power down terminal |
| 3 Favorites Icon | -Press to feed paper |
| 4 Main Menu | 7 Enter / Confirm Selection |
| 5 Contact Support | 8 Main Menu on Keypad |

CONNECT TO WIFI

- From the Home Screen, tap ★ 7 Comm Config
- From the Configuration Menu Tap Comm Config
- Tap WiFi
- Tap SSID (WiFi Name)
- Tap Configure
- Enter WiFi Password
- Tap OK to confirm WiFi password
- Tap Cancel to revert to previous screen
- Tap Connect
- WiFi password is case sensitive

To quickly swap internet connection types, tap the Connection Icon and select the desired connection type (see terminal guide on last page). The current connection type will be highlighted green.



wholesale
payments

7602 University Ave • Lubbock, TX 79423
(806) 698-0625 • wholesalepayments.com