





THE VAULT Filling Instructions

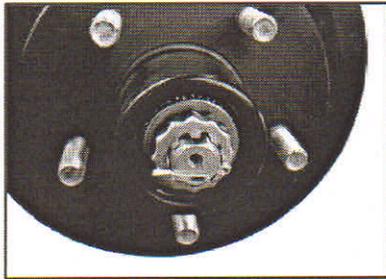


Install hub nose O-ring & adjust bearings per UFP Assembly Instructions.*

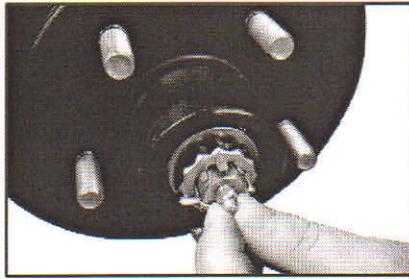


Screw a 1/8" NPT (Auto parts store) grease fitting into the threaded hole in the end of the spindle.



ONLY use UFP's proprietary HYBRID-OIL lubricant in a grease gun. *If no spindle hole, hand pack bearings during assembly.

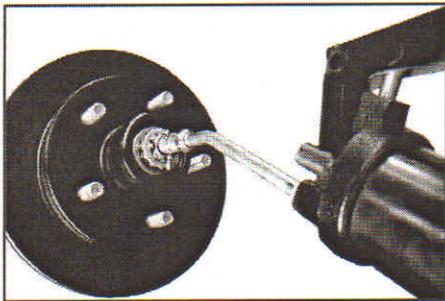


Fill hub cavity with the HYBRID-OIL lubricant. Rotate hub during filling to disperse air.

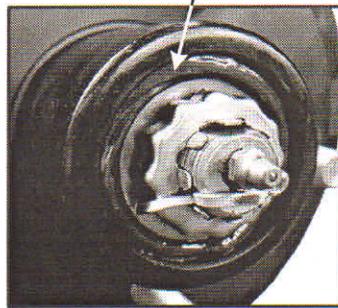


Hub cavity is full when the HYBRID-OIL lubricant first appears around edge of spindle washer. Remove grease fitting.


Fill to Retaining Ring Apply "Loctite" to shoulder Fill Completely

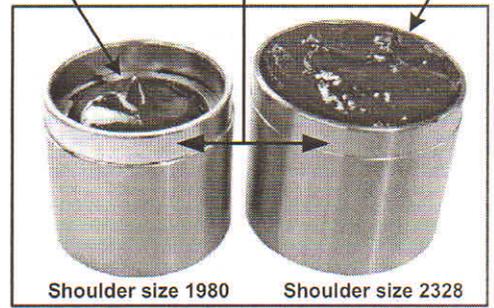

Fill THE VAULT protector cap with HYBRID-OIL lubricant. As shown in the photo above. Apply "Loctite" retaining compound to shoulder of protector.

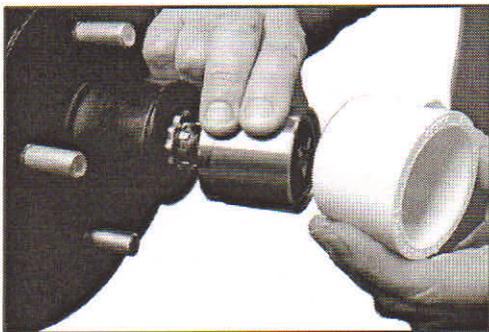

Place PVC collar over protector (2"x1-1/2" slip collar for 1980 size) (2" female adapter for 2328 size) in order to prevent damage to the protector during installation.

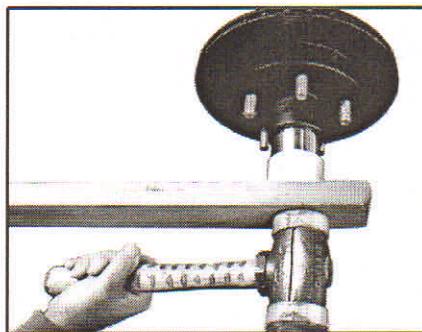

Place a piece of wood over the collar and hit with a mallet to drive the protector STRAIGHT into the hub. You can expect excess HYBRID-OIL to escape from the sides of the protector.



When properly installed, THE VAULT piston will extend out of the end of the protector approx. 1/16" to 3/16".



135 Sunshine Lane, San Marcos, CA 92069 800-854-1905 Fax: 760-744-1616
1041 Baxter Lane, Winchester, TN 37398 800-835-9211 Fax: 931-967-1828
www.ufpnet.com