 
 


CONTROL PANEL


AEIHDOM30

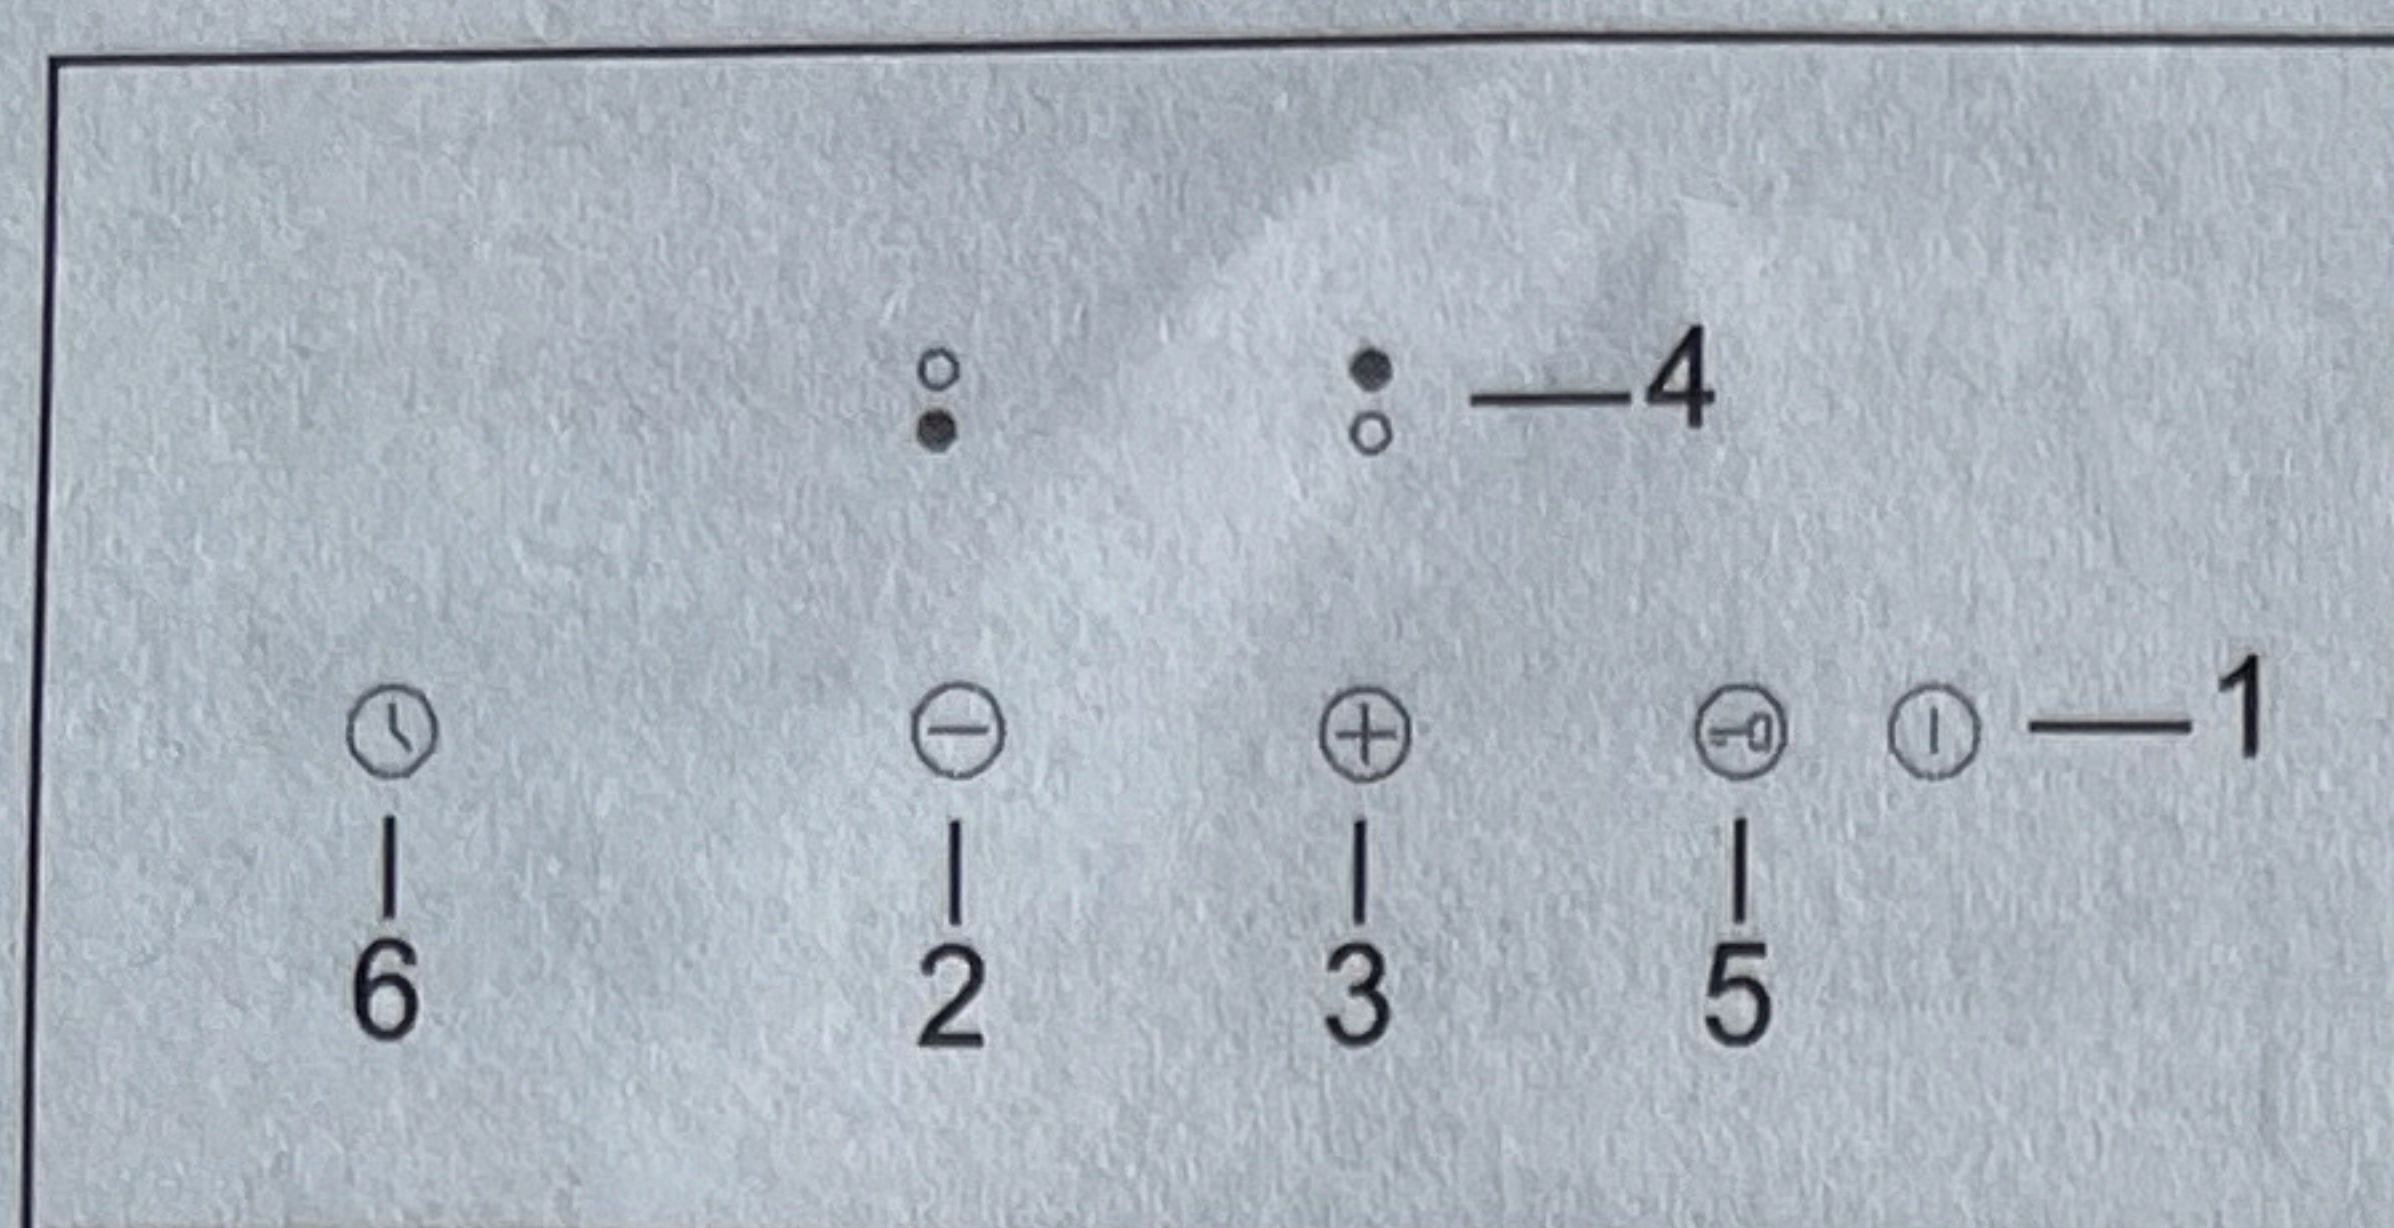

AEIH60T

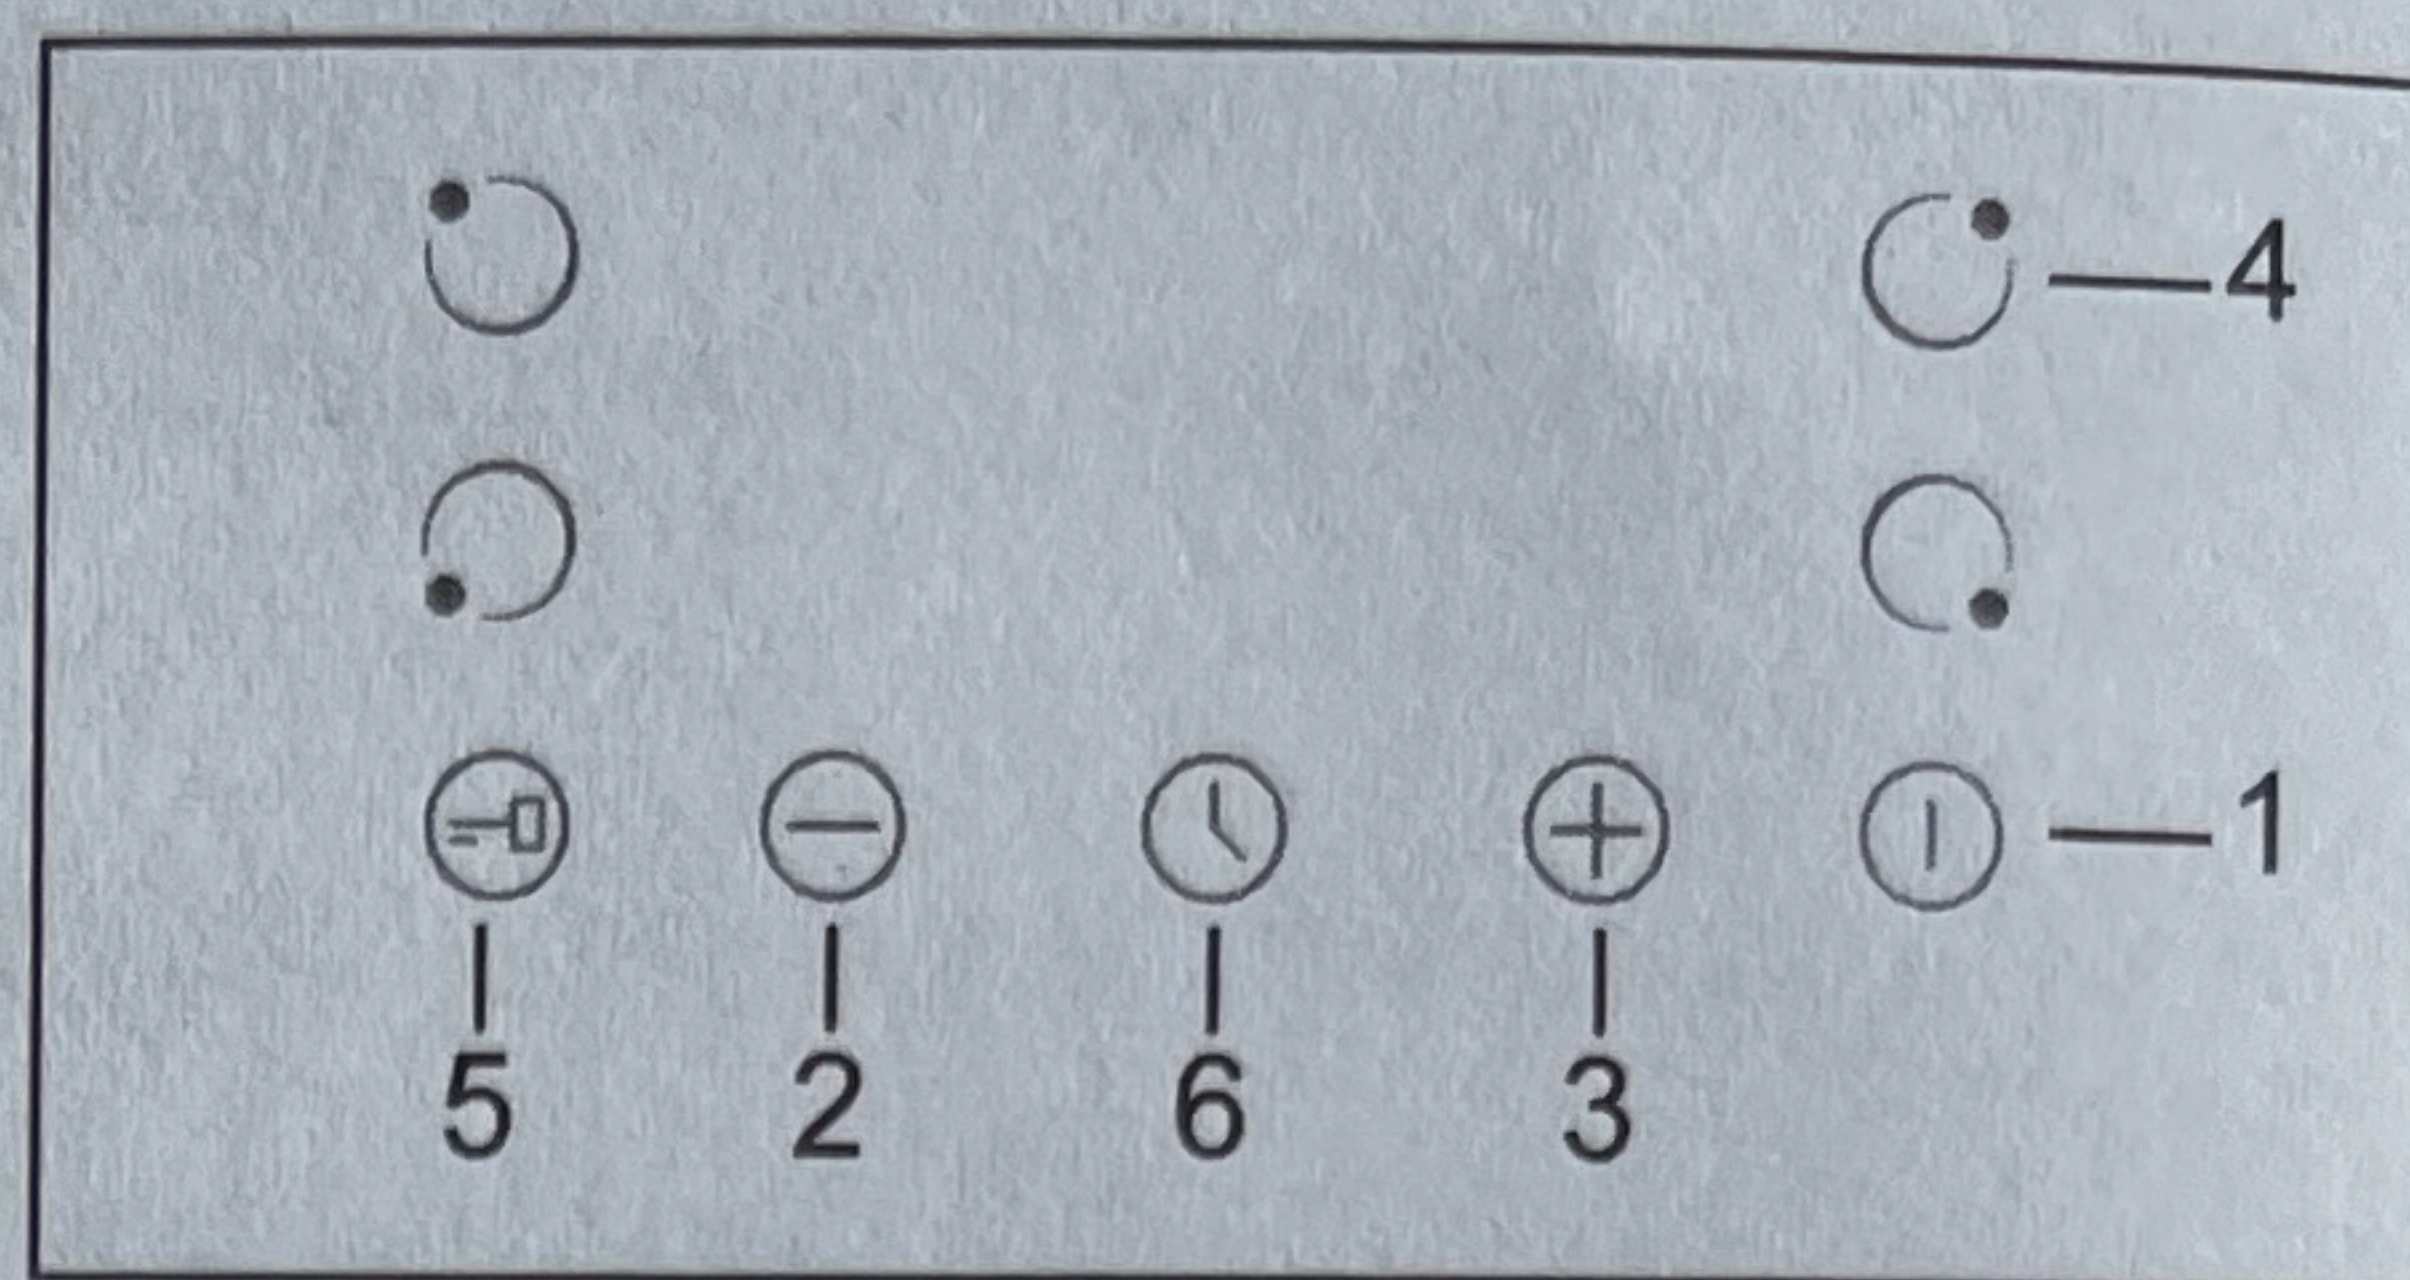

 AEIH60TPP

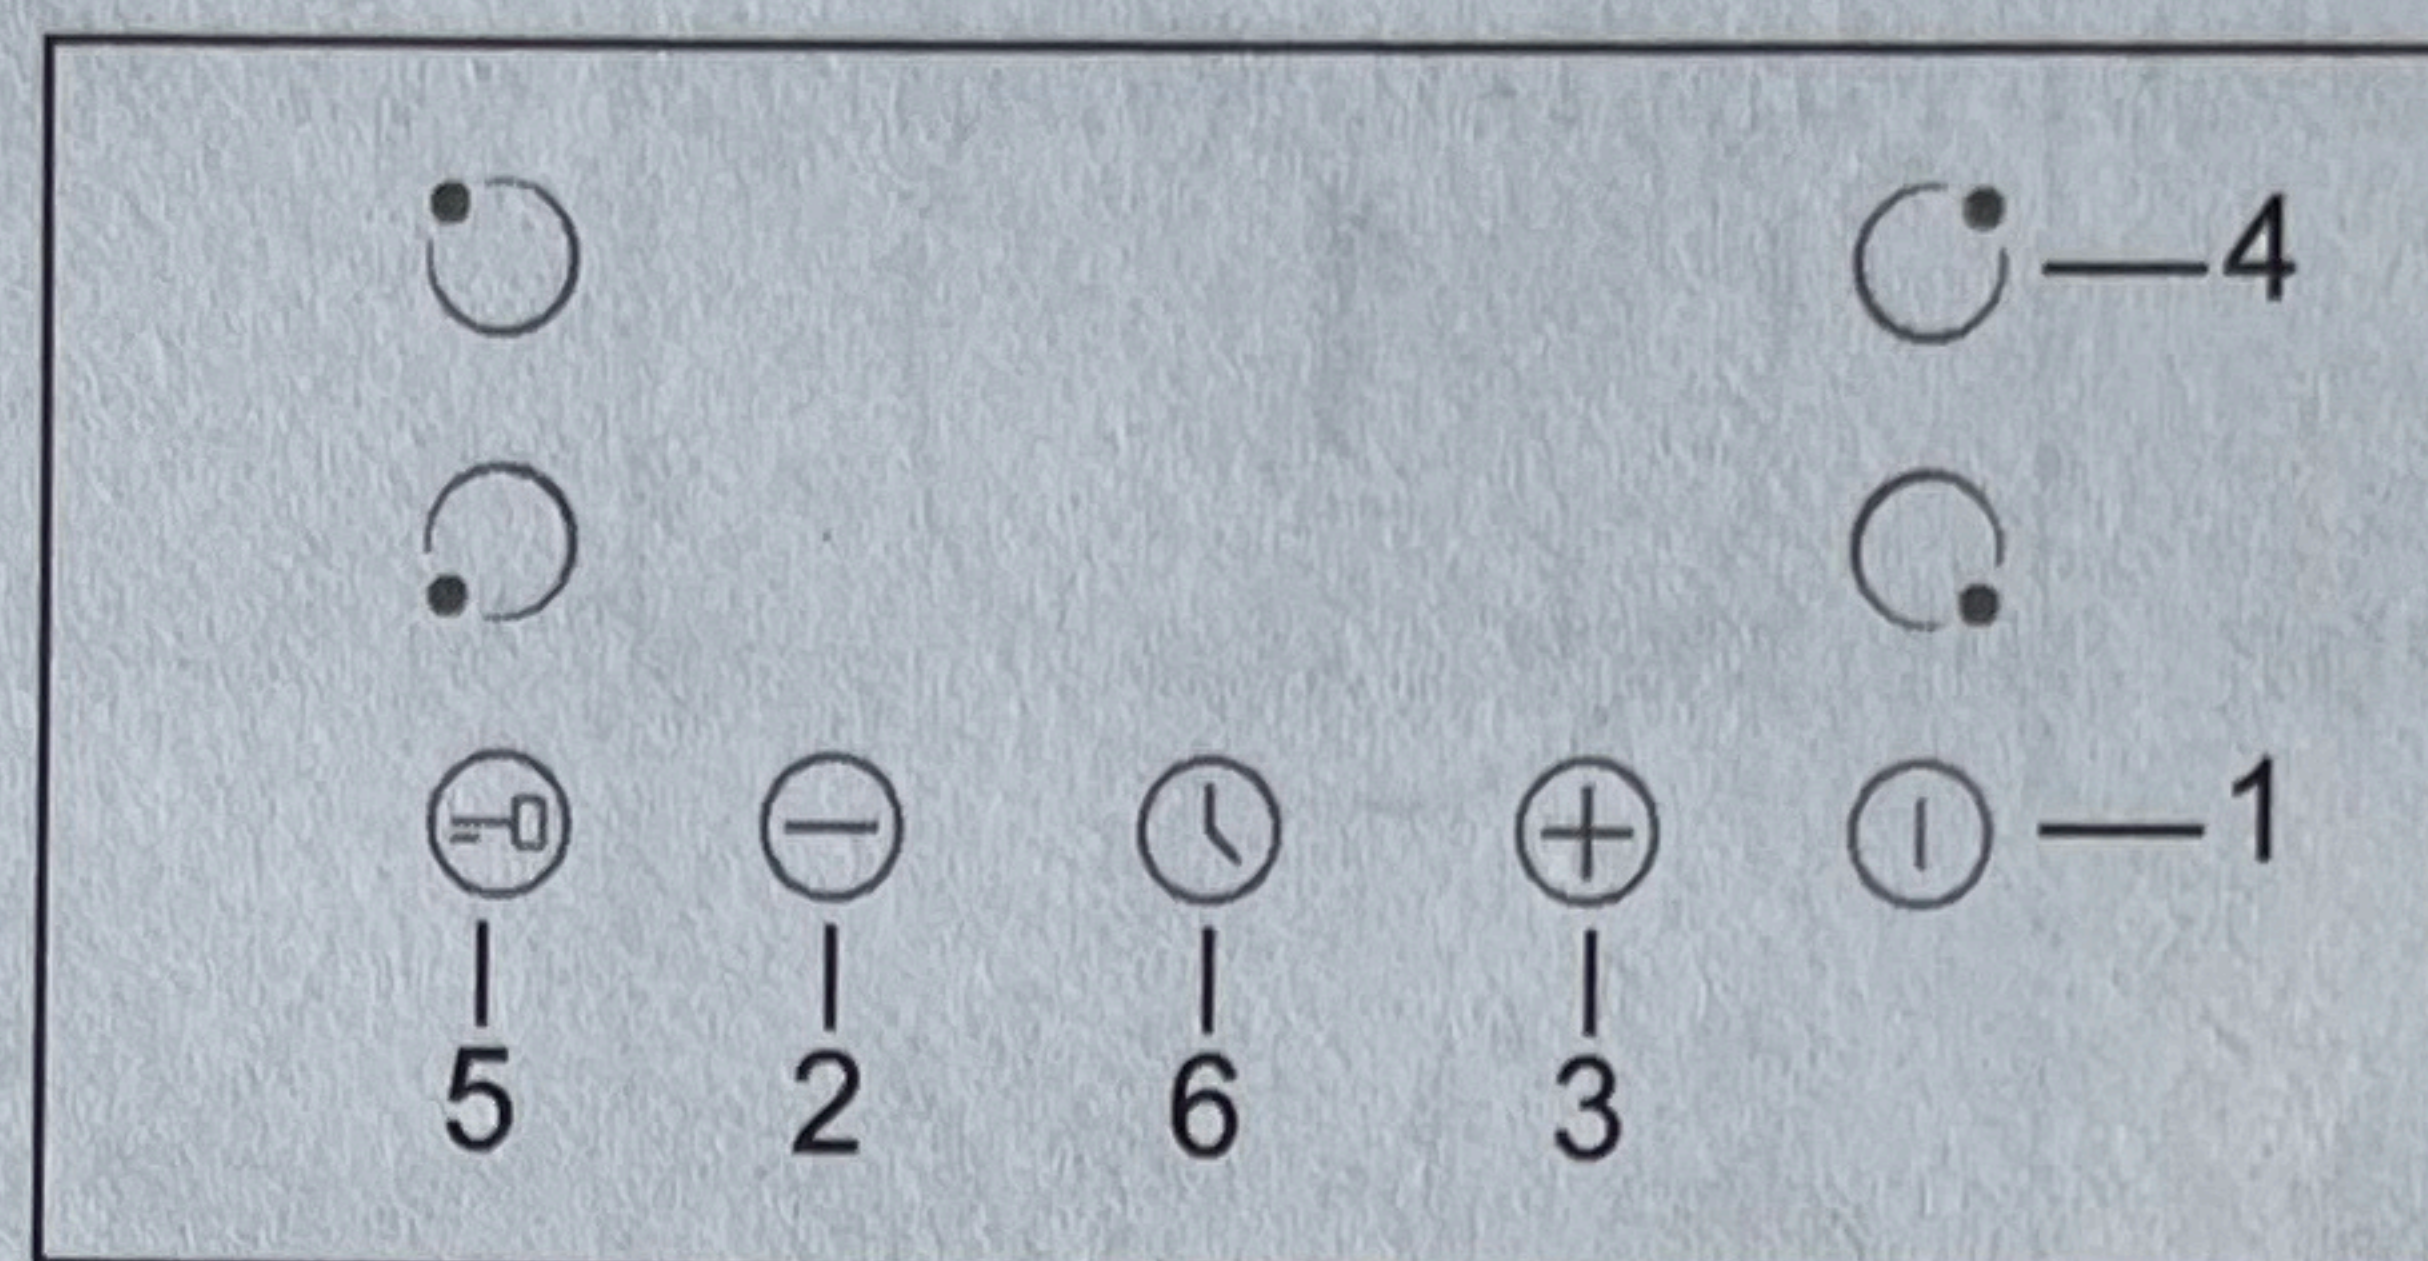

Control Panel Keys


KEY #	FUNCTIONS	KEY #	FUNCTIONS
Key 1.	ON/OFF	Key 4.	Zone selection
Key 2.	MINUS	Key 5.	Child lock
Key 3.	PLUS	Key 6.	Timer

Before using your New Hob

- Read this guide, taking special note of the 'Safety Warnings' section.
- Remove any protective film that may still be on your hob.
- Clean the glass-ceramic


Using the Touch Controls

 - The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip (see figure below).
- You will hear a beep each time a touch is registered.
- Make sure the control panel is always clean, dry, and that there is no object (e.g., a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

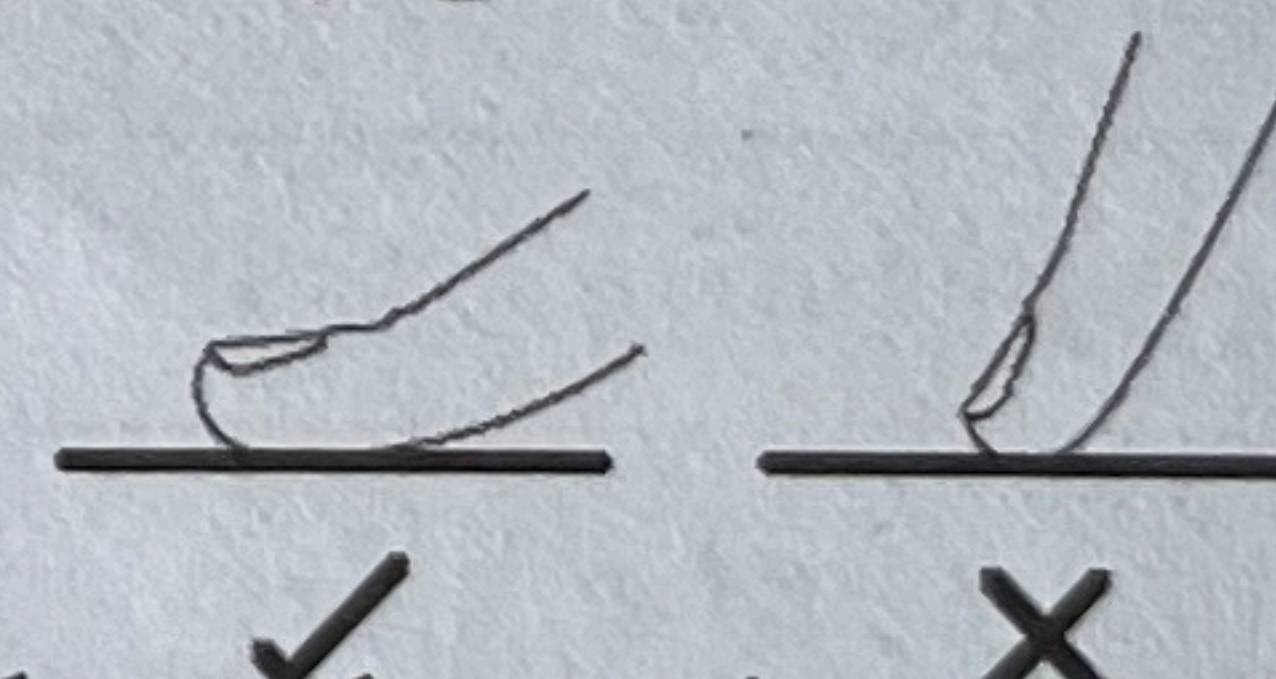


Choosing the right Cookware

 
- Use glass-ceramic suitable cookware only.
 - The base of cookware must have a minimum diameter relevant to the diameter of the cooking zone you use the cookware on.
- Do not use cookware with jagged edges or a curved base.

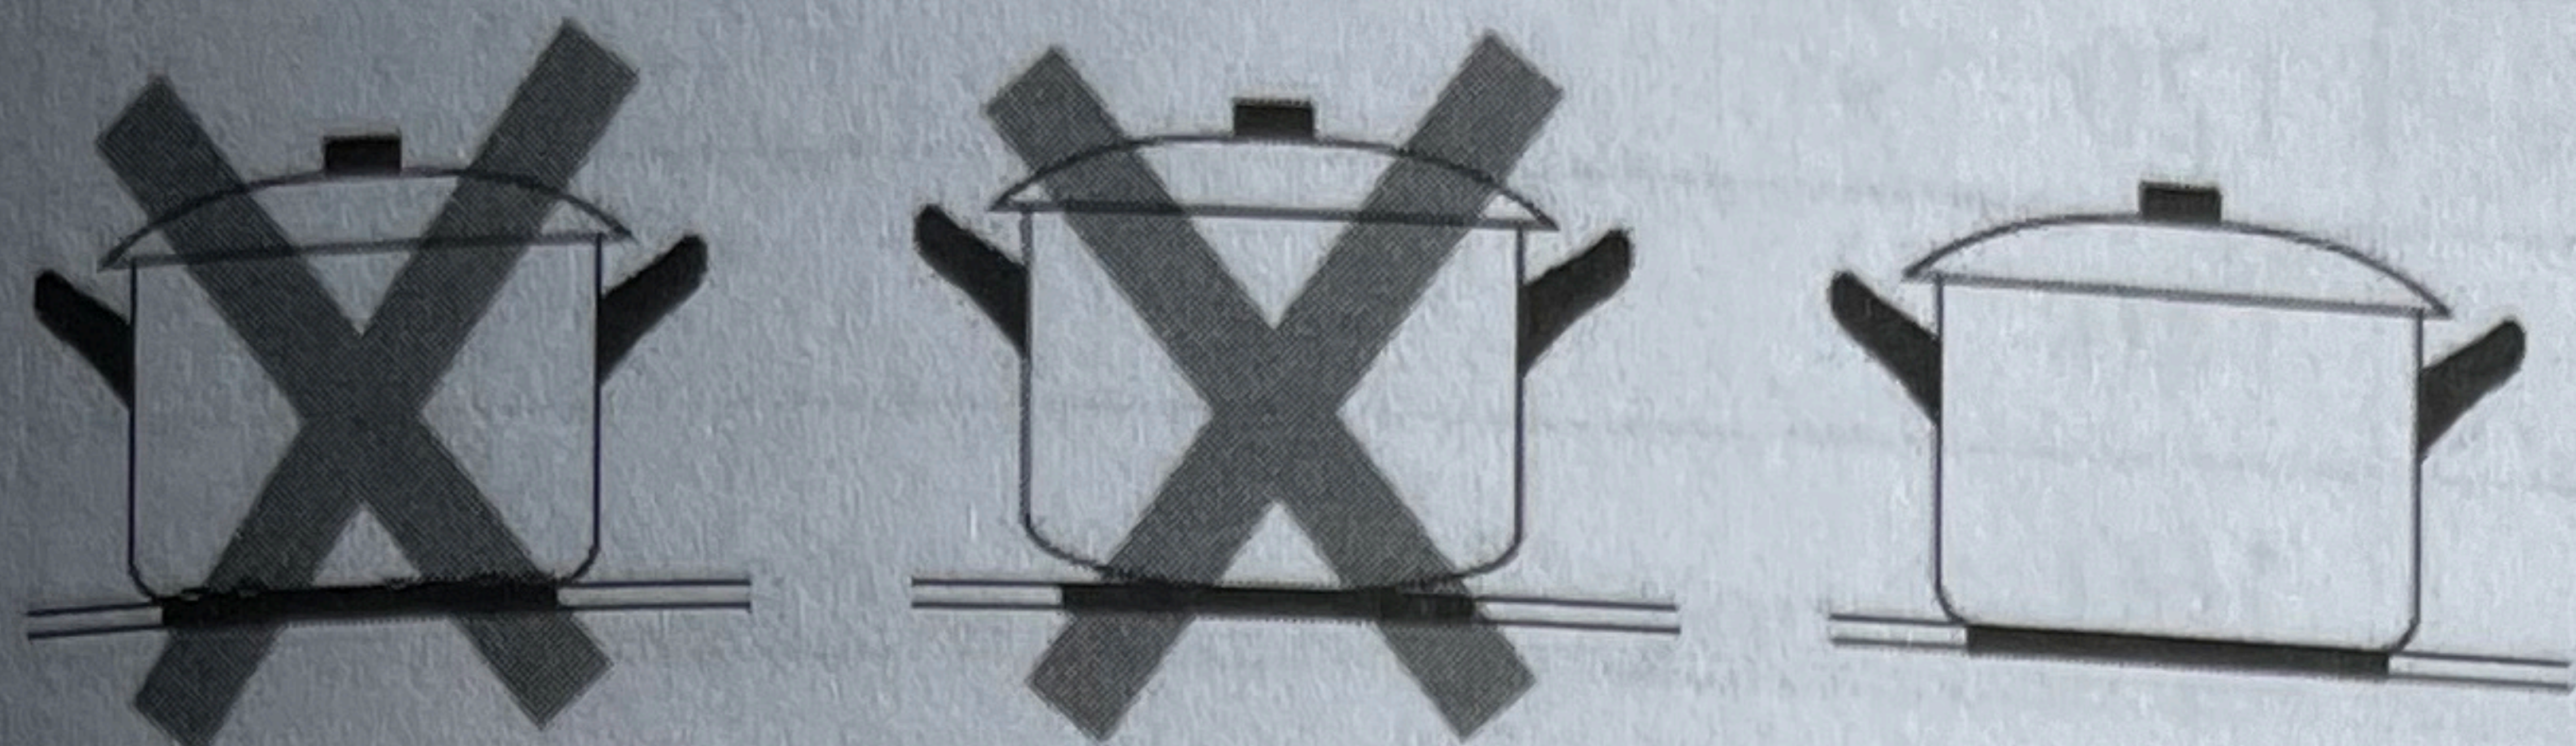

 Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Always centre your pan on the cooking zone.

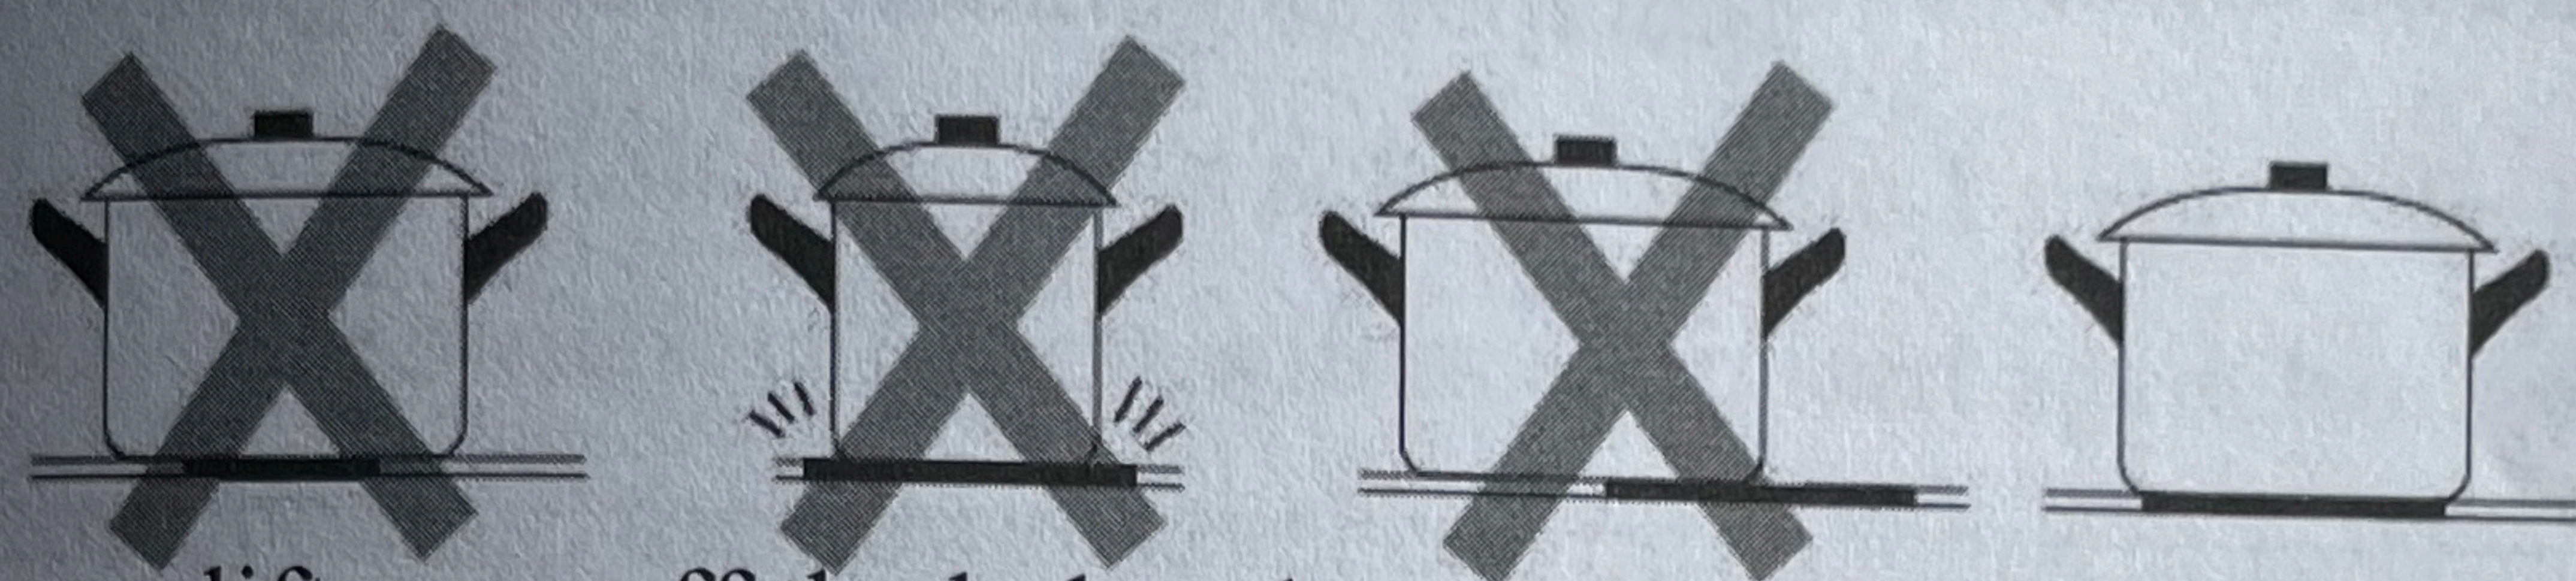

 Always lift pans off the hob – do not slide, or they may scratch the glass.

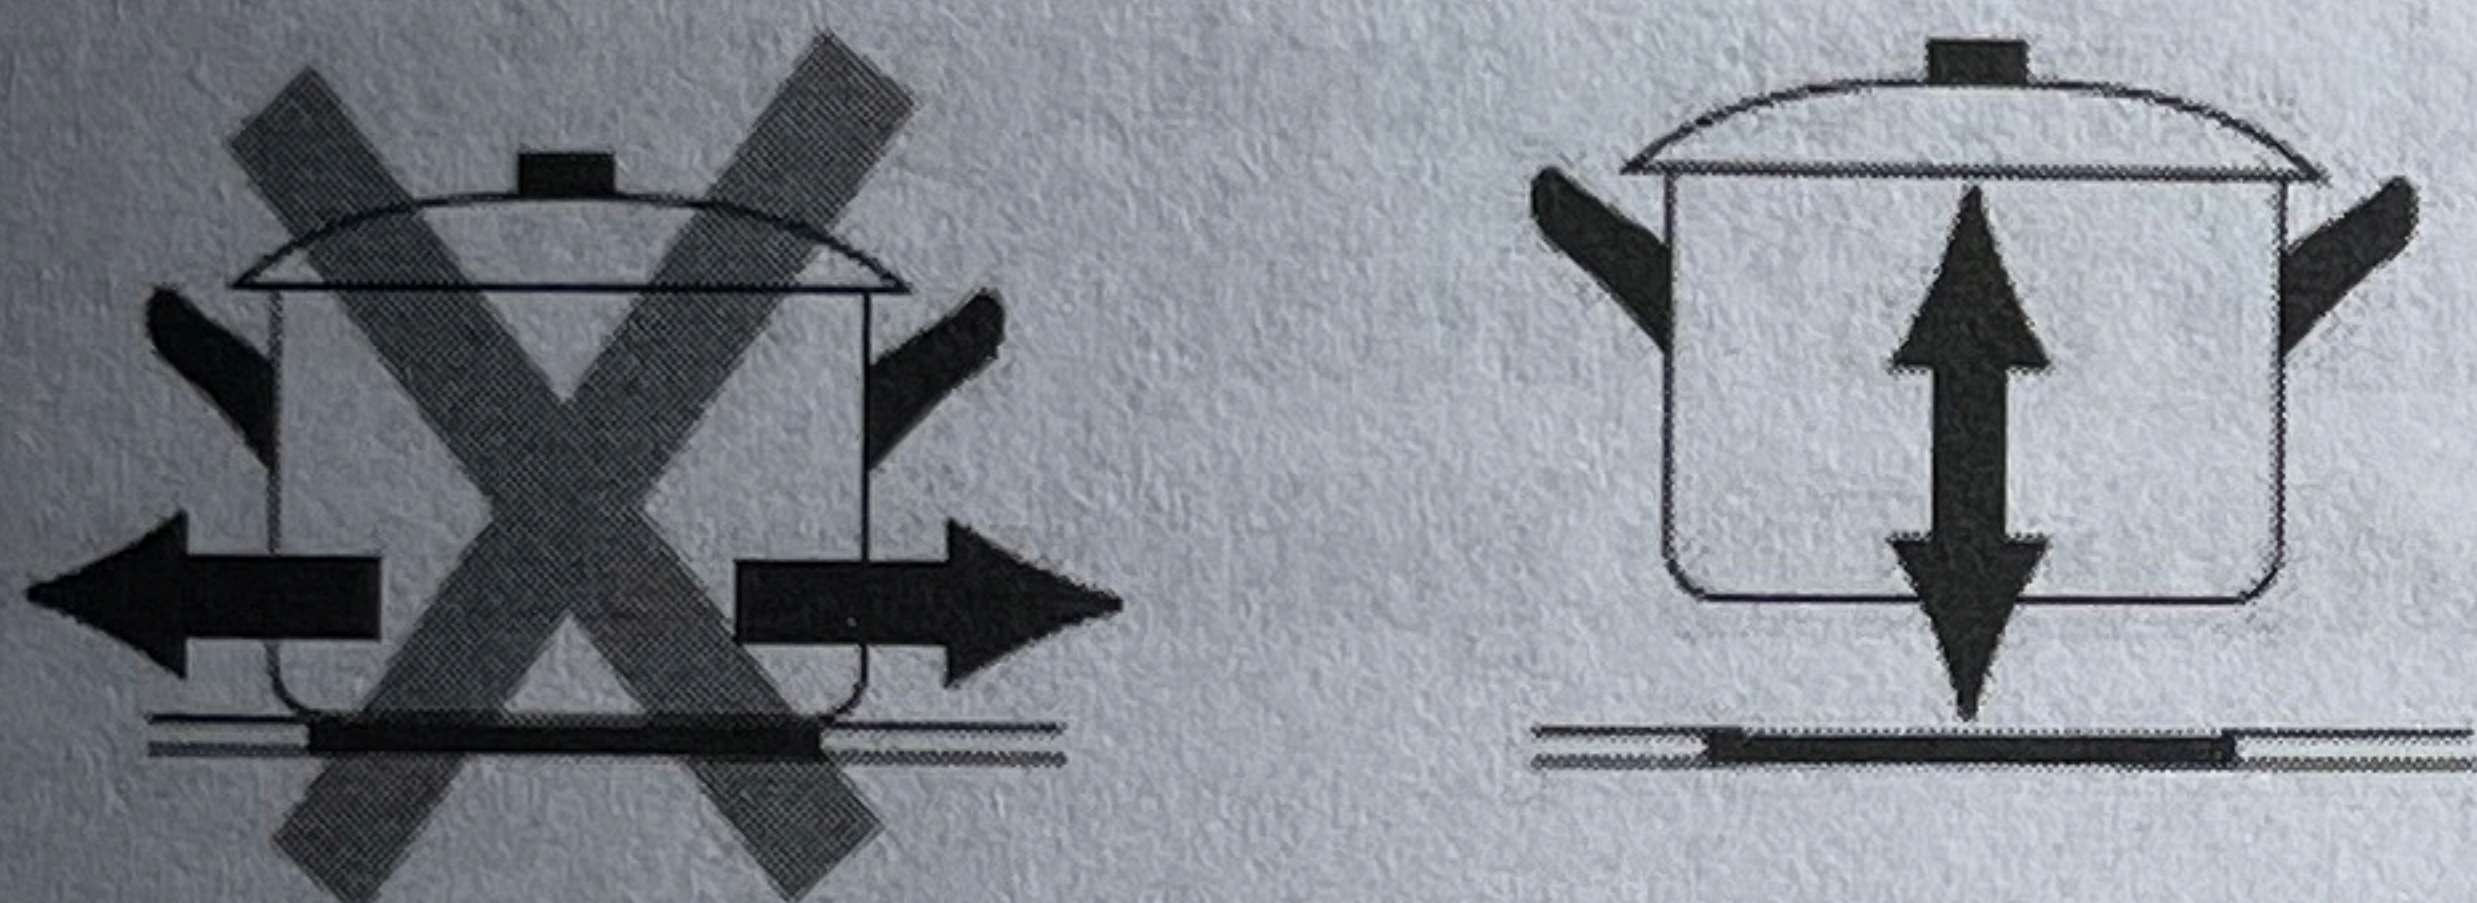

- Only ferromagnetic cookwares are suitable for induction cooking. Look for the induction symbol on the packaging or on the bottom of the pan. 
- You can check whether your cookware is suitable by carrying out a magnet test. Move a magnet towards the base of the pan. If it is attracted, the pan is suitable for induction.
- If you do not have a magnet:
 1. Put some water in the pan you want to check.
 2. Follow the steps under 'To start cooking'.
 3. If  does not flash in the display and the water is heating, the pan is suitable.
- Cookware made by the following materials is not suitable: pure stainless steel, aluminum or copper without a magnetic base, glass, wood, porcelain, ceramic, and earthenware.