


USING YOUR DISHWASHER

Control Panel

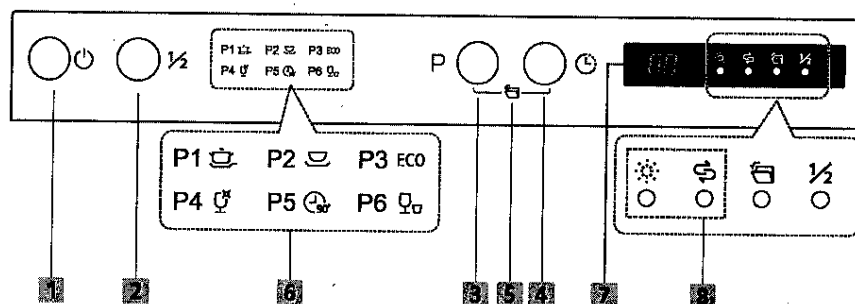

Operation (Button)

1 Power	Press this button to turn on your dishwasher, the screen lights up.
2 Half-load	To select Half load functions. (With this Half load function you can only use it when you have only about or less than 6 place setting dish ware, and you will see less water and energy consumption, can only be used with Intensive, Universal, ECO Glass and 90min.) When pressing this button, corresponding indicator will be lit.
3 Program	Select the appropriate washing program, the selected program indicator will be lit.
4 Delay	Press this button to set the delayed hours for washing. You can delay the start of washing up to 24 hours. One press on this button delays the start of washing by one hour.
5 Auto open	The dishwasher door opens automatically at the end of the program, which improves the drying results. Press the Program button and Delay button to activate or cancel this function. When you activate this function, corresponding indicator will be lit.


Display

6 Program indicator	Intensive Heavily soiled items include pots and pans. With dried on food. Universal For normally soiled loads, such as pots, plates, glasses and lightly soiled pans. ECO ECO This is the standard program suitable for normally soiled loads, such as pots, plates, glasses and lightly soiled pans. Glass For lightly soiled crockery and glass. 90 min For normally soiled loads that need quick wash. Rapid A shorter wash for lightly soiled loads that do not need drying.
7 Screen	88 To show the program, delay time, error code etc.
8 Warning indicator	Rinse Aid If the "☼" indicator is lit, it means the dishwasher is low on dishwasher rinse aid and requires a refill. Salt If the "⌘" indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled.

Problem	Possible Causes	What To Do
The dishes aren't drying	Wrong program has been selected.	With a short program, the washing temperature is lower, decreasing cleaning performance. Choose a program with a long washing time.
	Use of cutlery with a low-quality coating.	Water drainage is more difficult with these items. Cutlery or dishes of this type are not suitable for washing in the dishwasher.


LOADING THE BASKETS ACCORDING TO EN60436:

1.Upper basket:

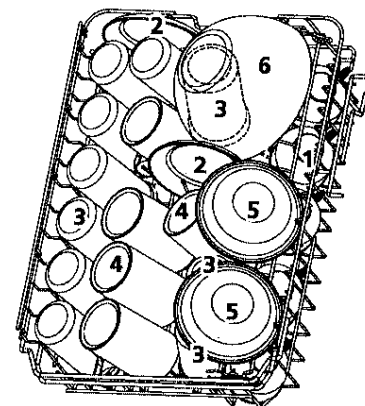


Number	Item
1	Cups
2	Saucers
3	Glasses
4	Mugs
5	Dessert bowls
6	Glass bowl

2.Lower basket:

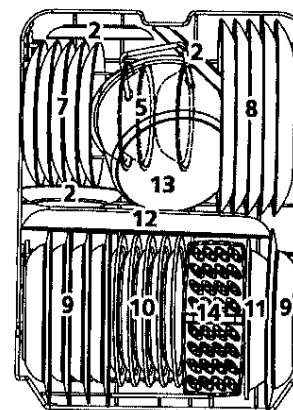

Number	Item
7	Dessert plates
8	Dinner plates
9	Soup plates
10	Melamine dessert plates
11	Melamine bowl
12	Oval platter
13	Small pot
14	Cutlery basket



3.Cutlery rack:

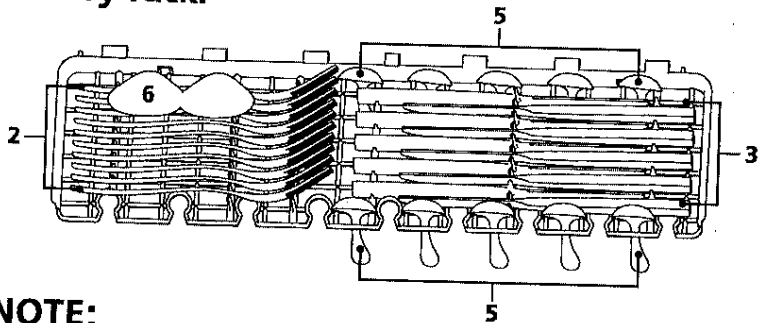

NOTE:


Please place the light flat wares on the shelf. The total weight is less than 1.5kg.

4.Cutlery basket:

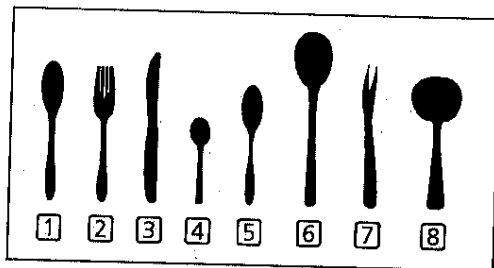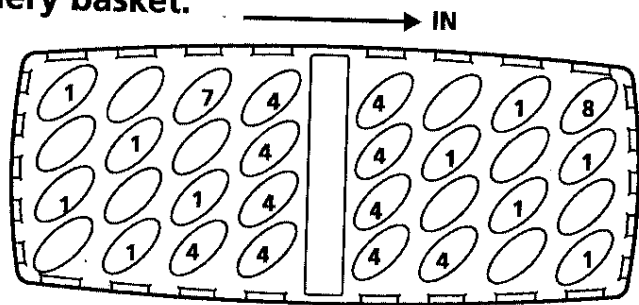

Information for comparability
tests in accordance with EN60436
Capacity: 10 place settings
Position of the upper basket: lower position
Program: ECO
Rinse aid setting: MAX
Softener setting: H3

Number	Item
1	Soup spoons
2	Forks
3	Knives
4	Tea spoons
5	Dessert spoons
6	Serving spoons
7	Serving fork
8	Gravy ladle

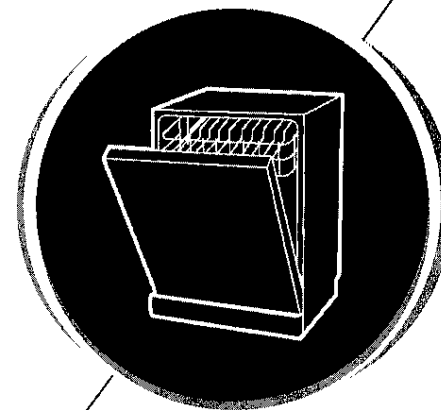

Dishwasher


Instruction Manual

BEL IDW45




Please read this manual carefully
before using the dishwasher and
Keep this manual for future reference.

Filling The Detergent Dispenser

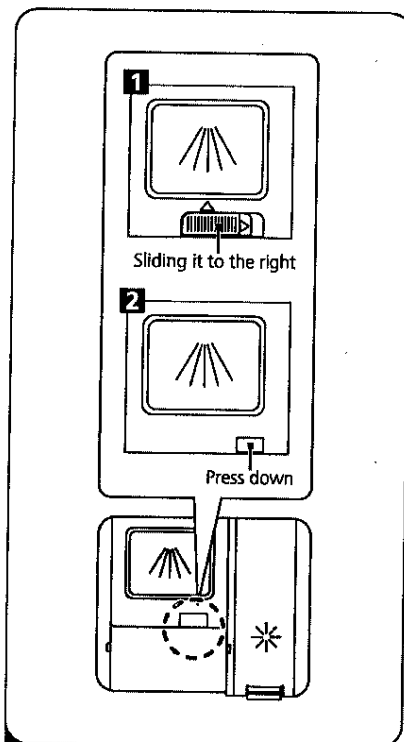


1 Please choose an open way according to the actual situation.

1. Open the cap by sliding the release catch.
2. Open the cap by pressing down the release catch.

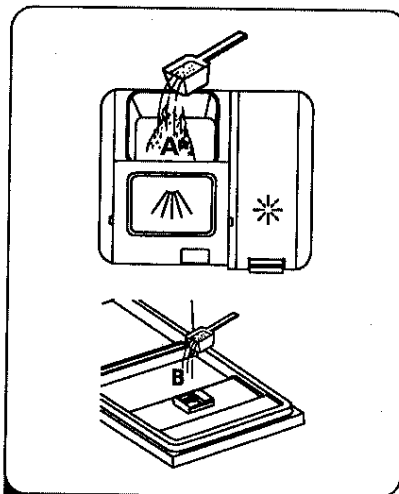

- 2 Add detergent into the larger cavity (A) for the main wash cycle. For better cleaning result, especially if you have very dirt items, pour a small amount of detergent onto the door. The additional detergent will activate during the pre-wash phase.

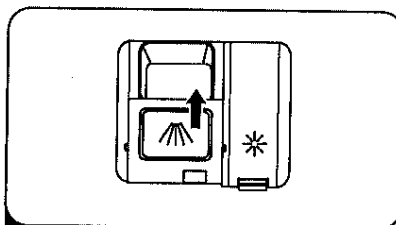

- 3 Close the flap by sliding it to the front and then pressing it down.

NOTE:

- Be aware that depending on the soiling of water, setting may be different.
- Please observe the manufacturer's recommendations on the detergent packaging.

PROGRAMMING THE DISHWASHER

Wash Cycle Table

The table below shows which programs are best for the levels of food residue on them and how much detergent is needed. It also show various information about the programs.

(●) Means: need to fill rinse into the Rinse-Aid Dispenser.

Program	Description Of Cycle	Detergent Pre/Main	Running Time(min)	Energy (kWh)	Water (L)	Rinse Aid
Intensive	Prewash(50°C)					
	Wash(65°C)					
	Rinse	4+14 (g)	205	1.432	15.2	●
	Rinse					
	Rinse(60°C)					
	Drying					
Universal	Prewash(45°C)					
	Wash(55°C)					
	Rinse	4+14 (g)	175	1.22	15.1	●
	Rinse					
	Rinse(60°C)					
	Drying					
ECO (*EN60436)	Wash(45°C)					
	Rinse	18 (g)	215	0.674	9	●
	Rinse(45°C)					
	Drying					
	Prewash(40°C)					
	Wash(50°C)					
Glass	Rinse	4+14 (g)	120	0.734	12.4	●
	Rinse(50°C)					
	Drying					
	Prewash(40°C)					
90 min	Wash(55°C)					
	Rinse	18 (g)	90	0.723	9.5	●
	Rinse(50°C)					
	Drying					
Rapid	Wash(40°C)					
	Rinse(40°C)	12 (g)	30	0.695	10.2	○
	Rinse(55°C)					

NOTE:

ECO : This program is the test cycle. The information for comparability test in accordance with EN60436.