

BOX #	QTY	PART #	DESCRIPTION
BOX #3	1	yoke	yoke
	1	205-6-099-11	bellcrank
	1	205-3-022-01	ash tray
		205-6-114-01	steering control cable
BOX #1	1		Throttle cable
	1	205-1-002-46	stringer
	1	9-053-01	bracket
	1	205-136-13	door handle
	1	205-3-009	inbd aileron hinge
	6		cover snaps
	1	205-1-168-15	door stop
	1		door handle (interior)
BOX #2	1	5-155-01	engine baffle (needs repair
	1	S205-6-066-02	cable box 2
	1	S205-6-066-01	cable box 2
	1	S205-6-067-01	cable box 2
	14	205-1-060-03	seat belt attach cables
	3	5-154-03	engine baffle
	2	5-153-03	engine baffle
	2	5-156-01	engine baffle
	2	5-155-01	engine baffle
	BOX #3	4	6-047-01
1		6-046-04	rod
1		6-046-03	rod
1		6-017-01	rod
1		6-203-13	rod (ends bent)
7		5-178-01	exhaust pip
1		202-001-102	exhaust
3		205-6-041-01	bracket? (exhaust clamps possibly)
1		5-182-03	tube
2		2-151-16	?
1		2-151-15	?
1		6-042-03	bracket arm assy
1		6-042-04	bracket arm assy
2		205-6-042-07	bracket arm assy
		6-042-06-	bracket arm assy
BOX #1	5	205-B32	grease fittings
	1	C23-805	compass card assy
	14	21155 13	Bracket
	1	MS28741-6-0221	hose-fuel
	1	205503201	?
	1	205-6-055-03	flap cable roller or 206-6-055-03

	2	S205/1072-03	door latch assy S205-03 or 1072-03
	6	S205B-35	grease fitting pins
	2	205-3-029-03	clamps
	10	205-8-189-11	elbow-hydrolic
	1	205-6-239-25	bracket
	2	205-6202-13	bushing flangeel
	1	915301	grease fitting-bolt
	1	205BB38A	kit
	1	205-9-044	seal
	1	205-5-033-01	
	1	205-6-201-13	sprocket
	1	205-1-053-14	stiffiner
	2	9-063-01	grease fitting
	1	205B57	kit
BOX #8	lots	205-8-019-13	link switch connection
BOX #9		205-045-02	bellcrank assy
		205-6-057-05	elevator assy
		205-6-044-20	pedal bar support
		205-1-159-14	plate
		205-6-049-03	spring rudder control
		205-6-071-01	bracket
		205-6-015-03	arm assy
		205-6-022-01	arm assy elevator
		205-8-280-11	plate
		205-6-271-01	
	1	205-1-042-11	RIB
	1		flap leading edge (Skin and Spar)
	4	ART-1012	
	1	205-7-053	trim tab
	1		trim tab (skin damaged)
	2	205-1-008-01	fillet
	1		L/H inbd flap (skin damage, trailing edge)
	1	205-1-139-01	latch assy
	1	6-208-05	gear rod
	2	6-208-09	gear rod
	1	6-208-07	gear rod
	1	205-1-057-09	floor panel
	2	205-5-141-01	cowl assy
	1	205-8-241-03	rib/frame assy
	1	3-052-15	flsp skin center outbd RH
	2	205-5-167-01	
	1	9-012-05	upper trunion
	4	205-1-140-01	rod
	4	205-1-139-01	rod

6	205-1-027-19	strip ??
1	205-1-002-56	center section, windshield post R/H (L/H also P/N?)
1		
2	205-8-053-11	panel
17		tach cables
1	8-322-13	line assy
2	1-135-01	actuattng rod (cowl flap??)
1	205-8-241-13	frame
1	6-058-03	rod
2 bags	205-2-022-02	frame -BOX #1

Box #9 cont	205-8-244-11	bearing
	205-2-037-17	
	205-7-057-02	arm assy
	205-7-064-12	stop
	205-7-013-13	bushing

Box #1 cont	1	205-1-072-01	door latch
	1	203-3-033	bracket
	4	MS25224-2	switch cover
	1	04-73451-01	battery lid assy

Interior panels

3	205-2-026-14	
8	205-2-026-14/1	
2	205-2-025-06	
2	205-2-025-03	

Wing Skins

1	205-3-020-13	
1	205-3-020-14	
1	205-3-020-10	

Nose bowl

4	205-5-140-01	Aluminum with one light
1		Fiberglass w/ 2 lt cut outs
3	5-142-01	cowl door
3	5-142-02	cowl door
2	205-1-027-11	window frame
2	205-2-024-20/1	window int panel
2	205-2-024-19/1	window int panel
3	205-1-002-33	rib (1ea unknown p/n)
3	205-1-002-34	rib (1ea unknown p/n)
1	205-8-241-01	A-frame assy
2	1-116-01-	?

BOX #13	1	205-9-044	seal
	1	205-B38A	kit
	1	209-9-153-01	
	1	205-9-054-09	
	1	205-5-033-01	cup
	1	205-9-153-01	
	1	205-6-239-25	bracket
	1	205-8-189-11	elbow
	1	205-5-032-01	scoop
	1	205-B-31B	kit
	1	205-1-072-01	door latch
	1	205-B31B	kit
	1	205-51-13	kit fla[roller
	1	205-B32	grease fitting kit
	1	205-1-053-14	stiffener
	1	205-6-202-13	bushing - flanged
	1	205-9-038-01	
	1		hose-dump to carburator
	1	205-6-214-13	sprocket
	1	205-3-029-03	clamp

BOX #8		205-8-019-13	link switch connection
---------------	--	--------------	------------------------

BOX #9		205-045-02	bellcrank assy rudder control RH
		205-6-051-05	bellcrank elevator assy
		205-6-044-20	bracket pedal bar support RH
		205-1-159.14	plate
		205-6-049-03	spring rudder ctrl return
		205-6-071-01	bracket assy
		205-6-015.03	arm assy
		205-6-022-01	arm assy elevator
		205-8-280-11	plate
		205-6-271-01	
		205-8-244-11	bearing
		205-2-037-17	
		205-7-057-02	arm assy
		205-7-064-12	stop
		205-9-013-13	bushing

BOX #10		205-6-098-02	bellcrank assy aileron ctrl RH
		205-8-094-11	gasket drain lock connection
		205-6-069-07	cable assy
		205-6-272.01	pastrine
		205-5-168-19	adapter
		205-7-057-03	tube-torque elevator
		205-8-093-11	fitting drain lock
		205-8-344-11	spring (lever)

205-8-255-03 bracket
205-123-03 bracket
205-8-037-01 tie rod assy

BOX #3

205-6-120-02 cable
205-6-044-04 bracket assy pulley ctrl RH
205-6-021-01 bracket assy ctrl bar RH
205-6-097-01 rod assy flpa control
205-6-097-11 tube ctrl rod
205-6-051-15 bracket pully flap ctrl RH
205-6-051-20 bushing
205-6-243-03 bracket
205-6-120-11 plate 5H 107
205-6-044-03 bracket pully ctrl LH
206-6-025-01 rod assy elevator
206-6-057-04 bracket assy-pulley elevator ctrl
205-6-243-03 bracket
205-6-257-13 channel-throttle microswitch
205-6-057-22 bushing
205-6-055-01 pully for flap ctrl
205-6-051-14 bracket pully flap ctrl RH
205-6-056-15 bracket
205-6-182-01 bracket assy microswitch actuating
205-6-072-11 spacer

BOX #4

205-6-042-14 bearing
205-8-097.11 gasket
205-6-062.15 bushing
205-8-252.30 plackard
205-9-112 snap ring for 205-9-112
205-9-050 cap
205-9-042-15 washer shim rear
205-9-033 valve metering
205-6-223-03 plug assy
205-7-007-13 bracket-elevator hinge
205-6-057-23 spacer
205-9-042-11 washer shim
205-1-140-17 rod end ppin
205-7-060-01 support assy, tab ctrl mchanism
205-7-064-13 stop elevator
205-6-202-05 angle assy
205-6-062-11 bushing
205-9-041-13 washer
205-6-204-15 roller ctrl rodd fair lead
205-7-007-14 bracket elevator hinge
205-8-097-11 gasket
205-9-042-13 washer

205-6-233-03

BOX #5

205-1-156-01
205-6-045-03 bell crank
205-6-014-13 pulley cable
205-6-045-04 arm
205-6-014-01 bellcrank assy
205-6-216-03 rod gear position indicator
205-6-065-03 bracket assy pulley rudder ctrl
205-6-043-15 spacer rudder pedal outbrd
205-6-073-15 sleeve ctrl bar lock
205-6-057-03 supports
205-6-057-21 bellcrank
205-4-005-14 no. 8 roller
205-6-084-11 rod end
205-6-057-03 bracket assy pulley elevator LH
205-6-042-06 arm inbd pedal
205-2-022-22 hinge half
205-6-044-19 bracket pedal bar support
205-6-256-01 clamp & bracket assy
205-3-072-02 bracket
205-1-117-14 bracket
205-6-243-05 bracket actuator rew seetel

BOX #6

205-6-214-11 support
205-9-152-11 hot cylinder retainer
205-6-043-13 spacer rudder
205-6-043-12 spacer rudder pedcal center
205-6-230-01 drive assy
205-6-218-01 handle assy emergency exten
205-6-256-01 bracket assy -mixture ctrl
205-6-92-03 chain
205-1-060-12 block
205-6-047-03 tube assy
205-6-051-16 bracket trim tab
205-6-099-12 body bell crank
205-6-214-11 support emergency drive
205-6-048 link co-pilot pedal
205-6-257-11 bracket
205-6-014-11 bolt flanged
205-6-015-11 bolt flanged
205-6-218-03 bolt & handle assy

BOX #7

205-3-013-21 bracket
205-1.138.01 bellcrank door
205-1-059-13 bushing
205-1-144-13 blade baggage door latch

205-1-033 fitting
205-1-139-17 end eye
205-1-140-17 rod end
205-3-013-15 support bracket
205-3-021-25 hinge half door
205-1-143-25 spring cabin door lower
205-1-033 fitting
205-1-002.52 racket angle lower
205-3-021-27 hinge
205-1-002.38 channel

BOX #1

205-1-072.05 bellcrank-latch
max loas compartment signs
205-1-07.13 spacer lower
205-1-008.19 gasket
205-6-216-11 cup
04-72266-11 gasket-fuel transmitter (use w/ 205-8-095-01)
205-1-046 bushing
205-6-214.13 sprocket-chain emergency drive
205-1-059-11 plate support shim
205.1.129.13 hinge half door
205-9-038 washer
205-8-129-11 spacer
205-1-060-01 hat-ctrl pully bracket attaching
205-1.072.13 spacer lower

BOX #2

205-6-097-01 rod assy aileron
205-1-003-11 angle-fuselage connection LH
205-3-007-20 angle flap bracket attaching
205-1-146-11 plate cabin door latch retainer
205-1-142-11 gasket-door auter handle
205-1-002/50 bracket angle upper
205-3-007-18 angle flap bracket inbd r side
205-1-072-15 spacer upper
205-3-019-11 bolt eye
205-3-021-05 plate cabin door latch retainer
205-3-007-19 angle flap brackket attaching
205-1-072-15 spacer upper