

## Ford/Lincoln With Stability Control Data

Model Year	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021
BRONCO													823*
CMAX					783	AB10P							
ECONOLINE	384 RC6												
ECOSPORT										823*			
EDGE			384					783*				823*	
ESCAPE	384			384	783		783*					823*	
EXPEDITION	-	-	384				783			823*			
EXPLORER		-	384		783	RC7		783*				823*	
F150	384						783*			RC7P			
FIESTA			384			783							
FLEX		384											
FOCUS				597 Bosch AB10			783						
FUSION		384			783*			AB10P	823*				
GT										783*			
MAVERICK													
MUSTANG		384					783*				RC7P		
MUSTANG MACH E													823*
RANGER		384									823*		
SUPER DUTY F250-550	-	384							783*	RC7P			
TAURUS/SABLE		384			783 RC7								
TRANSIT (big van)									783				
TRANSIT CONNECT (small)					778*	783							823*
AVIATOR (Explorer platform)												823*	
Continental										823*			
MKC/CORSAIR (Escape Platform)							783*					823*	
MKS (Taurus Platform)		384			783								
MKZ, Zephyr (Fusion platform)		384			783	783*				823* AB12			
MKT '10 (Flex Platform)		384											
MKX/NAUTILUS (Edge platform)			384					783*			823*		
NAVIGATOR (Expedition platform)			384				783			823*			

The source data for this chart is the Bosch CDR help file 21.2 and personal knowledge

Always consult the latest Bosch CDR help file for the most accurate information, including important details not covered in this summary chart.

Copyright Ruth Consulting LLC 2021 Authorized for use by IPTM, and SAE