CHAPTER SIX

Troubleshooting Flow Charts,

How to use.

- ✓ Troubleshooting charts are divided into the common problems for the different areas of the system.
- Find the problem that is most closely related to the symptoms of the system you are working on.
- Work your way down the flow chart.
- Refer back to the pages listed in the flow charts for theory and diagrams relating to the problem.

What to look for.

- Observe the gauge glass. Boiler has to be clean before troubleshooting. See page 34.
- Get out of the boiler room to see the whole system.
- If steam, air, or water are in parts of the system that they are not supposed to be, that is part of your problem.
- If steam, air, or water are not where they are supposed to be, what is blocking the path is part of your problem.



What to ask.

- A How long has the problem been occurring?
- Has anything in the system been changed lately?
- In what areas of the building or system is the problem occurring?
- A Has the fuel usage increased?



Bonus Feature

Page 153

15 tips for top performance and low fuel bills for steam systems.




INDEX OF TROUBLESHOOTING FLOW CHARTS

Index of Troubleshooting Flow Charts


Page no.	BOILER/BURNER PROBLEMS
126	Unsteady or bouncing water line
127	Water suddenly leaves gauge glass
128	Pressure builds up quickly, but steam does not circulate
129	Water hammer in Hartford Loop
130	Boiler takes on a lot of make-up water
131	Boiler does not build up pressure on gauge
132	Boiler is flooding
133	Burner shuts off on low water
134	Burner shuts off on pressure
	PIPING/PUMPING PROBLEMS
135	Spitting main air vent
136	Main air vent leaks steam
137	Water hammer in mains
138	Steam does not reach end of main
139	Steam coming out of vent on condensate, vacuum, or boiler feed unit
140	Hissing main air vent
	RADIATION PROBLEMS
141	Spitting radiator air vent
142	Hissing radiator vents
143	Radiator vent leaks steam
144	Water hammer in radiator
145	Radiator does not completely fill with steam
146	Last radiator or radiators off supply main will not heat
147	One radiator in system will not heat (no steam at riser)
148	One radiator in system will not heat (steam is at riser)
	BUILDING/SYSTEM PROBLEMS
149	Building heats unevenly
150	Building is too hot
151	Building is too cold
152	High fuel bills
153	TOP 15 TIPS FOR PEAK PERFORMANCE

CHAPTER 6 BOILER/BURNER PROBLEMS

Unsteady or Bouncing Water Line

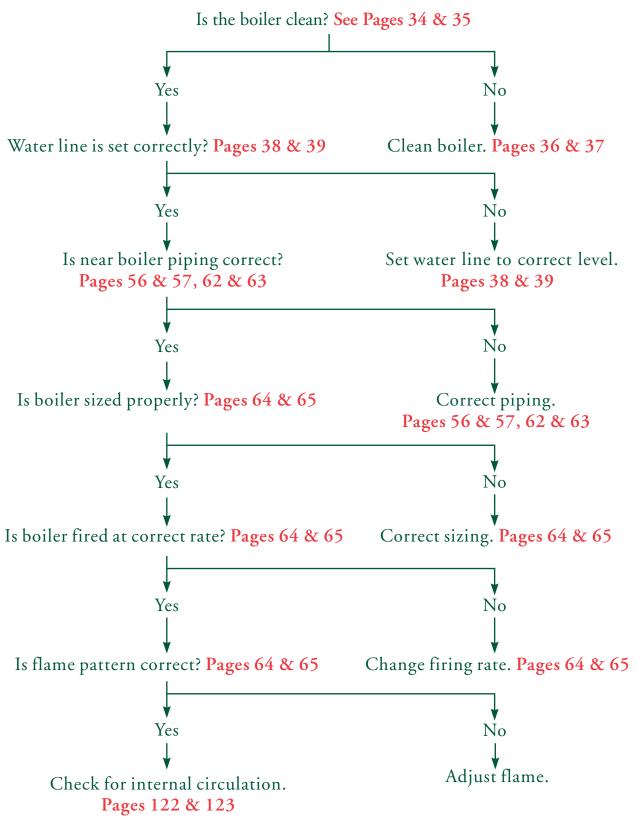


BOILER/BURNER PROBLEMS

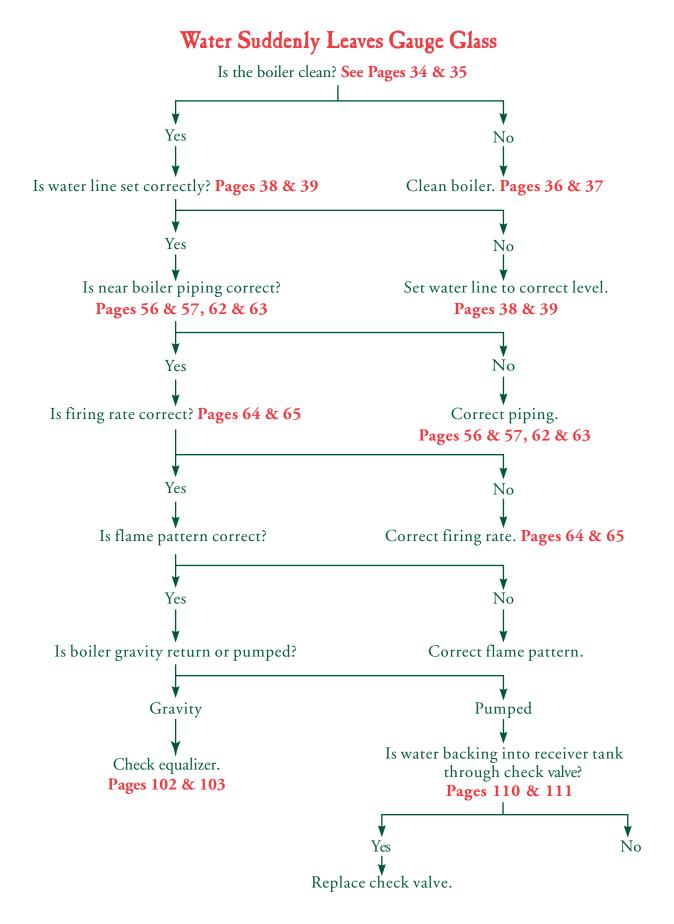


CHAPTER 6 BOILER/BURNER PROBLEMS

Pressure Builds Up Quickly, But Steam Does Not Circulate

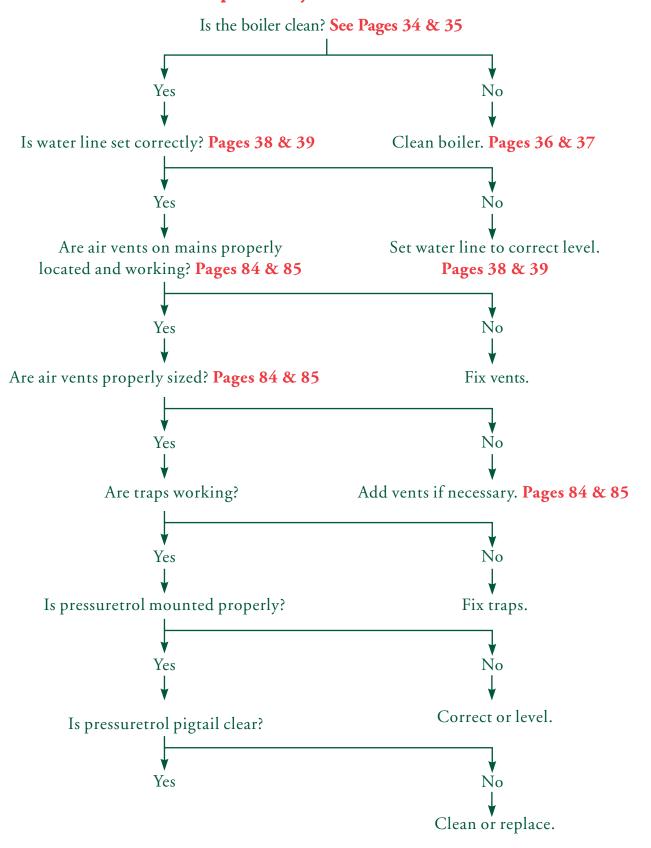


BOILER/BURNER PROBLEMS

Water Hammer in Hartford Loop

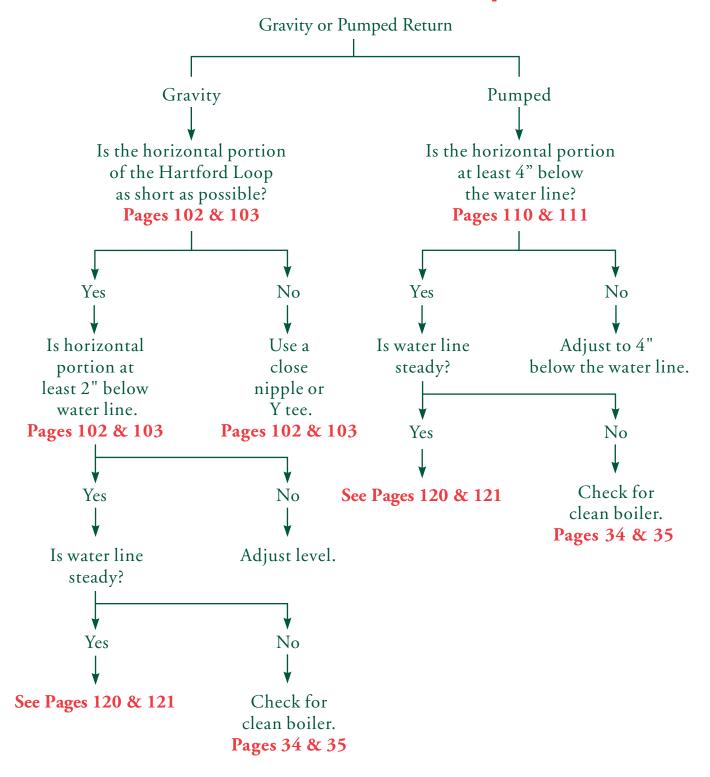


CHAPTER 6 BOILER/BURNER PROBLEMS

Boiler Takes on a Lot of Make-up Water

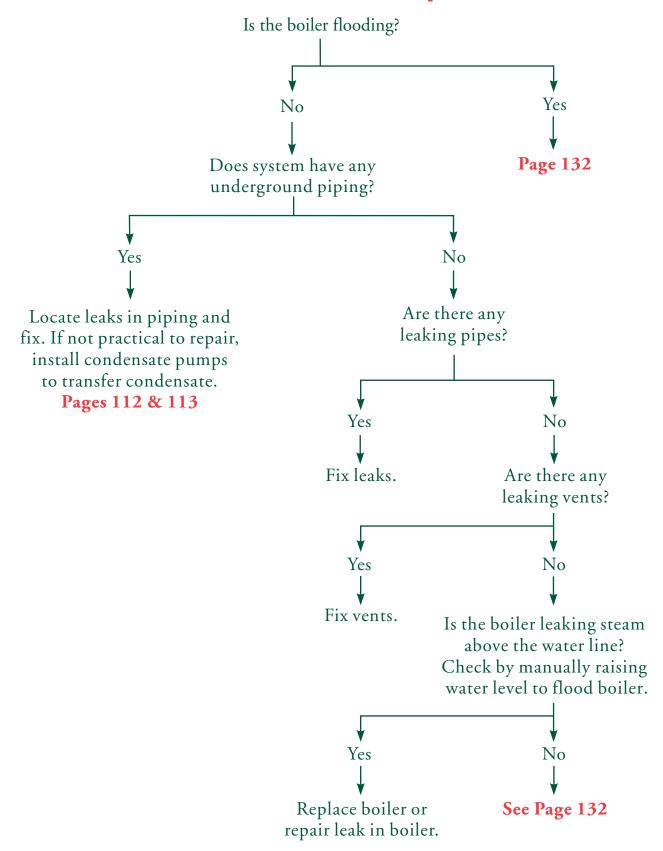


BOILER/BURNER PROBLEMS

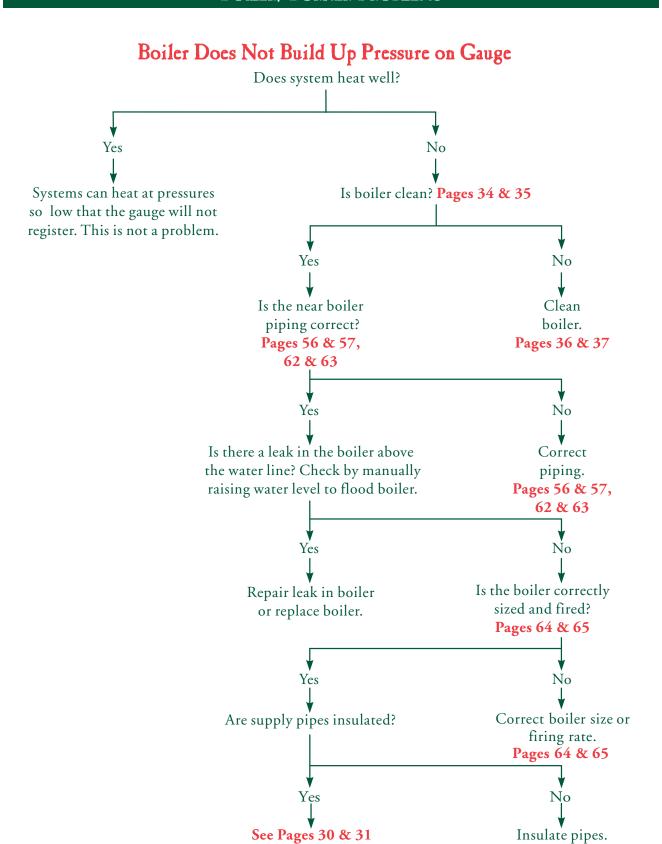


CHAPTER 6 BOILER/BURNER PROBLEMS

Boiler Is Flooding

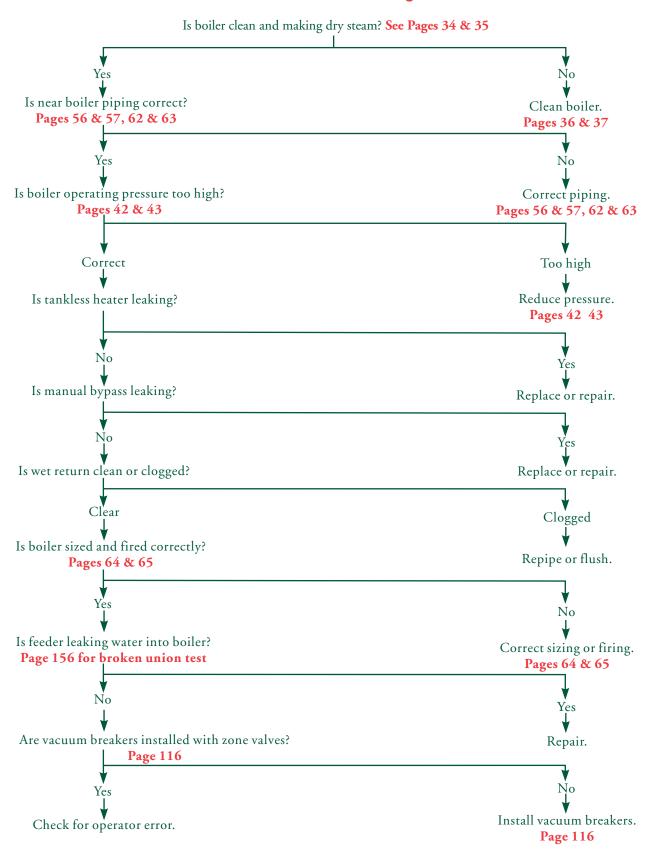

BOILER/BURNER PROBLEMS

Burner Shuts Off on Low Water

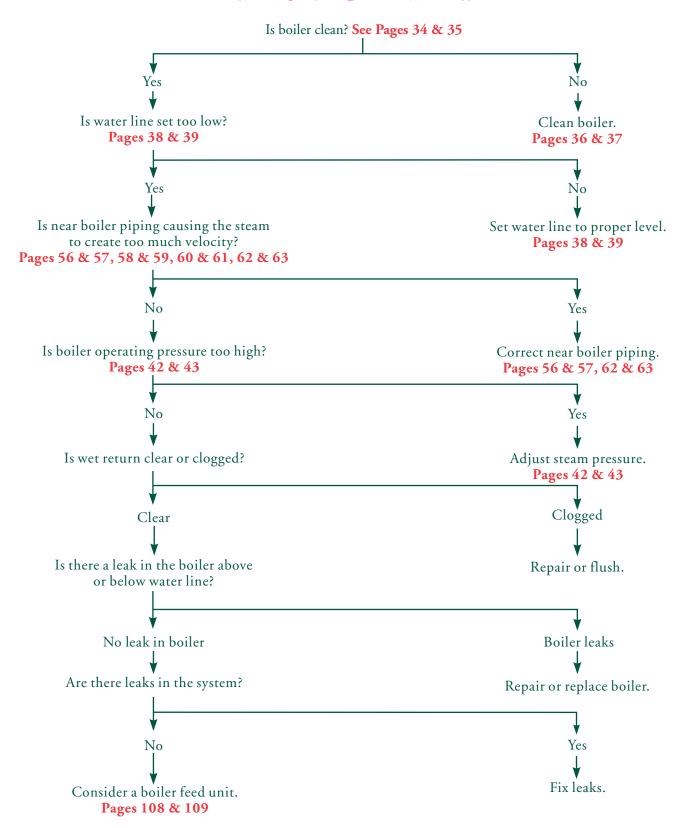


CHAPTER 6 BOILER/BURNER PROBLEMS

Boiler Shuts Off on Pressure


Is boiler oversized for the amount of radiation installed? See Pages 64 & 65 No Yes Is burner overfiring for the amount Reduce input to burner if possible. Pages 64 & 65 of radiation installed? Pages 64 & 65 No Yes Is the main air vent(s) installed and working? Pages 66 & 67 Adjust boiler firing rate. No Yes Is the main air vent(s) Install and replace properly sized? Pages 84 & 85 main air vent(s). No Yes Is the pigtail of the Replace with properly sized vent(s). Pages 84 & 85 pressure control clear? Yes No Is pressure control level? Clean or replace. Yes No Replace pressure control. Level.

Spitting Main Air Vent

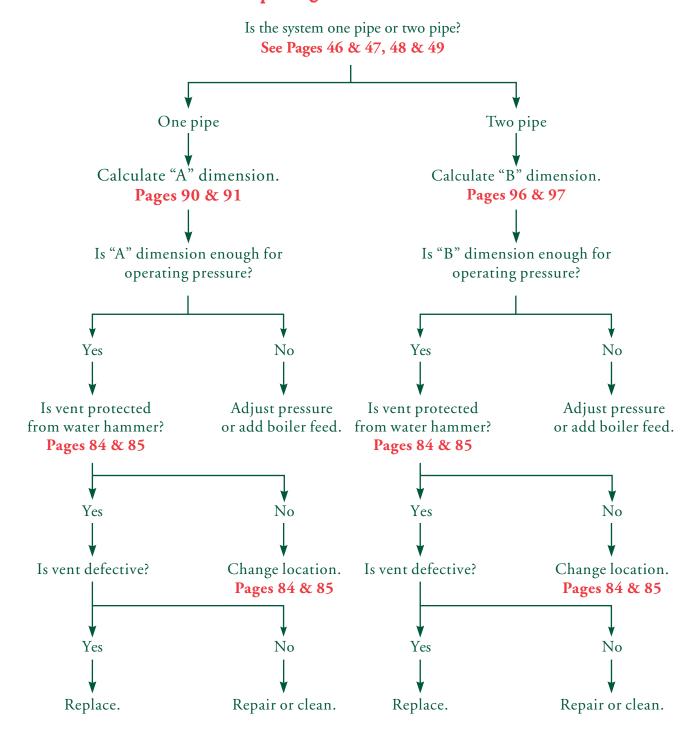


CHAPTER 6 PIPING/PUMPING PROBLEMS

Main Air Vent Leaks Steam

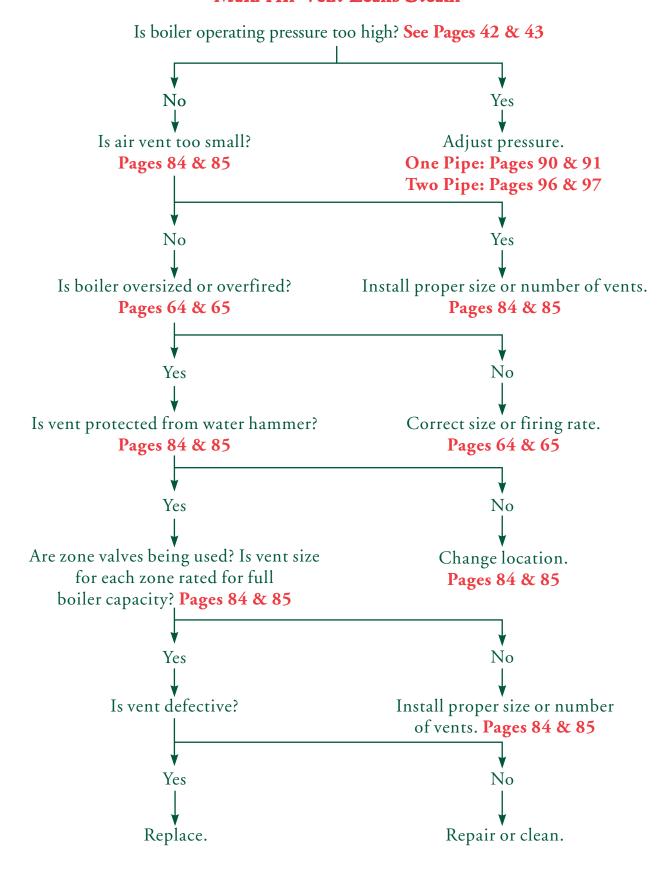


PIPING/PUMP PROBLEMS

Water Hammer in Mains

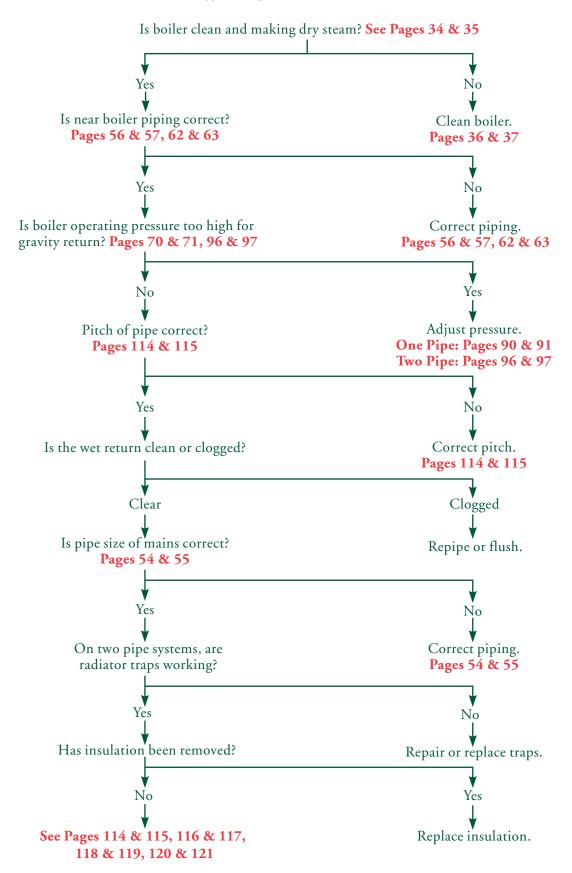


Steam Does Not Reach End of Main

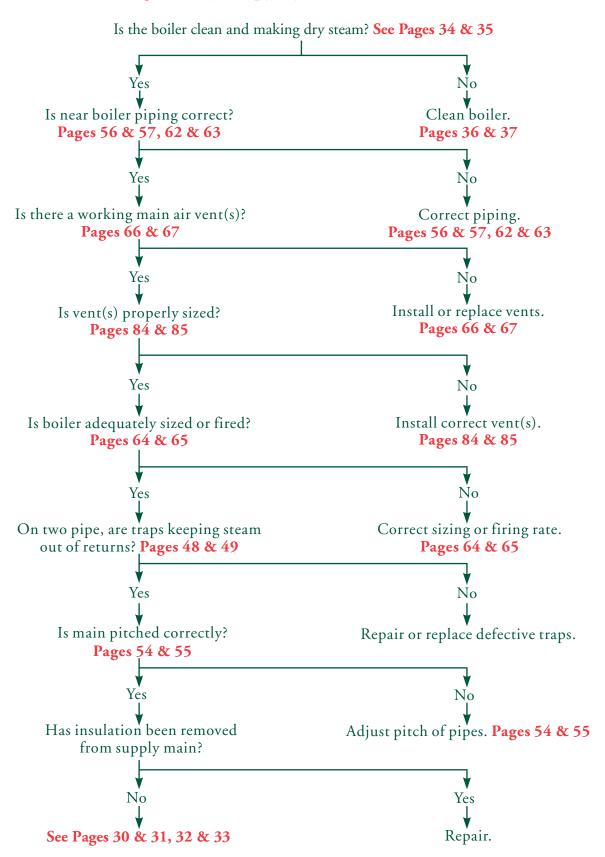


PIPING/PUMP PROBLEMS

Steam Coming Out of Vent on Condensate, Vacuum, or Boiler Feed Units

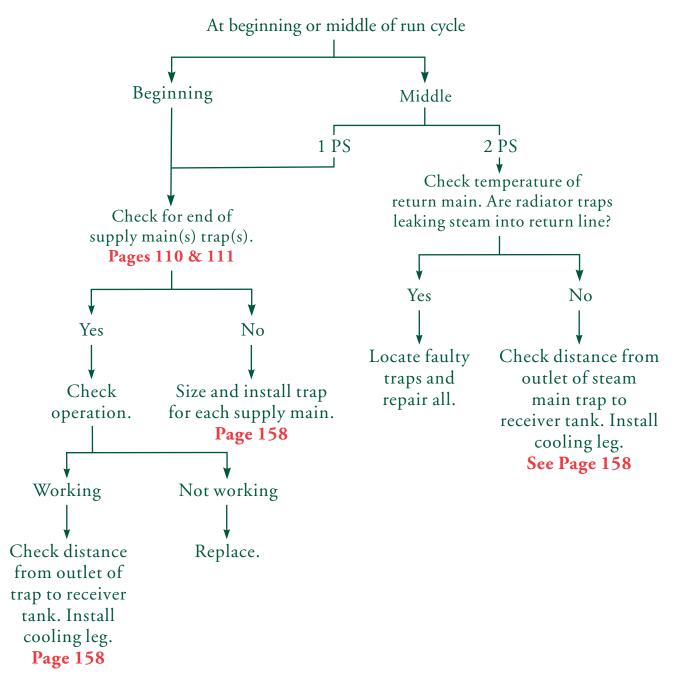


CHAPTER 6 PIPING/PUMPING PROBLEMS

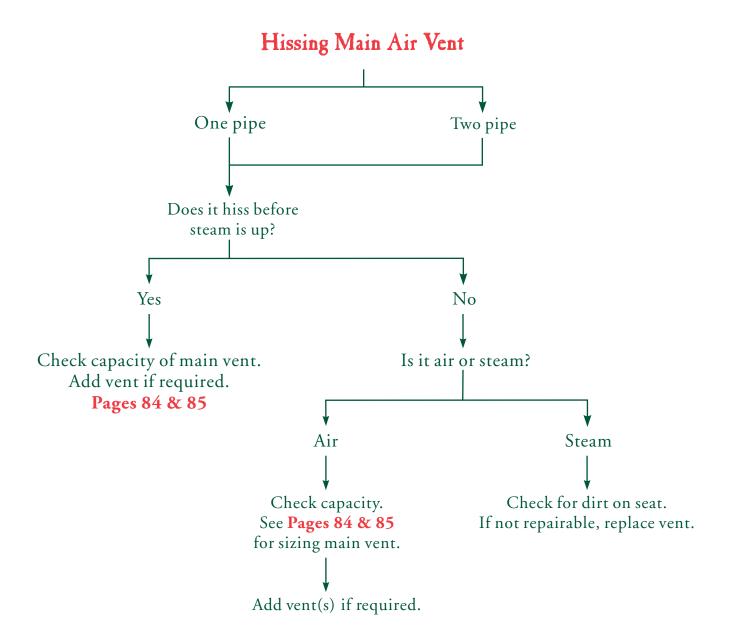


RADIATION PROBLEMS

Spitting Radiator Air Vent

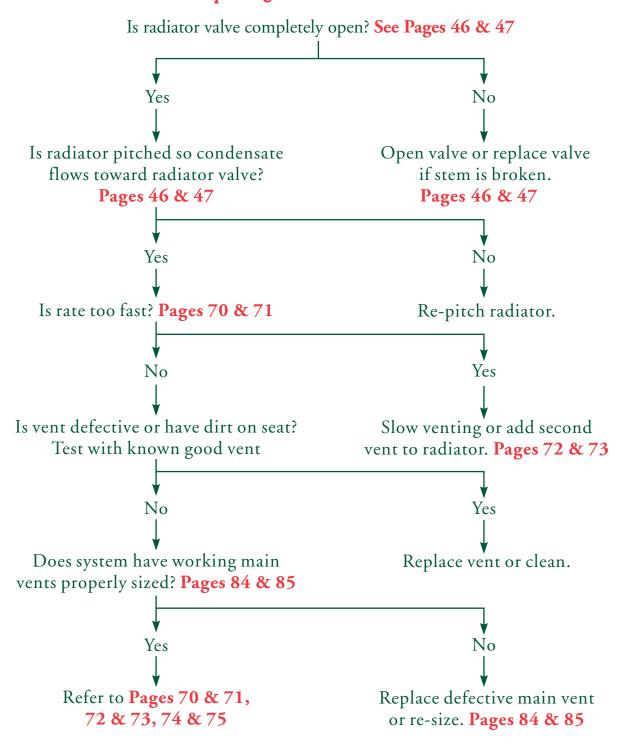

CHAPTER 6 RADIATION PROBLEMS


Hissing Radiator Vents

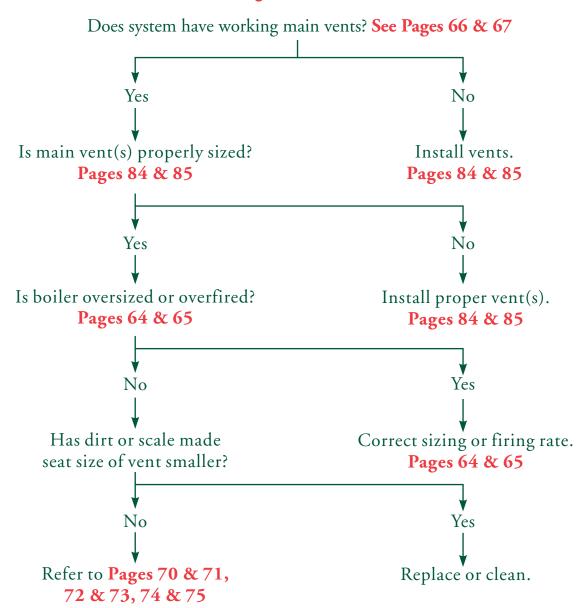

RADIATION PROBLEMS


Radiator Vent Leaks Steam

Has dirt or scale built-up on seat of vent to prevent it from closing?

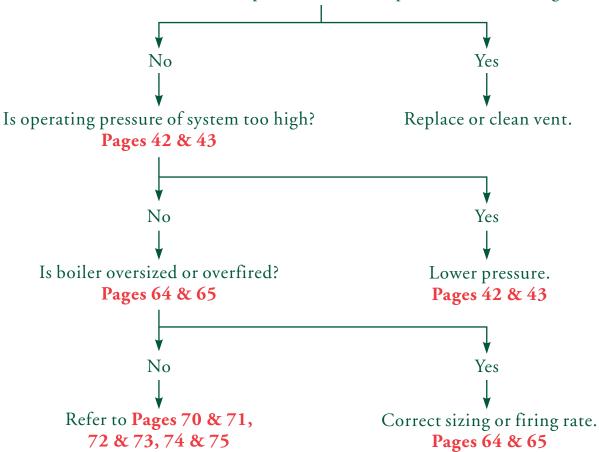


CHAPTER 6 RADIATION PROBLEMS


Water Hammer in Radiator

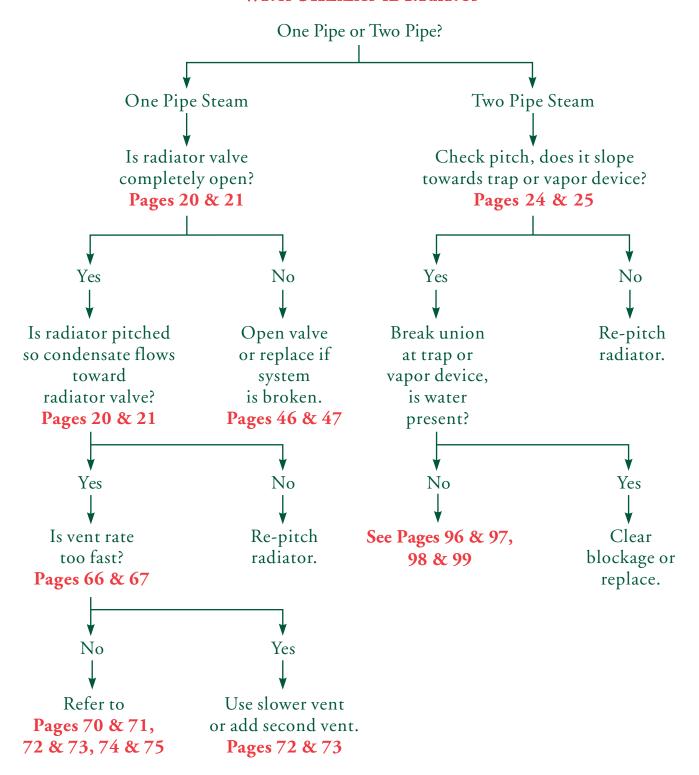


RADIATION PROBLEMS

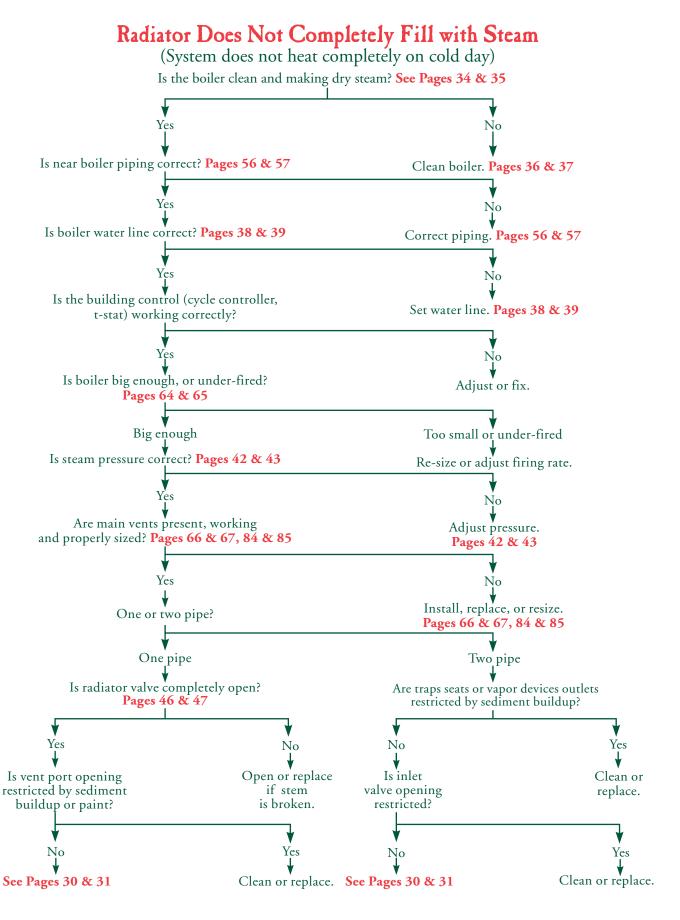

CHAPTER 6 RADIATION PROBLEMS

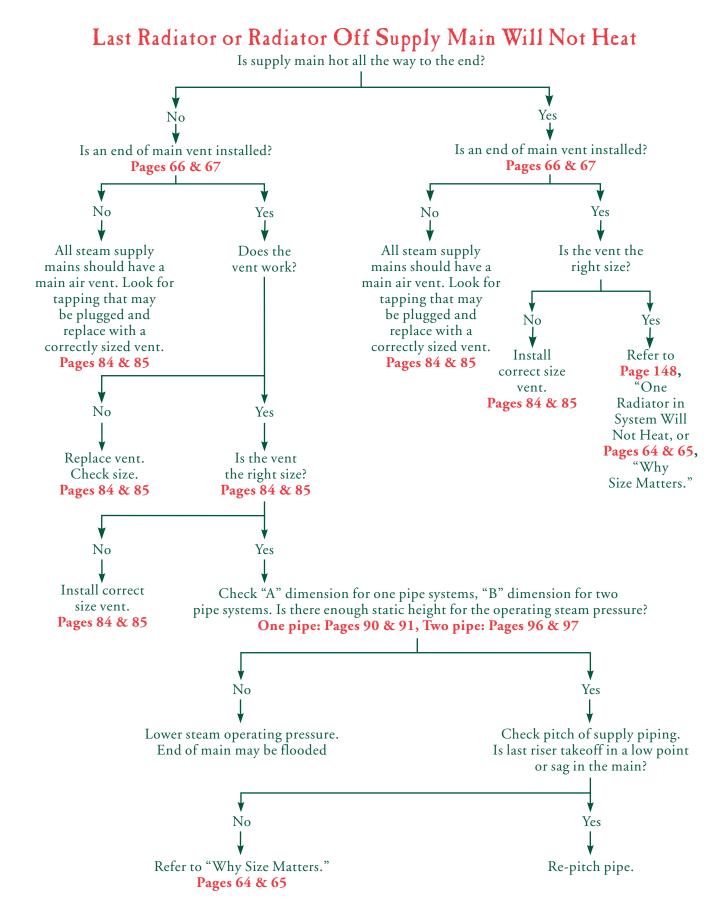


RADIATION PROBLEMS

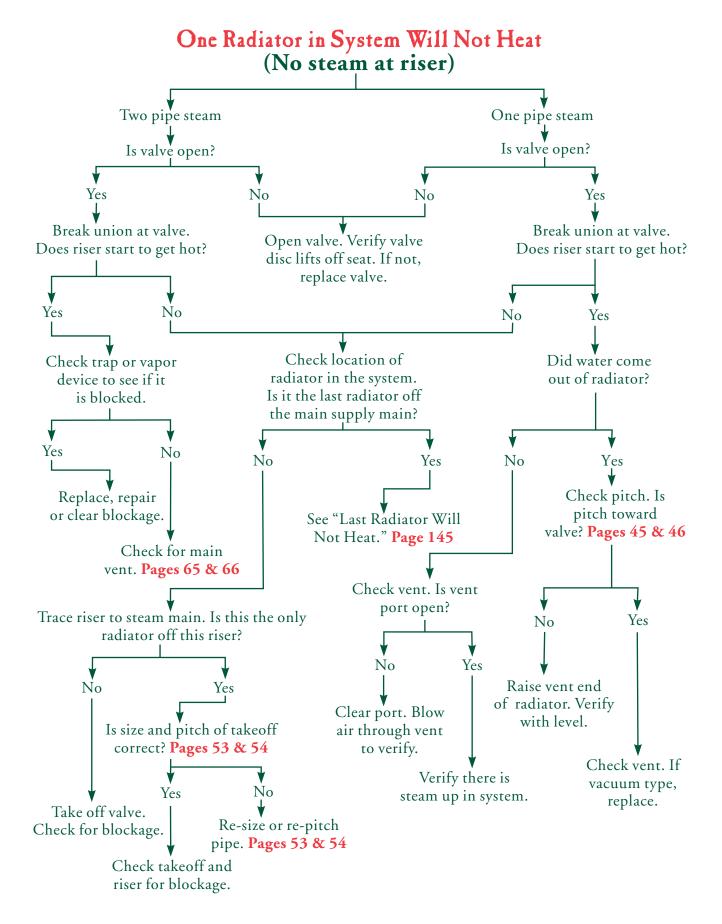


CHAPTER 6 RADIATION PROBLEMS

One Radiator in System Will Not Heat

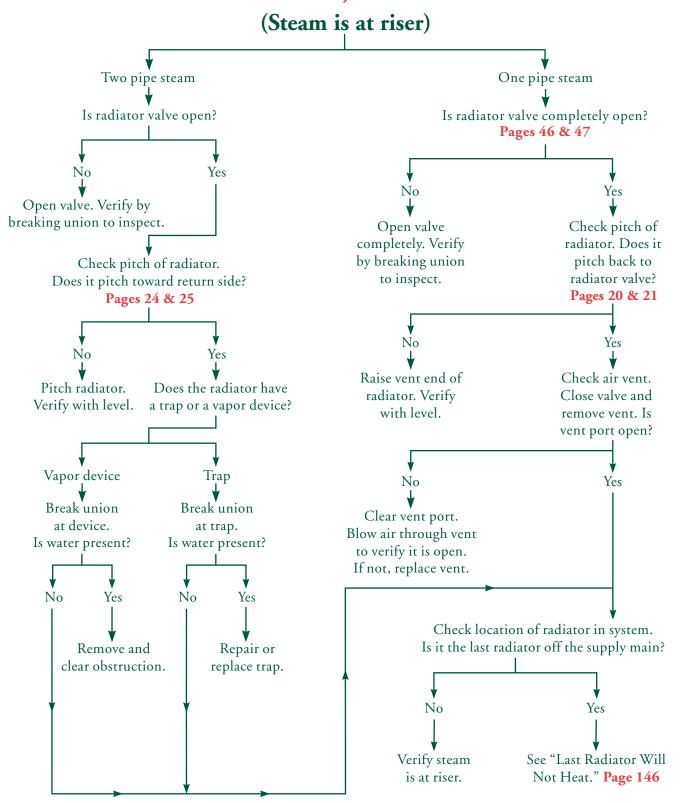


BUILDING/SYSTEM PROBLEMS

Building Heats Unevenly

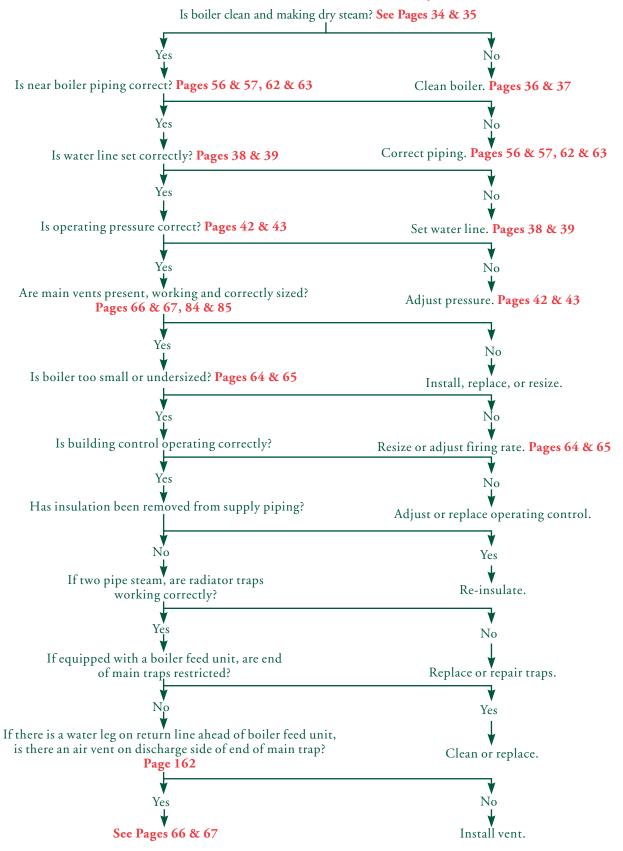


CHAPTER 6 BUILDING/SYSTEM PROBLEMS

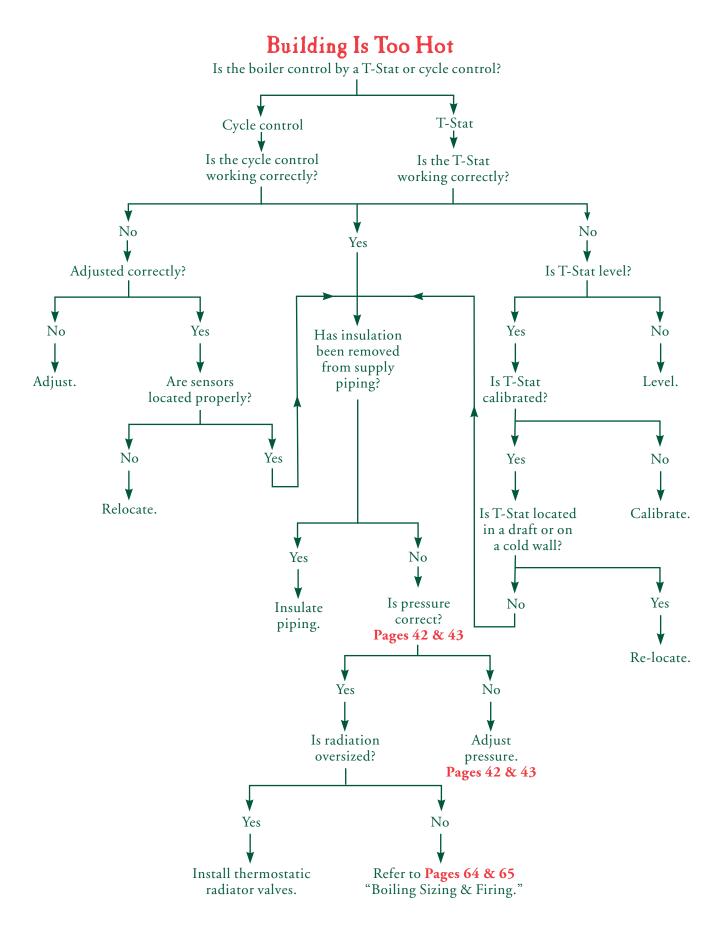


BUILDING/SYSTEM PROBLEMS

Building Is Too Cold

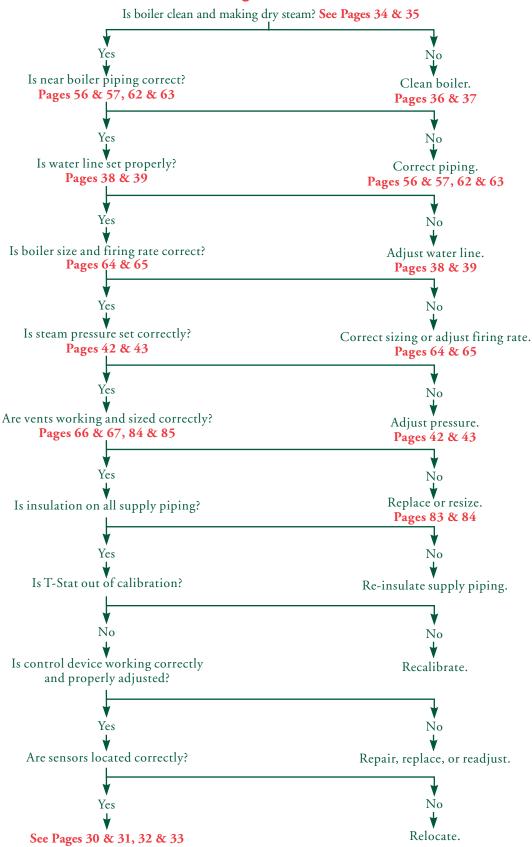

CHAPTER 6 BUILDING/SYSTEM PROBLEMS

High Fuel Bills

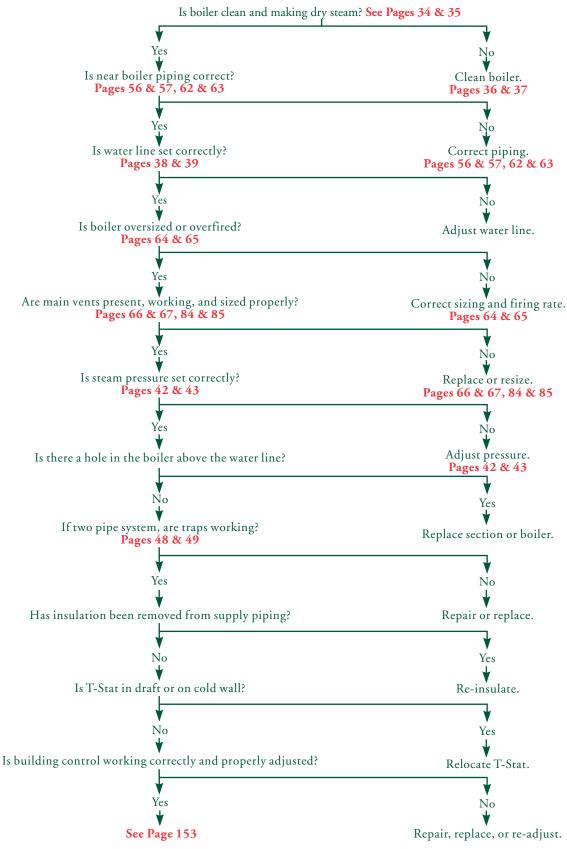

TOP 15 TIPS FOR PEAK PERFORMANCE

FOR ALL SYSTEMS

- 1. Make sure boiler is clean, page 34 A dirty boiler is the cause of so many problems and affects the quality of steam.
- 2. Make sure main vents are installed and working properly, page 66. Main vents have to be there to have even distribution of the steam along the main.
- 3. Check steam pressure control setting, page 42. It is the simplest adjustment to make, but has a major effect on the system.
- 4. Check water line position, page 38. Normal water line position has a huge impact on the production of steam.
- 5. Check the main vent(s) size, page 84. The bigger the opening is in the main vent, the faster the system will heat.
- 6. Check near boiler piping for proper size and orientation, page 56. This has to be right to get dry steam.
- 7. Check for the amount of combustion air that is available to burner. The burner has to have enough air to fire optimally.
- 8. Perform a combustion analysis to fine tune the burner. Record the results so they can be compared at next check
- 9. Insulate or re-insulate all the supply piping, including the near boiler piping. This may be the best investment to reduce the fuel bill.

FOR SYSTEMS OVER 500,000 BTU/HR

- 10. Install a boiler feed unit, pages 108, 110 and 158. A steady water line equals peak performance.
- 11. Install a cycle rate type control that senses both outdoor temperature and return water temperature. They are not cheap, but they have a great payback.

FOR ONE PIPE SYSTEMS

- 12. Make sure all radiator valves are fully open or closed, page 46. Partially closed valves slow condensate return.
- 13. Replace all radiator vents throughout system with one common size vent, page 72. The same size port on each vent proportions the steam flow for even heating.

FOR TWO PIPE SYSTEMS

- 14. Make sure all the radiator traps are working correctly, page 48. If traps are failed open, steam is being wasted and system will heat unevenly.
- 15. Install thermostatic radiator valves on each radiator, page 50. They will balance the flow of steam similar to the metering systems.