

Error Code

Error Code	Description	Measures
Error T002	No thermocouple detected	a.Check thermocouple connection b.Replace thermocouple
Error S002	No heating element detected	a.Check heating element connection b.Replace heating element
CT:999 Err-T001	Thermocouple failure in operation	a.Check thermocouple connection b.Replace thermocouple
Error FANerr	Overheating	a.Check hot air blower b.Clean nozzle and filter