

VULNERABLE PARTS LIST OF GASOLINE MOKE

NO	PARTS NAME	TYPE	NOTE
1	前大灯 head lights assy	L&R	
2	前转向灯Front turn signal	L&R	
3	后尾灯Tail lamp	L&R	
4	方向机 steering assy		
5	刹车总泵Brake master pump		
6	电子手刹 electric power hand brake assy		
7	前挡风玻璃Front windshield		
8	三角窗玻璃Triangular window glass	L&R	
9	前保险杠Front bumper		
10	后保险杠Rear bumper		
11	前摆臂Front swing arm	L&R	
12	转向球头Steering ball head	F:2, R:2	
13	转向拉杆 steering drawbar	F:2, R:2	
14	后人字臂球头 rear swing arm ball	L&R	
15	减震器 absorber assy	F:2, R:2	
16	刹车系统brake system(4W DISC BRAKE)	F:2, R:2	
17	前中网 front gril		
18	挡泥板fender	F:2, R:2	
19	电子转向助力Electronic steering power		
20	272活塞环272 piston rings	1 SET	
21	272气门272 valve	1 SET	
22	272火花塞272 Spark plugs		
23	272油底壳272 Oil pan		
24	272水泵272 Water pump		
25	272止推瓦272 thrust tiles	1 SET	
26	272主轴瓦272 Spindle tiles	1 SET	
27	272连杆瓦272 connecting rod tile	1 SET	
28	272连杆272 connecting rod		
29	272活塞272 piston	1 SET	
30	272曲轴272 Crankshaft		
31	272机油泵272 oil pump		
32	272缸床垫272 cylinder pads		
33	272缸压胶条272 cylinder pressure rubber strip		
34	272全车垫272 full car mat	1 SET	
35	272曲轴前后油封272 crankshaft front and rear oil seals	1 SET	
36	272凸轮轴油封272 camshaft oil seal		
37	272离合器片272 clutch disc		
38	272压盘272 pressure plate		
39	272分离轴承272 Separate bearing		