




## Let's get acquainted ELECTROLUX® Cleaner

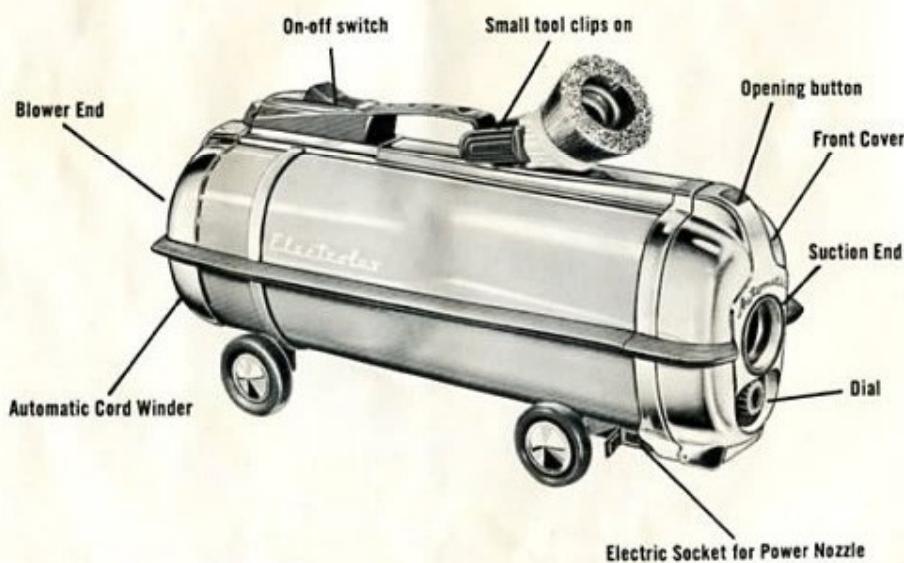

This is your Electrolux Cleaner—the heart of your cleaning system. On the following pages you'll see how to use it for all kinds of cleaning.

with your new MODEL G  
and its work-saving attachments

Notice that your hose is tapered—smaller at the handle end, larger at the other end. This is to prevent clogging.

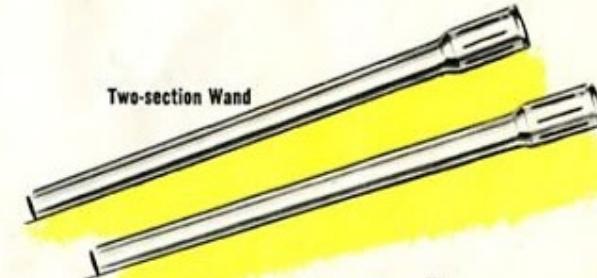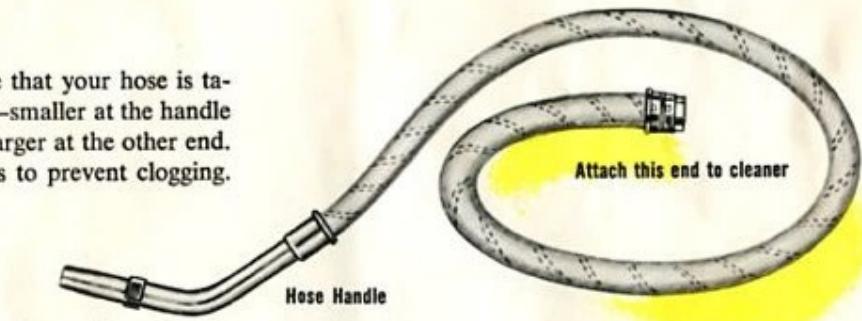

Depending on the type of cleaning you are going to do, you may attach your cleaning tool directly to the hose handle, or use one or two sections of the light-weight wands between the hose handle and the tool. The swivel-connector is always used with the larger cleaning tool.





Your larger multi-purpose tool is reversible. Simply attach it to the swivel-connector, always being sure that plate marked "This Side Up" is visible when the cleaner is in use. Use the smooth side of the tool for rugs, and the brush side for floors, walls and ceilings.



Above you see your smaller cleaning tool. When the hinged sides are extended, it is an upholstery cleaner that cleans on flat or curved surfaces. Fold the sides back, reverse the tool and it becomes a dusting brush.



Crevice Tool . . . gets your Electrolux Cleaner's suction to work in radiators, other hard-to-reach places.



## The revolutionary new **POWER NOZZLE**

This new and remarkable attachment is available with your Electrolux Cleaner. The Power Nozzle has a rapidly spinning, *motor-driven* brush that quickly cleans your carpets and at the same time gently fluffs the nap of the carpet to keep or restore its luxurious look. The extra-soft bristles of the brush are gentle to rugs and carpets. Because the brush is driven by its own separate electric motor, you do not lose any of the powerful suction of your Electrolux Cleaner. To attach nozzle and for operation of Reset Button, see page 13.




How to be sure of always  
getting top cleaning  
power and efficiency  
from your Electrolux Cleaner



The answer is simple: always use only a genuine Electrolux® automatic self-sealing disposable filter bag. This is the bag that automatically seals in the dirt and dust your Electrolux cleaner picks up—so that you never touch it, breathe it or see it! This bag is one of the important automatic work-saving features of your Electrolux Cleaner. On the next page you'll see how it works!



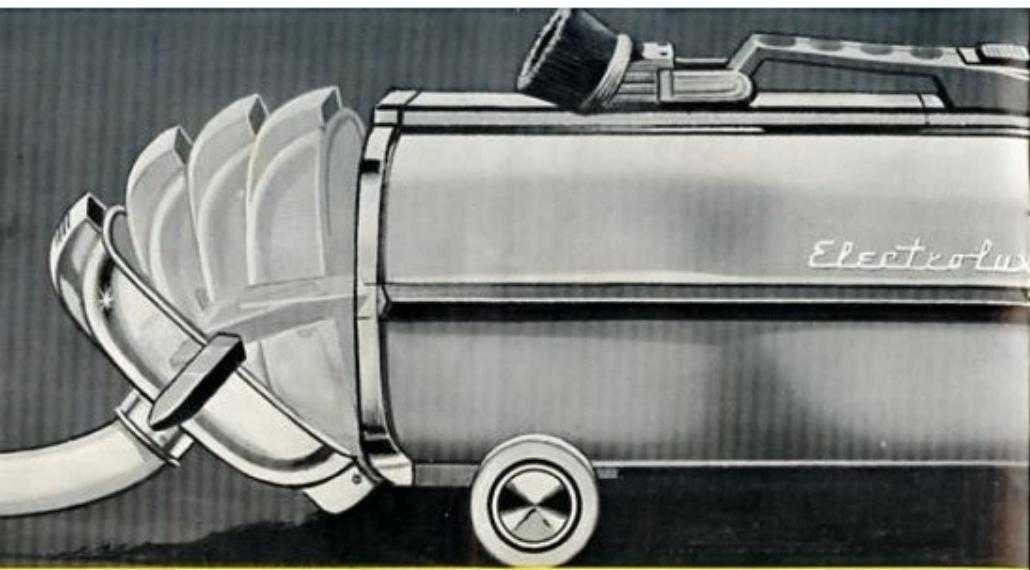

The instant enough dust and dirt accumulate in the bag to cut down the suction power of your cleaner, the Model G Electrolux with the patented filter bag stops and opens itself *automatically*. That is your signal to change bags. It means you never have to guess about when your bag needs replacement. It means you never waste time trying to clean with a dust-clogged bag that is choking off cleaning power!

And that's why you can proudly say you have the *world's most automatic vacuum cleaner*.

**NOTE:** If you want to put a clean bag in before the cleaner opens automatically, you may. Open the front cover by pushing down on the latch at top. Some women put a clean bag in every time they clean.



When your cleaner stops and the front end opens, stand the cleaner on end and remove the used filter bag.



Throw the used bag away—never try to use it over again. The bag is automatically sealed with the dirt inside.



Insert the new genuine Electrolux disposable filter bag. Close the front cover, and your cleaner is again ready for use.

## How to dial for your special cleaning needs



Fine, powdery dirt will make your cleaner stop automatically sooner than loose, linty dirt. If you have a special cleaning job such as cleaning an automobile, a fireplace, an attic or basement, you can slow up the automatic stop action by turning the dial on the front cover of your cleaner to the left.

*Be sure to return the dial to its regular setting after you've done the special cleaning job.*

Remember, when your friendly Electrolux man delivered the cleaner to you, he adjusted the dial for the most efficient operation in your particular home. Keep it there for all ordinary cleaning jobs. Another automatic feature prevents cleaner from operating unless there's a dust bag in it. While it is possible to use your cleaner with a cloth dust bag, it is not recommended for best results.

### This is why the ELECTROLUX® automatic self-sealing filter bag keeps on trapping dirt long after other bags fail



This is the filter bag that traps all the dirt your Electrolux Cleaner picks up. There's no other bag like it. Why? Looking at it from the outside, you can see *part* of the reason. You can see that when the cleaner opens the Electrolux bag seals itself, locks in all the dirt. But that's not all . . .


It's the *inside* of the bag that counts! An ordinary vacuum cleaner bag consists of just a single thickness of paper or cloth. But if you tore open an Electrolux filter bag, you'd see inside *three* extra layers of filter liner, each with millions of tiny filters that trap dirt and let air through.

Take an ordinary dirt bag, cloth or paper. There's only *one* surface to trap the dirt. As the cleaner picks up dirt, the pores of this ordinary bag clog quickly. Suction goes down quickly. You waste time and effort trying to clean with a dust-clogged bag that chokes off the cleaning power.


Now look what happens inside the Electrolux filter bag: the *three* layers of filter paper trap the dirt while air keeps on flowing through the bag . . . the suction keeps on picking up more dirt. When ordinary bags clog up, you can be sure that the Electrolux bag is still working for you.

**IMPORTANT:** To order a new supply of Electrolux filter bags, use the reorder envelope in the package of filter bags, or use the order form inside the back cover of this book.

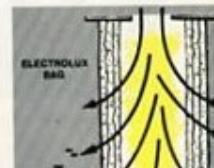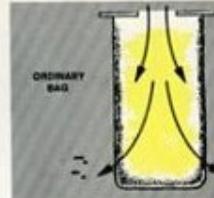


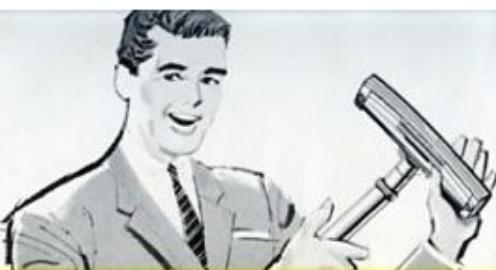


Now we're ready to put your cleaner to work for you!

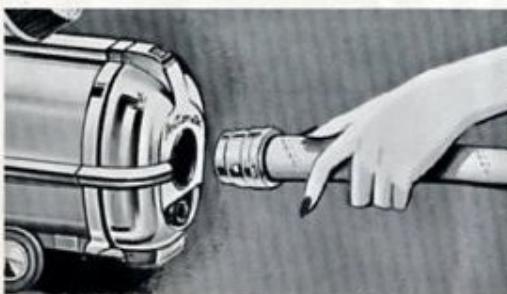

1 Slip the larger end of the hose into the suction end of the cleaner until it clicks. To remove, press buttons on side and pull out.

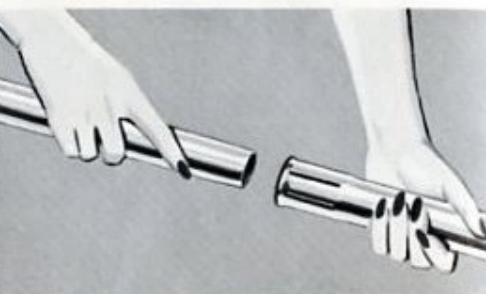

2 The two sections of your wand fit together. For all cleaning at floor level, insert one of the sections of the wand into the other.

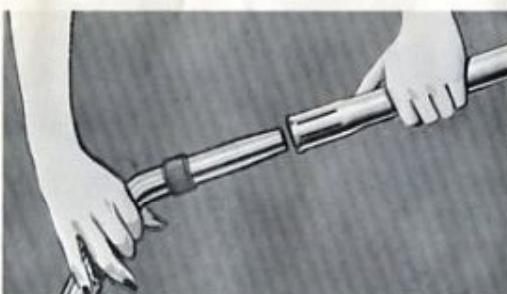

3 Slip the hose handle into one end of the wand. Now you're ready to attach the tool to the other end of the wand.



4 To use the larger cleaning tool, first attach the swivel connector to the tool. In use, be sure the plate marked "THIS SIDE UP" is visible.




5 Merely sliding the swivel connector on the free end of the wand locks it into place. Pressure on the spring clip unlocks it.



6 Your smaller cleaning tool is slipped into place with a twist, either on the hose handle or the wand, whichever is more convenient.

Now that we've looked over your cleaner, your attachments and your filter bags, we're ready to let your cleaner do the jobs it was meant for. Here are the easy, step-by-step ways to put your Electrolux® Cleaner and its attachments together, so that the powerful cleaning action can go to work!

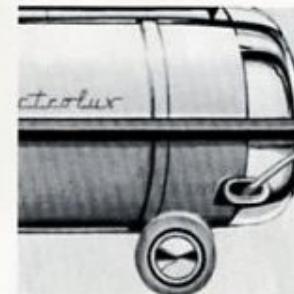

7 The Automatic Cord Winder has window-shade action. Just pull the cord out and plug it into a convenient electric outlet.




8 Note Cord Lock on handle (inset) to lock Cord at desired length. A touch of your toe on the switch starts your cleaner.

How to attach the power nozzle.



1 After connecting the hose to the suction end of the cleaner, connect the other end to the wand of the Electrolux® Power Nozzle.

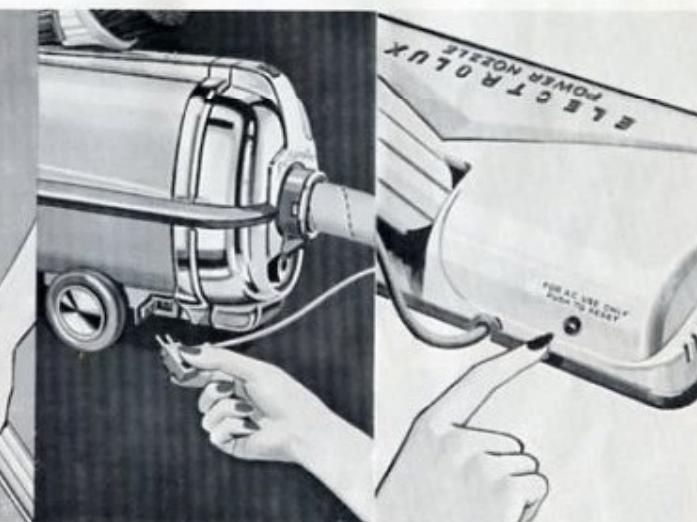

2 Plug the cord from the Power Nozzle into receptacle provided. When you turn on your cleaner, the Power Nozzle will be turned on.



3 If obstacle jams the Power Nozzle turn cleaner off and remove the obstruction. Press the Reset Button as pictured before starting cleaner.

# LOOK HOW EASY IT IS TO CLEAN YOUR RUGS AND CARPETS


...with the larger multi-purpose tool

...or with the new Power Nozzle



Just put hose in suction end, wand on hose, and the larger multi-purpose tool on the end of the wand, as shown on page 12. Use the tool with the bristles up, smooth rug-cleaning surface down on the carpet. Let the Electrolux Cleaner do the work. Simply guide the tool back and forth in free and easy strokes until every area has been covered.

If threads or other surface litter are tangled in the nap, a tip of the lever at one end of the tool brings the Gleaner® air-flow concentrator into action. Even dog hairs can be picked up easily. Caution: be sure Gleaner is in OFF position when cleaning looped pile rugs, hooked rugs or rag rugs.

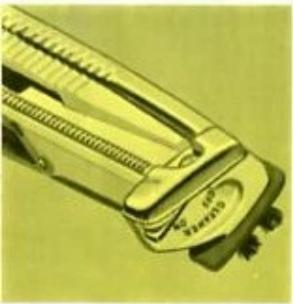

Attach the Power Nozzle as described on page 13—then let the swift but gentle motor-driven brush action clean and beautify your carpet! The rotating brush helps make the powerful Electrolux suction even more effective, while it fluffs the nap of your carpet. Guide the Power Nozzle in a slow motion across the area to be cleaned—notice how swiftly it works, even on "problem" carpets.


Your Power Nozzle slips easily under low furniture to take care of even those hard-to-reach places. Use it as often as you wish—it "gentles" fine carpeting. The Power Nozzle is available as an attachment to your Electrolux Cleaner.




# Important cleaning "How-to's" for all around your home



**How to clean FLOORS without spreading dust**  
Put hose in suction end, wand on hose, and larger multi-purpose tool on wand. Use tool with bristles *down*. Your cleaner will pick up all the scratchy dust and grit...keep your polished floors gleaming longer.  
Lower wand with a slight twist to clean beneath furniture.

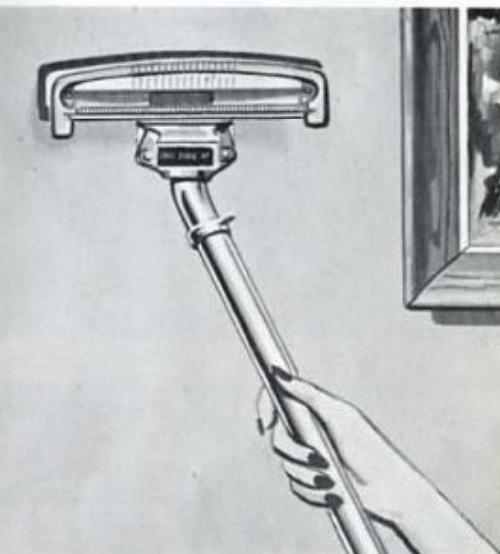


**How to clean WALLS to save redecorating bills**  
Attach large multi-purpose tool same way as for floors...brush walls with bristle side. Dust clings to walls and ceilings, too. But regular cleaning keeps them fresh-looking, saves on repainting and redecorating bills.  
If lint clings to brush, whisk it clean with suction from the open hose end.

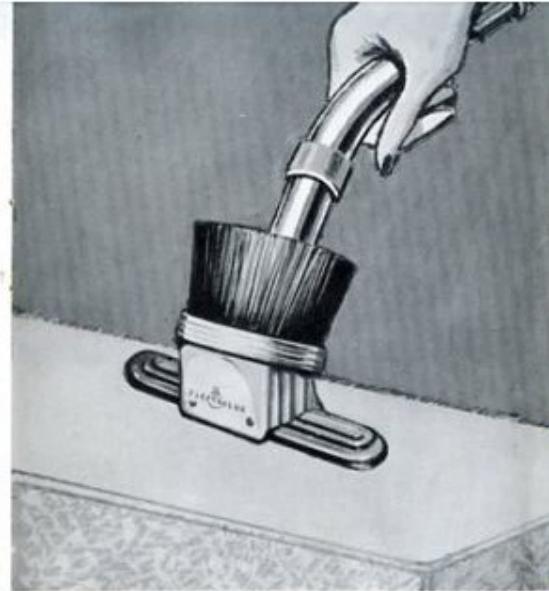

## How to get the deep-down dirt out of your UPHOLSTERED FURNITURE

Attach hose to suction end, insert hose handle *through* the brush of the smaller multi-purpose tool. Now extend the hinged sides of the tool. Your cleaner will remove the deep dirt as well as surface dust.

Note that the hinged sides of the tool make it a contour cleaner that will clean round and square edges as well as flat surfaces.

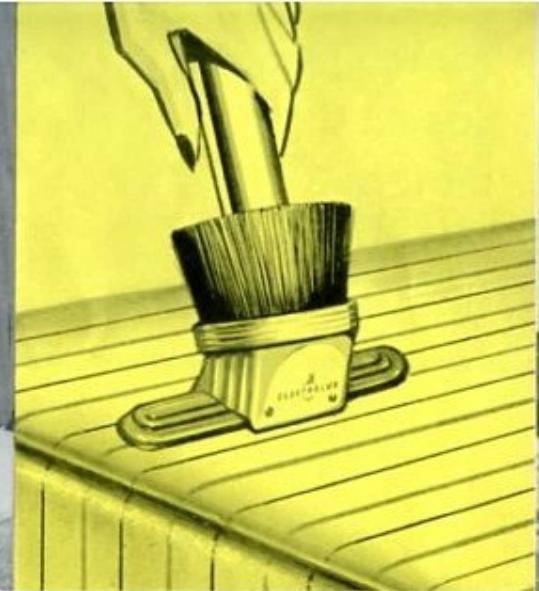


## How to keep BEDDING fresh and airy

Use the smaller multi-purpose tool in the same way as for cleaning upholstered furniture.

Frequent cleaning airs and freshens mattresses, pillows and blankets...removes fine dust seeping from pillows or mattress fillers.


To clean exposed bed-springs, reverse the tool and use the brush.

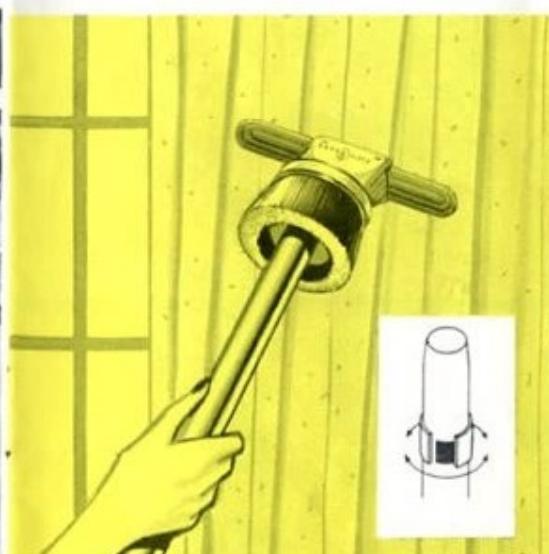

## How to clean filmy CURTAINS ... DRAPEs

Use the smaller multi-purpose tool, as above...or reverse the tool and use the dusting brush.

To tame the powerful suction so that it doesn't "suck in" filmy fabrics, twist the Vacuum Adjuster on the hose handle until the suction is gentle enough.

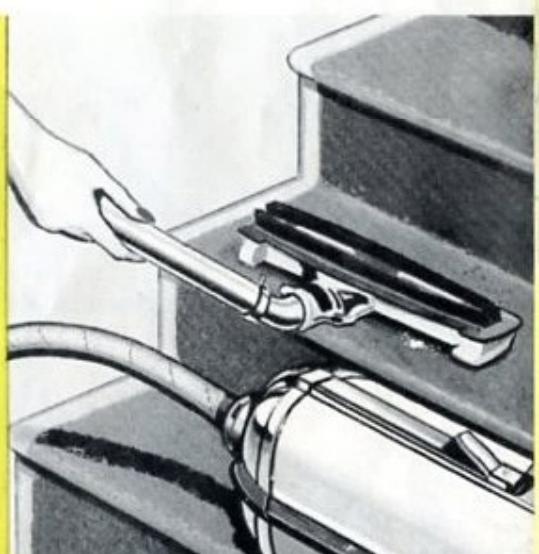

## How to take the drudgery out of cleaning STAIRWAYS

Put hose in suction end, use only *one* section of wand. Use larger tool with bristles *up* for carpeted stairways, bristles *down* for uncarpeted stairs.

Use brush end of smaller tool for banisters.

Move your cleaner right up the stairs with you...cleaning a step or two at a time.

More tips on  
getting the  
most out  
of your  
Electrolux®



Your  
**ELECTROLUX**  
Cleaner has  
plenty of  
helpful friends...  
all ready to  
make your home  
care easier, too.  
*Let's meet  
some of them...*





THE ELECTROLUX® B-8 Floor Polisher and Scrubber  
Makes "professional quality" floor care easy

- cleans and polishes every type of floor to gleaming lustre in minutes
- because it has the extra power no other home polisher and scrubber can offer
- three heavy-duty "floating" brushes automatically adjust to uneven floors
- easy to handle . . . just guide it from side to side
- automatic safety feature turns off polisher when handle drops to floor
- the Wax Mist Sprayer makes polishing easy. Optional equipment



Your Polisher quickly becomes a Carpet Beautifier  
to bring back rug beauty almost like magic.

- Top-of-the-line Triple Brush Shampooer for the finest quality rug cleaning.
- So simple, so efficient, so completely satisfying.
- Enormous money-saver on carpet cleaning, no rug moving or expensive re-laying of wall to wall carpet required.
- Quick and easy without soaking carpet. Finish a 9 x 12 rug in 15 minutes.
- Banishes Floor Care Drudgery Forever.

# Other helpful ELECTROLUX home care aids



The Air-Powered Single Brush Rug Washer, economical work-saving attachment to your Electrolux Cleaner, enables you to...

- Shampoo your rugs and carpeting without getting down on hands and knees.
- No soaking, no rinsing, or wiping up required.
- Dispenses the right amount of shampoo, dries quickly.
- Quick, easy, saves rug cleaning bills, pays for itself.
- Restores the beauty of your rugs and carpets in minutes.
- Does an excellent job in just a little more time.



**White Wall Brush** . . . ideal for cleaning all kinds of walls and ceilings, painted or prepared.



**White Dusting Brush** . . . for delicate lampshades or other furnishings that need special care.



## The Electrolux® Sprayer

- sprays insecticide, garden spray, moth-proofing liquids
- may be used to spray paint if paint is thinned
- a dial on top controls the amount of spray



## The Electrolux® Vaporizer

- for effective economical moth protection
- attaches to blower end of your Electrolux Cleaner
- vaporizes moth crystals to form a gas that is deadly to moths when the gas is