

ELECTROLUX®

How to use the Electrolux® Deluxe Special Model Vacuum Cleaner

An introduction to your Deluxe Special Model Vacuum Cleaner

You are now the owner of one of America's finest, easiest to use vacuum cleaners—the Electrolux® Deluxe Special Model.

The following pages contain information regarding the use and care of your Special Model Vacuum Cleaner. Read them carefully—they will help you get the most out of your new cleaner.

Call your representative or your nearest Electrolux branch office for the answer to any questions or to meet any future service needs you may have.

Electrolux offers many work-saving

FULL 2 YEAR WARRANTY

(Full Ninety Day Warranty for Commercial Units)

What is Covered by this Warranty

Electrolux warrants its products, to the consumer, against defects in workmanship or material, provided that the products are returned to an Electrolux Branch Office within the following time period:

Vacuum cleaners, attachments, and accessories -- within 2 years of date of purchase (except as noted below);

All products, and service of products used for commercial and/or industrial purposes — within 90 days of date of purchase.

How to Obtain Warranty Service

Upon contacting and returning the products to an Electrolux Branch Office within the above time periods, Electrolux will repair or replace, without charge and within a reasonable period of time, any part which its examination shall disclose to be defective in workmanship or material. If Electrolux is unable to repair the product after a reasonable number of attempts, Electrolux will provide either a refund of the purchase price or a replacement unit, at its option.

What is Not Covered by this Warranty

Ordinary wear and tear shall not be considered a defect in workmanship or material. These warranties do not apply if the products have been damaged by accident, abuse, misuse, modification or misapplication, or by improper service. As applied to vacuum cleaners, the warranty with respect to the motor and fan unit is null and void if it is damaged as a result of vacuuming damp or wet surfaces, or dirt leakage through a filter bag other than an Electrolux® filter bag.

Exclusion of Other Warranties — Products in household use only: THE WARRANTY OF MERCHANTABILITY IS LIMITED TO THE ABOVE TIME PERIOD.

Products in commercial use only: The warranty set forth above is exclusive and in lieu of all other warranties, whether oral or written,

optional accessories for your Special Model—ask your representative.

Use only Electrolux® filter bags for best performance and to protect your warranty.

WARNING:

Electric shock could occur if used outdoors or on wet surfaces.

Do not operate your cleaner in the presence of explosive or flammable material.

© 1983 Electrolux Corporation

express or implied. The only exception is the warranty of title. NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL APPLY.

Limitation of Liability for Special, Incidental or Consequential Damages

ELECTROLUX SHALL NOT IN ANY CASE BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM BREACH OF EXPRESS OR IMPLIED WARRANTIES, BREACH OF CONTRACT, NEGLIGENCE OR ANY OTHER LEGAL THEORY. Such damages include, but are not limited to, loss of profits or revenue and loss of use of the products.

Statute of Limitations — Products in commercial use only: No suit shall be brought on an alleged breach of any of the above warranties more than one year after the date of purchase.

Special State Laws

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on warranties, or on remedies for breach. In such states, the above limitations may not apply to you.

For service under the above warranties or for any information you may need at any time about the products purchased, consult any local Electrolux Branch Office, the address of which may be found in your local telephone directory.

ELECTROLUX CORPORATION

3003 SUMMER STREET • STAMFORD, CONNECTICUT 06905



A CONSOLIDATED FOODS COMPANY • RESPONSIVE TO CONSUMER NEEDS®

Fill in and keep for future reference and service

Locate the serial number on the front wheel caster plate on the bottom of the machine.
Write it here and retain it for future reference.

Serial No. _____

Model No. Special Model (1453)


Date of Purchase _____

Name of Sales Person _____

Branch Address _____

Branch Phone Number _____


Features of the Electrolux® Deluxe Special Model

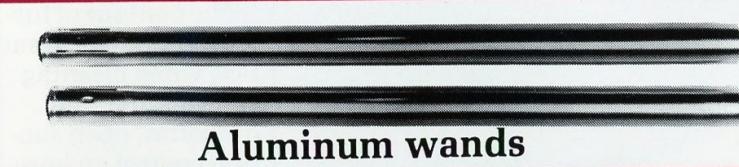


Combination upholstery/dusting brush




Assembling your Electrolux® Deluxe Special Model

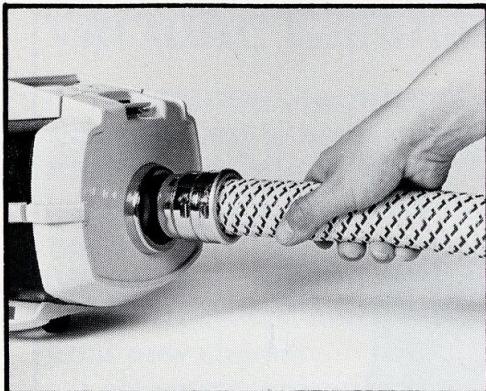


1. Insert hose into suction end of cleaner until it clicks. If using Rug Saver Power Nozzle® power hose, see page 7 for complete instructions.

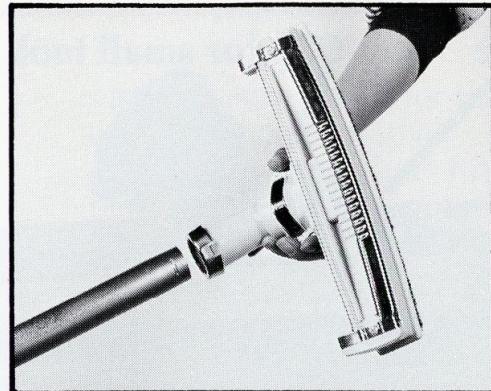


5. Lock swivel connector into place by pushing it onto wand as far as it will go. Depress spring clip and twist wand to release it.

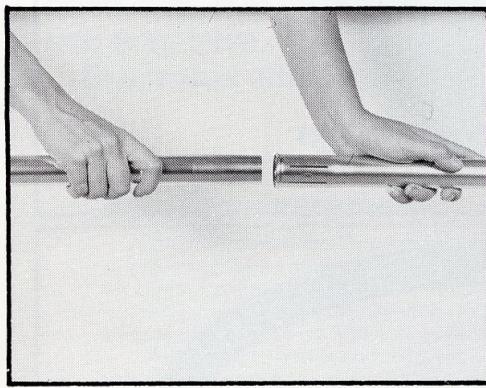


2. Assemble two-section aluminum wands.

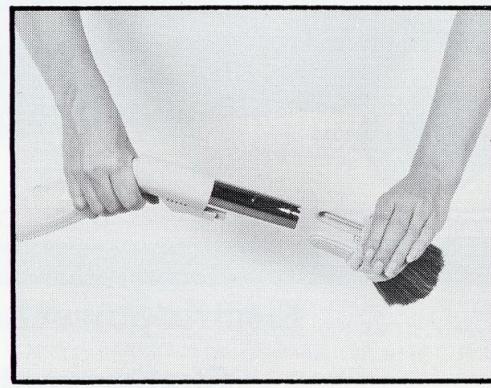


6. Combination upholstery-dusting brush may be used on hose handle or wand. Slip it on and twist slightly.

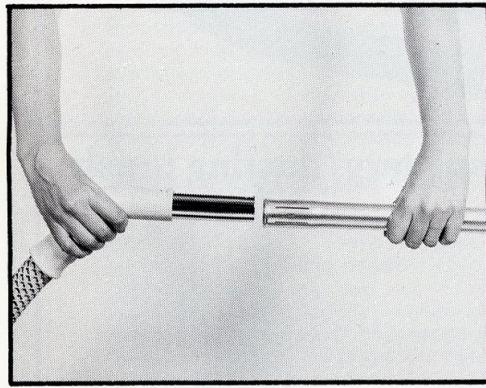


3. Slip handle end of the flexible hose into the flared end of wand.

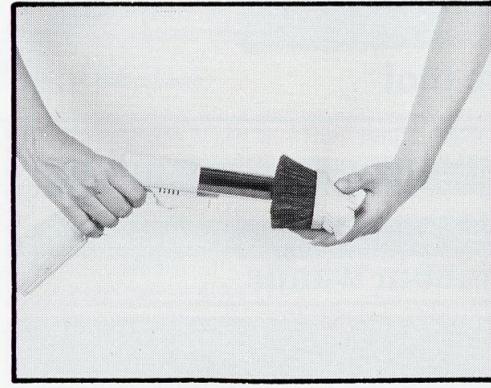

7. Reverse tool to clean upholstery or fabric. You may adjust wings to the contour of furniture. To reduce suction when cleaning curtains and light draperies, open suction control on hose handle.

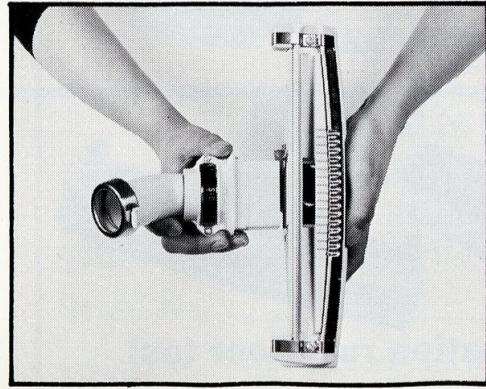

4. To use the combination rug/floor tool, slide swivel connector into slotted side of tool until it locks into place. NOTE: Remove and reinsert swivel connector into tool each time you change from rug cleaning to floor cleaning. Be sure the tag reading "This Side Up" is always visible when in use.

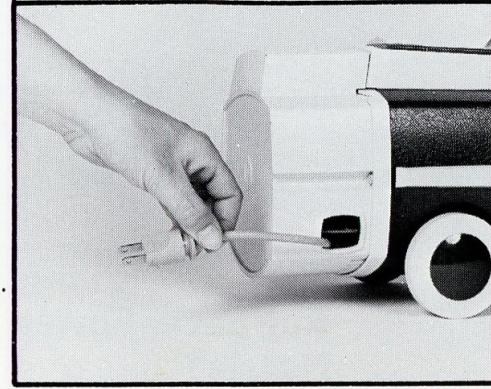

8. Pull out cord from optional automatic cordwinder. Allow cord to retract slightly until it locks, then plug into electrical outlet. To release, pull lightly and release like a window shade. Cord rewinds automatically.


Using the right filter bags a must

Always use genuine Electrolux® disposable, self-sealing filter bags

The Electrolux filter bag is especially designed and manufactured in such a way that it will safeguard the motor against dirt leakage. . . . Used exclusively, the Electrolux filter bag will promote longer motor life and more efficient operation of your cleaner. We are so sure of its superiority that we make it part of our warranty.

Remember . . . every bit of air brought into your new Electrolux® Special Model by its powerful motor must be quickly dispersed. To accomplish this without having the air carry dust particles into the fan and motor calls for the best filter bag on the market . . . and that means Electrolux.

Triple-lined filter bags also provide you with longer service without changing, as they pick up more dirt than other bags before shutting off the flow of air.

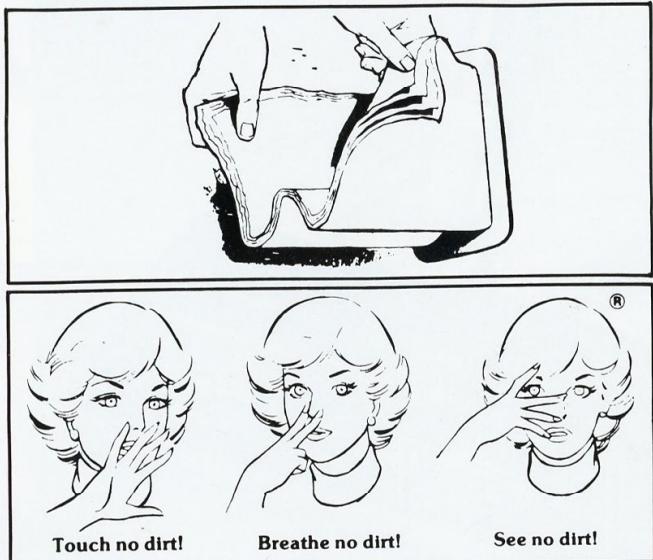

To change bags

Stand cleaner on end. Press latch to open cover. Lift out self-sealed filter bag. Drop new Electrolux filter bag into position. Close the front of the cleaner and the self-sealing filter bag is locked in position.

Your cleaner motor will not operate unless a filter bag is in place. This automatic safeguard protects the fan and motor from damage by dust particles.

To reorder, call your sales representative, or consult your telephone directory for nearest authorized Electrolux Branch Office.

Using the Rug Saver Power Nozzle® attachment





Your Electrolux® Deluxe Special Model is equipped for use with the new Rug Saver Power Nozzle®


The Rug Saver Power Nozzle attachment provides a powerful two motor cleaning system. Its swiftly rotating brush gives the fastest, easiest rug, upholstery, and mattress care possible. It gently fluffs the nap and permits the cleaner suction to get the deep down dirt that causes expensive carpet wear.

How to restart the Rug Saver Power Nozzle®


If an object clogs the attachment, unplug cord from sheath, detach wand and remove object through elbow. To restart, replace wand, replug cord, and press RESET button.

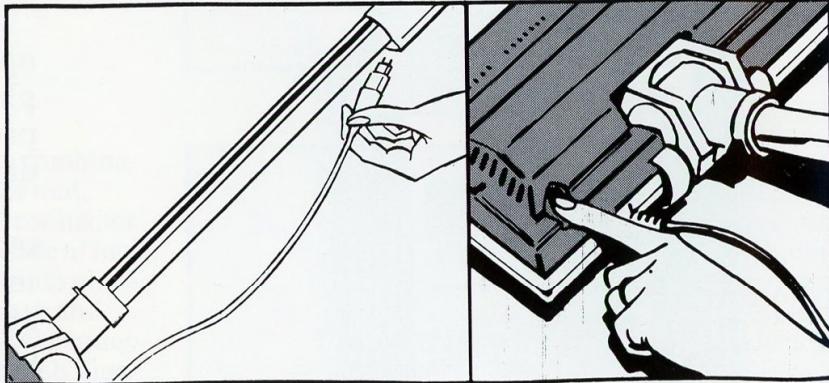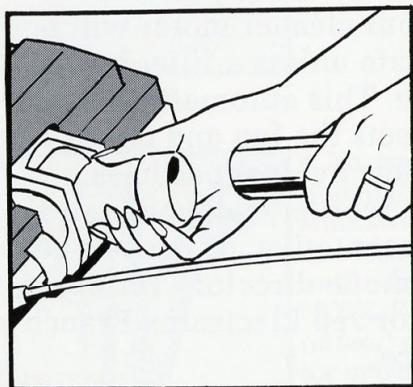


Assembling the Rug Saver Power Nozzle® attachment

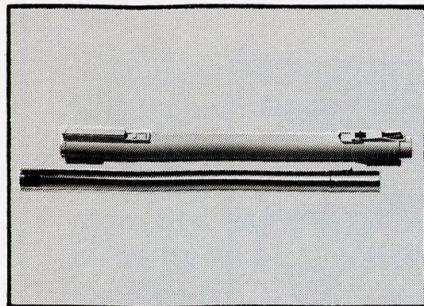


1. The upper wand, sheath and cord have been pre-assembled at the factory.

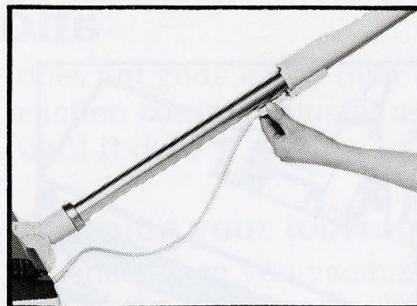


5. Plug the Rug Saver Power Nozzle® attachment cord into the sheath cord receptacle.

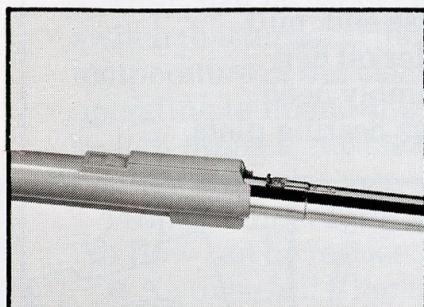


2. All that is required to complete the assembly is to insert the lower wand, large end first, into sheath from the bottom until the latch engages.

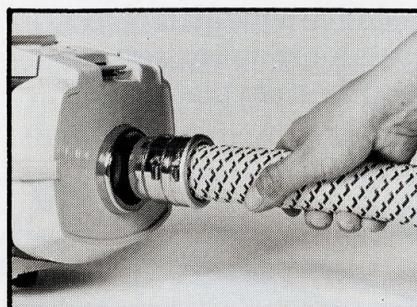


6. Insert Power Hose into cleaner as shown.

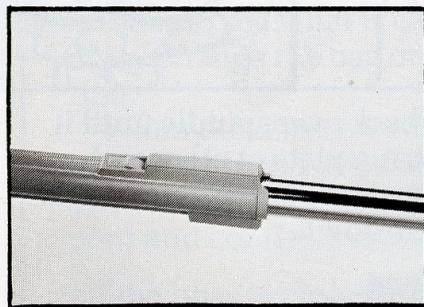


3. Disassemble as shown by disengaging latch.

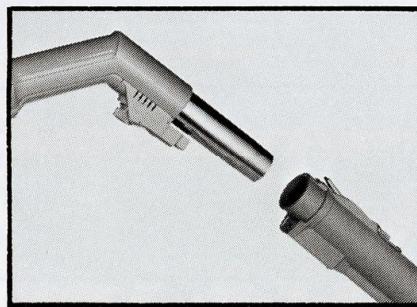

7. Make sure plug on handle and plug on sheath are lined up properly so they interlock completely.

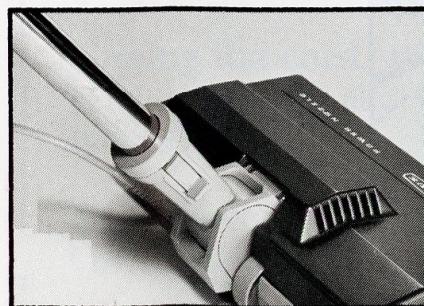

4. Insert the sheath/wand assembly fully into the Power Nozzle elbow opening until firmly seated.

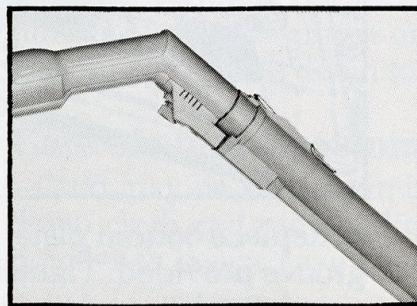


8. Push down lightly on wand lock spring button (A) and insert metal hose handle (B).


How to clean Rug Saver Power Nozzle® attachment and brush

Note:


Unplug cleaner card from wall outlet.

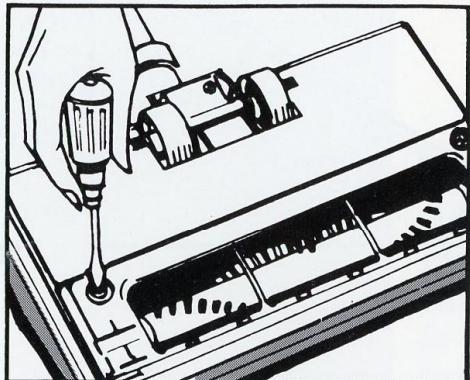


1. To dislodge a tangled object, or to clean thoroughly, remove 2 screws in bottom plate and lift off plate.

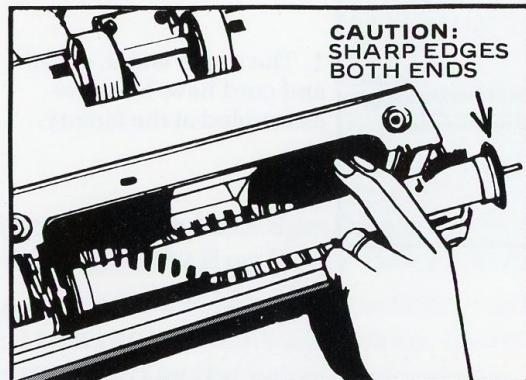


2. To remove brush, raise end, pull to right until brush slides off belt drive spindle. Belt assembly need not be removed. Remove bearing plate.

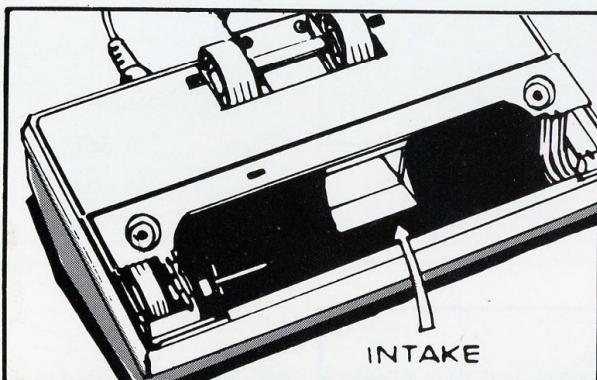

3. Clean bristles and bearing plates of lint, threads, etc. and clear intake passage.

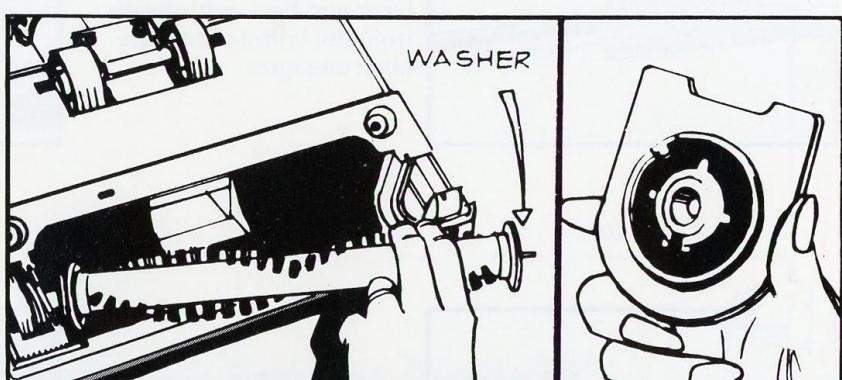

4. To reassemble, slide brush back over spindle until it interlocks firmly. Replace bearing plate at other end. Slotted side of bearing plate must face brush. Reseat bearing plate in groove, curved side down.

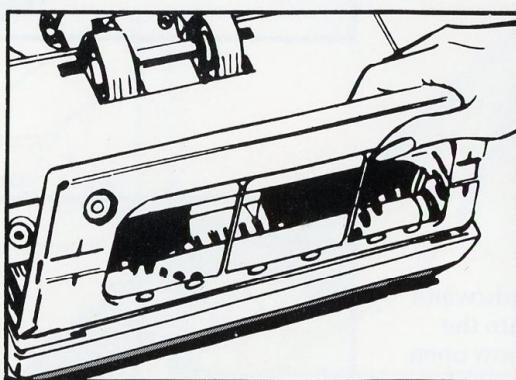

5. Replace bottom plate. Be sure front edge is in groove provided. Tighten screws securely. Replace wand. Replug cord (in sheath). Press RESET button.

Care and Maintenance

With reasonably good care, your Electrolux® Special Model will give you long and satisfactory service. Avoid dropping it. Do not pick up water with it or store in a damp place. Keep the motor clean by using Electrolux® filter bags exclusively. Have your representative give it periodic check-ups.

If Your Cleaner Shuts Off—

Your Special Model has an automatic switch that turns off the vacuum cleaner if the temperature of the cleaner rises above proper operating temperature. This automatic switch protects the cleaner from overheating and saves repair costs.

Proper temperature depends on air flow. Air flow can be reduced by:

- An over-full filter bag
- Paper, plastic film, or other material covering the intake area of the cleaning tool.
- An object clogging the wands or hose*

Unplug the electric cord—Check your cleaner to see what is causing reduced air flow. Change the bag or remove the obstruction.

When the cleaner returns to proper temperature (approximately 10 minutes), the switch will automatically reset. Plug in the cord and continue cleaning.

*If the hose is clogged, wait until the switch resets. Then put the machine end of the hose into the blower attachment receptacle and the handle end into a container. Turn the cleaner on to blow the object into the container.


Unplug the cord—Whenever the machine is not in use or is shut off automatically, unplug the cord.

Suction control—If your Rug Saver Power Nozzle® attachment or Rug Tool

does not glide easily over carpets, open the suction control adjuster on the handle until it does.

Cleaning your tools—Lint comes off brushes when you vacuum them with the end of the hose handle. Wipe tools occasionally with a damp cloth or sponge and mild detergent.

Storage—Stand the cleaner on end with wands beside it. Avoid bending hose sharply by hanging it over two clothes hooks spaced about a foot apart on the closet wall.

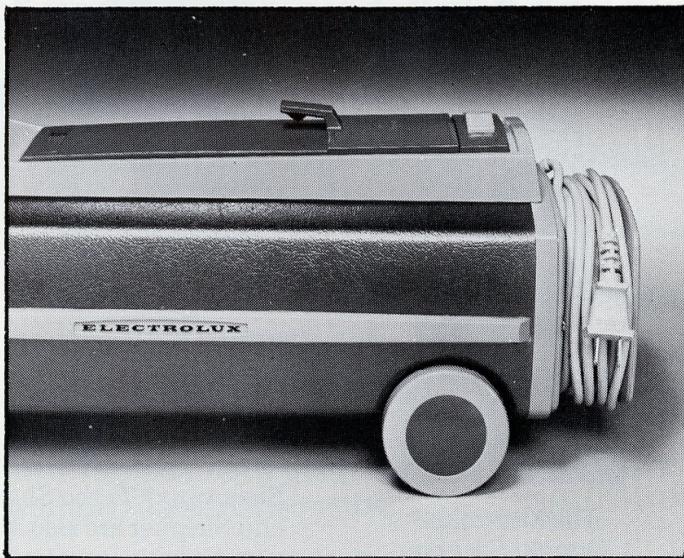

Cord Holder—Place cleaner on floor and wind cord counter clockwise around the cord holder. Notice the groove on the underside of the plug and press down to fasten.

Care of optional automatic cordwinder

—Cord may be kept clean by wiping with damp cloth and rubbing lightly with talcum powder to insure easy operation.

Other Fine Electrolux Products




The Electrolux® Upright Vacuum Cleaner. The world's most modern upright vacuum cleaner.

The Electrolux® B-8 Triple Brush Carpet Shampooer. Shampoos rugs and carpeting. Optional attachments to scrub, wax, and polish floors.

The Electrolux® Commercial Model CB Vacuum Cleaner. For heavy duty cleaning.



Electrolux® Turbo Shampoo, Tile and Terrazzo Floor Polish and Floor Cleaner and Stripper are also available in quart containers.

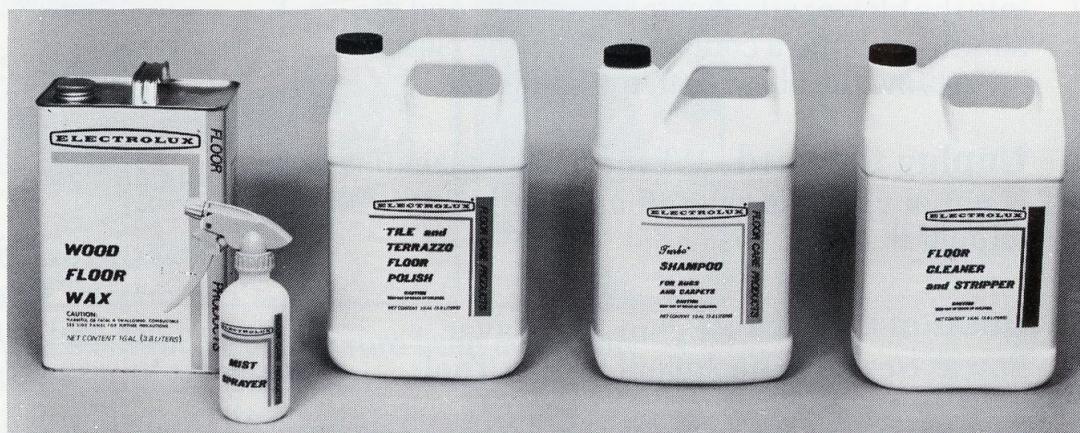

VCMA

VACUUM CLEANER MANUFACTURERS ASSOCIATION

Service To The Consumer Since 1913

Consumer Information

This information has been compiled by the Vacuum Cleaner Manufacturers Association from Governmental and Private Sources concerned with product safety. These basic guidelines are for your protection and convenience.

TO AVOID ELECTRIC SHOCK

Never vacuum liquids (unless using equipment designed for wet pickup).

Never vacuum carpeting that is damp or wet (unless using equipment designed for wet pickup).

Do not store machine outdoors.

Replace worn or frayed power cord immediately.

TO AVOID ACCIDENTS

Never vacuum live ashes or cigarette butts.

Never run machine over power cord or place sharp objects on it.

Never let children use machine as a toy.

Use extra caution when cleaning on stairs.

Keep machine on floor—not on chairs, tables, etc.

When machine is turned on, never allow fingers, hair or garments to come near intake suction ports or revolving brushes.

Never leave machine running or cord plugged in when unattended.

TO AVOID ACCIDENTS

Turn machine off at switch before unplugging from wall outlet.

When unplugging machine, grasp plug—not cord.

Always unplug power cord from wall outlet before servicing machine or attaching accessories.

Store machine promptly after each use to prevent accidents from tripping over power cord or machine.

Use machine and accessories only in manner intended by manufacturer.

FOR BEST PERFORMANCE

Keep your machine and all accessories clean and in good operating condition.

Change or clean bags and/or filters as recommended by manufacturer to maintain optimum cleaning efficiency.

Periodically check revolving brush for buildup of lint, hair or other foreign material and remove as necessary.

Adjust or replace cleaning brushes when worn.

Buy replacement parts from manufacturer's authorized service center.

Have machine checked periodically by manufacturer's authorized service center.

Store machine carefully—in dry area—never outdoors.

For optimum cleaning performance and safety, study and follow your Owner's Manual—keep it in a handy and safe place for future reference.

ELECTROLUX®

Electrolux Corporation, 3003 Summer Street, Stamford, Conn. 06905



This Special Model 1453 is listed under the Reexamination Service of Underwriters' Laboratories, Inc.



Service

For prompt service, call your Electrolux representative or the nearest Electrolux branch office listed in your telephone directory. Authorized Electrolux branch offices are best suited to service your cleaner both during and after the warranty period. Only through an Electrolux branch office can you be sure of getting genuine Electrolux parts.

Regional Offices

6145 Cosmopolitan North
Suite 200
Atlanta, Georgia 30328

6650 North Northwest Highway
Chicago, Illinois 60631

1500 Main Street
Springfield, Massachusetts 01101



A CONSOLIDATED FOODS COMPANY • RESPONSIVE TO CONSUMER NEEDS®