
BX42 DIRECT VENT GAS FIREPLACE




Specifications

| Model | BTU | Width | | Height | | Depth | | Glass Size |
|----------|--------|--------|---------|--------|---------|---------|---------|---------------------|
| | | Actual | Framing | Actual | Framing | Actual | Framing | Glass Size |
| BX42NTRE | 30,000 | 42 | 42 1/2 | 34 5/8 | 41 1/8 | 18 5/16 | 18 9/16 | 37 11/16 x 23 11/16 |
| BX42PTRE | | | 42 1/2 | | | | | |


Dimensions

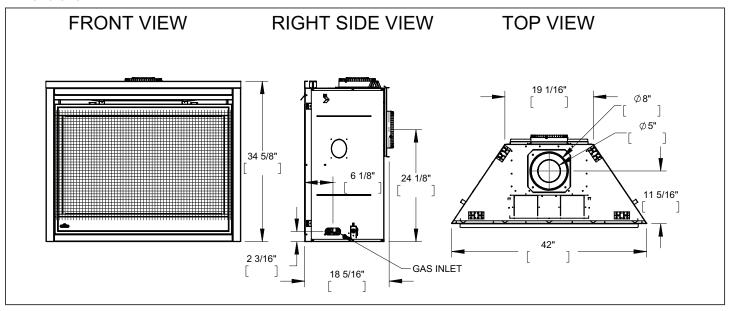

Appliance Location

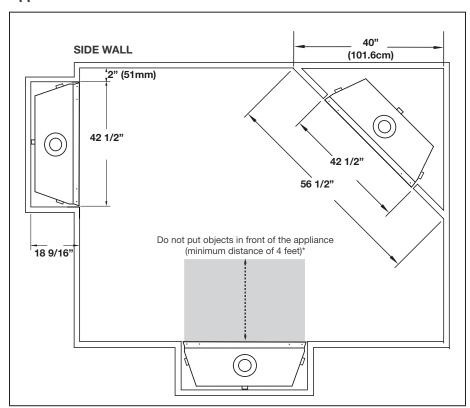

Combustible Mantel Clearances

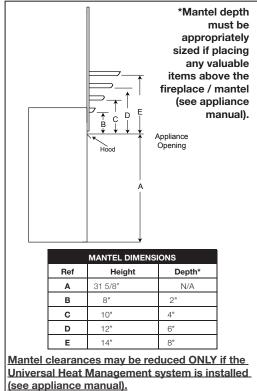


BX42 DIRECT VENT GAS FIREPLACE




Product information provided is not complete and is subject to change without notice. Please consult the installation manual for the most up to date installation information.

Wall Penetration

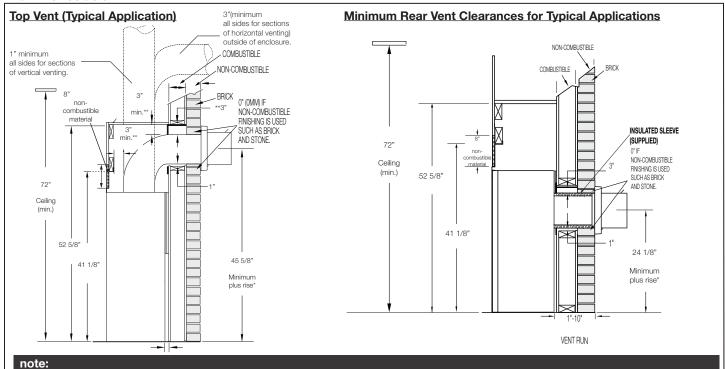

Vent Sections: When passing through a wall, use the appropriate firestop spacer W010-4479 (not supplied) for flex venting or 5DHFSN (not supplied) for rigid venting. When passing through a ceiling, use firestop spacer W500-0028 (not supplied) for flex venting or 5DFS (not supplied) for rigid venting. For venting and minimum clearance to combustibles, refer to appliance manual.

Minimum Framing Dimensions

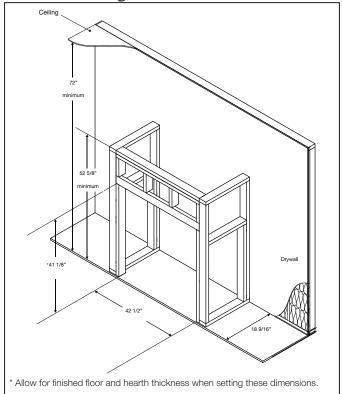

Minimum Framing Dimensions

