




Quick Start Guide

DISH Remote Control Model 52.0


Explore Your Remote

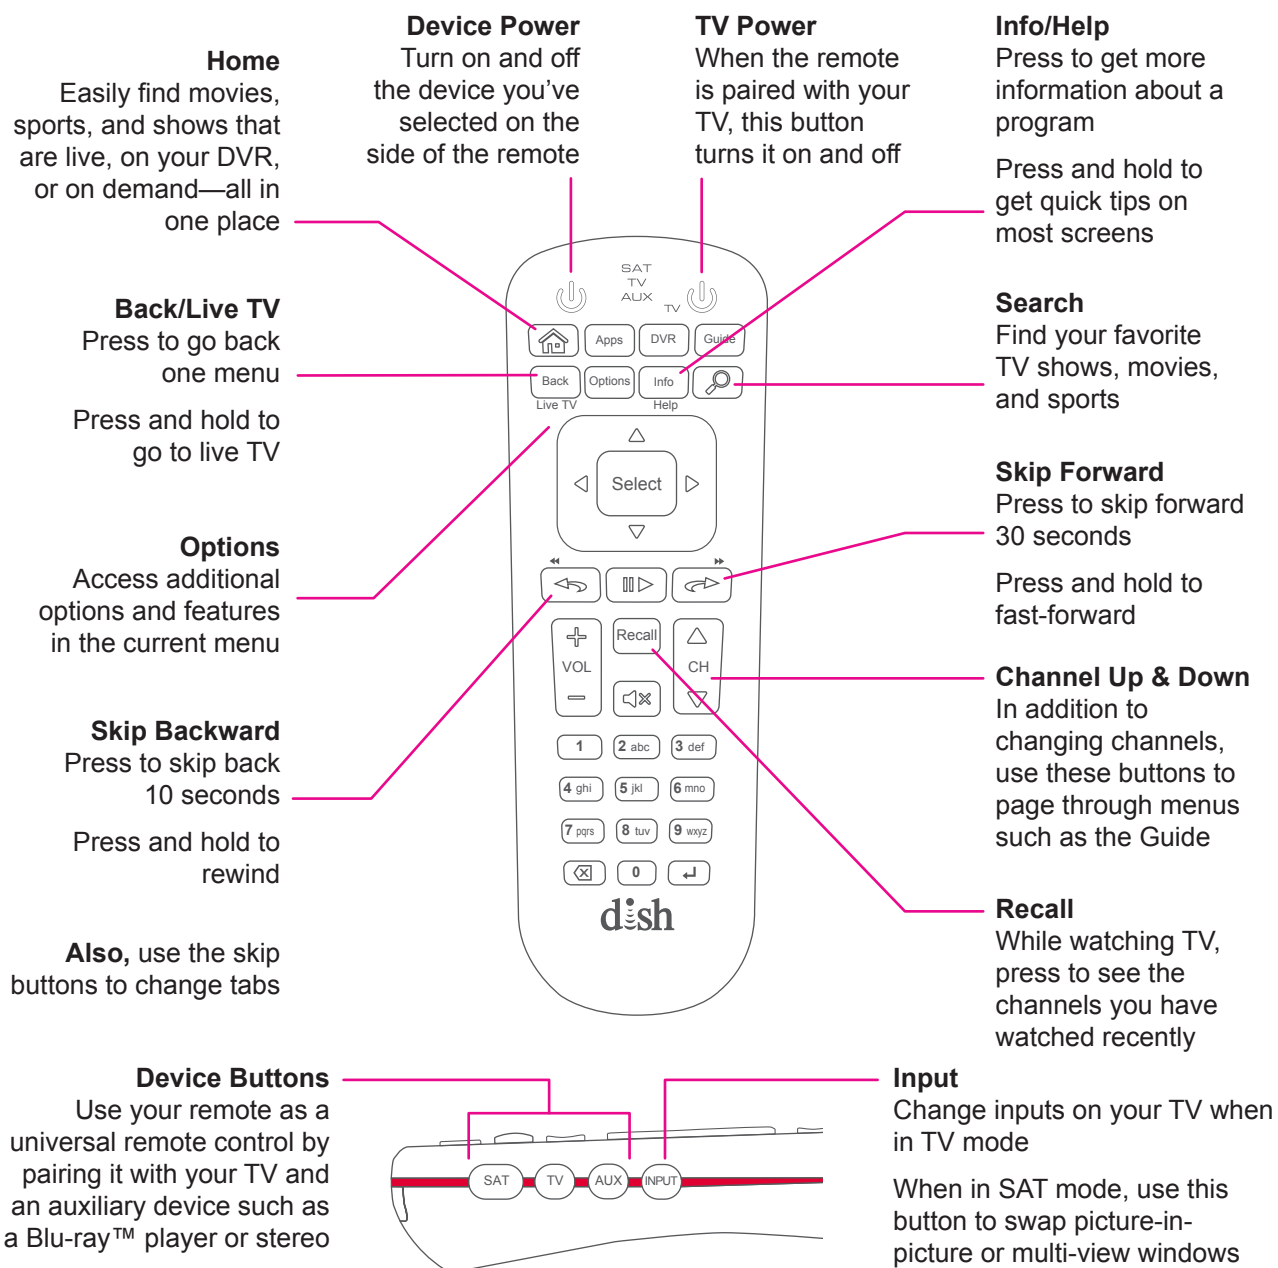

GET IN TOUCH


Turn On Your Remote

1 Remove the back cover by pushing the tab upward, and remove the **PULL** tab

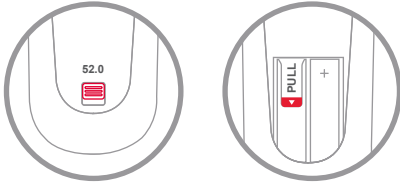


2 Replace the back cover

3 Open the front panel of your DISH receiver, and press the **SYS INFO** button

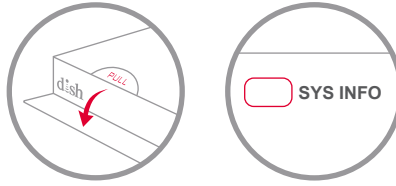


4 Press the **SAT** button on the side of the remote control

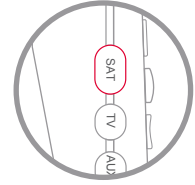

You will hear three beeps from the remote control, indicating it has paired with your DISH receiver

Locate Your Remote

1 Open the front panel of your DISH receiver

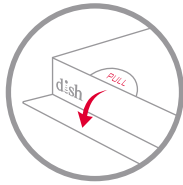


2 Press the **LOCATE REMOTE** button



You will hear a series of beeps from your remote, allowing you to find it.

Pair Your Remote

1 Press the home button twice

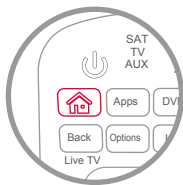

2 Select **Settings** and the **Remote Control**



3 Select **TV** and then **TV Pairing Wizard**



4 Follow the prompts

5 If desired, pair your remote with an auxiliary device such as a Blu-ray™ player or stereo

GET IN TOUCH