




Mid-Century Collection Bar Cabinet - Bottom Unit

Assembly Instructions for: KN008-B - Walnut/White

△WARNING:

ADULT ASSEMBLY REQUIRED - This product contains hardware that, before being assembled, can pose a chocking hazard to children under the age of 3 years. Care should be taken when unpacking and assembling this product.

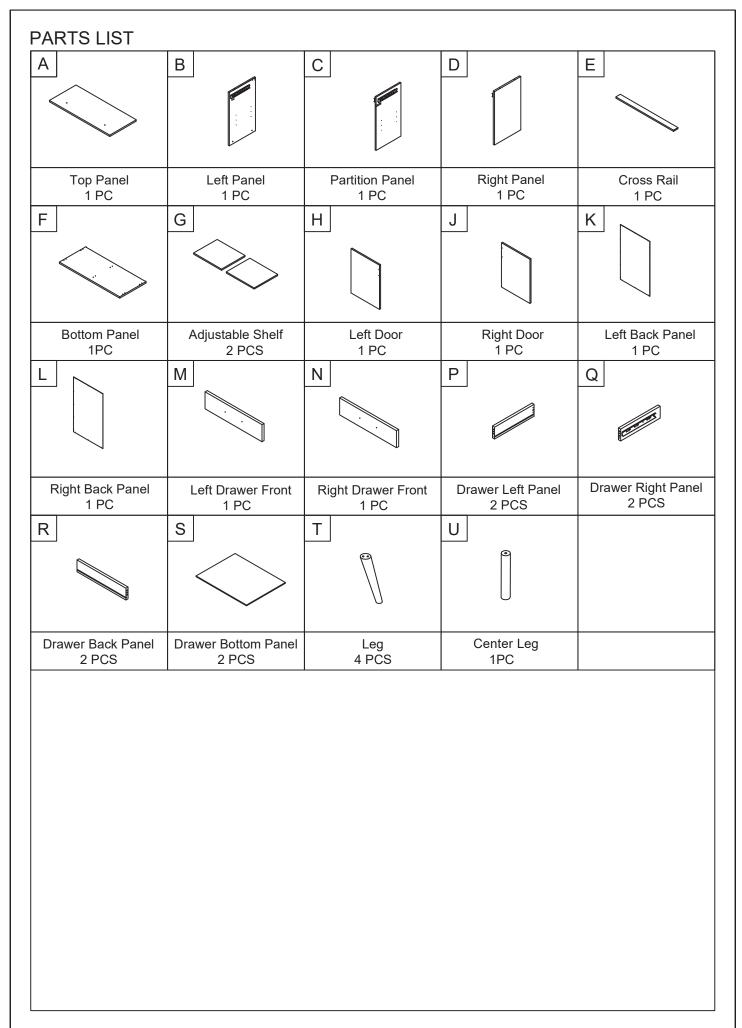

HARDWARE LIST

#1	#2	#3	#4	#5
	0000			×
Handle 4 PCS	Center Leg Plate 1 PC	Leg Attachment Plates 4 PCS	Cam Bolt 16 PCS (+1 Extra)	Cam Lock 16 PCS (+1 Extra)
#6	#7	#8	#9	#10
1/4"x50mm	1/4"x20mm	1/4"x11mm	1/4"x13mm	8x30mm
Long Round Head Bolt 6 PCS (+1 Extra)	Short Bolt 28PCS (+1 Extra)	Spring Washer 6 PCS (+1 Extra)	Flat Washer 6 PCS (+1 Extra)	Wood Dowel 24 PCS (+1 Extra)
#11	#12 7x15mm	#13 4x22mm	#14 Ø2025 8x12mm	#15
Hinge 4 PCS	Flat Head Screw 24 PCS (+1 Extra)	Round Head Bolt 8 PCS (+1 Extra)	Short Screw 23 PCS (+1 Extra)	Barrel Nut 6 PCS (+1 Extra)
#16	#17	#18		
	4x32mm	M4		
Shelf Holder 8 PCS (+1 Extra)	Round Screw 8 PCS (+1 Extra)	Allen Wrench 1 PC		

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.





Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1.

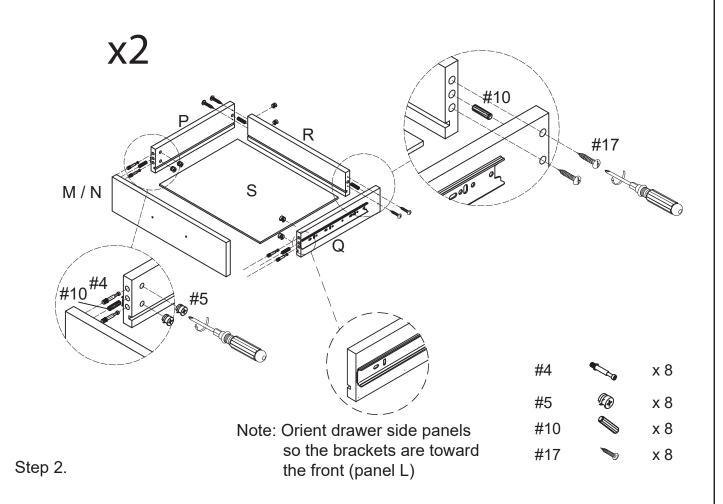


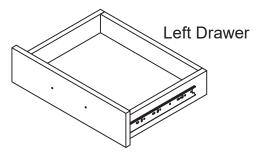

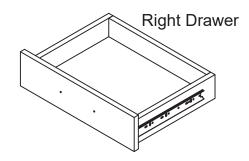

Step 3.


Note: Bolts to be fully seated and flush with the plate

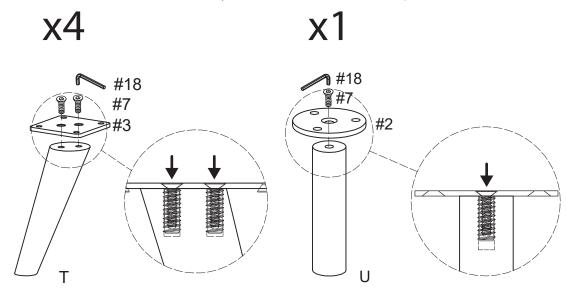

#7 🝿 x 9

#18 x 1

Step 4.

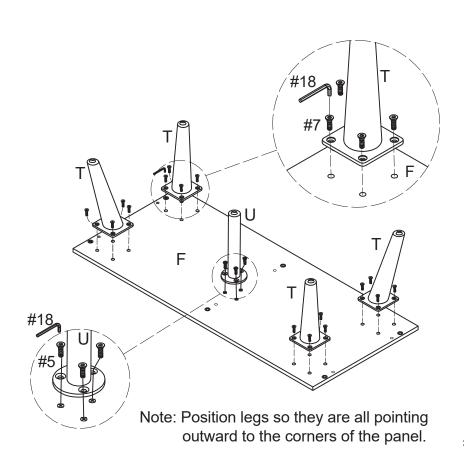

x 1

#18


Step 5. D #4 x 2 #5 x 2 #10 x 4 Step 6. В D #4 x 6

#5

#10

x 6

x 6

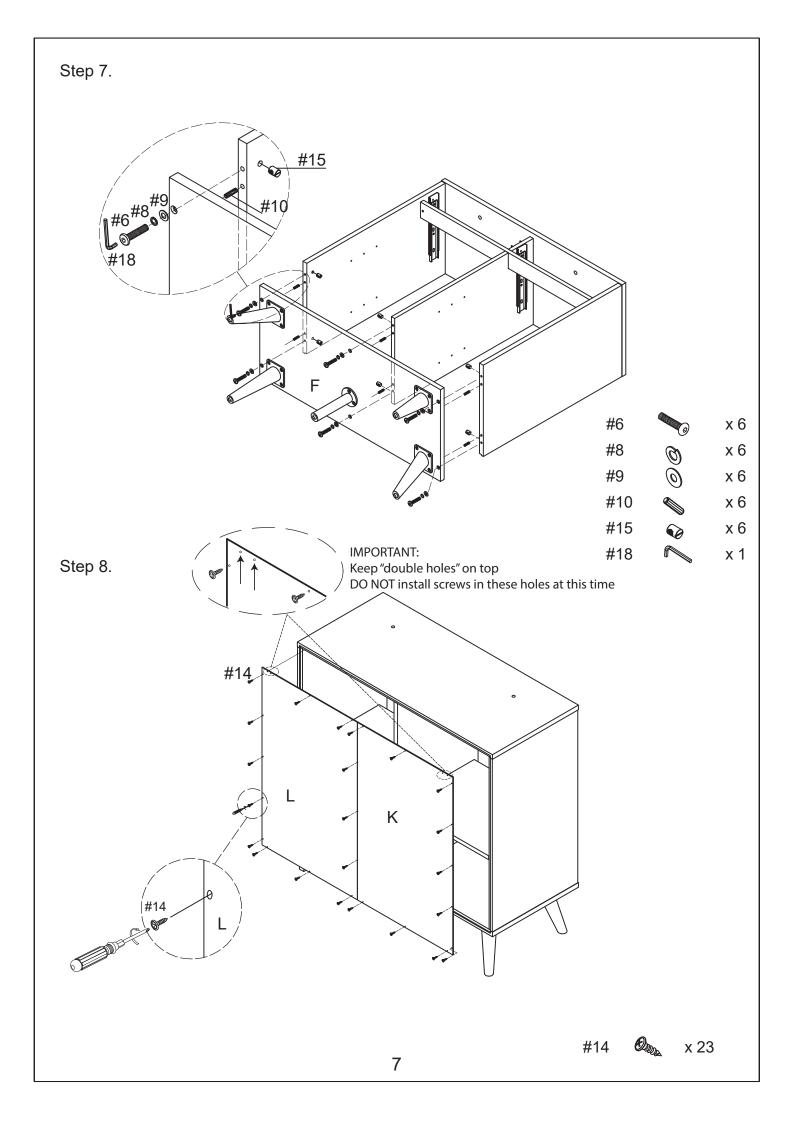

Step 9. #16 G G Step 10. #16 8⁻ X #13 Trigger Disconnect Lever #1 Slide Track -Trigger Disconnect Lever Slide Runner x 2 Move the sliders to the front end of rail before sliding the drawer into place. #13 x 4

Step 11. #13 #13 #1 x 2 #11 x 4 x 24 #12 #13 x 4 Step 12.


NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable levelers until all four levelers are firmly in contact with the floor.


Hinge Adjustment Instructions

For Proper Door Alignment (optional)

Left - Right Adjustment

Tightening/Loosening the center screw in the hinge will move the door to the left and right

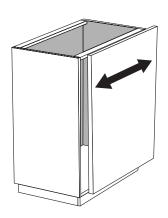


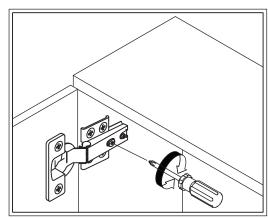


Up - Down Adjustment

Loosen the screws attaching both hinges to the inner wall of the side panel.

Shift the door and hinges up and down for best alignment.

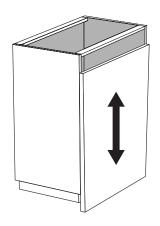

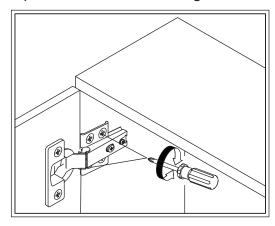

In - Out Adjustment

Loosen the screw on the end of both hinges. Shift the door in and out for best alignment.

