

---

## 5. MAIN Electrical Parts List

---

Parts Code	Design LOC	Description
0404-001250	D5000,D5001	DIODE
0406-001808	D6000	DIODE
0406-001809	ZD6001,ZD6002	DIODE
0406-001829	ZD1001	DIODE
0406-001860	ZD5001	DIODE
0505-003618	Q5000	FET
0601-003833	LED5000	LED
1001-002114	U7000	IC
1001-002121	U2004,U2010	IC
1108-000698	UME500	IC
1201-003869	U3001	IC
1201-003915	PAM1000	IC
1201-004219	U1000	IC
1201-004273	PAM1001	IC
1203-008249	U5001	IC
1203-008475	U6001	IC
1203-008867	U3010,U5003,U6000	IC
1203-008867	U7008,U7011	IC
1203-008872	U7006	IC
1203-009157	U7005	IC
1203-009161	U2007	IC
1203-009220	U7003	IC
1203-009221	U7010	IC
1203-009404	U5002	IC
1203-009470	U5000	IC
1205-006271	U2005	IC
1205-006274	U3003	IC
1205-006278	U3004	IC
1205-006423	U4000	IC
1209-002450	U3006	IC
1209-002513	U3005	IC
1209-002711	U3000	IC
1209-002714	U2008	IC
1404-001724	TH4000,TH4001,V1000	THERMISTOR
2007-000141	C3002,R5004,R5005	R-CHIP
2007-000148	R4033,R4039,R4040	R-CHIP
2007-000173	R3003	R-CHIP
2007-001329	R5020	R-CHIP

---

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

---

## 5. MAIN Electrical Parts List

---

2007-003015	R6003,R6004	R-CHIP
2007-007134	R5013	R-CHIP
2007-007156	R5023	R-CHIP
2007-007190	R5042,R5043	R-CHIP
2007-007573	R5012	R-CHIP
2007-007741	R6023	R-CHIP
2007-007766	C2062	R-CHIP
2007-008045	R5019	R-CHIP
2007-008052	R6002,R6029	R-CHIP
2007-008055	R5017,R6001	R-CHIP
2007-008312	R4000,R4030,TH1000	R-CHIP
2007-008419	R4025,R4026,R4037	R-CHIP
2007-008419	R5028,R5031,R5034	R-CHIP
2007-008478	R5021	R-CHIP
2007-008483	R5022,R5026	R-CHIP
2007-008486	R5007,R5008,R5009	R-CHIP
2007-008486	R5010,R5011,R6014	R-CHIP
2007-008516	R4015,R4032,R5001	R-CHIP
2007-008516	R5002,R5014,R5041	R-CHIP
2007-008516	R7003	R-CHIP
2007-008531	R4004,R5039,R7001	R-CHIP
2007-008531	R7002,R7004,R7006	R-CHIP
2007-008531	R7018,R7019	R-CHIP
2007-008587	R1000	R-CHIP
2007-008588	R2001,R4001,R4003	R-CHIP
2007-008588	R4005,R4007,R4012	R-CHIP
2007-008588	R4014,R4021,R4022	R-CHIP
2007-008588	R6000	R-CHIP
2007-008647	R4013,R7021	R-CHIP
2007-008648	R6015	R-CHIP
2007-008806	R1003,R7020	R-CHIP
2007-009111	R5037	R-CHIP
2007-009155	R5018	R-CHIP
2007-009212	R5044,R5045,R6017	R-CHIP
2007-009314	R5038	R-CHIP
2007-009361	R1005	R-CHIP
2007-009408	R3002,R3004	R-CHIP
2007-009410	R6010,R6011	R-CHIP
2007-009866	R5015	R-CHIP

---

## 5. MAIN Electrical Parts List

---

2007-009920	R5032,R5033	R-CHIP
2007-009969	R6025	R-CHIP
2007-010849	R4016	R-CHIP
2007-011532	R6018	R-CHIP
2007-011648	R1008	R-CHIP
2007-012197	R5000	R-CHIP
2007-012202	R6022	R-CHIP
2203-000233	C3010,C3011	C-CERAMIC,CHIP
2203-000359	C3009	C-CERAMIC,CHIP
2203-000585	C5063,C5064	C-CERAMIC,CHIP
2203-000627	C3036	C-CERAMIC,CHIP
2203-002285	C6016	C-CERAMIC,CHIP
2203-005344	C5059	C-CERAMIC,CHIP
2203-005682	C1042,C5024,C5146	C-CERAMIC,CHIP
2203-005682	C5148,C5149,C6019	C-CERAMIC,CHIP
2203-005682	C6026,C7038,C7055	C-CERAMIC,CHIP
2203-005682	C7056,L3004	C-CERAMIC,CHIP
2203-005725	C7004,C7008,C7013	C-CERAMIC,CHIP
2203-005725	C7073,L2001	C-CERAMIC,CHIP
2203-005727	L1041	C-CERAMIC,CHIP
2203-005729	C1090,C6018,C6029	C-CERAMIC,CHIP
2203-005731	C6009,C6011	C-CERAMIC,CHIP
2203-005732	C2010,C6017,C6025	C-CERAMIC,CHIP
2203-005732	C6028	C-CERAMIC,CHIP
2203-005734	C1016	C-CERAMIC,CHIP
2203-005777	C1010,C1051,C1060	C-CERAMIC,CHIP
2203-005777	C1067,L1036,L1047	C-CERAMIC,CHIP
2203-005789	C1054,C1061,C1076	C-CERAMIC,CHIP
2203-005789	C1080,C1098,L1029	C-CERAMIC,CHIP
2203-005789	L1070	C-CERAMIC,CHIP
2203-005806	C1011,C2000	C-CERAMIC,CHIP
2203-006121	C6022	C-CERAMIC,CHIP
2203-006194	C3043,C5159	C-CERAMIC,CHIP
2203-006305	C1117,C1120	C-CERAMIC,CHIP
2203-006379	C3046,C6010	C-CERAMIC,CHIP
2203-006399	C6024	C-CERAMIC,CHIP
2203-006400	C1038,C1077,C3014	C-CERAMIC,CHIP
2203-006400	C3015,C3081,C5073	C-CERAMIC,CHIP
2203-006400	C5075,C5081	C-CERAMIC,CHIP

---

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

---

## 5. MAIN Electrical Parts List

---

2203-006423	C2021,C2022,C2023	C-CERAMIC,CHIP
2203-006423	C2024,C2025,C2026	C-CERAMIC,CHIP
2203-006423	C3031,C3034,C5034	C-CERAMIC,CHIP
2203-006423	C5156,C5157,C5161	C-CERAMIC,CHIP
2203-006423	C6027,C7017,C7028	C-CERAMIC,CHIP
2203-006423	C7041,C7045,C7046	C-CERAMIC,CHIP
2203-006556	C1026	C-CERAMIC,CHIP
2203-006674	L1063	C-CERAMIC,CHIP
2203-006707	C1045,L1060	C-CERAMIC,CHIP
2203-006839	C1012,C1047,C1049	C-CERAMIC,CHIP
2203-006839	C2002,C2006,C2061	C-CERAMIC,CHIP
2203-006839	C3048,C4000,C4014	C-CERAMIC,CHIP
2203-006839	C4015,C4017,C4019	C-CERAMIC,CHIP
2203-006839	C4020,C4023,C4024	C-CERAMIC,CHIP
2203-006839	C4031,C4033,C4034	C-CERAMIC,CHIP
2203-006839	C4044,C4047,C4050	C-CERAMIC,CHIP
2203-006839	C4051,C4052,C4053	C-CERAMIC,CHIP
2203-006839	C4069,C5056,C5090	C-CERAMIC,CHIP
2203-006839	C5091,C5099	C-CERAMIC,CHIP
2203-006841	C2068	C-CERAMIC,CHIP
2203-006872	C5029,C7021,C7026	C-CERAMIC,CHIP
2203-006872	C7039,C7040	C-CERAMIC,CHIP
2203-006896	C5031	C-CERAMIC,CHIP
2203-006968	C1043	C-CERAMIC,CHIP
2203-007194	C3037,C7033	C-CERAMIC,CHIP
2203-007210	C4021,C4054	C-CERAMIC,CHIP
2203-007271	C4001,C4009,C4035	C-CERAMIC,CHIP
2203-007271	C5007,C5032,C5077	C-CERAMIC,CHIP
2203-007279	C5061,C5062,C5072	C-CERAMIC,CHIP
2203-007317	C2019,C2020,C3045	C-CERAMIC,CHIP
2203-007317	C3076,C5006,C5035	C-CERAMIC,CHIP
2203-007317	C5036,C5065,C5098	C-CERAMIC,CHIP
2203-007317	C5106,C5139,C5140	C-CERAMIC,CHIP
2203-007317	C7031	C-CERAMIC,CHIP
2203-007391	C1039,C5153	C-CERAMIC,CHIP
2203-007393	C3083,C3084,C5030	C-CERAMIC,CHIP
2203-007393	C5043,C5044,C5045	C-CERAMIC,CHIP
2203-007393	C5046,C5078,C5097	C-CERAMIC,CHIP
2203-007393	C5116,C5123,C5143	C-CERAMIC,CHIP

---

## 5. MAIN Electrical Parts List

---

2203-007393	C5160,C7002,C7011	C-CERAMIC,CHIP
2203-007393	C7023,C7024,C7025	C-CERAMIC,CHIP
2203-007393	C7027	C-CERAMIC,CHIP
2203-007425	C5033	C-CERAMIC,CHIP
2203-007781	C6000,C7048	C-CERAMIC,CHIP
2203-007796	C2069,C3003,C3013	C-CERAMIC,CHIP
2203-007796	C3029,C3050,C3069	C-CERAMIC,CHIP
2203-007796	C3070,C3078,C3089	C-CERAMIC,CHIP
2203-007796	C3090,C3091,C4002	C-CERAMIC,CHIP
2203-007796	C4003,C4004,C4010	C-CERAMIC,CHIP
2203-007796	C4011,C4013,C4022	C-CERAMIC,CHIP
2203-007796	C4026,C4032,C4037	C-CERAMIC,CHIP
2203-007796	C4046,C4048,C4049	C-CERAMIC,CHIP
2203-007796	C4073,C4074,C4077	C-CERAMIC,CHIP
2203-007796	C4078,C5000,C5001	C-CERAMIC,CHIP
2203-007796	C5003,C5004,C5009	C-CERAMIC,CHIP
2203-007796	C5010,C5011,C5013	C-CERAMIC,CHIP
2203-007796	C5014,C5016,C5018	C-CERAMIC,CHIP
2203-007796	C5019,C5020,C5021	C-CERAMIC,CHIP
2203-007796	C5028,C5057,C5058	C-CERAMIC,CHIP
2203-007796	C5066,C5067,C5068	C-CERAMIC,CHIP
2203-007796	C5069,C5070,C5071	C-CERAMIC,CHIP
2203-007796	C5076,C5079,C5080	C-CERAMIC,CHIP
2203-007796	C5086,C5089,C5105	C-CERAMIC,CHIP
2203-007796	C5114,C5115,C5120	C-CERAMIC,CHIP
2203-007796	C5121,C5122,C5124	C-CERAMIC,CHIP
2203-007796	C5128,C5129,C5137	C-CERAMIC,CHIP
2203-007796	C5138,C5141,C5142	C-CERAMIC,CHIP
2203-007796	C5144,C5150,C5151	C-CERAMIC,CHIP
2203-007796	C6003,C7000,C7001	C-CERAMIC,CHIP
2203-007796	C7005,C7006,C7009	C-CERAMIC,CHIP
2203-007796	C7010,C7022,C7032	C-CERAMIC,CHIP
2203-007796	C7034,C7036,C7049	C-CERAMIC,CHIP
2203-007796	C7053,C7057,C7058	C-CERAMIC,CHIP
2203-007796	C7060,C7069,C7070	C-CERAMIC,CHIP
2203-007796	C7071,C7072,C7074	C-CERAMIC,CHIP
2203-008097	C6005	C-CERAMIC,CHIP
2203-008242	C4045,C4063,C4064	C-CERAMIC,CHIP
2203-008242	C5037,C5038,C5039	C-CERAMIC,CHIP

---

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

---

## 5. MAIN Electrical Parts List

---

2203-008242	C5040,C5085,C5092	C-CERAMIC,CHIP
2203-008242	C5127	C-CERAMIC,CHIP
2203-008243	C5041	C-CERAMIC,CHIP
2203-008394	L1028,L1044	C-CERAMIC,CHIP
2203-008572	C5053	C-CERAMIC,CHIP
2203-008860	C3088,C5095,C5096	C-CERAMIC,CHIP
2203-008860	C5103,C5104,C5113	C-CERAMIC,CHIP
2203-008860	C6001,C6015,C7059	C-CERAMIC,CHIP
2203-008876	C1048,C1050,C1078	C-CERAMIC,CHIP
2203-008876	C1112,C1114,C2070	C-CERAMIC,CHIP
2203-008876	C5017,C5107,C5108	C-CERAMIC,CHIP
2203-008876	C5109,C5119,C5125	C-CERAMIC,CHIP
2203-008876	C5126,C5145,C5158	C-CERAMIC,CHIP
2203-008876	C6008,C6032	C-CERAMIC,CHIP
2203-009134	C1020	C-CERAMIC,CHIP
2203-009167	C3033,C3038	C-CERAMIC,CHIP
2203-009328	C5005,C5022,C5023	C-CERAMIC,CHIP
2203-009328	C5025,C5026,C5051	C-CERAMIC,CHIP
2203-009328	C5052,C5054,C5055	C-CERAMIC,CHIP
2203-009328	C5082,C5083,C5087	C-CERAMIC,CHIP
2203-009328	C5088,C5100	C-CERAMIC,CHIP
2203-009584	C6006,C6007	C-CERAMIC,CHIP
2203-009733	C1070,C5042,C5047	C-CERAMIC,CHIP
2203-009733	C5048,C5049,C5050	C-CERAMIC,CHIP
2203-009733	C5084,C7003,C7007	C-CERAMIC,CHIP
2203-009733	C7012,C7014,C7015	C-CERAMIC,CHIP
2203-009733	C7016,C7019,C7020	C-CERAMIC,CHIP
2203-009733	C7029,C7037,C7042	C-CERAMIC,CHIP
2203-009733	C7043,C7044,C7047	C-CERAMIC,CHIP
2203-009733	C7050,C7051,C7052	C-CERAMIC,CHIP
2203-009733	C7061,C7062,C7063	C-CERAMIC,CHIP
2203-009733	C7064,C7065,C7066	C-CERAMIC,CHIP
2203-009733	C7067,C7068	C-CERAMIC,CHIP
2203-010085	C5093,C5094	C-CERAMIC,CHIP
2203-010141	C6014	C-CERAMIC,CHIP
2203-010223	C6004	C-CERAMIC,CHIP
2703-002900	C1082	INDUCTOR-SMD
2703-003064	L2017	INDUCTOR-SMD
2703-004014	C2001,C2003,C2009	INDUCTOR-SMD

---

## 5. MAIN Electrical Parts List

---

2703-004018	C1056,L1037,L2008	INDUCTOR-SMD
2703-004018	L3009	INDUCTOR-SMD
2703-004030	C1106,L2022	INDUCTOR-SMD
2703-004032	C2094,L2028,L3011	INDUCTOR-SMD
2703-004032	L6009,L6010	INDUCTOR-SMD
2703-004034	C3008,L1046,L3002	INDUCTOR-SMD
2703-004034	L3017	INDUCTOR-SMD
2703-004035	C1084,C1099,C2013	INDUCTOR-SMD
2703-004035	C2075,L1006,L1013	INDUCTOR-SMD
2703-004035	L1035,L1061,L2002	INDUCTOR-SMD
2703-004035	L2005,L2020	INDUCTOR-SMD
2703-004037	C1017,C1085,C1087	INDUCTOR-SMD
2703-004037	C2007,L1032,L1034	INDUCTOR-SMD
2703-004037	L2012,L2016	INDUCTOR-SMD
2703-004171	L1019,L1031,L1033	INDUCTOR-SMD
2703-004171	L2014,L2033,L2034	INDUCTOR-SMD
2703-004362	C2011,C2012,C2018	INDUCTOR-SMD
2703-004362	C2049,C2067,L1016	INDUCTOR-SMD
2703-004362	L1023,L1039,L1071	INDUCTOR-SMD
2703-004362	L1073	INDUCTOR-SMD
2703-004363	L1053	INDUCTOR-SMD
2703-004368	C1081,L1042	INDUCTOR-SMD
2703-004369	C2078,L1002,L1038	INDUCTOR-SMD
2703-004369	L2019,L2029	INDUCTOR-SMD
2703-004703	C3042	INDUCTOR-SMD
2703-004853	L1017,L1024	INDUCTOR-SMD
2703-004862	C1058,L1052	INDUCTOR-SMD
2703-005118	L7006	INDUCTOR-SMD
2703-005201	L5001,L5005,L5007	INDUCTOR-SMD
2703-005201	L5008	INDUCTOR-SMD
2703-005224	L7009	INDUCTOR-SMD
2703-005430	L7007	INDUCTOR-SMD
2703-005505	L5000,L5002,L5004	INDUCTOR-SMD
2703-005505	L5011,L6000	INDUCTOR-SMD
2703-005555	L3013,L3014	INDUCTOR-SMD
2703-005581	L5012	INDUCTOR-SMD
2703-005724	L5006	INDUCTOR-SMD
2801-005542	OSC5000	OSCILLATOR
2901-001690	C4005,C4006,C4007	FILTER-EMI SMD

---

## 5. MAIN Electrical Parts List

---

2901-001690	C4012,C4016,C4018	FILTER-EMI SMD
2901-001690	C4036,C4071	FILTER-EMI SMD
2904-002257	F2001	FILTER-SAW
2904-002260	F1000	FILTER-SAW
2904-002339	F2005	FILTER-SAW
2904-002405	F2000	FILTER-SAW
2904-002409	U3008	FILTER-SAW
2904-002417	F3003	FILTER-SAW
2904-002419	F2002	FILTER-SAW
2910-000417	F1006	FILTER-SAW
2911-000430	U2001	FILTER
2911-000448	U1002	FILTER
2911-000495	U1004	FILTER
3003-001256	MIC6000	MIC-CONDENSOR
3301-002122	L5016,L6001,L6002	CORE-FERRITE BEAD
3301-002235	L6005,L6007,L6008	CORE-FERRITE BEAD
3301-002235	L6012	CORE-FERRITE BEAD
3301-002237	L2023,L3005,L5013	CORE-FERRITE BEAD
3301-002237	L6004	CORE-FERRITE BEAD
3301-002238	L3007,L3008	CORE-FERRITE BEAD
3301-002244	L1075	CORE-FERRITE BEAD
3301-002312	L7005,L7008,L7010	CORE-FERRITE BEAD
3301-002331	L5003	CORE-FERRITE BEAD
3301-002372	L5009,L5010	CORE-FERRITE BEAD
3705-001708	RFS1000	CONNECTOR-COAXIAL
3705-001937	ANT1000	CONNECTOR-COAXIAL
3709-001932	CN5001	CONNECTOR-CARD EDGE
3709-001933	SIM5002	CONNECTOR-CARD EDGE
3709-001934	SIM5000,SIM5001	CONNECTOR-CARD EDGE
3710-003871	SOC7000	CONNECTOR-SOCKET
3710-003874	SOC7001,SOC7004	CONNECTOR-SOCKET
3710-004008	CN5000	CONNECTOR-SOCKET
3710-004027	SOC7002,SOC7003	CONNECTOR-SOCKET
3710-004501	SOC6000	CONNECTOR-SOCKET
3712-001626	ANT1001,ANT1002	CONNETCTOR
3712-001626	ANT2006,ANT2007	CONNETCTOR
3712-001626	ANT2008,ANT3003	CONNETCTOR
3712-001626	ANT3004	CONNETCTOR
3712-001633	ANT3005,ANT3006	CONNETCTOR



## 5. MAIN Electrical Parts List

3712-001633	ANT5004,ANT5005	CONNECTOR
3712-001666	ANT5000,ANT5001	CONNECTOR
3712-001666	ANT5002,ANT5003	CONNECTOR
3712-001666	ANT5006	CONNECTOR
3712-001694	ANT2001,ANT2002	CONNECTOR
3712-001694	ANT2003,ANT2004	CONNECTOR
3712-001763	ANT6000,ANT6001	CONNECTOR
4709-002196	F2004	DIPLEXER
4709-002387	F1002	DIPLEXER
4709-002761	F2003	DIPLEXER

### [SM-A325F]

Parts Code	Design LOC	Description
1001-002065	U2000,U2002	IC
2203-005736	C1000,C1001,C1002	C-CERAMIC,CHIP
2203-005736	C1003,C1018,C1040	C-CERAMIC,CHIP
2203-005736	C1044,C1053,C1062	C-CERAMIC,CHIP
2203-005736	C1063,C1064,C1069	C-CERAMIC,CHIP
2203-005736	C1072,C1113,C1123	C-CERAMIC,CHIP
2203-005736	C2004,C2005,C2016	C-CERAMIC,CHIP
2203-005736	C2027,C2028,C2030	C-CERAMIC,CHIP
2203-005736	C2031,C2034,C2035	C-CERAMIC,CHIP
2203-005736	C2036,C2037,C2038	C-CERAMIC,CHIP
2203-005736	C2039,C2040,C2041	C-CERAMIC,CHIP
2203-005736	C2042,C2043,C2045	C-CERAMIC,CHIP
2203-005736	C2046,C2047,C2048	C-CERAMIC,CHIP
2203-005736	C2050,C2051,C2052	C-CERAMIC,CHIP
2203-005736	C2054,C2055,C2056	C-CERAMIC,CHIP
2203-005736	C2057,C2058,C2059	C-CERAMIC,CHIP
2203-005736	C2060,C2063,C2074	C-CERAMIC,CHIP
2203-005736	C2077,C2079,C2080	C-CERAMIC,CHIP
2203-005736	C2096,C3000,C3004	C-CERAMIC,CHIP
2203-005736	C3018,C3021,C3028	C-CERAMIC,CHIP
2203-005736	C3044,C3047,C3049	C-CERAMIC,CHIP
2203-005736	C5172,L1001,L1004	C-CERAMIC,CHIP
2203-005736	L1005,L1022,L1072	C-CERAMIC,CHIP
2203-005736	L1074,L2013,L2015	C-CERAMIC,CHIP
2203-005736	L2021,L2031	C-CERAMIC,CHIP
2203-005792	C1023,C1068,L1062	C-CERAMIC,CHIP
2203-005792	L1065,L1067	C-CERAMIC,CHIP

## 5. MAIN Electrical Parts List

2203-006410	L1066	C-CERAMIC,CHIP
2703-003970	L3010	INDUCTOR-SMD
2703-004012	C1013,C1122,C2008	INDUCTOR-SMD
2703-004012	C3027,L1030,L1040	INDUCTOR-SMD
2703-004012	L2000,L2006,L2027	INDUCTOR-SMD
2703-004012	L7011	INDUCTOR-SMD
2703-004013	L1015,L2009	INDUCTOR-SMD
2703-004038	C1006,C1037,L1000	INDUCTOR-SMD
2703-004038	L2003,L2004,L3012	INDUCTOR-SMD
2703-004366	C1007,C1055,C1057	INDUCTOR-SMD
2703-004366	L2030	INDUCTOR-SMD
2703-004367	L1048,L1069	INDUCTOR-SMD
2703-004763	C1121,L1003	INDUCTOR-SMD
2703-004764	C2017,L2032	INDUCTOR-SMD

### [SM-A326M]

Parts Code	Design LOC	Description
1001-002065	U2000,U2002,U2006	IC
1001-002065	U2009	IC
1001-002093	U1005	IC
2203-005736	C1000,C1001,C1002	C-CERAMIC,CHIP
2203-005736	C1003,C1018,C1027	C-CERAMIC,CHIP
2203-005736	C1040,C1044,C1053	C-CERAMIC,CHIP
2203-005736	C1062,C1063,C1064	C-CERAMIC,CHIP
2203-005736	C1069,C1072,C1088	C-CERAMIC,CHIP
2203-005736	C1103,C1104,C1107	C-CERAMIC,CHIP
2203-005736	C1109,C1111,C1113	C-CERAMIC,CHIP
2203-005736	C1116,C1123,C2004	C-CERAMIC,CHIP
2203-005736	C2005,C2016,C2027	C-CERAMIC,CHIP
2203-005736	C2028,C2030,C2031	C-CERAMIC,CHIP
2203-005736	C2034,C2035,C2036	C-CERAMIC,CHIP
2203-005736	C2037,C2038,C2039	C-CERAMIC,CHIP
2203-005736	C2040,C2041,C2042	C-CERAMIC,CHIP
2203-005736	C2043,C2045,C2046	C-CERAMIC,CHIP
2203-005736	C2047,C2048,C2050	C-CERAMIC,CHIP
2203-005736	C2051,C2052,C2054	C-CERAMIC,CHIP
2203-005736	C2055,C2056,C2057	C-CERAMIC,CHIP
2203-005736	C2058,C2059,C2060	C-CERAMIC,CHIP
2203-005736	C2063,C2077,C2079	C-CERAMIC,CHIP
2203-005736	C2080,C2096,C3000	C-CERAMIC,CHIP

---

## 5. MAIN Electrical Parts List

---

2203-005736	C3004,C3018,C3021	C-CERAMIC,CHIP
2203-005736	C3028,C3044,C3047	C-CERAMIC,CHIP
2203-005736	C3049,C5172,L1001	C-CERAMIC,CHIP
2203-005736	L1004,L1005,L1022	C-CERAMIC,CHIP
2203-005736	L1072,L1074,L2013	C-CERAMIC,CHIP
2203-005736	L2015,L2021,L2031	C-CERAMIC,CHIP
2203-005792	C1023,C1068,C1092	C-CERAMIC,CHIP
2203-005792	C1093,L1058,L1062	C-CERAMIC,CHIP
2203-005792	L1065,L1067	C-CERAMIC,CHIP
2203-006410	C1034,L1066	C-CERAMIC,CHIP
2703-003970	L1055,L3010	INDUCTOR-SMD
2703-004012	C1013,C1110,C1122	INDUCTOR-SMD
2703-004012	C2008,C3027,L1030	INDUCTOR-SMD
2703-004012	L1040,L1057,L2000	INDUCTOR-SMD
2703-004012	L2006,L2027,L7011	INDUCTOR-SMD
2703-004013	L1015,L1050,L2009	INDUCTOR-SMD
2703-004033	C1030	INDUCTOR-SMD
2703-004038	C1006,C1032,C1037	INDUCTOR-SMD
2703-004038	C2076,L1000,L2003	INDUCTOR-SMD
2703-004038	L2004,L3012	INDUCTOR-SMD
2703-004366	C1007,C1055,C1057	INDUCTOR-SMD
2703-004366	C1091,L2030	INDUCTOR-SMD
2703-004367	L1048,L1059,L1069	INDUCTOR-SMD
2703-004763	C1033,C1121,L1003	INDUCTOR-SMD
2703-004764	C2017,L2024,L2032	INDUCTOR-SMD
2703-005058	L1051,L1056	INDUCTOR-SMD
2910-000364	F1005	FILTER-SAW
2910-000416	F1003	FILTER-SAW

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.