
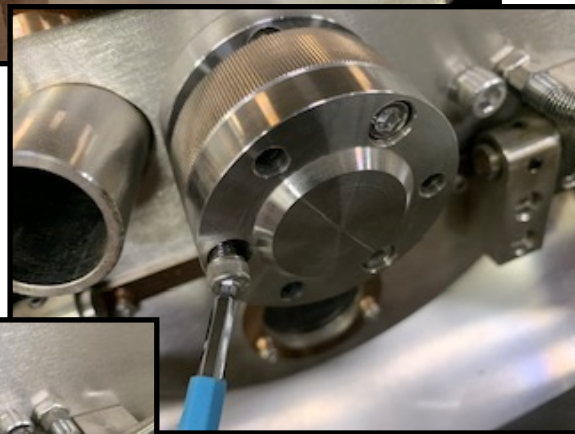


## GREASE FRONT BEARING ON THE NEW 2023-2024 BC MODELS

In 2023 BC-3.5 to BC-25 Models all received a new type bearing holder which allows easy adjustment of drum if ever needed. In order to grease the front 'open' type bearing on these models please follow these simple directions:

**1.** Remove the front cover of bearing holder by loosening and removing the 3 screws with the metric head (Not the smaller set screws)

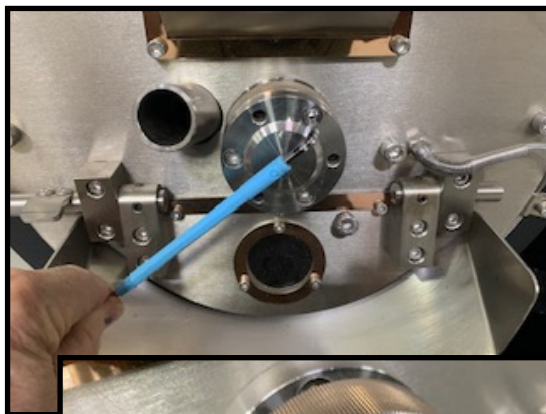

**3.** LAST: Put cover in place over bearing holder then insert and tighten the 3 screws that were removed. DONE! (Do not remove the inset setscrews from holder)

**2.** Using a grease gun or taking the High Temp Grease directly from a container- Pack grease into bearing:

