




YOU MUST READ INSTRUCTION MANUAL PRIOR TO USE. ONLY USE UNDER ADULT SUPERVISION. USE AT OWN RISK.

ASSEMBLY

HOW TO ATTACH FRONT WHEEL

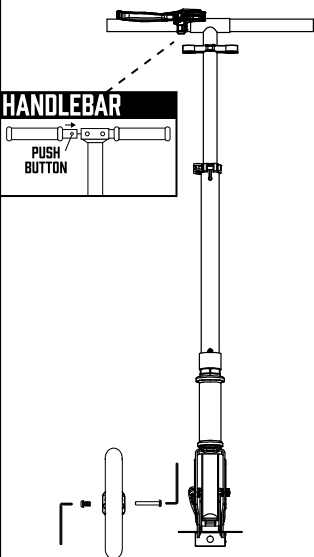


POSITION THE WHEEL: ALIGN THE FRONT WHEEL (230 MM) BETWEEN THE FORK ARMS OF THE SCOOTER FRAME.

INSERT THE AXLE: SLIDE THE AXLE BOLT THROUGH THE HOLES ON ONE FORK ARM, THROUGH THE WHEEL HUB, AND THEN THROUGH THE HOLE ON THE OPPOSITE FORK ARM.

SECURE WITH ALLEN KEY: USE THE PROVIDED ALLEN KEYS (HEX WRENCHES) TO TIGHTEN THE AXLE BOLT SECURELY.

CHECK TIGHTNESS: ENSURE THE WHEEL SPINS FREELY BUT IS SECURELY FASTENED.

HOW TO ATTACH BACK WHEEL & FRONT TUBE

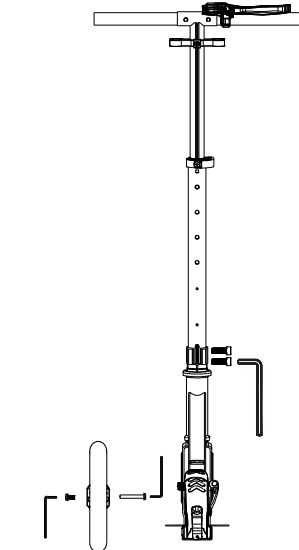


POSITION THE WHEEL: ALIGN THE BACK WHEEL (200 MM) BETWEEN THE FRAME ARMS OF THE SCOOTER.

INSERT THE AXLE: SLIDE THE AXLE BOLT THROUGH THE HOLES ON ONE FRAME ARM, THROUGH THE WHEEL HUB, AND THEN THROUGH THE HOLE ON THE OPPOSITE FRAME ARM.

SECURE WITH ALLEN KEY: USE THE PROVIDED ALLEN KEYS (HEX WRENCHES) TO TIGHTEN THE AXLE BOLT SECURELY.

CHECK TIGHTNESS: ENSURE THE WHEEL SPINS FREELY BUT IS SECURELY FASTENED.

SCOOTER FEATURES

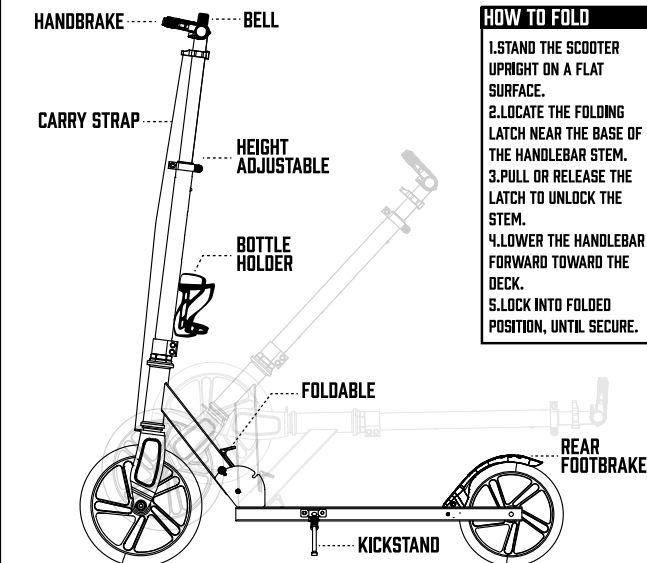

HOW TO FOLD

1. STAND THE SCOOTER UPRIGHT ON A FLAT SURFACE.
2. LOCATE THE FOLDING LATCH NEAR THE BASE OF THE HANDLEBAR STEM.
3. PULL OR RELEASE THE LATCH TO UNLOCK THE STEM.
4. LOWER THE HANDLEBAR FORWARD TOWARD THE DECK.
5. LOCK INTO FOLDED POSITION, UNTIL SECURE.

WARNING

- NOT SUITABLE FOR CHILDREN UNDER 60 MONTHS.
- CHOKING HAZARD DUE TO SMALL PARTS.
- USE ONLY UNDER CONSTANT ADULT SUPERVISION.
- SCOOTER MUST ONLY BE USED BY ONE RIDER AT A TIME.
- ALWAYS WEAR SAFETY EQUIPMENT SUCH AS CPSC APPROVED HELMET, KNEE PADS, AND ELBOW PADS.
- ALWAYS KEEP CHINSTRAP SECURELY BUCKLED.
- ALWAYS WEAR FULLY ENCLOSED SHOES.
- DO NOT USE SCOOTER AT NIGHT.
- AVOID STREETS AND SURFACES WITH WATER, SAND, GRAVEL, DIRT, LEAVES, AND OTHER DEBRIS. WET WEATHER IMPAIRS TRACTION, BRAKING, AND VISIBILITY.
- AVOID SHARP BUMPS, DRAINAGE GRATES, AND SUDDEN SURFACE CHANGES. SCOOTER MAY SUDDENLY STOP.
- THIS SCOOTER IS NOT DESIGNED FOR OFF-ROAD USE.
- IT IS NOT RECOMMENDED THAT THE SCOOTER BE USED ON STEEP SLOPES OR AT HIGH SPEEDS.
- DO NOT USE THIS PRODUCT FOR JUMPING, STUNTS, OR TRICKS.
- ALWAYS FOLLOW LOCAL TRAFFIC AND SCOOTER RIDING LAWS AND REGULATIONS.
- ALWAYS WATCH SURROUNDINGS FOR PEDESTRIANS, OTHER RIDERS, AND AUTOMOBILES.
- ALWAYS CHECK THE BRAKES BEFORE RIDING.
- NEVER HAVE YOURSELF PULLED OR TOWED.
- BRAKE WILL GET HOT FROM CONTINUOUS USE, DO NOT TOUCH AFTER BRAKING.
- ALWAYS CHECK ALL CLAMPING DEVICES AND WHEELS FOR TIGHTNESS BEFORE RIDING.
- NEVER RIDE THE SCOOTER WITHOUT TIGHTENING THE FOLDING MECHANISM AND WHEELS.
- ADULTS MUST ASSIST CHILDREN IN THE INITIAL ADJUSTMENT PROCEDURES TO UNFOLD SCOOTER, ADJUST HANDLEBAR AND STEERING TO HEIGHT, AND FINALLY TO FOLD SCOOTER.
- HAND BRAKE MUST BE CHECKED BEFORE EVERY RIDE FOR PROPER FUNCTIONALITY.
- DO NOT APPLY EXCESSIVE FORCE TO THE HAND BRAKE LEVER.
- AVOID SUDDEN BRAKING TO PREVENT LOSS OF CONTROL.
- ALWAYS ENSURE KICKSTAND IS FULLY RETRACTED BEFORE RIDING.
- USE AT OWN RISK OF INJURY.

MAINTENANCE!

- DO NOT LEAVE THIS PRODUCT IN HIGH TEMPERATURES.
- DO NOT LEAVE THIS PRODUCT IN EXTREME LOW TEMPERATURES.
- DO NOT LEAVE THIS PRODUCT IN INTENSE SUNLIGHT OR DUSTY AREAS.
- STORE IN A DRY PLACE.

CAUTION

NO MODIFICATIONS THAT COULD AFFECT OR LESSEN SAFETY SHOULD BE INTRODUCED. AN EXPIRY DATE IS UNDETERMINABLE FOR ALL COMPONENTS. RIDER MUST CHECK THE EFFICIENCY OF ALL COMPONENTS BEFORE RIDING. IF ANY COMPONENT IS LOOSE OR DAMAGED, IT MUST BE TIGHTENED OR REPLACED BEFORE RIDING.

CUSTOMER SUPPORT
1 (800) 986-6415

VISIT WWW.HALORISEABOVE.COM
FOR MORE DETAILS
@ HALORISEABOVE

TESTING STANDARD

F2264

WEIGHT CAPACITY

220 LBS



DO NOT CONTACT RETAILER!

FOR ALL CUSTOMER SERVICE ISSUES CONTACT:
GILLYBOOCUSTOMERCARE@GMAIL.COM

OR VISIT

GILLYBOOCORPORATION.COM/CONTACT-US



124 CONNIE CRESCENT
CONCORD, ONTARIO, CANADA L4K1L7