



# Napper Alarm Clock User Guide

## Quick Start

1. Take the Napper out of the box.
2. Install 2 AA batteries.
3. Push the 15-, 30-, or 60-minute nap button.

An alarm will sound when the nap timer runs out.

## Specifications

|                     |   |                   |  |
|---------------------|---|-------------------|--|
| <b>Time Display</b> | 12-hour system  | <b>Dimensions</b> | 4.75" Wide x 3.125" Deep x 1.875" High   |
| <b>Power source</b> | Battery-powered (requires two AA batteries, not included) | <b>Weight</b>     | 6.3 oz (with batteries installed)        |
| <b>Power</b>        | 3V (from two 1.5V AA batteries)                           | <b>Warranty</b>   | One-year manufacturer's limited warranty |

# Location and Description of Controls and Display

## Top Control View



**SLIDER** – Used to set the alarm or time, or to turn the alarm on or off.

**NAP BUTTONS (15, 30, 60)** – Used for setting the length of a nap alarm.


**CLEAR BUTTON** – Used to cancel the alarm sound.

**HOUR BUTTON** – Used to set the hour for the time or alarm.

**MINUTE BUTTON** – Used to set the minute for the time or alarm.

**SNOOZE AND BACKLIGHT BUTTON** – Used to snooze the alarm or turn on the backlight.

## Front Display View

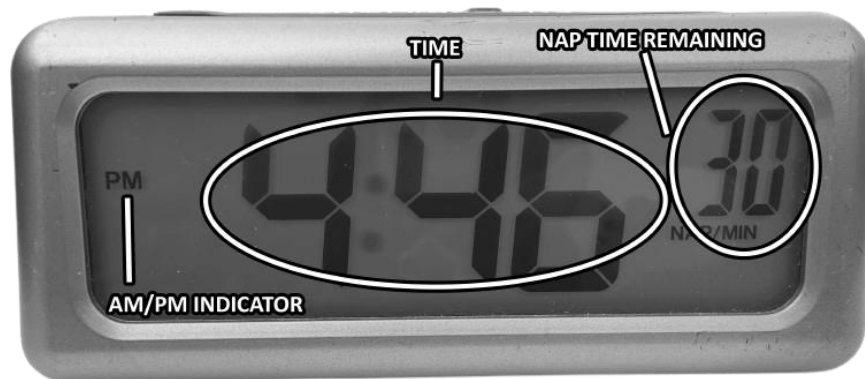

**TIME** – Shows the current time.

**NAP TIME REMAINING** – Shows how many minutes are left on the nap timer.

**AM/PM INDICATOR** – Shows whether the time is in AM or PM hours.

## *Bottom Battery Compartment View*



**BATTERY COMPARTMENT** – The compartment where the 2 AA batteries are placed.

## **Getting Started**

### *Inserting the Batteries*

1. Remove the cover to the battery compartment, located on the bottom of the clock.
2. Insert two new AA batteries in the battery compartment.
3. Replace the battery compartment cover.
4. The alarm will sound once, then the display will come on once the batteries are inserted.

### *Setting the Time*

1. Adjust the slider on the top of the clock to “Time Set.” The time will begin to flash.
2. Press the hour (“HR”) button until the hour is correct.

**Note:** Make sure that the AM/PM display is correct (for PM times, go through all the AM times first).

3. Press the minute (“MIN”) button until the minute is correct.
4. Turn the slider to “OFF.”

# Functions

## *Setting and Using the Alarm*

1. Adjust the slider on the top of the clock to alarm set (“AL Set”). The time will begin to flash.
2. Press the hour (“HR”) button until the hour is correct.

**Note:** Make sure that the AM/PM display is correct (for PM times, go through all the AM times first).

3. Press the minute (“MIN”) button until the minute is correct.
4. To turn the alarm on, turn the slider to alarm on (“AL ON”).
5. Press the “SNOOZE/LIGHT” button to snooze the alarm for 5 minutes.
6. To turn the alarm off and have it sound again at the same time the next day, press the “CLEAR” button.
7. To turn the alarm off so that it will not sound again the next day, turn the slider to “OFF.”

## *Using the Nap Feature*

1. Push one of the nap buttons (15, 30, or 60) to have the nap alarm sound after that many minutes.

**Note:** Push a button multiple times or push different buttons one after another to lengthen the nap time (60 + 60 = 120-minute nap, 30 + 15 = 45-minute nap, etc.)

**Note:** Once the nap timer has been set, minutes cannot be added by clicking the buttons mid-nap.

2. Nap minutes remaining can be seen in the upper right-hand side of the display above “NAP/MIN.”
3. To end a nap before the alarm sounds, press the “CLEAR” button.
4. Press the “SNOOZE/LIGHT” button to snooze the alarm for 5 minutes.
5. To turn the alarm off, press the “CLEAR” button.

## *Using the backlight*

1. Press the “SNOOZE/LIGHT” button to turn the backlight on for 5 seconds.

# LIMITED WARRANTY

New Time Products, LLC warrants this product against defects in material or workmanship for the time periods as set forth below when purchased directly from a New Time Products, LLC retailer. Pursuant to this Limited Warranty, New Time Products, LLC will replace the product with a new product. **In the event of a defect, this is your exclusive remedy.**

**Term:** for a period of one (1) year from the original date of purchase of the product, New Time Products, LLC will replace with a new product any product deemed to be defective.

**Instructions:** To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the New Time Products, LLC retailer from which you purchased the product. A dated purchase receipt from the New Time Products, LLC retailer is required.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any part of the New Time Products, LLC product or product purchased from other than a New Time Products LLC retailer. This Limited Warranty is valid only in the United States.

**LIMITATION ON DAMAGES:** NEW TIME PRODUCTS, LLC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

# WARNING

1. Do not expose the product to excessive heat such as sunshine or fire for a long time. The batteries could melt, fuse together, or warp in a way that ruins the product or shortens its lifespan.
2. There is a danger of explosion if batteries are incorrectly replaced. Follow these precautions:
  - a. Use only the same type and size of batteries. Do not mix different types of batteries together.
  - b. Follow the correct polarity.
  - c. If the device is not to be used for a long time, remove batteries to prevent damage or injury from battery leakage.
  - d. Do not try to recharge a battery not intended to be recharged.