



PYTHIA TECHNOLOGIES
data transformation solutions

Smart Panel
Network Configuration
5/2022

Table of Contents

CHANGE HISTORY 3

1. NETWORK CONNECTION 4

2. LOGIN..... 4

3. NAVIGATION..... 5

4. CHANGE IP ADDRESS 6

Change History

Date	Version	Change
5/20/2022	1	Initial Document

1. Network Connection


Default IP address: 192.168.0.221

Connect ethernet cable to “LAN” as indicated below.




2. Login

Click on “Open Settings” icon to log on to console.

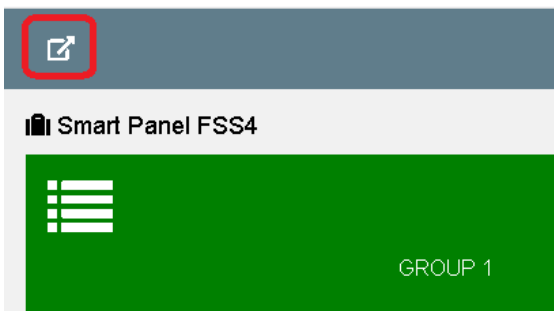


Default User: admin

Default Password: admin

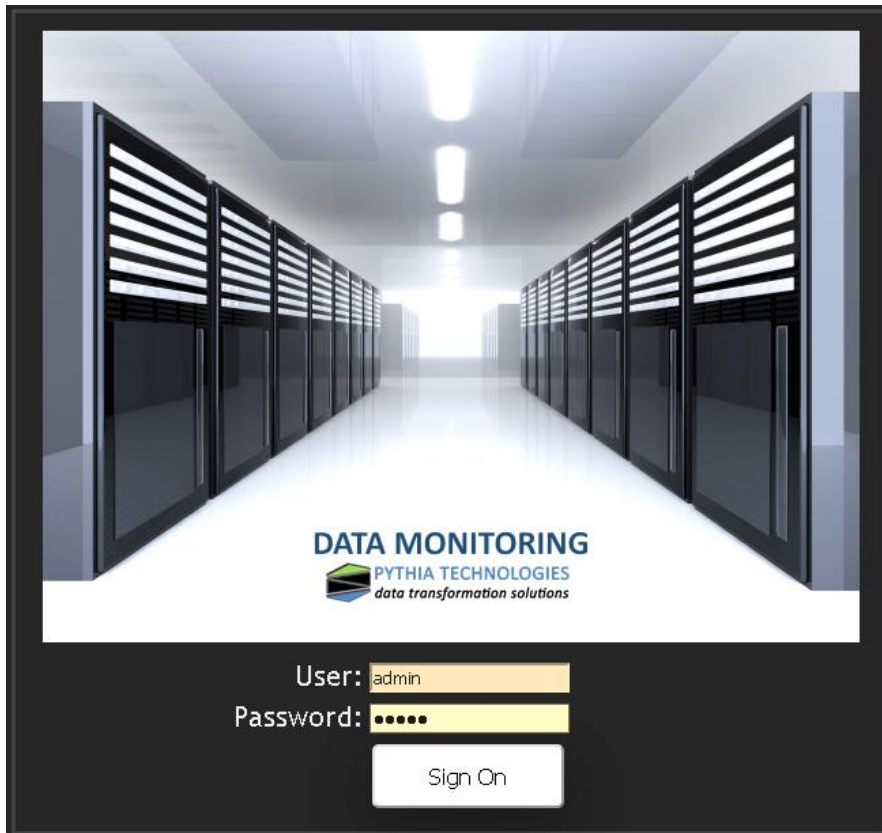

3. Navigation


Click on "Settings" in the tree.

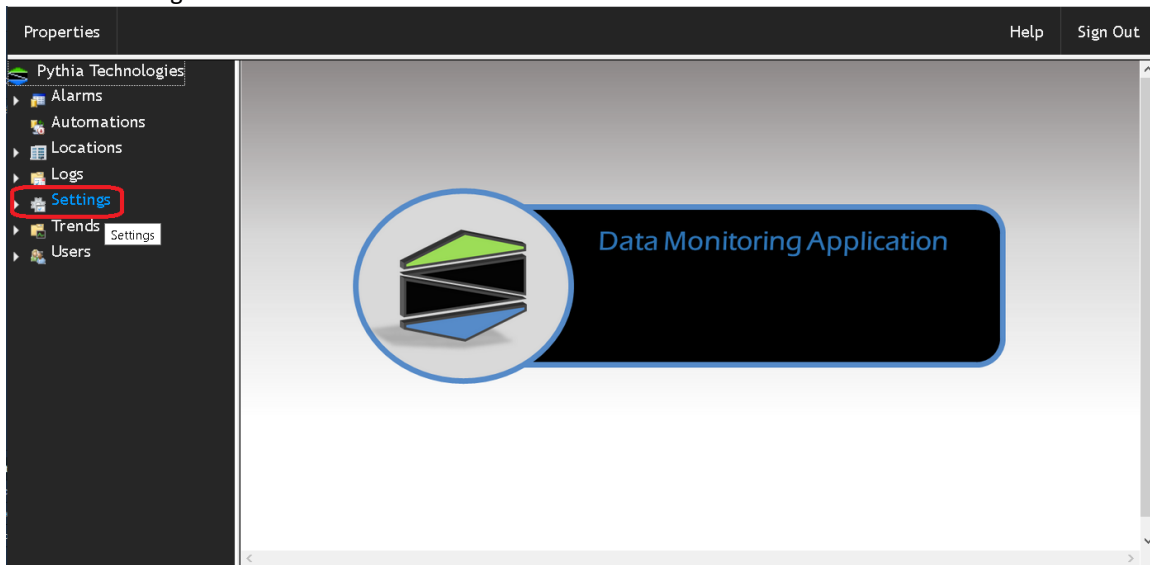


4. Change IP Address

Navigate to Network Interface “0”. Note: Do not change the IP address of network interface “1”.


\Settings\Network Interfaces\0

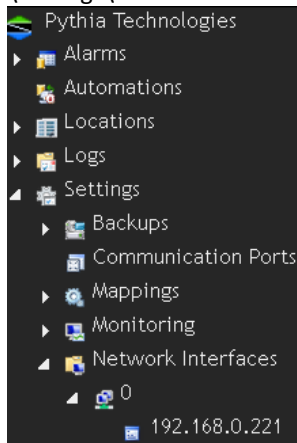


Click on Network Interface “0”, then click on the “Add New IP Address” toolbar option.

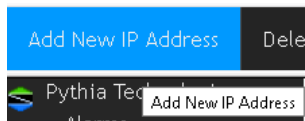

Enter new IP address, Subnet Mask and Gateway. Click the “Save” toolbar option.

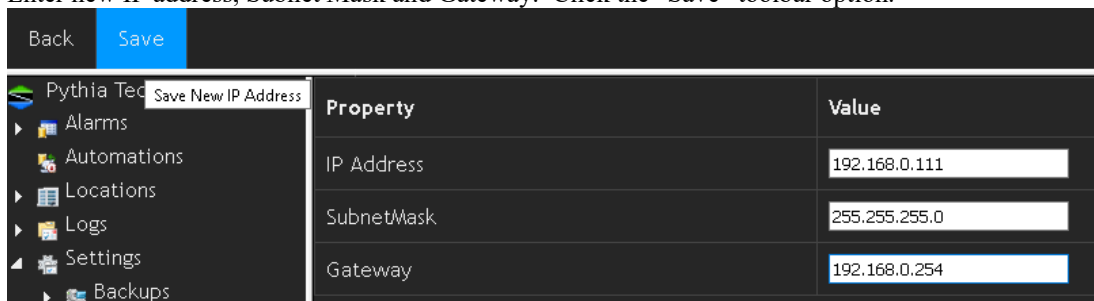


If you wish to remove the default IP address, click on the IP address “192.168.0.221” and click the “Delete IP Address” toolbar option.

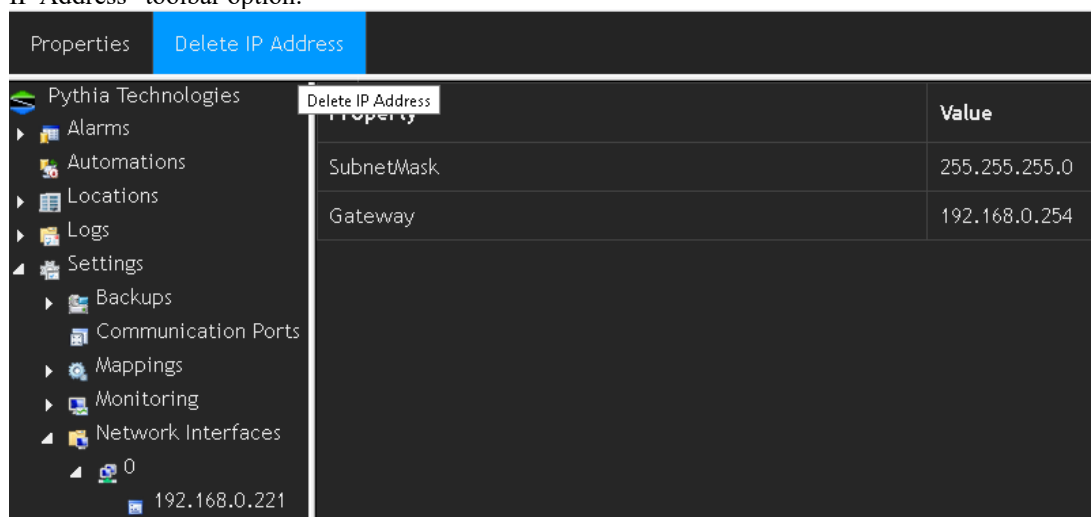


Note: You can add multiple IP addresses but only add one Gateway to one IP address.

The module must be restarted to change the IP address. Click on the “Network Interfaces” container and click the “Properties” toolbar option.

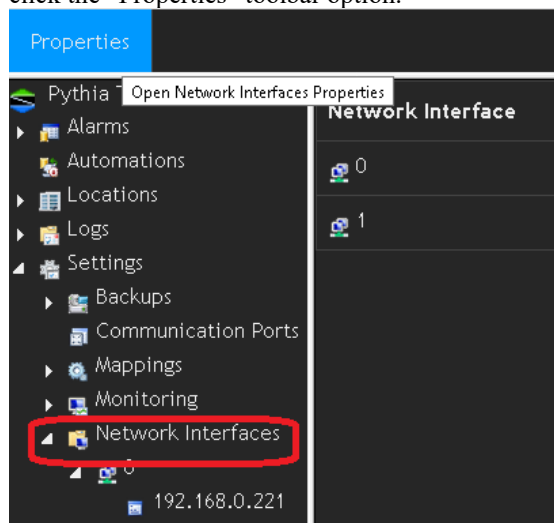

Check the “Apply” checkbox and click the “Save” toolbar option. The module will automatically restart.

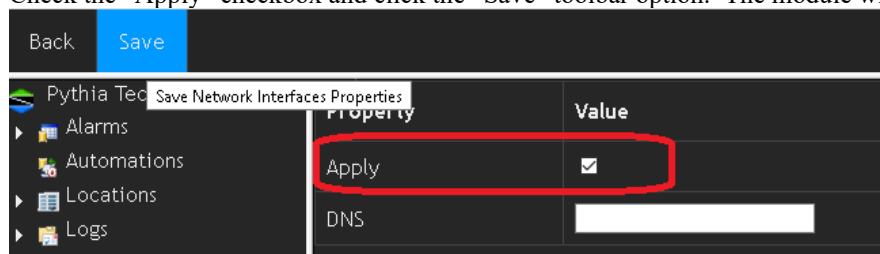



PYTHIA TECHNOLOGIES
data transformation solutions

175 S. Sandusky Street, Suite 321 Delaware OH 43015 Tel. 740.363.2272
Sales@pythiatech.net Support@pythiatech.net

© 2022 Pythia Technologies, Inc. All rights reserved. No part of this document may be transmitted or reproduced in any form without retention of Pythia Technologies Inc.