

# SHARP®

ELECTRONIC CASH REGISTER

MODEL

**XE-A137**

**XE-A147**

BASIC USER MANUAL



**CAUTION:**

- The cash register should be securely fitted to the supporting platform to avoid instability when the drawer is open.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- For a complete electrical disconnection pull out the AC adapter.

**WARNING:**

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

**SD card****ADDITIONAL INFORMATION:**

We would like to point out that the time for the SD card storage depends on the size of the already used memory on SD card. Measurements have shown that backing up data is approximately 6 minutes, unless there are already up to 3000 backups / directories on the SD card.

In order to obtain a realistic compromise between the required time and the to be stored data volume, storage of data is limited to a maximum of 5000 entries.

But also under this condition a period over 13 years can be stored on SD card even so, daily data storage is done.

Since SD cards have a specified lifetime we recommend to create regularly backups to ensure the availability of critical data in the event of a faulty SD card.

---

# INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XE-A137/XE-A147. Please read this manual carefully before operating your machine in order to gain full understanding of functions and features.

Please keep this manual for future reference. It will help you if you encounter any operational problems.

Further details can be freely downloaded from the URL:

- The United Kingdom and Republic of Ireland: [www.sharp-pos.co.uk](http://www.sharp-pos.co.uk)
- Netherlands and Belgium and Luxemburg: [www.sharp.nl](http://www.sharp.nl)
- Sweden: [www.sharp.se](http://www.sharp.se)

## CAUTION!

**Never install the batteries into the cash register before initializing it.** Before you start operating the cash register, you must first initialize it, then install three new alkaline batteries LR6 ("AA" size) on the register. Otherwise, distorted memory contents and malfunction of the cash register will occur. For this procedure, please refer to pages 6 to 7.

---

# IMPORTANT

- **Be very careful when removing and replacing the printer cover, as the cutter mounted on it is very sharp.**
- **Install the cash register in a location not subject to direct sunlight, unusual temperature changes, high humidity, splashing water or dust and sand.**  
Installation in such locations could cause damage to the cabinet, the electronic components and other precision components.
- **Never operate the register with wet hands.**  
The water could seep into the interior of the register and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner.**  
The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- **The register plugs into any standard wall outlet (official (nominal) voltage).**  
Other electrical devices on the same electrical circuit could cause the register to malfunction.
- **For protection against data loss, please install three alkaline batteries LR6 ("AA" size) after initializing the cash register. When handling the batteries, please observe the following:**  
Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the cash register.
  - **RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.**  
**DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**
  - **Be sure that the positive (+) and negative (–) poles of each battery are facing in the proper direction for installation.**
  - **Never mix batteries of different types.**
  - **Never mix old batteries and new ones.**
  - **Never leave dead batteries in the battery compartment.**
  - **Remove the batteries if you do not plan to use the cash register for long periods.**
  - **Should a battery leak, clean out the battery compartment immediately, taking care to avoid letting the battery fluid come into direct contact with your skin.**
  - **For battery disposal, follow the corresponding law in your country.**
- **For complete electrical disconnection, disconnect the AC adapter.**
- **Be sure to use the attached AC adapter. Otherwise, an electric shock or fire may be caused.**


---

# CONTENTS



<b>INTRODUCTION .....</b>	<b>1</b>
<b>IMPORTANT .....</b>	<b>1</b>
<b>CONTENTS .....</b>	<b>2</b>
<b>PARTS AND THEIR FUNCTIONS .....</b>	<b>3</b>
1 External View .....	3
2 Printer .....	3
3 Mode Switch and Mode key .....	4
4 Keyboard .....	4
5 Display .....	5
6 Drawer Lock Key .....	5
<b>PREPARING THE CASH REGISTER .....</b>	<b>6</b>
1 Initializing the Cash Register .....	6
2 Installing Batteries .....	7
3 Installing a Paper Roll .....	8
<b>HELP FUNCTION .....</b>	<b>9</b>
<b>BASIC FUNCTION PROGRAMMING .....</b>	<b>10</b>
1 Abbreviations and Terminology .....	10
2 Prior to Programming .....	10
3 Language Selection .....	12
4 Date and Time Programming .....	12
5 Tax Programming .....	13
6 Department Programming .....	14
7 PLU (Price Look-Up) and Subdepartment Programming .....	17
8 Text Programming .....	19
<b>BASIC SALES ENTRY (Example) .....</b>	<b>21</b>
1 Basic Sales Entry .....	21
2 PLU Sales Entry .....	22
<b>CORRECTION .....</b>	<b>23</b>
1 Cancellation of the Numeric Entry .....	23
2 Correction of the Last Entry (direct void) .....	23
3 Correction of the Next-to-last or Earlier Entry (indirect void) .....	24
4 Subtotal Void .....	24
5 Correction after Finalizing a Transaction (Void mode) .....	25
<b>FULL SALES REPORT (X or Z REPORT) .....</b>	<b>26</b>
<b>MAIN FUNCTIONAL OVERVIEW .....</b>	<b>28</b>
<b>OPERATOR MAINTENANCE .....</b>	<b>29</b>
1 In Case of Power Failure .....	29
2 In Case of Printer Error .....	29
3 Cautions in Handling the Printer and Recording Paper .....	29
4 Replacing the Batteries .....	30
5 Replacing the Paper Roll .....	31
6 Removing a Paper Jam .....	32
7 Cleaning the Printer (Printer Head / Sensor / Roller) .....	32
8 Removing the Drawer .....	33
9 Opening the Drawer by Hand .....	33
<b>BEFORE CALLING FOR SERVICE .....</b>	<b>34</b>
<b>SPECIFICATIONS .....</b>	<b>35</b>

# PARTS AND THEIR FUNCTIONS

## 1 External View

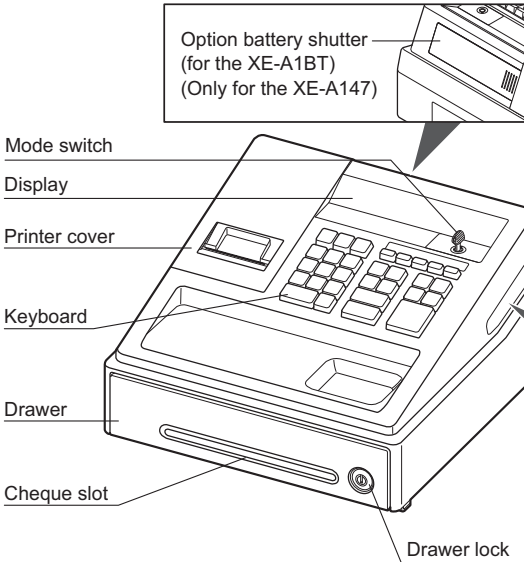


Plug the AC adapter connector into the AC adapter jack, then plug the AC adapter into the wall outlet.

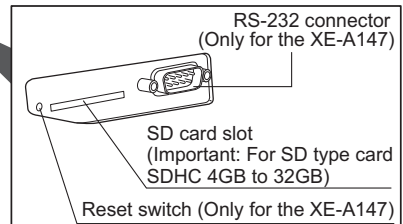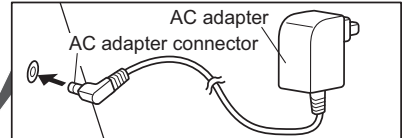

**DO NOT push the reset switch unless instructed to do.**  
Doing so may damage or delete the data.

## 2 Printer

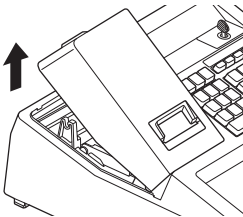


The printer is a receipt (one station) type thermal printer, and therefore it does not require any type of ink ribbon or cartridge. The average life of the printer is approximately 5 million lines.

When removing the printer cover, lift up its rear.

When installing the printer cover, hook it on the pawls on the cabinet and shut it.

**Caution:** The paper cutter is mounted on the printer cover. Be careful not to cut yourself.

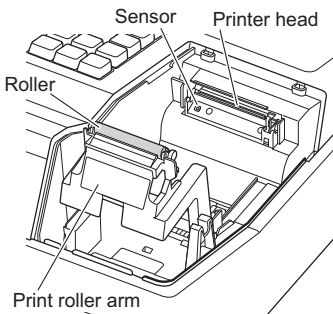


### NOTE

Do not attempt to remove the paper with the print roller arm in the hold position. This may result in damage to the printer and printer head.

### 3 Mode Switch and Mode key


Insert the mode key (the same key as drawer lock key) into the mode switch and move the key to get an appropriate mode.

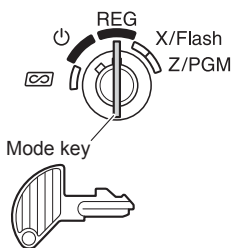

- Power:** Turns the display off. No operations are possible.
- REG:** Permits transaction entry.
- Correction:** Permits correction after finalizing a transaction.
- X/Flash:** Permits printing of sales reports and displaying the flash reports.
- Z/PGM:** Permits printing and resetting of sales reports and programming.

### 4 Keyboard

#### Keyboard layout

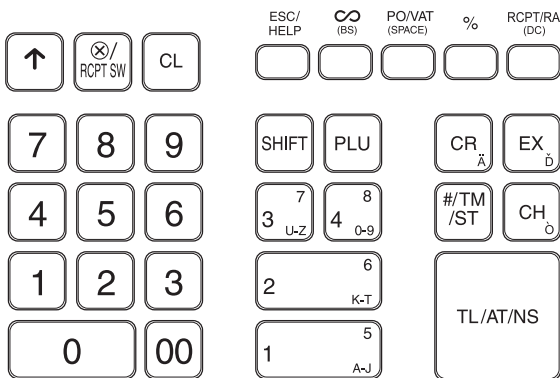


#### Key names

	Paper feed key		PLU/Subdepartment key		Total/Amount tender/No sale key
	Multiplication/receipt switch key		Department keys		Void key
	Clear key		Credit key		Escape/Help key
	Numeric keys		Foreign currency exchange key		Percent key
	Shift key		Non-add code/Time display/Subtotal key		Paid-out/Value added tax key
			Cheque key		Receipt print/Received-on-account key

## 5 Display

### ■ Operator display

Your cash register is equipped with a front LED (Light-Emitting Diode) display that affords easy visibility of 9 digits for the operator during transaction.

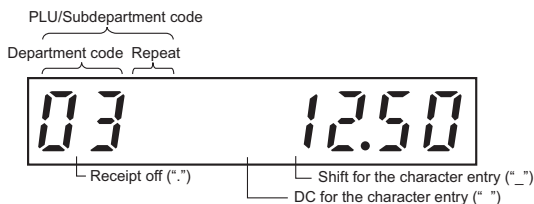

**Amount:** Appears in the far-right eight (max.) positions. When the amount is negative, the minus symbol “-” appears before the amount.

**Number of repeats for repetitive registrations:**

The number of repeats is displayed, starting at “2” and incremental with each repeat. When you have registered ten times, the display will show “0”. (2 → 3 ..... 9 → 0 → 1 → 2 ... )

**Receipt function status:**

The indicator “.” appears in the receipt off position when the receipt function is in the OFF status.

**Time:** Appears in the first to fifth positions (using 24-hour format) in the REG or mode. Press the key to display the time.

### ■ Machine state symbols

: Appears during programming.

: Appears with an error code when an error is detected. For the details of error codes, please refer to “Error code table”.

: Appears when the subtotal is displayed or when the amount tendered is smaller than the sales amount.

: Appears when the key is pressed to calculate a subtotal in foreign currency.

: Appears when a transaction is finalized by pressing the , or key.

: Appears when the change due amount is displayed.

: Appears in the far-left three positions at the timing of key entry when the electronic journal (EJ) memory is full. (Depending on programming.)

: Appears when the voltage of the installed batteries is under the required level. You must replace with new ones within two days. Refer to page 30 for details.

: Appears when the batteries are not installed, or the installed batteries are dead. You must replace with new ones immediately. Refer to page 30 for details.

- May appear right below the seventh and eighth places at the timing of finalization of a transaction when the electronic journal (EJ) memory is nearly full.

: Appears when programmed date (and time) for EURO modification operation has come.

: Appears when the paper is not set or out.

## 6 Drawer Lock Key

This key (the same key as mode key) locks and unlocks the drawer. To lock it, turn 90 degrees counterclockwise. To unlock it, turn 90 degrees clockwise.



# PREPARING THE CASH REGISTER

Unpack the cash register and make sure all accessories are included. For details of accessories, please refer to "SPECIFICATIONS" section.

For installing the cash register, find a stable surface near an AC outlet where the cash register will not subject to water sources or direct sunlight.

For preparing the cash register, please follow the three steps shown below; "1 Initializing the Cash Register" on this page, "2 Installing Batteries" on page 7, and "3 Installing a Paper Roll" on page 8.

## 1 Initializing the Cash Register

In order to operate the cash register properly, you must initialize it before operating for the first time. Follow this procedure.

1. Insert the mode/drawer lock key into the mode switch and turn it to the REG position.

2. Insert the AC adapter into the AC outlet.

**IMPORTANT: This operation must be performed without batteries installed.**



3. The cash register has now been initialized. The register display will show "0.00" with "L".



### NOTE


*If this does not happen when inserting the AC adapter, then the initialization has not been done successful. (This will occur when the voltage is high because you operated the cash register before starting initialization.) Wait at least one minute after pulling out the AC adapter and reinsert the AC adapter into the AC outlet only after this waiting time has passed.*




## 2 Installing Batteries

Three new alkaline batteries LR6 ("AA"size) must be installed in the cash register to prevent the data and user-programmed settings from being erased from the memory, when the AC adapter plug is accidentally disconnected or in case of power failure. Once installed, the batteries will last approximately one year before needing replacement. At this time, the "⌚" symbol will appear on the display to indicate the batteries are low and must be replaced within two days. **If the no battery symbol "⌚" appears, you must install the batteries at once. Install three new alkaline batteries LR6 ("AA"size) according to the procedure shown below with the AC adapter plug connected and set the mode switch to the REG position:**

1. Push the printer cover forward and detach it.  
**Be careful with the paper cutter, so as not to cut yourself.**
2. Open the battery compartment cover next to the paper roll cradle.

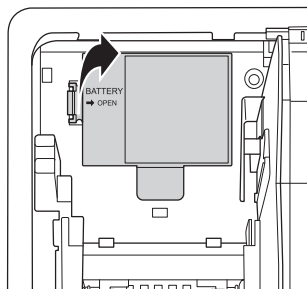

3. Install three new alkaline batteries LR6 ("AA"size) as per the diagram. When the batteries are properly installed "⌚" on the display will disappear.
4. Close the battery compartment cover.

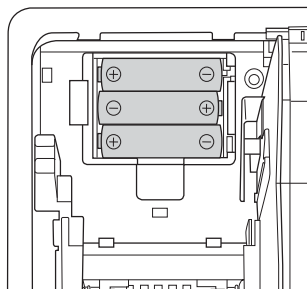

### NOTE

- Be sure to observe precautions shown on page 1 when handling batteries.
- If you press a key by mistake, an error symbol "pppppppppp" may be displayed. Press the **CL** key to clear the symbol after installing paper rolls.


**Caution:** "⌚" or "⌚" can be displayed only when the cash register is being turned on. Please be advised that when the cash register is being turned off for a long time, the data in memory might be cleared without the warning symbols: "⌚" or "⌚".

### 3 Installing a Paper Roll

The register can print receipts. For the printer, you must install the paper roll provided with the register.

**NOTE** Install the paper roll in the printer. Be careful then to set the roll and cut the paper end correctly.


#### (How to set the paper roll)

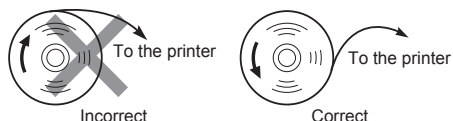

#### (How to cut the paper end)




1. Remove the printer cover.
2. Lift up the print roller arm.

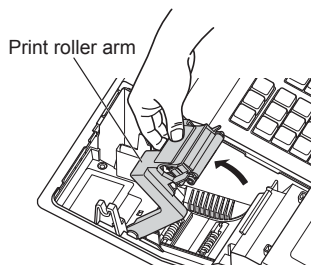


3. Set the paper correctly in the paper roll cradle as per the diagram.

**NOTE** Before placing a new paper roll in the paper roll cradle, cut off the pasted (taped) part of the paper and confirm that the cut end of the paper is straight.

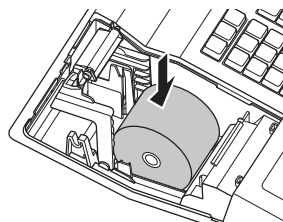


4. Feed the end of the paper along with the paper positioning guides as per the diagram.
5. While holding down the paper, slowly close the print roller arm, and push down the arm until you hear a click locking the arm.


**NOTE** If the print roller arm is not securely locked, printing is not done right. If this problem occurs, open the arm, and close the arm as instructed above.

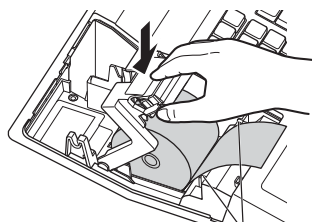

Paper positioning guides

6. Cut off the excess paper and replace the printer cover.
7. Press the  key to make sure the paper end comes out of the printer cover and clean paper appears.

**NOTE** If the paper end does not come out, open the printer cover, and pass the paper end between the paper cutter and the paper guide of the printer cover, and replace the printer cover.

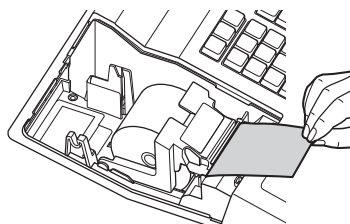

# HELP FUNCTION

The help function allows you to print guidance messages for basic programming procedures of the cash register. This function is available in any mode switch position other than “**ϕ**”. For more details on each programming, refer to “BASIC FUNCTION PROGRAMMING” on pages 10 to 20.

## ■ Printing the help menu

Press the **[ESC/HELP]** key to print the help menu. This menu provides a list of the programming procedures for which you can print the guidance messages.

Key operation	Print
<b>[ESC/HELP]</b>	<div>HELP MENU  1 LANGUAGE SELECTION 2 HOW TO SET THE PAPER 3 DATE SETTING 4 TIME SETTING 5 VAT RATE SETTING 6 VAT TEXT SETTING 7 VAT ASSIGNMENT TO DEPT. 8 DEPARTMENT TEXT SETTING 9 MINUS DEPARTMENT SETTING 10 PLU-DEPT. ASSIGNMENT/PRICE 11 PLU TEXT SETTING 12 LOGO MESSAGE SETTING 13 TEXT INPUT METHOD 14 DAILY Z REPORT PRINT 15 HOW TO SET RCPT SW OFF/ON 16 HOW TO OPERATE SD CARD  TO PRINT ABOVE EACH HELP CONTENTS, EX) 1-[ESC/HELP]. MODE POSITION REG MODE.</div>

## ■ Printing guidance messages

By reference to the help menu above, press the corresponding numeric key and then the **[ESC/HELP]** key to print the guidance message for each programming procedure.

Key operation	Print
4 <b>[ESC/HELP]</b>	<div>4 TIME SETTING  MODE POSITION Z/PGM MODE. [HHMM]-[#/TM/ST] HH:00-23 MM:00-59 JOB#61-F: TIME FORMAT 24 HOUR = 1 (DEFAULT) 12 HOUR = 0 EX) PM4:30 (TIME FORMAT=24 HOUR) 1630-[#/TM/ST]</div>

Sample print of TIME SETTING

**NOTE**

The **[ESC/HELP]** key works as the error escape function during a transaction. Finalize the transaction to use the key as the help function.

# BASIC FUNCTION PROGRAMMING

Before starting sales entries, you must first program necessary items so the cash register suits your sales needs. In this manual, there are three sections, **BASIC FUNCTION PROGRAMMING (pages 10-20)** where **required items must be programmed**, "AUXILIARY FUNCTION PROGRAMMING" for using all available keyboard keys and "ADVANCED FUNCTION PROGRAMMING". Further details can be freely downloaded from the URL.

## 1 Abbreviations and Terminology

- Dept.: Department; a category for merchandise classifications. Every sales item should belong to a department.
- PLU: Price Look Up; a category for merchandise classifications. PLUs are used to call up preset prices by a code entry.
- VAT: Value Added Tax
- X report: Report to read sales data
- Z report: Report to read and reset sales data
- Receipt ON/OFF function: To print or not to print receipts in the REG mode.

## 2 Prior to Programming








### ■ Procedure for programming

1. Check to see whether a paper roll is present in the machine. If there is not enough paper on a roll, replace it with a new one (refer to "Replacing the Paper Roll" in "OPERATOR MAINTENANCE" chapter for the replacement).
2. Put the mode key in the mode switch and turn it to the Z/PGM position.
3. Program necessary items into the cash register.  
Every time you program an item, the cash register will print the setting. Please refer to print samples in each section.
4. If necessary, issue programming reports for your reference.

**NOTE**

- On the key operation example shown in the programming details, numbers such as "221012" indicates the parameter which must be entered using the corresponding numeric keys.
- Asterisks in the tables shown in the programming details indicate default settings.

### ■ Description of special keys

- |   |   |
|---|---|
|  ,  to  | Used for numerical number entry.        |
|   | Used for character code entry.          |
|   | Used for cancel entry.                  |
|   | Used for data decision entry.           |
|   | Used for programming termination entry. |


■ Guidance for text programming

The register allows you to program texts for department item names, PLU/subdepartment item names, logo messages, foreign and domestic currency symbols, and function texts.

There are two ways for programming text; using character keys on the keyboard or entering character codes with numeric keys on the keyboard.

**NOTE** Details can be freely downloaded from the URL.

Character entry sequence

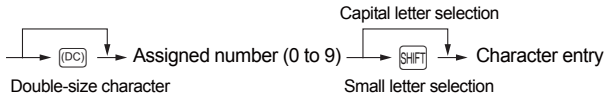

Assigned number and character table

	1 <sup>5</sup> A-J	SHIFT 1 <sup>5</sup> A-J	2 <sup>6</sup> K-T	SHIFT 2 <sup>6</sup> K-T	3 <sup>7</sup> U-Z	SHIFT 3 <sup>7</sup> U-Z	4 <sup>8</sup> 0-9	SHIFT 4 <sup>8</sup> 0-9	CR Ä	SHIFT CR Ä	EX ß	SHIFT EX ß	CH ö	SHIFT CH ö
0	A	a	K	k	U	u	0	0	Ä	ä	ß	ß	ö	ö
1	B	b	L	l	V	v	1	1	Ö	ö	È	è	Ó	ó
2	C	c	M	m	W	w	2	2	Ü	ü	É	é	Ô	ô
3	D	d	N	n	X	x	3	3	Â	â	Ê	ê	Õ	õ
4	E	e	O	o	Y	y	4	4	Á	á	Ë	ë	Š	š
5	F	f	P	p	Z	z	5	5	Â	â	Ì	ì	Ť	ť
6	G	g	Q	q	%	%	6	6	Ã	ã	Í	í	Ù	ù
7	H	h	R	r	+	+	7	7	À	à	Î	î	Ú	ú
8	I	i	S	s	-	-	8	8	Č	č	Ñ	ñ	Û	û
9	J	j	T	t	!	!	9	9	Ç	ç	Ň	ň	Ž	ž


- SHIFT Used for the small letter entry.
- SPACE Used for a space entry.
- (BS) Used to delete the last character or figure.
- (DC) Used for the double-size character entry.
- A-J, K-T, U-Z, 0-9, Ä, ß, ö Used for character entry.

[ Example ] For entry character “MnH”



### 3 Language Selection

#### Procedure

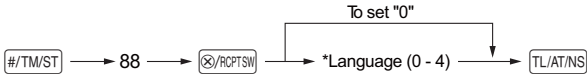

\*Language: 0: English    1: German    2: French    3: Spanish    4: Swedish  
By default, English is set.

#### Key operation example

#/TM/ST 88 &Rarr;/RCPTSW  
0 TL/AT/NS

#### Print

#88      \*PGM\*      0

**Caution:** When you change the language, the texts such as logo messages and function texts, which you programmed, will be reset to the default settings. The language selection must be made before programming logo messages and function texts.

### 4 Date and Time Programming

#### ■ Date

For setting the date, enter the date in 6 digits using the day-month-year (DD/MM/YY) format, then press the

#/TM/ST key.

#### Procedure

Date(DD/MM/YY) → #/TM/ST

#### Key operation example

221012  
(22 October, 2012)  
#/TM/ST

#### Print

\*PGM\*      22/10/12      Date

#### ■ Time

For setting the time, enter the time in 4 digits using the 24-hour format. For example, when the time is set to 2:30 AM, enter 230; and when it is set to 2:30 PM, enter 1430.

#### Procedure

Time(max. 4 digits in 24-hour format) → #/TM/ST

#### Key operation example

1430  
#/TM/ST

#### Print

\*PGM\*      14:30      Time

## 5 Tax Programming

If you program the VAT/tax, the cash register can calculate the sales tax. In the VAT system, the tax is included in the price you enter in the register, and the tax amount is calculated when tendered according to the VAT rate programmed. In the tax system, the tax is calculated when tendered according to the tax rate programmed, and added to the price. The cash register can provide totally 6 kinds of VAT/tax systems (automatic VAT1-4, automatic tax 1-4, manual VAT 1-4, manual tax 1-4, and automatic VAT1 and automatic tax 2-4 systems) and 4 kinds of rates. By default, the cash register is pre-programmed as automatic VAT1-4 system.


When you program tax rate(s) and taxable status for each department (by default, VAT1/tax1 is set to taxable.), tax will be automatically added to sales of items assigned to the department according to the programmed tax status for the department and the corresponding tax rate(s).

Further details can be freely downloaded from the URL.

### ■ Tax rate programming

The percent rate specified here is used for tax calculation on taxable subtotals.

#### Procedure

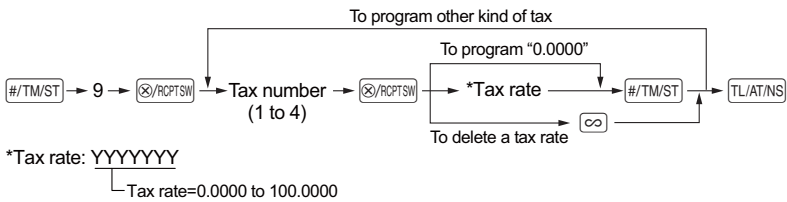

#### Key operation example

#/TM/ST 9 ⊗/RCPTSW  
2 ⊗/RCPTSW  
0070000  
#/TM/ST  
TL/AT/NS

#### Print

TAX2	*PGM*
	7.0000%
	0.00

6


Department Programming

Merchandise can be classified into a maximum of 8 departments. Items sold using the department keys can later be printed on a report shown as the quantities sold and sales amounts classified by department. The data is useful for making purchasing decisions and other store operations.

■

Department status

Procedure

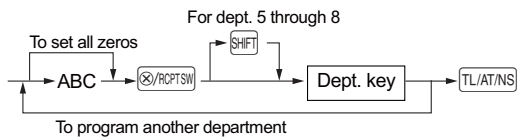

Item:	Selection:	Entry:
A	SICS / Normal	1
	Normal*	0
B	Sign	1
	Negative department	0
C	Positive department*	3
	Open and preset	2
	Preset only	1
	Open only*	0
	Inhibit department key	0

\* Default settings

SICS (Single Item Cash Sale)

- If an entry of a department programmed for SICS is made first, the sale will be finalized as a cash sale as soon as the department key is pressed. If the entry is made after entering a department not programmed for SICS, it does not finalize and result in a normal sale.

Key operation example

113 ⊗/RCPT SW  
2 TL/AT/NS

Print

D02

DEPT-02

\*PGM\*

T1

-0.00

183

Type of unit price entry


SICS / Normal

Sign



■ Preset unit price

Procedure

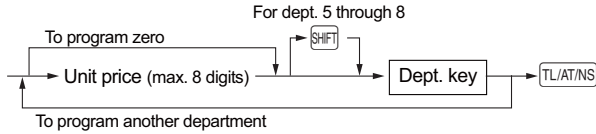

Key operation example

1000


Print

<b>*PGM*</b>	
<b>D01</b>	<b>10.00</b> Unit price
<b>DEPT. 01</b>	<b>T1 083</b>

**NOTE** If a department is not programmed to allow the entry of preset unit prices in functional programming, the department is automatically changed to allow the entry of preset unit prices by this programming entry.

■ VAT/tax status

Procedure

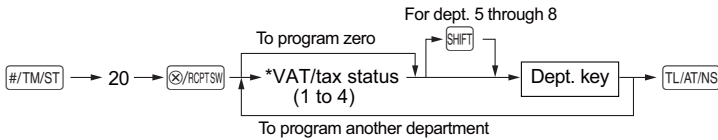

*VAT/tax status	Selection:	Entry:
	VAT/tax 1*	1 e.g. for this number a VAT/tax rate of 7% is assigned
	VAT/tax 2	2
	VAT/tax 3	3
	VAT/tax 4	4
	Non VAT/tax	0

Key operation example

#/TM/ST 20


Print

<b>*PGM*</b>	
<b>D01</b>	<b>10.00</b>
<b>DEPT. 01</b>	<b>T 2 083</b>


VAT/tax status (VAT/tax 2)

■ Department text (item label)

Procedure

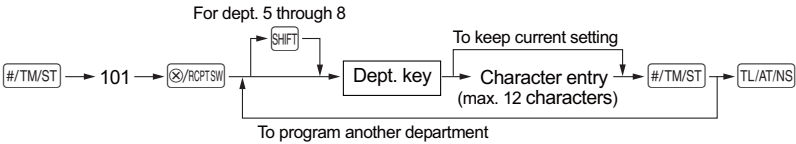


Key operation example

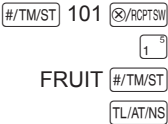

(Programming FRUIT for dept.1)

Print

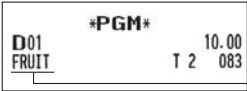

Text  
programmed for  
dept. 1

For details of the text entry ("FRUIT"), please refer to the "Guidance for text programming" on page 11.


(F:5 <sup>5</sup><sub>1 A-J</sub>, R:7 <sup>6</sup><sub>2 K-T</sub>, U:0 <sup>7</sup><sub>3 U-Z</sub>, I:8 <sup>5</sup><sub>1 A-J</sub>, T:9 <sup>6</sup><sub>2 K-T</sub>)

## 7 PLU (Price Look-Up) and Subdepartment Programming

The PLU function allows speedy key entries whereby a price is automatically called up when a code is entered. The subdepartment is a kind of “open PLU”, which requires you to enter a price after the PLU code is entered. PLU/subdepartment setting for 1 through 200 codes are available.

### Unit price and associated department assignment

#### Procedure

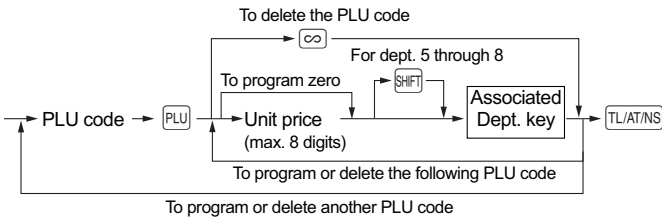

#### Key operation example

1 [PLU]  
125 [1]  
[TL/AT/NS]

#### Print


*PGM*	
P001 (01)	1
PLU.001	1.25

Unit price  
Associated dept.

PLU code

### PLU/subdepartment selection

#### Procedure

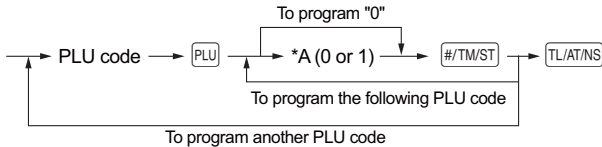

\*A: 0 for subdepartment or 1 for PLU

#### Key operation example

1 [PLU]  
0 [# /TM/ST]  
[TL/AT/NS]

#### Print


*PGM*	
P001 (01)	0
PLU.001	1.25

PLU/subdept.

**NOTE** When you program the last PLU code, the programming sequence will be complete with a press of the [# /TM/ST] key.

■ PLU text (item label)

Procedure

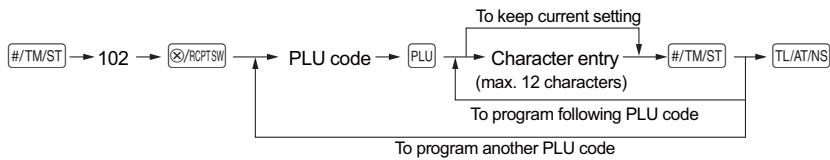

Key operation example

**#/TM/ST** **102** **⊗/RCPTSW**  
**1** **PLU**  
**MELON** **#/TM/ST**  
**TL/AT/NS**

(Programming MELON to PLU1)

Print

*PGM*		
P001	(01)	0
MELON		1.25

Text programmed for PLU code 1

For details of the text entry ("MELON"), please refer to the "Guidance for text programming" on page 11.  
(M:2 <sup>6</sup>/<sub>2 K-T</sub>, E:4 <sup>5</sup>/<sub>1 A-J</sub>, L:1 <sup>6</sup>/<sub>2 K-T</sub>, O:4 <sup>6</sup>/<sub>2 K-T</sub>, N:3 <sup>6</sup>/<sub>2 K-T</sub>)


## 8 Text Programming

Please refer to “Guidance for text programming” section as for how to entering characters.

### ■ Logo messages (6 lines and 30 characters for each line)

The register can print programmed messages on every receipt. On the standard model, a header 3-line and footer 3-line logo message is printed on the receipt. If you want to print in other logo message format, please change the format. Further details can be freely downloaded from the URL.

#### Procedure

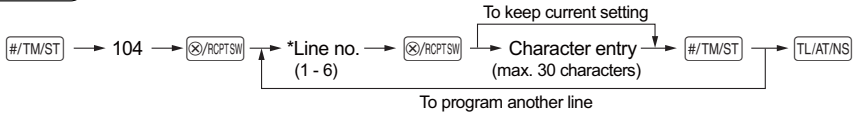

\*Line no.; “Header 3-line message” type : 1 to 3

“Header 6-line message” type : 1 to 6

“Header 3-line and footer 3-line message” type: 1 to 6 (1 to 3 as header, 4 to 6 as footer)

#### Logo message print format (3 types)

Header 1st line
Header 2nd line
Header 3rd line

Header 3-line message

Header 1st line
Header 2nd line
Header 3rd line
Header 4th line
Header 5th line
Header 6th line

Header 6-line message

Header 1st line
Header 2nd line
Header 3rd line
Footer 4th line
Footer 5th line
Footer 6th line

Header 3-line message and footer 3-line message (Default setting)

#### NOTE

A header 3-line and footer 3-line logo message is preprogrammed when shipped. Please start entering from the first line when you first program a logo message.

To print the logo message "THANK YOU" using double sized characters and centering on the third line.

Key operation example

#/TM/ST

104

⊗/RCPT SW

3

⊗/RCPT SW

(DC)

(SPACE)

(DC)

(SPACE)

(DC)

(SPACE)

(DC)

T

(DC)

H

(DC)

A

(DC)

N

(DC)

K

(DC)

(SPACE)

(DC)

Y

(DC)

O

(DC)

U

#/TM/ST

TL/AT/NS

Print

\*PGM\*

THANK YOU

For details of the text entry, please refer to the "Guidance for text programming" on page 11.

(T:9 <sup>6</sup><sub>2 K-1</sub>, H:7 <sup>5</sup><sub>1 A~J</sub>, A:0 <sup>5</sup><sub>1 A~J</sub>, N:3 <sup>6</sup><sub>2 K-1</sub>, K:0 <sup>6</sup><sub>2 K-1</sub>, Y:4 <sup>7</sup><sub>3 U-Z</sub>, O:4 <sup>6</sup><sub>2 K-1</sub>, U:0 <sup>7</sup><sub>3 U-Z</sub>)

20

# BASIC SALES ENTRY (Example)

## 1 Basic Sales Entry

Listed below is a basic sales entry example when selling items by cash. Details can be freely downloaded from the URL.

### Mode switch setting

- 1. Turn the mode switch to the REG position.

### Item entries

- 2. Enter the price for the appropriate department. For example if the price 15.00 EURO, enter "1500" by numeric keys and then press the appropriate department key.  
For department 5 to department 8, press the **[SHIFT]** key first before pressing the department key.
- 3. Repeat step 2 for all department items.

### Displaying subtotals

- 4. Press the **[#/TM/ST]** key to display the amount due.

### Finalizing the transaction

- 5. Enter the amount received from the customer. (You can omit this step if the amount tendered is the same as the subtotal.)
- 6. Press the **[TL/AT/NS]** key, and the change due is displayed and the drawer is opened.
- 7. Tear off the receipt and give it to the customer with his or her change.
- 8. Close the drawer.

### Key operation example

### Operator display

Item entries	1500 <b>[5]</b>	<b>01 15.00</b>
	2300 <b>[2]</b>	<b>02 23.00</b>
Displaying subtotal	<b>[#/TM/ST]</b>	<b>0 38.00</b>
Amount tendered	4000	<b>40.00</b>
Finalizing the transaction	<b>[TL/AT/NS]</b>	<b>€ 2.00</b>

(In this example, tax system is set to automatic VAT 1-4 and the tax1 rate is set to 7%.)

### Receipt print

<b>THANK YOU FOR YOUR PURCHASE</b>		Logo message (Header)
22/10/12 19:27 000000#000036		Date/Time Register number/ Consecutive number
1x 15.00	*15.00	Price
DEPT. 01		Items
1x 23.00	*23.00	
DEPT. 02		
SUBTOTAL	*38.00	
-----		
TAX1 ST	*38.00	
VAT 1	*2.49	
NET 1	*35.51	
-----		
ITEMS 20		Total quantity
***TOTAL	<b>*38.00</b>	Total amount
CASH	*40.00	Cash tendering/amount received
CHANGE	*2.00	Change
<b>WE ARE LOOKING FORWARD TO YOUR NEXT VISIT</b>		Logo message (Footer)

## 2 PLU Sales Entry

Enter a PLU code using numeric keys and press the **PLU** key.

Key operation example	Operator display	Receipt print
1 <b>PLU</b>	001 1.50	1x 1.50 *1.50 PLU.001
71 <b>PLU</b>	071 15.00	1x 15.00 *15.00 PLU.071
141 <b>PLU</b> 3620 <b>PLU</b>	141 36.20	1x 36.20 *36.20 PLU.141
<b>TL/AT/NS</b>	F 52.70	ITEMS 30 CASH *52.70



# CORRECTION

## 1 Cancellation of the Numeric Entry

If you make an incorrect numeric entry, you can clear the entry by pressing the **[CL]** key only before pressing a department key, PLU/subdepartment key or the **[%]** key.

## 2 Correction of the Last Entry (direct void)

If you make an incorrect entry relating to a department, PLU/subdepartment or percentage (**[%]**), you can void this entry by pressing the **[∞]** key immediately after the incorrect entry.

Key operation example	Operator display	Receipt print
1250 <b>[SHIFT]</b> <b>[2]</b> <b>[∞]</b>	06 12.50 06 - 12.50	<div>1x 12.50 *12.50 DEPT. 06 DEPT. 06 V-12.50 1x 1.50 *1.50 PLU. 002 PLU. 002 V-1.50 1x 6.00 *6.00 DEPT. 08 % -15.00% -0.90 % -15.00% V*0.90 1x 3.28 *3.28 PLU. 001  ITEMS 20 CASH *9.28</div>
2 <b>[PLU]</b> <b>[∞]</b>	002 1.50 002 - 1.50	
600 <b>[SHIFT]</b> <b>[4]</b> <b>[%]</b> <b>[∞]</b>	08 6.00 -0.90 0.90	
1 <b>[PLU]</b> <b>[TL/AT/NS]</b>	001 3.28 F 9.28	

### 3 Correction of the Next-to-last or Earlier Entry (indirect void)

You can void any incorrect department entry, PLU/subdepartment entry or item refund entry made during a transaction if you find it before finalizing the transaction (e.g. pressing the **TL/AT/NS** key). This function is applicable to department, PLU/subdepartment and refund entries only.

Press the **⊞** key just before you press a department key or **PLU** key.

Key operation example	Operator display	Receipt print
1310 <b>SHIFT</b> <b>2</b> <sup>0</sup>	06 13.10	1x 13.10 *13.10
1755 <b>SHIFT</b> <b>3</b> <sup>7</sup>	07 17.55	DEPT. 06
10 <b>PLU</b>	010 7.15	1x 17.55 *17.55
12 <b>PLU</b>	012 3.60	DEPT. 07
825 <b>SHIFT</b> <b>3</b> <sup>7</sup>	07 8.25	1x 7.15 *7.15
Correction of a department entry → 1310 <b>⊞</b> <b>SHIFT</b> <b>2</b> <sup>0</sup>	06 -13.10	PLU. 010
Correction of a PLU entry → 12 <b>⊞</b> <b>PLU</b>	012 -3.60	1x 3.60 *3.60
	F 32.95	PLU. 012
		1x 8.25 *8.25
		DEPT. 07
		-1x 13.10 V-13.10
		DEPT. 06
		-1x 3.60 V-3.60
		PLU. 012
		ITEMS 30
		CASH *32.95


### 4 Subtotal Void


You can void an entire transaction. Once subtotal void is executed, the transaction is aborted and the register issues a receipt.


Key operation example	Operator display	Receipt print
1310 <b>2</b> <sup>0</sup>	02 13.10	1x 13.10 *13.10
<b>2</b> <sup>0</sup>	2 13.10	DEPT. 02
1755 <b>SHIFT</b> <b>2</b> <sup>0</sup>	06 17.55	1x 13.10 *13.10
10 <b>PLU</b>	010 7.15	DEPT. 02
35 <b>PLU</b>	035 10.00	1x 17.55 *17.55
Subtotal void { <b>#/TM/ST</b>	0 60.90	DEPT. 06
{ <b>⊞</b>	0.00	1x 7.15 *7.15
{ <b>#/TM/ST</b>	0.00	PLU. 010
		1x 10.00 *10.00
		PLU. 035
		SUBTOTAL *60.90
		SBTL VOID -60.90
		***TOTAL *0.00

## 5 Correction after Finalizing a Transaction (Void mode)

When you need to void incorrect entries that are found after finalizing a transaction or cannot be corrected by direct, indirect void or subtotal void, the following steps should be taken:

1. Turn the mode switch to the  position using the mode key, to enter into the void mode.
2. Repeat the entries that are recorded on an incorrect receipt. (All data on the incorrect receipt is removed from register memory; the voided amounts are added to the void mode transaction totalizer.)

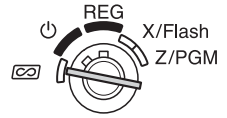

Incorrect receipt			Cancellation receipt			
1x 10.00	*10.00		* VOID MODE *			
DEPT. 04			1x 10.00	*10.00		
1x 1.50	*1.50		DEPT. 04			
DEPT. 03			1x 1.50	*1.50		
			DEPT. 03			
ITEMS 2Q					ITEMS 2Q	
CASH	*11.50				CASH	*11.50

# FULL SALES REPORT (X or Z REPORT)

- Use the reading function (X) when you need to take a reading of sales information entered since the last reset. You can take this reading any number of times. It does not affect the register's memory.
- Use the resetting function (Z) when you need to clear the register's memory. Resetting prints all sales information and clears the entire memory except for the GT1 through GT3, reset count, and consecutive number.

X1 and Z1 reports: Daily sales reports

X2 and Z2 reports: Periodic (monthly) consolidation reports

When you take an X1 or X2 report, turn the mode switch to the X/Flash position, and use the corresponding key sequence.

When you take an Z1 or Z2 report, turn the mode switch to the Z/PGM position, and use the corresponding key sequence.

## ■ Daily full sales report (X1 or Z1 report)

Put the mode key in the mode switch and turn it to the X/Flash or the Z/PGM position.

### Key operation

TL/AT/NS (For Z1 report: in the Z/PGM position)

### Sample report

*Z1*		Mode title*1
*2		
	Z1 0001	Reset counter
GT1	*00000000345.08	Net grand total (GT2-GT3)
GT2	*00000000399.04	Grand total of plus registration
GT3	-00000000053.96	Grand total of minus registration
DEPT.		
D01	42 Q	Dept. code
DEPT. 01	*182.42	
D02	15 Q	Sales q'ty
DEPT. 02	*50.00	Sales amount
D03	10 Q	
DEPT. 03	*19.34	
D04	7 Q	
DEPT. 04	*21.83	
D05	4 Q	
DEPT. 06		
D08	*20.88	
DEPT. 08	11 Q	
*DEPT TL	*68.53	} "+" dept. counter and total
	*369.08	
D07		
DEPT. 07	7 Q	
DEPT (-)	-21.77	} "-" dept. counter and total
	-21.77	
TRANSACTION		
%	2 Q	} Subtotal percent counter and total
NET 1	-2.23	
	*345.08	Net sales total

TAX1 ST	*254.70	Taxable 1 total
VAT 1	*35.13	VAT 1 total
TAX2 ST	*50.00	
VAT 2	*3.27	
TAX3 ST	*18.55	
VAT 3	*1.37	
TAX4 ST	*21.83	
VAT 4	*2.16	
TTL TAX	*41.93	Tax total
NET	*303.15	Net total without tax
%		
	3 Q	} Item percent counter and total
	-0.45	
VOID	4 Q	} Item void counter and total
	*19.01	
VOID MODE	1 Q	} Void-mode transaction counter and total
	*10.50	
SRTL VOID	1 Q	} Subtotal void counter and total
	*8.95	
NO SALE		
	2 Q	No-sales counter
GUEST	11 Q	Customer counter
PAID TL		
	*345.08	Paid total
AVE.	*31.37	Paid total average per customer
SCH (+)	*200.00	Starting cash memory (+)
SCH (-)	-100.00	Starting cash memory (-)
SCH TTL	*100.00	Starting cash memory total
***RA	1 Q	} Received on account counter and total
	*100.00	
***PO	1 Q	} Paid out counter and total
	*50.00	

(To be continued on the next page)

\*1: When you take X1 report, "X1" is printed.

\*2: Printed in the Z1 report only.

CASH	5 0	Cash counter and total
	*263.44	
CHECK	2 0	Cheque sales counter
	*47.00	and total
CREDIT	2 0	Credit sale and tendering
	*15.40	counter and total
EXCH	2 0	Exchange counter and total
	22.00	
DOM. CUR	*23.39	Domestic currency
<hr/>		
***CID	*409.29	Cash in drawer
*CH ID	*47.00	Cheque in drawer
CA/CHK ID	*456.29	Cash + cheque in drawer
CHK/CG	*3.40	Change total for cheque tendering

## ■ Periodic consolidation (X2 or Z2 report)

Put the mode key in the mode switch and turn it to the X/Flash or the Z/PGM position.

### Key operation

**SHIFT** **TL/AT/NS** (For Z2 report: in the Z/PGM position)

### Sample report

*Z2*		Mode title*1
	Z1 0004	Reset counter of daily total
	Z2 0001	Reset counter of
GT1	*00000000804.22	periodic consolidation
GT2	*00000000859.84	Grand total
GT3	-00000000055.62	

↓

The subsequent printouts are the same in format as in the Z1 full sales report.

- \*1: When you take X2 report, "X2" is printed.
- \*2: Printed in the Z2 report only

---

# MAIN FUNCTIONAL OVERVIEW

The register has the following main functions. Details can be freely downloaded from the URL.

## Item Entries

- Single item entries
- Repeat entries
- Multiplication entries
- Single item cash sale (SICS) entries

## Special Entries for PLU

- PLU entries
- Subdepartment entries

## Display of Subtotals

- Subtotal

## Finalization of Transaction

- Cash or cheque tendering
- Mixed tendering (cheque + cash)
- Cash or cheque sale that does not need any tender entry
- Credit sale
- Mixed-tender sale

## Computation of VAT (Value Added Tax)/Tax

- VAT/tax system

## Auxiliary Entries

- Percent calculations (premium or discount)
- Printing of non-add code numbers

## Auxiliary Payment Treatment

- Currency exchange
- Received-on-account entries
- Paid-out entries
- No-sale (exchange)

## Correction

- Correction of the last entry (direct void)
- Correction of the next-to-last or earlier entries (indirect void)
- Subtotal void
- Correction after Finalizing a Transaction (Void mode)

## Special Printing Function

- After transaction receipt
- Copy receipt printing

## Other Functions

- SD card mode
- Electronic journal
- Starting cash memory (+)(-)
- Help function

## Reports

- General report
- PLU report
- Hourly report
- Electric Journal report
- Flash reports
- Euro change

# OPERATOR MAINTENANCE


## 1 In Case of Power Failure

When power is lost, the machine retains its memory contents and all information on sales entries.  
(Note: Three alkaline batteries must be installed.)

- When power failure is encountered in register idle state or during an entry, the machine returns to normal operation after power recovery.
- When power failure is encountered during a printing cycle, the register prints "===== " and then carries out the correct printing procedure after power recovery. (See the sample print.)



## 2 In Case of Printer Error

If the printer runs out of paper, the printer will stall, and "PPPPPPPPPP" will appear on the display. Key entries will not be accepted. Refer to section 5 in this chapter, install a new roll, then press the  key. The printer will print the power failure symbol and resume printing.

## 3 Cautions in Handling the Printer and Recording Paper

### ■ Cautions in handling the printer

- Avoid dusty and humid environments, direct sunlight and iron powder. (A permanent magnet and electromagnet are used in this machine.)
- Never pull the paper when the print roller arm is locked. First lift up the arm, and then remove the paper.
- Never touch the surface of the printer head and print roller.

### ■ Cautions in handling the recording paper (thermal paper)

- Use only the paper specified by SHARP.
- Do not unpack the thermal paper until you are ready to use it.
- Avoid heat. The paper will color at around 70°C.
- Avoid dusty and humid storage places. Avoid direct sunlight.
- The printed text on the paper can discolor under conditions of high humidity and temperature, exposure to the direct sunlight, contact with glue, thinner or a freshly copied blueprint, and heat caused by friction from scratching or other such means.
- Be very careful when handling the thermal paper. If you want to keep a permanent record, copy the printed text with a photocopier.

## 4 Replacing the Batteries

This cash register displays a low battery symbol (  $\text{L}$  ) when the batteries are low, and displays a no battery symbol (  $\text{L}$  ) when batteries are extremely low or batteries are not installed.


When the low battery symbol is displayed, replace the batteries with new ones as soon as possible. The existing batteries will be dead in about two days.

When the no battery symbol is displayed, replace the batteries immediately. Otherwise, if the AC adapter plug is disconnected or a power failure occurs, all the programmed settings will be reset to the default settings and any data stored in memory will be cleared.

**Caution:** While the no battery symbol is being displayed, do not turn the mode switch to any positions. Follow the battery replacement procedure below without changing the mode switch position. Never pull out the AC adapter from the AC outlet, all the programmed settings will be reset to the default settings and any data stored in memory will be cleared.

**NOTE** Be sure to observe precautions shown on page 1 when handling batteries.

### To replace the batteries:

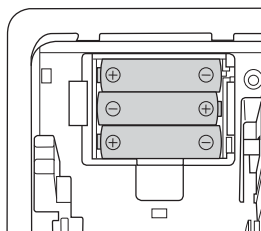

1. Make sure that the cash register is plugged in.
2. Remove the printer cover.
3. Open the battery compartment cover next to the paper roll cradle and remove the old batteries.
4. Install three new alkaline batteries LR6 ("AA" size) in the battery compartment. Be sure the positive and negative poles of each battery are facing in the proper direction. When they are installed correctly, the "  $\text{L}$  " or "  $\text{L}$  " symbol will disappear.
5. Close the battery compartment cover.
6. Replace the printer cover.



## 5 Replacing the Paper Roll

Be sure to use paper rolls specified by SHARP.

The use of any other paper rolls other than those specified could cause paper jamming, resulting in register malfunction.

### Paper specification

Paper width:  $57.5 \pm 0.5$  mm

Max. outside diameter: 80 mm

Quality: High quality (0.06 to 0.08 mm thickness)

- **Be sure to set the paper roll prior to using your machine, otherwise it may cause a malfunction.**

Install the paper roll in the printer. Be careful to set the roll correctly.


### (How to set the paper roll)



## ■ Removing the paper roll

When a red dye appears on the paper roll, it is time to replace it. Replace the paper roll with a new one. If you plan on not using the register for an extended period of time, remove the paper roll, and store it in an appropriate place.

**Caution:** The paper cutter is mounted on the printer cover. Be careful not to cut yourself.

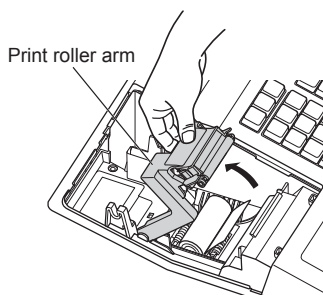

1. Remove the printer cover.
2. Lift up the print roller arm.
3. Remove the paper roll from the paper roll cradle.

**NOTE** Do not pull the paper through the printer.


## ■ Installing the paper roll

For information on how to install paper rolls, refer to "Installing a Paper Roll" on page 8.

**Caution:** The paper cutter is mounted on the printer cover. Be careful not to cut yourself.

## 6 Removing a Paper Jam

**Caution:** The paper cutter is mounted on the printer cover. Be careful not to cut yourself. Never touch the printer head immediately after printing, as the head may still be hot.

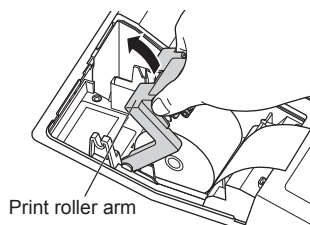


1. Remove the printer cover.
2. Lift up the print roller arm. (When a large roll paper is set, hold the both side of the print roller arm as per the diagram.)
3. Remove the paper jam. Check for and remove any shreds of paper that may remain in the printer.
4. Reset the paper roll correctly by following the steps in "Installing a Paper Roll" on page 8.

## 7 Cleaning the Printer (Printer Head / Sensor / Roller)

When the printed text is getting dark or faint, paper dust may be stuck to the printer head, sensor and/or roller. Clean them as follows:


### Caution:

- Never touch the printer head with a tool or anything hard as it may damage the head.
- The paper cutter is mounted on the printer cover. Be careful not to cut yourself.

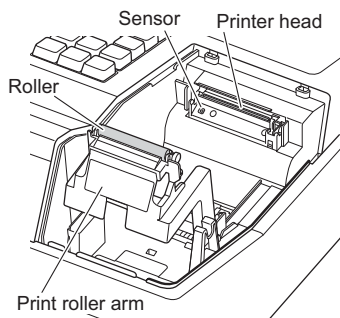


1. Turn the mode switch to the "⏻" position.
2. Remove the printer cover.
3. Lift up the print roller arm.
4. Remove the paper roll referring to the "Removing the paper roll" section.
5. Clean the printer head with a cotton swab or soft rag moistened with ethyl alcohol or isopropyl alcohol. Clean the roller and the sensor in the same manner.
6. Reset the paper roll correctly by following the steps in "Installing a Paper Roll" on page 8.

## 8 Removing the Drawer

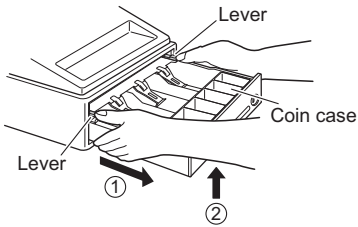

The drawer in the register is detachable. After closing your business for the day, remove the drawer. To detach the drawer, pull it forward fully, and while holding the lever down, lift the drawer slightly and remove. The 6-denomination coin case is detachable.

## 9 Opening the Drawer by Hand

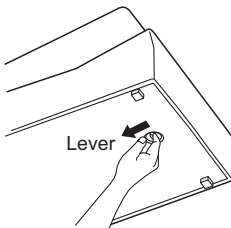


The drawer automatically opens. However, when a power failure occurs or the machine becomes out of order, slide the lever located on the bottom of the machine in the direction of the arrow. (See the diagram at the left.)

The drawer will not open if it is locked with the key.




# BEFORE CALLING FOR SERVICE

The malfunctions shown in the left-hand column below, labeled “Fault,” do not necessarily indicate functional faults of the machine. It is therefore advisable to refer to “Checking” shown in the right-hand column before calling for service.

Fault	Checking
(1) The display shows symbols that do not make sense.	<ul style="list-style-type: none"><li>• Has the machine been initialized properly as shown in “PREPARING THE CASH REGISTER”? (Note that initialization clears all the data and programmed settings stored in memory.)</li></ul>
(2) The display won't illuminate even when the mode switch is turned to any other position than “  ”.	<ul style="list-style-type: none"><li>• Is power supplied to the electrical outlet?</li><li>• Is the AC adapter plug out or loosely connected to the AC outlet?</li></ul>
(3) The display is illuminated, but the whole machine refuses registrations.	<ul style="list-style-type: none"><li>• Is the mode switch set properly at the “REG” position?</li></ul>
(4) No receipt is issued.	<ul style="list-style-type: none"><li>• Is the paper roll properly installed?</li><li>• Is there a paper jam?</li><li>• Is the receipt function in the “OFF” status?</li><li>• Is the print roller arm securely locked?</li></ul>
(5) Printing is unusual.	<ul style="list-style-type: none"><li>• Is the print roller arm securely locked? Open the print roller arm, and lock the arm by following the instruction of installation.</li><li>• Is the paper roll properly installed?</li><li>• Are the printer head/sensor/roller clean?</li></ul>
(6) Continuous printing stops.	<ul style="list-style-type: none"><li>• “—” will be displayed in order from left to right continuously. It occurs when the printer temperature is high. Printing will automatically restart after several seconds.</li></ul>

## ■ Error code table

When the following error codes are displayed, press the  key and take a proper action according to the table below.

Error code	Error status	Action
E01	Registration error	Make a correct key entry.
E02	Misoperation error	Make a correct key entry.
E11	Compulsory depression of the  key	Press the  key and continue the operation.
E12	Compulsory tendering	Make a tendering operation.
E33	Compulsory SCM (starting cash memory) entry	Make the SCM (starting cash memory) entry.
E34	Overflow limitation error	Make a registration within a limit of entry.
E35	The open price entry is inhibited.	Make a preset price entry.
E36	The preset price entry is inhibited.	Make an open price entry.
E37	The direct finalization is inhibited.	Make a tendering operation.
E67	Subtotal void is not allowed.	Finalize the transaction, and correct the wrong entries in the  mode.
E80	The battery trouble is occurred.	Change the battery.

# SPECIFICATIONS

Model:	XE-A137 XE-A147	
Dimensions:	335 (W) x 360 (D) x 190 (H) mm	
Weight:	Approx. 5 kg	
Power Source:	Official (nominal) voltage and frequency	
Power Consumption:	Stand-by: 1.9 W (The official voltage: 220 to 230V [50Hz/60Hz] and 230 to 240 V [50 Hz]) Operating: 8.1 W (The official voltage: 220 to 230 V [50Hz/60Hz] and 230 to 240 V [50 Hz])	
Working Temperature:	0 to 40 °C (32 to 104 °F)	
Humidity:	20 % to 90 %	
Electronics:	LSI (CPU) etc.	
Display:	7-segment display (9 positions)	
Printer:	Type:	One-station thermal printer
	Printing speed:	Approx. 7 lines/second
	Printing capacity:	30 digits
	Other functions:	
	- Logo message function	
	- Receipt (ON-OFF) function	
Logo:	Graphic logo printing:	
	Size:	130 (H) x 360 (W) pixel Area of black must be less than 35% of all area.
	Logo message printing:	
	Logo message for the receipt (max. 30 characters x 6 lines)	
Paper Roll:	Width: 57.5 ± 0.5 mm	
	Max. diameter: 80 mm	
	Quality: High quality (0.06 to 0.08 mm thickness)	
Cash Drawer:	3 slots for bills and 6 for coin denominations	
Accessories:	Basic user manual:	1 copy
	Paper roll:	1
	Mode key (same as drawer lock key):	2
	AC adapter:	1
	Fiscal caution sheet:	1 (for Germany and Norway)

\*Specifications and appearance are subject to change without notice for improvement.

## ■ Option

The following sharp option is available only for your XE-A147 register.

- Option battery    model XE-A1BT



**CAUTION:** (only for the XE-A147)

Shielded interface cables must be used with this equipment to maintain compliance with EMC regulations.

**XE-A137**

Noise level LpA: 56.4 dB(A-weighted)

Measured according to EN ISO 7779:2001

[Maximum value if the cash drawer springs open LpAI: 71.4 dB(A-weighted)]

**XE-A147**

Noise level LpA: 53.0 dB(A-weighted)

Measured according to EN ISO 7779:2001

[Maximum value if the cash drawer springs open LpAI: 70.1 dB(A-weighted)]

# **SHARP®**

**SHARP ELECTRONICS (Europe) Ltd.**

4 Furzeground Way, Stockley Park Uxbridge,  
UB11 1 EZ, United Kingdom

**SHARP CORPORATION**



Printed in Thailand  
16E TINSE2649BSZ1 ②