

LASQUETI

WOOD STOVES

INSTALLATION, OPERATION & MAINTENANCE MANUAL

Models Covered

**Forge
Kiln
Foundry**



Tested and listed to EN 16510-2-1:2022

For the safe installation, operation, and maintenance of LASQUETI Wood Stoves.

This manual contains important information regarding appliance installation, operating procedures, routine maintenance, safety precautions, and warranty coverage. Read this manual completely before installing or operating your appliance, and retain it for future reference.

TABLE OF CONTENTS

Introduction

Safety Information

1. Appliance Overview

2. Technical Specifications

3. Installation Requirements

4. Installation Procedure

5. Operating Instructions

6. Fuel Requirements

7. Maintenance and Cleaning

8. Troubleshooting

9. Replacement Parts and Service

10. Warranty

11. Installation Record

12. Manufacturer Information

13. Certification & Compliance

SECTION 1 – INTRODUCTION

Thank you for choosing a **LASQUETI Wood Stove**.

The **Forge**, **Kiln**, and **Foundry** models are premium, non-catalytic wood-burning appliances designed to provide efficient, reliable, and environmentally responsible heating for residential applications. Each model combines heavy-duty steel construction, advanced secondary combustion technology, and modern European design to deliver exceptional heating performance while maintaining low emissions.

The LASQUETI product line has been independently tested and certified in accordance with **EN 16510-2-1:2022** for residential solid fuel-burning room heaters. Installation and operation must comply with the requirements contained in this manual as well as all applicable national and local building regulations.

This manual applies to the following models:

- Forge

- Kiln
- Foundry

Although dimensions and heating capacities vary between models, the installation methods, operating procedures, maintenance requirements, and safety information contained in this manual generally apply to all three appliances unless otherwise specified.

Purpose of this Manual

This manual has been prepared to assist installers, homeowners, and service personnel with the safe installation, operation, inspection, and maintenance of LASQUETI Wood Stoves.

Proper installation and routine maintenance are essential to ensure:

- Safe operation
- Maximum heating performance
- Long appliance service life
- Compliance with applicable building and fire regulations
- Continued certification performance

Failure to follow the instructions contained in this manual may result in reduced appliance performance, property damage, serious injury, or death.

Before Installing

Before beginning installation:

- Read this manual completely.
- Inspect the appliance for shipping damage.
- Verify that all components are present.
- Confirm that the installation location meets the required clearance and hearth protection requirements.
- Ensure the chimney system complies with the applicable installation requirements.
- Do not modify any component of the appliance.

Installation should only be carried out by a qualified installer familiar with solid fuel heating appliances and all applicable local regulations.

Important Information

Retain this manual for future reference.

This manual forms part of the appliance and shall remain with the stove throughout its service life. If ownership of the appliance changes, this manual must be transferred to the new owner.

For replacement parts, technical support, warranty information, and the latest product documentation, visit www.carbonfired.com.



SECTION 2 – SAFETY INFORMATION

Safe installation and operation of your LASQUETI Wood Stove depend upon following the instructions contained in this manual. Failure to comply with these instructions may result in fire, property damage, personal injury, or death.

Read this manual completely before installing or operating the appliance. Retain this manual for future reference.

2.1 General Safety

WARNING

Failure to follow the installation instructions may create a fire hazard.

- Install the appliance only in accordance with this manual and all applicable national and local building regulations.
- Do not modify the appliance or any of its components.
- Use only approved replacement parts supplied or recommended by LASQUETI.
- Operate the appliance only with the door fully closed and latched, except during refueling.
- Never leave the appliance unattended with the loading door open.

2.2 Hot Surfaces

WARNING

The appliance becomes extremely hot during operation.

The following components may cause burns:

- Loading door
- Door handle
- Glass
- Top plate
- Flue collar
- Flue pipe
- Air control
- Surrounding metal surfaces

Always use the supplied operating tool or a suitable heat-resistant glove when operating the appliance.

Keep children, pets, and combustible materials a safe distance from the stove while it is operating and until it has completely cooled.

2.3 Fire Safety

WARNING

To reduce the risk of fire:

- Burn only clean, dry, seasoned natural cordwood.
- Do not burn treated lumber, painted wood, plywood, particle board, driftwood, garbage, plastics, cardboard, coal, charcoal, or household waste.
- Never use gasoline, kerosene, lighter fluid, diesel fuel, or any flammable liquid to ignite or rekindle a fire.
- Do not overfire the appliance.

Overfiring may permanently damage the appliance and void the warranty.

2.4 Combustible Materials

Maintain the minimum certified clearances from combustible materials as specified in this manual.

Do not place the following near the appliance:

- Firewood
- Furniture
- Curtains
- Clothing
- Paper products
- Cleaning supplies
- Aerosol cans
- Fuel containers

Keep combustible materials outside the required clearance zone at all times.

2.5 Fuel Requirements

Only burn properly seasoned natural cordwood having a moisture content below 20%.

Wet or unseasoned wood may result in:

- Poor combustion
- Excessive smoke
- Creosote formation
- Reduced heating efficiency
- Increased chimney fire risk

For detailed fuel recommendations, refer to **Section 9 – Fuel Requirements**.

2.6 Chimney Safety

A properly installed and maintained chimney system is essential for safe operation.

Before each heating season:

- Inspect the chimney.
- Inspect the connector pipe.
- Check all joints for leakage or damage.
- Remove accumulated soot and creosote as required.

If a chimney fire occurs:

1. Fully close the air control.
2. Keep the loading door closed.
3. Evacuate occupants if necessary.
4. Contact the fire department immediately.
5. Do not operate the appliance again until the complete chimney system has been inspected and approved for continued use.

2.7 Ash Disposal

Ashes may remain hot for several days after the fire has gone out.

Remove ashes only into a metal container fitted with a tight-fitting metal lid.

Place the container outdoors on a non-combustible surface and well away from combustible materials until all embers have completely cooled.

Never dispose of ashes in plastic containers, paper bags, cardboard boxes, or household garbage containers.

2.8 Glass Safety

Do not operate the appliance with:

- Cracked glass
- Broken glass
- Missing glass
- Damaged door gasket

If replacement is required:

- Allow the appliance to cool completely.
- Replace only with the correct high-temperature ceramic glass specified for the appliance.
- Never substitute tempered or ordinary glass.

2.9 Carbon Monoxide Protection

For added safety, LASQUETI recommends installing carbon monoxide alarms in accordance with the manufacturer's instructions and local building regulations.

Carbon monoxide alarms should be tested regularly and batteries replaced as recommended by the alarm manufacturer.

2.10 Children and Vulnerable Persons

Young children should be supervised whenever the appliance is operating.

Persons with reduced physical, sensory, or mental capabilities should only operate the appliance after receiving proper instruction and supervision.

Consider installing a suitable safety barrier if young children or vulnerable persons are regularly present.

2.11 Safety Labels

Do not remove, cover, or alter any safety labels or the appliance rating plate.

If any label becomes damaged or unreadable, contact LASQUETI or your authorized dealer for a replacement before operating the appliance.

2.12 Emergency Information

If you suspect an unsafe operating condition:

- Stop adding fuel.
- Close the air control.
- Allow the fire to burn down safely.
- Do not continue operating the appliance until the cause has been identified and corrected.

If smoke enters the living space or a chimney fire is suspected, discontinue use immediately and have the entire appliance and chimney system inspected by a qualified professional before returning the stove to service.

SECTION 3 – APPLIANCE OVERVIEW

The LASQUETI Wood Stove series consists of three freestanding, steel, non-catalytic wood-burning appliances designed for residential heating. Each model incorporates a high-efficiency secondary combustion system to improve fuel utilization, reduce particulate emissions, and provide long burn times.

All models share the same operating principles, controls, and maintenance procedures. Differences between models are limited primarily to overall dimensions and firebox capacity.

The LASQUETI product line includes:

- **Forge**
- **Kiln**
- **Foundry**

3.1 Standard Features

Every LASQUETI Wood Stove includes the following standard features:

- Heavy-duty welded steel firebox
- Secondary combustion system
- High-temperature ceramic glass viewing window
- Large front-loading firebox

- Top flue outlet (150 mm)
- Removable pedestal base
- Removable baffle assembly
- Firebrick-lined combustion chamber
- Primary air control
- Cool-touch operating handle
- Replaceable door gasket
- Ash lip for cleaner loading

3.2 Main Components

The principal components of the appliance are shown in Figure 3-2.

3.2 MAIN COMPONENTS

The principal components of the appliance are shown in Figure 3-2.

1. Flue Collar
2. Top Plate
3. Firebox
4. Baffle Assembly
5. Firebrick Lining
6. Ceramic Glass
7. Loading Door
8. Door Handle Assembly
9. Latch Assembly
10. Primary Air Control
11. Removable Pedestal Base

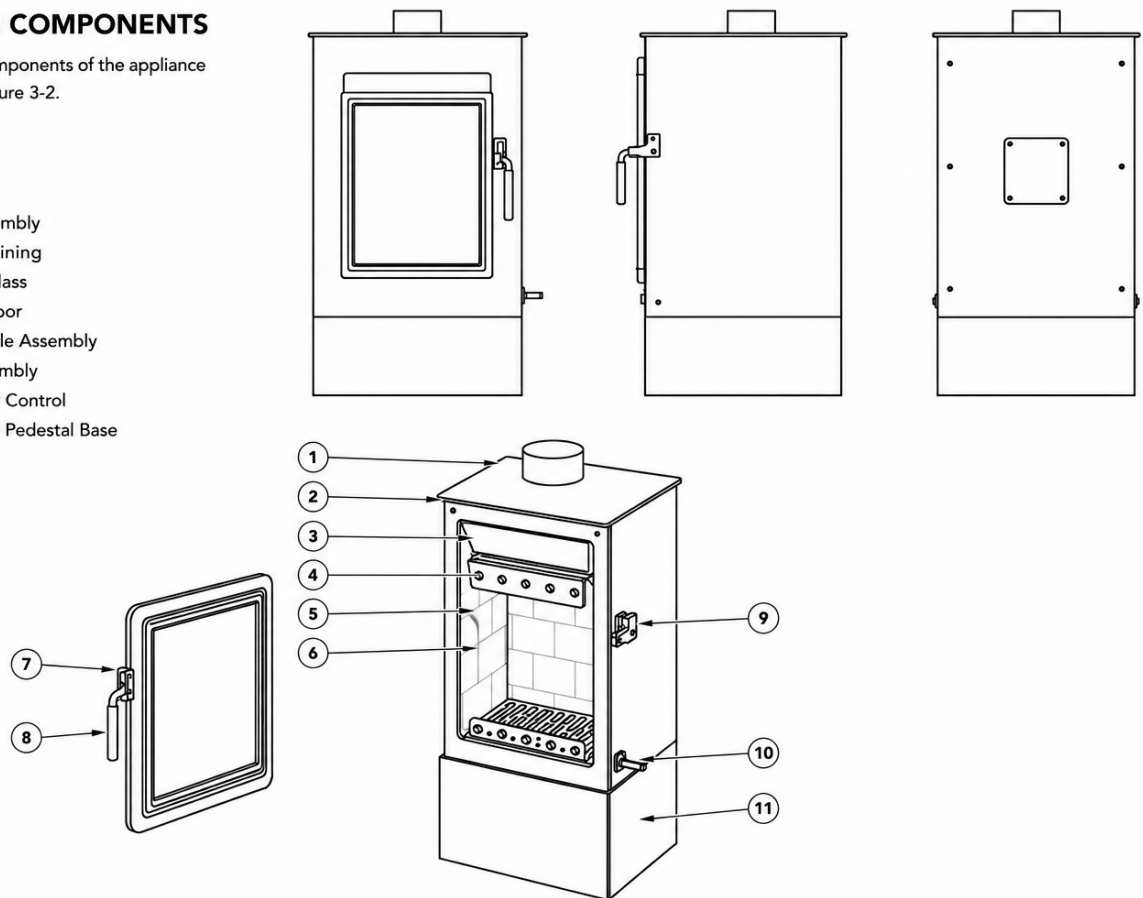



Figure 3-2

3.3 Controls

Primary Air Control

The primary air control regulates the combustion air entering the firebox.

Moving the control toward the **Open** position increases combustion air,

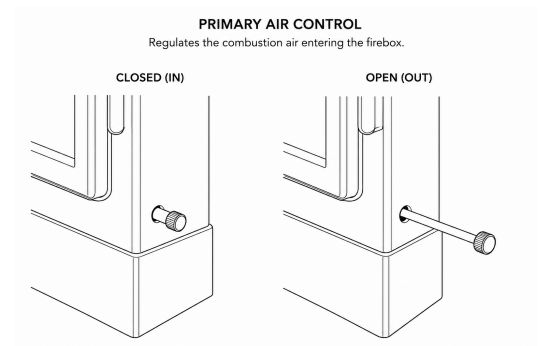

resulting in a faster-burning fire.

Moving the control toward the **Closed** position reduces combustion air, producing a slower, longer-lasting burn.

Always ensure adequate combustion air is available while establishing a fire.

Door Handle

The loading door is equipped with a secure latching mechanism designed to provide an airtight seal during operation.

Always ensure the door is fully closed and latched before operating the appliance.

Do not operate the stove with the loading door open except during refueling.

3.4 Secondary Combustion System

LASQUETI Wood Stoves utilize a non-catalytic secondary combustion system.

As the fire reaches operating temperature, preheated secondary air is introduced through the baffle located near the top of the firebox.

This additional oxygen burns combustible gases that would otherwise exit through the chimney, improving efficiency while reducing smoke and emissions.

Under normal operating conditions, secondary combustion appears as small flames burning beneath the baffle near the top of the firebox.

3.5 Firebrick Lining

The firebox is protected by firebricks.

These firebricks:

- Protect the steel firebox
- Reflect heat back into the combustion chamber
- Promote efficient combustion
- Improve appliance longevity

Replace damaged firebricks only with approved LASQUETI replacement components.

3.6 Removable Baffle Assembly

The removable baffle assembly directs hot combustion gases through the secondary combustion zone before they enter the flue system.


The baffle must remain correctly installed whenever the appliance is operated.

Removal is only required for inspection, chimney cleaning, or replacement.

Refer to **11.8 Replacing the Baffle Assembly**

3.7 Rating Plate

Each appliance is permanently fitted with a rating plate containing:

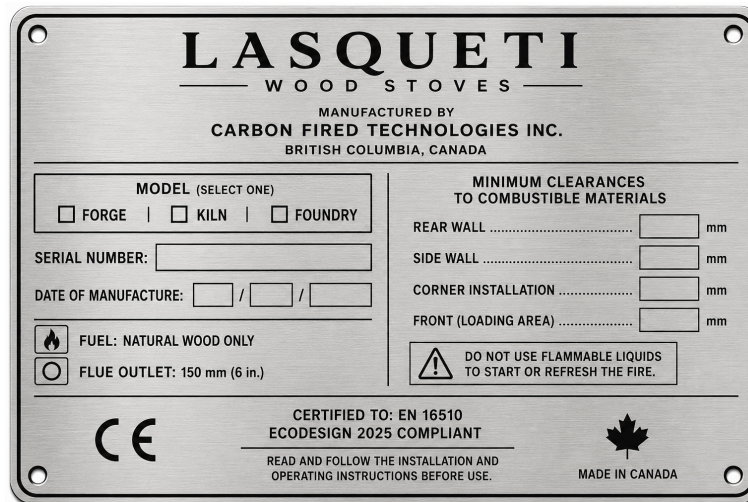

The rating plate is a rectangular metal plate with a brushed finish. It features the brand name 'LASQUETI' in large, bold, serif capital letters at the top, with 'WOOD STOVES' in smaller capital letters below it. Underneath, it says 'MANUFACTURED BY CARBON FIRED TECHNOLOGIES INC. BRITISH COLUMBIA, CANADA'. The plate is divided into several sections. On the left, there is a 'MODEL (SELECT ONE)' section with three checkboxes: 'FORGE', 'KILN', and 'FOUNDRY'. Below this is a 'SERIAL NUMBER:' field with a blank space for entry. Underneath that is a 'DATE OF MANUFACTURE:' field with three boxes for day, month, and year. At the bottom left, there are two circular icons: a flame icon for 'FUEL: NATURAL WOOD ONLY' and a circle with a dot for 'FLUE OUTLET: 150 mm (6 in.)'. On the right side, there is a 'MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS' section with four rows: 'REAR WALL', 'SIDE WALL', 'CORNER INSTALLATION', and 'FRONT (LOADING AREA)', each followed by a blank space and 'mm'. Below this is a warning triangle icon with the text 'DO NOT USE FLAMMABLE LIQUIDS TO START OR REFRESH THE FIRE.' At the bottom of the plate, there is a 'CE' mark on the left, 'CERTIFIED TO: EN 16510 ECODESIGN 2025 COMPLIANT' in the center, and a maple leaf icon with 'MADE IN CANADA' on the right. A small line of text at the very bottom reads 'READ AND FOLLOW THE INSTALLATION AND OPERATING INSTRUCTIONS BEFORE USE.'

- Model designation
- Serial number
- Manufacturing information
- Certification information
- Fuel type
- Safety clearances

3.8 Appliance Identification

Before operating the appliance for the first time, verify:

- The correct model has been installed.
- The rating plate matches the appliance.
- All firebricks are correctly positioned.
- The baffle assembly is properly installed.
- The door seals tightly against the gasket.
- The air control operates smoothly.

Do not operate the appliance if any components are missing, damaged, or improperly installed.

SECTION 4 – TECHNICAL SPECIFICATIONS

The LASQUETI Wood Stove series consists of three models designed using the same combustion system and operating principles. Each model differs primarily in overall dimensions and firebox capacity while maintaining identical operating procedures and installation practices.

All models feature:

- Freestanding steel construction
- Non-catalytic secondary combustion system

- Top flue outlet
- Removable pedestal base
- Removable baffle assembly
- Firebrick-lined combustion chamber
- Ceramic glass viewing door
- Primary air control
- Right-hand door handle
- Dry seasoned cordwood fuel

4.1 Model Specifications

Specification	Forge	Kiln	Foundry
Overall Height	788 mm	813 mm	839 mm
Overall Width	406 mm	508 mm	610 mm
Overall Depth	508 mm	533 mm	559 mm
Removable Base Height	279 mm	279 mm	279 mm
Maximum Log Length	406 mm	406 mm	406 mm
Flue Collar Diameter	150 mm	150 mm	150 mm
Flue Outlet	Top	Top	Top
Fuel	Dry seasoned cordwood	Dry seasoned cordwood	Dry seasoned cordwood
Door Handle	Right-hand side	Right-hand side	Right-hand side
Air Control	Right-hand side	Right-hand side	Right-hand side

4.2 Forge Dimensions

The **Forge** is the most compact model in the LASQUETI series, making it suitable for installations where floor space is limited while still providing efficient wood-burning performance.

Overall Dimensions

- Height: 788 mm
- Width: 406 mm
- Depth: 508 mm
- Removable Base Height: 279 mm
- Flue Diameter: 150 mm (Top Exit)

4.3 Kiln Dimensions

The **Kiln** offers increased firebox volume and heating capacity while maintaining the same operating characteristics as the Forge.

Overall Dimensions

- Height: 813 mm
- Width: 508 mm
- Depth: 533 mm
- Removable Base Height: 279 mm
- Flue Diameter: 150 mm (Top Exit)

4.4 Foundry Dimensions

The **Foundry** is the largest appliance in the LASQUETI product line and provides the greatest firebox capacity for extended burn times.

Overall Dimensions

- Height: 839 mm
- Width: 610 mm
- Depth: 559 mm
- Removable Base Height: 279 mm
- Flue Diameter: 150 mm (Top Exit)

4.5 Standard Construction Features

Every LASQUETI Wood Stove incorporates the following construction features:

- Welded heavy-gauge steel firebox
- Replaceable refractory firebrick lining
- Removable insulated baffle assembly
- Ceramic glass viewing window
- Airtight gasketed loading door
- Precision air control system
- Heavy-duty removable pedestal base
- Top-mounted flue outlet


These components are designed to maximize combustion efficiency while providing ease of maintenance throughout the service life of the appliance.

4.6 Appliance Identification

Each LASQUETI appliance is permanently identified by a manufacturer rating plate attached to the stove.

The rating plate contains:

- Model designation
- Serial number
- Manufacturing date
- Certification information
- Fuel type

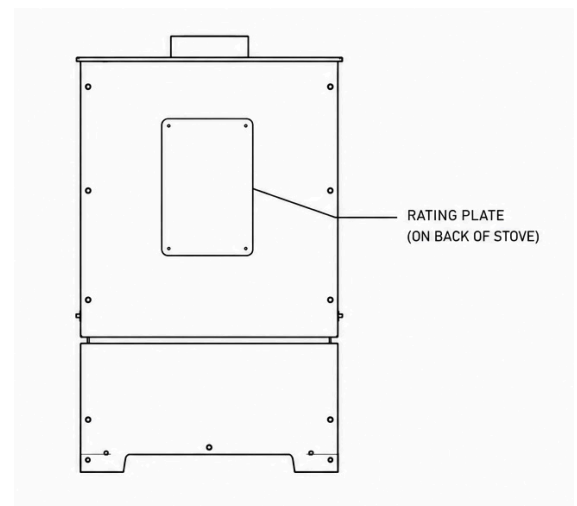

- Flue size
- Required installation clearances

The rating plate must remain legible and permanently attached throughout the service life of the appliance.

4.7 Dimensions and Installation Planning

Before beginning installation:

- Verify the selected model dimensions.
- Confirm adequate floor space is available.
- Ensure sufficient ceiling height for the chimney system.
- Verify compliance with all certified clearances specified in Section 5.
- Confirm the hearth dimensions meet the requirements outlined in this manual.

Careful planning before installation will simplify assembly and help ensure safe operation of the appliance.

SECTION 5 – INSTALLATION REQUIREMENTS

Proper installation is essential for the safe and efficient operation of your LASQUETI Wood Stove. This appliance shall be installed only in accordance with this manual and all applicable national and local building regulations.

Before beginning installation, ensure the selected location provides adequate floor protection, minimum clearances to combustible materials, and a chimney system suitable for solid fuel-burning appliances.

5.1 Selecting an Installation Location

Choose a location that provides:

- Adequate structural support for the appliance and chimney system.
- Sufficient clearance from combustible walls, ceilings, furniture, and furnishings.
- Safe access for loading fuel and performing routine maintenance.
- Proper routing of the chimney system with the fewest possible offsets.
- Adequate room ventilation.

Do not install the appliance in areas where flammable liquids, vapours, or combustible materials are stored.

5.2 Certified Clearances to Combustible Materials

Maintain the certified minimum clearances shown below. These clearances shall not be reduced unless specifically permitted by the applicable installation regulations.

Clearance	Minimum Distance
Rear	300 mm
Side	300 mm

Corner	— mm
Front Hearth Extension	600 mm

These values apply only when the appliance is installed exactly as certified.

5.3 Hearth Requirements

The appliance shall be installed on a continuous, non-combustible hearth extending beyond the appliance as required by applicable regulations.

Suitable hearth materials include:

- Concrete
- Stone
- Ceramic tile
- Slate
- Steel
- Other approved non-combustible materials

The hearth shall be level and capable of supporting the combined weight of the appliance, chimney system, and fuel load.

5.4 Wall Protection

Where wall protection is permitted by local regulations, only approved non-combustible wall protection systems shall be used.

Do not attach combustible materials directly behind or beside the appliance within the required clearance area.

5.5 Chimney Requirements

The LASQUETI Wood Stove is designed for connection to a chimney system intended for residential solid fuel-burning appliances.

The chimney system shall:

- Be installed in accordance with the manufacturer's instructions.
- Be in good condition and free from damage.
- Provide adequate draft under all operating conditions.
- Extend to the required height above the roof.
- Be inspected before initial operation.

5.6 Flue Connector

Use a **150 mm diameter** flue connector compatible with the appliance's top flue outlet.

All joints shall be securely fastened in accordance with the flue manufacturer's installation instructions.

Keep the connector as short and direct as practical while maintaining the required upward slope toward the chimney.

5.7 Floor Loading

Before installation, verify that the floor structure is capable of supporting the appliance and chimney system.

Where required, consult a qualified building professional to confirm structural adequacy.

5.8 Final Installation Checklist

Before proceeding with installation, verify the following:

- ☐ Installation location selected
- ☐ Certified clearances confirmed
- ☐ Hearth protection installed
- ☐ Chimney system inspected
- ☐ Flue components available
- ☐ Appliance inspected for shipping damage
- ☐ Firebrick correctly installed
- ☐ Baffle correctly installed
- ☐ Rating plate present and legible
- ☐ Owner's manual available at the installation site

SECTION 6 – INSTALLATION PROCEDURE

This section outlines the recommended installation procedure for LASQUETI Wood Stoves. Installation shall be performed by a qualified installer familiar with solid fuel-burning appliances and in accordance with all applicable building, fire, and electrical regulations.

Failure to install the appliance correctly may result in poor performance, fire hazards, property damage, serious injury, or death.

6.1 Before Installation

Before unpacking the appliance, verify that:

- The installation location has been prepared.
- The hearth has been completed.
- Required clearances can be maintained.
- The chimney system is complete and ready for connection.
- All required tools and installation materials are available.

Inspect the appliance for shipping damage before installation.

Do not install a damaged appliance.

6.2 Unpacking

Carefully remove all packaging materials.

Remove all components from inside the firebox, including:

- Owner's Manual
- Firebricks (if packaged separately)
- Baffle components (if packaged separately)
- Operating tool
- Any accessory parts supplied with the appliance

Dispose of all packaging materials responsibly.

6.3 Positioning the Appliance

Move the appliance carefully into its installation position.

Confirm that:

- The appliance sits level on the hearth.
- All required clearances are maintained.
- The flue collar aligns with the chimney connector.
- There is adequate space to fully open the loading door.
- Future maintenance access is not restricted.

Adjust the final position before connecting the chimney.

6.4 Installing the Pedestal Base

The LASQUETI pedestal base is supplied attached to the appliance.

If removed during transport or installation:

1. Position the pedestal beneath the appliance.
2. Align the mounting holes.
3. Install all factory fasteners.
4. Tighten securely.
5. Verify the appliance is stable before proceeding.

Do not operate the appliance unless the pedestal is securely attached.

6.5 Installing Firebricks

If the firebricks were removed for transport:

1. Install the floor firebricks.
2. Install the rear firebricks.
3. Install the sides firebricks.
4. Verify each brick seats correctly.
5. Replace any damaged bricks before operating the appliance.

Improperly installed firebricks may reduce appliance performance.

[INSERT FIGURE 6-4 – Firebrick Installation Layout]

6.6 Installing the Baffle Assembly

Install the removable baffle assembly exactly as supplied.

Ensure:

- The baffle is fully supported.
- The secondary air tubes remain correctly positioned.
- No components interfere with the loading door.

Never operate the appliance without the baffle assembly installed.

Refer to **11.8 Replacing the Baffle Assembly**

6.7 Connecting the Flue

Connect a **150 mm diameter** flue connector to the appliance's top flue outlet.

The connector should:

- Fit securely over the flue collar.
- Be installed according to the flue manufacturer's instructions.
- Rise continuously toward the chimney.
- Be adequately supported where required.
- Be secured at each joint with the recommended fasteners.

Seal all joints as required by the flue system manufacturer.

6.8 Final Inspection

Before lighting the first fire, verify that:

- ☐ Appliance is level.
- ☐ Pedestal is secure.
- ☐ Firebricks are correctly installed.
- ☐ Baffle assembly is installed.
- ☐ Door closes and latches properly.
- ☐ Door gasket seals completely.
- ☐ Air control operates smoothly.
- ☐ Flue connector is securely attached.
- ☐ Chimney system is complete.
- ☐ Required clearances are maintained.
- ☐ Combustible materials have been removed from the clearance area.

6.9 First Firing

The first fire should be small to allow the appliance to cure gradually.

During the initial firing:

- Open the air control fully.
- Use only dry kindling and small pieces of seasoned firewood.
- Build a modest fire.
- Allow the appliance to heat gradually.
- Maintain good room ventilation.

During the curing process, the high-temperature paint may emit a temporary odor and light smoke. This is normal and will disappear after several heating cycles.

Avoid touching painted surfaces during the curing process.

6.10 Installation Completion

After the appliance has cooled:

- Reinspect all fasteners.
- Verify the chimney draft is satisfactory.
- Check the door seal.
- Confirm the air control operates correctly.
- Explain the operation of the appliance to the owner.

- Provide the owner with this manual.

Record the installation details in the **Installation Record** section at the end of this manual.

6.11 Installer Information

Upon completion of the installation, the installer should record:

- Installation date
- Appliance model
- Serial number
- Installer name
- Company name
- Contact information

This information will assist with future service, warranty claims, and replacement parts identification.

SECTION 7 – OPERATING INSTRUCTIONS

The LASQUETI Wood Stove is designed to burn **dry, seasoned natural cordwood**. Proper operation will maximize heat output, reduce fuel consumption, minimize emissions, and extend the service life of the appliance.

For safe operation, always follow the procedures outlined in this section.

7.1 Before Lighting the First Fire

Before operating the appliance for the first time, confirm that:

- The installation has been completed in accordance with this manual.
- The chimney system has been inspected.
- The firebrick lining is correctly installed.
- The baffle assembly is properly positioned.
- The loading door closes securely.
- The air control operates freely.
- All combustible materials have been removed from the clearance area.

7.2 First Fire (Paint Curing)

The high-temperature finish applied to the appliance requires a curing period during the first few fires.

For the initial firing:

1. Fully open the primary air control.
2. Build a small fire using dry kindling and several small pieces of seasoned firewood.
3. Allow the fire to burn slowly for approximately 30 to 45 minutes.
4. Allow the appliance to cool completely.
5. Repeat this process with progressively larger fires over the next several heating cycles.

During the curing process, the paint may emit a temporary odor and light smoke. This is normal. Ensure the room is well ventilated by opening windows or doors if necessary.

7.3 Lighting the Stove

1. Fully open the primary air control.
2. Place several sheets of crumpled newspaper or an approved fire starter on the firebox floor.
3. Add dry kindling in a crisscross pattern to promote airflow.
4. Place two or three small pieces of seasoned firewood on top of the kindling.
5. Light the newspaper or fire starter.
6. Close the loading door, leaving it slightly ajar only if necessary to establish draft.
7. Once the kindling is burning well, close and latch the door completely.
8. Gradually add larger pieces of firewood as the fire becomes established.

7.4 Establishing an Efficient Fire

Allow the appliance to reach normal operating temperature before reducing the primary air supply.

Once a bright, active fire has been established:

- Gradually reduce the air control.
- Observe the flames through the glass.
- Maintain active combustion without producing excessive smoke.
- Secondary combustion should become visible near the top of the firebox as the appliance reaches operating temperature.

Operating with excessively low air settings before the appliance is hot may result in incomplete combustion and increased creosote formation.

7.5 Refueling

When additional fuel is required:

1. Fully open the air control for several minutes.
2. Slowly open the loading door to equalize pressure within the firebox.
3. Add seasoned firewood without overloading the firebox.
4. Close and latch the loading door.
5. Leave the air control fully open until the new fuel is burning well.
6. Adjust the air control to the desired burn rate.

Avoid placing firewood directly against the ceramic glass.

7.6 Burn Rate Control

The primary air control regulates the burn rate of the appliance.

High Burn

- Air control fully open.
- Used for lighting fires, establishing draft, and rapid heating.

Medium Burn

- Air control partially open.
- Recommended for normal heating.

Low Burn

- Air control reduced after the appliance has reached operating temperature.
- Provides longer burn times and improved fuel economy.

Never completely close the air control while fuel is actively burning.

7.7 Secondary Combustion

Once the appliance reaches operating temperature, secondary combustion will occur automatically.

This process burns combustible gases before they leave the firebox, resulting in:

- Increased efficiency
- Reduced emissions
- Improved heat output
- Cleaner chimney operation

Secondary flames may appear as floating flames near the top of the firebox beneath the baffle assembly.

7.8 Avoiding Overfiring

WARNING

Overfiring can permanently damage the appliance and chimney system.

Signs of overfiring include:

- Portions of the stove glowing red.
- Extremely vigorous flames that cannot be controlled using the air control.
- Excessive flue temperatures.

If overfiring occurs:

1. Close the primary air control.
2. Do not add additional fuel.
3. Allow the fire to burn down naturally.
4. Inspect the appliance before returning it to service.

Damage resulting from overfiring is not covered by the warranty.

7.9 Safe Operating Practices

For safe and efficient operation:

- Burn only dry, seasoned natural cordwood.
- Keep the loading door closed during operation.
- Never use flammable liquids to start or revive a fire.
- Do not burn household waste or treated wood.
- Inspect the chimney regularly.
- Empty ashes before they accumulate excessively.
- Keep combustible materials outside the required clearance area.

7.10 When Not in Use

At the end of the heating season:

- Remove all remaining ashes.
- Clean the firebox thoroughly.
- Inspect the firebricks and baffle assembly.
- Clean the ceramic glass.
- Inspect the chimney system before the next heating season.

Leaving the appliance clean and dry during periods of non-use will help reduce corrosion and prolong its service life.

7.11 Operating Tips

For best performance:

- Use hardwood that has been seasoned for at least 12 months.
- Maintain a bright, active fire during normal operation.
- Avoid smoldering fires.
- Reload before the fuel bed is completely exhausted.
- Burn smaller loads during mild weather and larger loads during colder conditions.
- Inspect the chimney regularly throughout the heating season.

SECTION 8 – FUEL REQUIREMENTS

The performance, efficiency, and longevity of your LASQUETI Wood Stove depend greatly on the quality of the fuel used. Burning properly seasoned natural cordwood will produce higher heat output, cleaner combustion, lower emissions, and reduced chimney maintenance.

Only fuels specified in this manual shall be used.

8.1 Approved Fuel

This appliance is designed exclusively for burning:

- Dry, seasoned natural cordwood.

The recommended moisture content of the firewood is **20% or less**, measured with a wood moisture meter on a freshly split face.

Wood with higher moisture content reduces efficiency, increases smoke production, and promotes creosote accumulation in the chimney.

8.2 Recommended Firewood Species

Dense hardwoods generally provide longer burn times and greater heat output than softwoods.

Common hardwoods include:

- Oak
- Maple
- Ash
- Beech
- Birch

Softwoods such as pine, spruce, fir, and cedar may also be burned when properly seasoned. They ignite easily and are well suited for starting fires but typically burn faster than hardwoods.

8.3 Seasoning Firewood

Freshly cut wood contains a high percentage of moisture and is unsuitable for efficient combustion.

For best performance:

- Split firewood soon after cutting.
- Stack the wood off the ground.
- Protect the top of the stack from rain and snow while allowing air to circulate through the sides.
- Store the wood in a well-ventilated location.
- Season firewood for a minimum of 12 months before use.

Properly seasoned wood will generally:

- Appear darker in colour.
- Have visible cracks at the ends.
- Feel lighter than freshly cut wood.
- Produce a hollow sound when two pieces are struck together.

8.4 Wood Size

For efficient operation, use firewood that fits comfortably within the firebox.

Maximum recommended log length:

Model	Maximum Log Length
Forge	406 mm
Kiln	406 mm
Foundry	406 mm

Smaller pieces ignite more quickly and are recommended for starting fires, while larger pieces provide longer burn times once the appliance has reached operating temperature.

8.5 Fuels That Must Not Be Burned

WARNING

Burning prohibited materials may damage the appliance, create hazardous conditions, and void the warranty.

Do **not** burn:

- Coal or charcoal.
- Treated or pressure-treated lumber.
- Painted or stained wood.
- Driftwood or salt-contaminated wood.
- Plywood, particleboard, MDF, or OSB.

- Construction or demolition debris.
- Household garbage.
- Plastics or foam products.
- Rubber products.
- Cardboard in large quantities.
- Coloured or glossy paper.
- Liquid fuels including gasoline, kerosene, diesel fuel, or lighter fluid.

These materials may release harmful chemicals, produce excessive creosote, or damage the appliance.

8.6 Burning Wet Wood

Burning wood with excessive moisture content may result in:

- Difficult fire starting.
- Reduced heat output.
- Excessive smoke.
- Dirty stove glass.
- Increased creosote deposits.
- Reduced combustion efficiency.
- Higher emissions.
- Increased chimney fire risk.

If the firewood produces excessive hissing, bubbling at the ends, or visible steam, it is likely too wet for efficient use.

8.7 Storing Firewood

Store firewood:

- Outdoors whenever possible.
- Off the ground using pallets or supports.
- Covered only on the top to protect from precipitation.
- With the sides left open for ventilation.
- Away from exterior walls where moisture may accumulate.

Do not store firewood within the appliance's required clearance area or directly against the stove.

Bring only enough firewood indoors for immediate use.

8.8 Building Efficient Fires

For best performance:

- Use several pieces of dry kindling to establish the fire.
- Add progressively larger pieces as the fire develops.
- Maintain adequate spacing between logs to allow airflow.
- Avoid overloading the firebox.
- Allow each load of fuel to ignite fully before reducing the primary air supply.

Maintaining a bright, active fire helps minimize smoke and promotes efficient secondary combustion.

8.9 Fuel Tips

To maximize performance:

- Burn only clean, dry, seasoned wood.
- Verify moisture content with a moisture meter.
- Use smaller loads during mild weather.
- Use larger hardwood logs for extended heating during colder conditions.
- Inspect and clean the chimney regularly, especially when burning softer woods or during periods of frequent low-burn operation.

8.10 Environmental Considerations

Burning properly seasoned wood at the correct burn rate provides:

- Improved heating efficiency.
- Lower particulate emissions.
- Reduced fuel consumption.
- Cleaner chimney operation.
- Reduced environmental impact.

Responsible fuel selection and proper stove operation contribute to cleaner air and improved appliance performance.

SECTION 9 – MAINTENANCE AND CLEANING

Regular maintenance is essential to ensure safe operation, reliable performance, and long service life. The appliance, chimney system, and flue connector should be inspected and cleaned at regular intervals throughout the heating season.

WARNING

Always allow the appliance to cool completely before performing any maintenance or cleaning. Never use water to extinguish a fire or cool hot components.

9.1 Maintenance Schedule

The following maintenance intervals are recommended under normal operating conditions.

Maintenance Item	Frequency
Remove excess ash	As required
Clean ceramic glass	As required
Inspect door gasket	Monthly

Inspect firebricks	Monthly
Inspect baffle assembly	Monthly
Inspect air control operation	Monthly
Inspect chimney and flue	At least every two months during the heating season
Clean chimney system	As required, or at least once per year
Complete appliance inspection	Annually

9.2 Ash Removal

A thin layer of ash on the firebox floor helps protect the firebricks and improves combustion. Remove excess ash when accumulation begins to reduce the usable firebox volume.

To remove ashes:

1. Allow the appliance to cool completely.
2. Place ashes into a metal container with a tight-fitting lid.
3. Store the container outdoors on a non-combustible surface until all embers have completely cooled.
4. Dispose of ashes in accordance with local regulations.

Never place hot ashes into plastic containers, cardboard boxes, or combustible waste bins.

9.3 Cleaning the Ceramic Glass

The ceramic glass should remain relatively clean when burning properly seasoned wood at the correct burn rate.

If deposits develop:

- Allow the appliance to cool completely.
- Use a soft cloth or paper towel.
- Clean with a stove glass cleaner specifically intended for ceramic fireplace glass.
- Wipe the glass dry before operating the appliance.

Do not use abrasive cleaners, steel wool, razor blades, or products containing ammonia.

Replace cracked or damaged ceramic glass only with genuine LASQUETI replacement glass.

9.4 Firebrick Inspection

Inspect all firebricks periodically for:

- Cracks
- Excessive wear
- Loose positioning
- Missing sections

Hairline cracks are common and generally do not require replacement. Firebricks that are broken into multiple pieces or no longer protect the steel firebox should be replaced.

Replace firebricks only with approved LASQUETI replacement components.

9.5 Baffle Assembly Inspection

The removable baffle assembly should be inspected regularly to ensure it remains correctly positioned.

Check for:

- Warping
- Cracks
- Excessive wear
- Loose or displaced components

If chimney cleaning requires removal of the baffle, reinstall it exactly as originally supplied before operating the appliance.

Never operate the stove without the baffle assembly installed.

9.6 Door Gasket Inspection

The door gasket provides an airtight seal between the loading door and the firebox.

Inspect the gasket regularly for:

- Fraying
- Compression
- Hardening
- Missing sections
- Air leaks

A simple seal test may be performed by closing the door on a strip of paper. If the paper can be pulled out easily while the door is latched, the gasket may require replacement.

Replace worn gaskets using the correct diameter and high-temperature adhesive recommended for the appliance.

9.7 Air Control Inspection

Periodically verify that the primary air control:

- Moves freely.
- Opens fully.

- Closes smoothly.
- Is not obstructed by ash or debris.

Do not force the air control if resistance is encountered. Inspect the mechanism and remove any obstruction before operating the appliance.

9.8 Chimney and Flue Inspection

The chimney and flue connector should be inspected regularly for creosote accumulation.

Excessive creosote can ignite and cause a chimney fire.

Inspect more frequently during:

- The first heating season.
- Periods of frequent low-burn operation.
- When burning softwoods.
- When burning marginally seasoned firewood.

Clean the chimney whenever creosote accumulation reaches approximately **3 mm** in thickness.

9.9 Exterior Cleaning

After the appliance has cooled:

- Dust painted surfaces with a soft cloth.
- Clean using a dry or slightly damp cloth only.
- Do not use abrasive pads or household cleaning products.
- Avoid scratching the painted finish.

Minor scratches may be repaired using high-temperature stove paint approved for steel wood-burning appliances.

9.10 Seasonal Shutdown

At the end of each heating season:

- Remove all ashes.
- Clean the firebox.
- Clean the ceramic glass.
- Inspect the firebricks.
- Inspect the baffle assembly.
- Inspect the door gasket.
- Clean the chimney and flue connector.
- Leave the air control slightly open to promote air circulation and reduce condensation inside the firebox.

9.11 Replacement Parts

Only genuine LASQUETI replacement parts should be used when servicing the appliance.

Common replacement items include:

- Ceramic glass
- Door gasket

- Firebricks
- Baffle assembly
- Secondary air tubes
- Door handle components

Using non-approved replacement parts may affect appliance performance, certification, and warranty coverage.

9.12 Professional Inspection

A complete inspection by a qualified service technician is recommended **at least once each year** before the beginning of the heating season.

The inspection should include:

- Appliance condition
- Door seal integrity
- Air control operation
- Firebrick condition
- Baffle assembly
- Flue connector
- Chimney system
- Overall installation safety

Regular professional servicing helps ensure safe and efficient operation throughout the life of the appliance.

SECTION 10 – TROUBLESHOOTING

The following guide identifies common operating conditions, possible causes, and recommended corrective actions. Many performance issues are related to fuel quality, chimney draft, or operating practices.

If a problem persists after following the recommended actions, discontinue use of the appliance and consult a qualified service technician.

10.1 Stove Produces Little Heat

Possible Cause	Corrective Action
Firewood is wet or unseasoned	Burn only dry, seasoned cordwood with a moisture content of 20% or less.
Air control closed too early	Operate with the air control fully open until the fire is well established.
Firewood pieces are too large	Start with kindling and smaller pieces before adding larger logs.

Poor chimney draft	Inspect the chimney for blockages and verify proper installation.
--------------------	---

10.2 Difficulty Starting a Fire

Possible Cause	Corrective Action
Wet fuel	Replace with properly seasoned firewood.
Restricted air supply	Fully open the primary air control before lighting.
Cold chimney	Preheat the flue by burning newspaper or kindling before adding larger fuel.
Insufficient kindling	Use additional dry kindling to establish a hot fire quickly.

10.3 Smoke Enters the Room

Possible Cause	Corrective Action
Chimney draft is insufficient	Inspect the chimney system for blockages or inadequate height.
Door opened too quickly	Open the air control fully for several minutes before slowly opening the loading door.
Negative pressure in the building	Open a nearby window briefly to provide combustion air if necessary.
Chimney requires cleaning	Inspect and clean the flue system.

10.4 Excessive Smoke from the Chimney

Possible Cause	Corrective Action
----------------	-------------------

Wet or green firewood	Burn only properly seasoned wood.
Fire burning too slowly	Increase the air supply until active combustion is established.
Appliance operating below normal temperature	Burn a hotter fire before reducing the air contro

10.5 Glass Becomes Dirty Quickly

Possible Cause	Corrective Action
Wet firewood	Use properly seasoned wood.
Low burn rate for extended periods	Burn a hotter fire periodically to help keep the glass clean.
Air control closed excessively	Maintain sufficient combustion air during normal operation.

10.6 Fire Burns Too Quickly

Possible Cause	Corrective Action
Air control left fully open	Reduce the air control after the fire is established.
Excessive chimney draft	Consult a qualified installer regarding draft control.
Door gasket leaking	Inspect and replace the gasket if necessary.

10.7 Poor Burn Time

Possible Cause	Corrective Action
Small fuel load	Use larger pieces of seasoned hardwood.

Air control setting too high	Reduce the air setting after ignition.
Door gasket leaking	Inspect the door seal for wear or damage.
Excessive chimney draft	Have the draft evaluated by a qualified technician.

10.8 Creosote Accumulates Rapidly

Possible Cause	Corrective Action
Wet fuel	Burn only seasoned wood.
Frequent low-temperature fires	Burn hotter fires regularly.
Restricted chimney draft	Inspect and clean the chimney system.
Chimney cleaning interval too long	Increase inspection and cleaning frequency.

10.9 Chimney Fire

WARNING

If a chimney fire is suspected:

1. Fully close the primary air control.
 2. Close and latch the loading door.
 3. Evacuate all occupants if necessary.
 4. Call the fire department immediately.
 5. Do not use the appliance again until the chimney system has been inspected by a qualified professional.
- A chimney fire may damage the chimney system even if no damage is visible.

10.10 Unusual Odours

Temporary odours may occur:

- During the initial paint curing process.
- After repainting the appliance.
- Following extended periods of non-use.

Persistent smoke or burning odours after the curing period may indicate:

- Creosote accumulation.
- Debris in the chimney.
- Improper installation.
- Air leaks.

Discontinue operation and inspect the appliance before continued use.

10.11 When Service Is Required

Contact a qualified service technician if you observe:

- Cracked ceramic glass.
- Damaged firebricks.
- Warped baffle components.
- Air control malfunction.
- Loose door handle or hinges.
- Persistent smoke leakage.
- Excessive chimney draft problems.
- Structural damage to the appliance.

Do not attempt to modify or repair major components unless specifically instructed in this manual.

10.12 Troubleshooting Summary

Most operating problems can be prevented by:

- Burning only dry, seasoned firewood.
- Operating the appliance at normal combustion temperatures.
- Maintaining a clean chimney system.
- Inspecting the appliance regularly.
- Following the operating procedures described in this manual.

Routine maintenance and proper fuel selection are the keys to safe, efficient, and reliable performance.

SECTION 11 – REPLACEMENT PARTS AND SERVICE

LASQUETI Wood Stoves are designed for many years of reliable service. If replacement of a component becomes necessary, use only genuine LASQUETI replacement parts to maintain the appliance's safety, performance, and certification.

The use of unauthorized or modified components may impair appliance operation and void the warranty.

11.1 Genuine Replacement Parts

The following components are available as replacement parts:

- Ceramic glass
- Door gasket
- Door handle assembly
- Firebricks
- Baffle assembly
- Air control components
- Flue collar
- Pedestal base
- Fasteners and hardware

Always specify the correct model and serial number when ordering replacement parts.

11.2 Identifying Your Appliance

Before ordering replacement parts, record the following information from the appliance rating plate:

Information	Record Here
Model	_____
Serial Number	_____
Date of Purchase	_____
Date of Installation	_____

11.3 Exploded Parts Diagram

The exploded parts diagram identifies the major serviceable components of the appliance and their relationship to one another.

Use this illustration together with the parts list when identifying replacement components.

[INSERT FIGURE 11-2 – Exploded Parts Diagram]

11.4 Major Components

Item	Description
1	Top Plate
2	Flue Collar
3	Baffle Assembly
4	Firebrick Set
5	Firebox Assembly

6	Ceramic Glass
7	Door Assembly
8	Door Gasket
9	Door Handle Assembly
10	Primary Air Control
11	Pedestal Base

Actual part numbers may vary by model. Refer to the latest LASQUETI replacement parts catalogue or contact your authorized dealer.

11.5 Replacing the Ceramic Glass

WARNING

Only high-temperature ceramic glass approved for the appliance shall be used.

Never replace ceramic stove glass with tempered glass or ordinary window glass.

To replace the glass:

1. Allow the appliance to cool completely.
2. Remove the loading door if required.
3. Carefully remove the glass retaining hardware.
4. Remove the damaged glass.
5. Inspect the glass gasket and replace if necessary.
6. Install the new ceramic glass.
7. Tighten the retaining hardware evenly without overtightening.

Do not operate the appliance if the glass is cracked or damaged.

11.6 Replacing the Door Gasket

The door gasket should be replaced whenever it no longer provides an airtight seal.

Replacement procedure:

1. Remove the old gasket.
2. Clean the gasket channel thoroughly.
3. Apply high-temperature gasket adhesive.
4. Install the correct replacement gasket without stretching it.

5. Allow the adhesive to cure according to the manufacturer's instructions.
6. Close the door to ensure proper seating before operating the appliance.

11.7 Replacing Firebricks


Firebricks are designed to protect the steel firebox from excessive heat.

Replace firebricks that are:


- Broken into multiple pieces.
- Missing.
- Severely worn.
- Unable to remain in their correct position.

Minor surface cracks generally do not require replacement.

Foundry/kiln

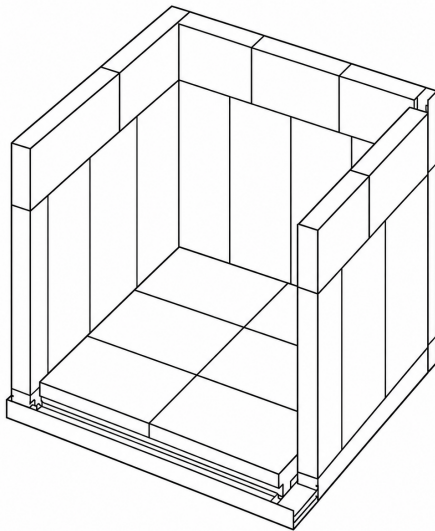

forge

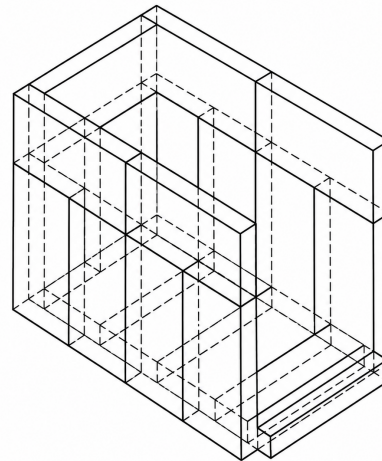


11.8 Replacing the Baffle Assembly

The removable baffle assembly may require replacement if it becomes damaged or excessively worn.

To replace the baffle:

1. Remove the firebricks as required.
2. Carefully remove the existing baffle.

3. Install the replacement baffle in the correct orientation.
 4. Reinstall all removed components.
 5. Verify that the baffle is securely supported before operating the appliance.
- Never operate the appliance without the baffle correctly installed.

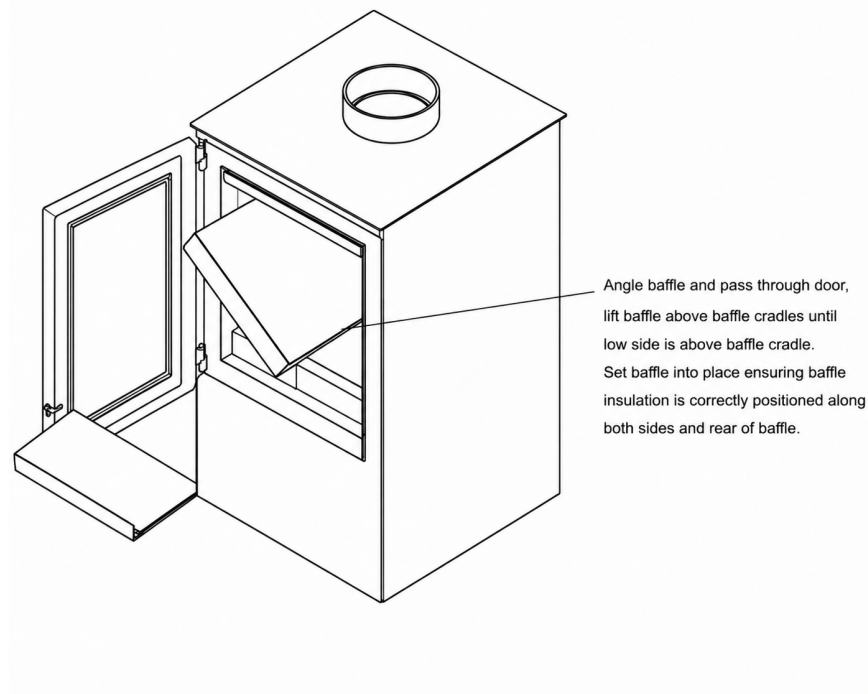

11.9 Service Recommendations

The appliance should be inspected by a qualified service technician whenever:

- A major component requires replacement.
- The appliance has been overfired.
- A chimney fire has occurred.
- Structural damage is suspected.
- Unusual operating conditions are observed.

Routine professional servicing helps ensure continued safe operation and optimum performance.

11.10 Ordering Replacement Parts

When ordering replacement parts, provide:

- Model designation
- Serial number
- Description of the required part

- Quantity required

Ordering the correct replacement part helps ensure proper fit, safe operation, and continued compliance with the appliance certification.

11.11 Technical Assistance

For replacement parts, technical assistance, or service information, contact your authorized LASQUETI dealer or Carbon Fired Technologies Inc.

Please have the appliance model and serial number available when requesting assistance.

SECTION 12 – WARRANTY

LASQUETI Wood Stoves are manufactured to high standards of quality and workmanship. Carbon Fired Technologies Inc. warrants each new LASQUETI Wood Stove to be free from defects in materials and workmanship under normal residential use and service.

This warranty applies only to the original retail purchaser and is not transferable.

12.1 Warranty Coverage

LASQUETI Wood Stoves are covered by a **two (2) year limited warranty** from the original date of purchase.

During the warranty period, Carbon Fired Technologies Inc. will, at its discretion, repair or replace components found to be defective due to manufacturing defects in materials or workmanship.

Proof of the original purchase date is required for all warranty claims.

12.2 Warranty Conditions

To maintain warranty coverage:

- The appliance must be installed in accordance with this manual.
- Installation must comply with all applicable local building and fire regulations.
- The appliance must be operated only with approved fuels.
- Routine maintenance described in this manual must be performed.
- Genuine LASQUETI replacement parts must be used for all repairs.

Failure to follow these requirements may void the warranty.

12.3 Items Not Covered

This warranty does not cover normal wear or deterioration of consumable components, including:

- Door gaskets
- Ceramic glass damaged by impact or misuse
- Firebricks
- Baffle components subject to normal wear
- Paint finish discoloration resulting from normal operation

These items are considered service components and may require periodic replacement.

12.4 Warranty Exclusions

This warranty does not cover damage resulting from:

- Improper installation
- Improper operation
- Overfiring
- Chimney fires
- Use of prohibited fuels
- Burning wet or unseasoned wood
- Neglect or lack of maintenance
- Misuse or abuse
- Unauthorized modification of the appliance
- Use of non-approved replacement parts
- Damage occurring during transportation after delivery

Damage resulting from any of the above conditions is the responsibility of the owner.

12.5 Owner Responsibilities

The owner is responsible for:

- Operating the appliance in accordance with this manual.
- Performing routine inspections and maintenance.
- Keeping the chimney system clean.
- Maintaining safe installation clearances.
- Using only properly seasoned natural cordwood.
- Retaining proof of purchase for warranty purposes.

12.6 Warranty Claims

To submit a warranty claim:

1. Contact the authorized LASQUETI dealer from whom the appliance was purchased or Carbon Fired Technologies Inc.
2. Provide:
 - Model designation
 - Serial number
 - Date of purchase
 - Description of the issue
 - Photographs of the affected component, if requested
3. Do not return any parts unless instructed to do so.

Carbon Fired Technologies Inc. reserves the right to inspect the appliance or defective component before approving a warranty claim.

12.7 Limitation of Liability

This warranty is limited to the repair or replacement of defective components.

Carbon Fired Technologies Inc. shall not be liable for:

- Incidental or consequential damages.
- Property damage resulting from improper installation or operation.
- Loss of use of the appliance.
- Labour costs associated with removal or reinstallation unless specifically authorized.
- Travel expenses incurred during warranty service unless otherwise agreed in writing.

Some jurisdictions do not allow limitations on incidental or consequential damages. In such jurisdictions, these limitations may not apply.

12.8 Warranty Registration

Warranty registration may be completed through your authorized dealer or directly with Carbon Fired Technologies Inc., where applicable.

Retain the following documents for future reference:

- Original sales receipt
- Installation record
- Serial number
- This owner's manual

12.9 Warranty Service

Warranty service shall be performed only by an authorized LASQUETI dealer or a service provider approved by Carbon Fired Technologies Inc.

Unauthorized repairs or modifications may void the warranty.

12.10 Contact Information

For warranty assistance, replacement parts, or technical support, contact:

Carbon Fired Technologies Inc.

LASQUETI Wood Stoves

Email: [INSERT CUSTOMER SERVICE EMAIL]

Website: [INSERT WEBSITE ADDRESS]

Please have the appliance model and serial number available when requesting assistance.

12.11 Warranty Record

Model	
Serial Number	

Date of Purchase	_____
Dealer	_____
Installer	_____

Keep this information with your proof of purchase for the duration of the warranty period.

SECTION 13 – INSTALLATION RECORD

This section should be completed by the installer at the time of installation and retained by the owner for future reference.

Maintaining accurate installation and service records assists with future maintenance, warranty support, replacement parts identification, and periodic inspections.

Appliance Information

Model

☐ Forge ☐ Kiln ☐ Foundry

Serial Number

Date of Manufacture

Date of Purchase

Date of Installation

Installation Location

Owner Name

Installation Address

Installer Information

Installation Company

Installer Name

Installer Certification Number (if applicable)

Telephone

Email

Chimney System Information

Chimney Manufacturer

Chimney Model

Chimney Diameter

☐ 150 mm

Overall Chimney Height

Flue Connector Material

Installation Checklist

The installer confirms that:

- ☐ Appliance installed according to this manual.
- ☐ Required floor protection installed.
- ☐ Certified clearances maintained.
- ☐ Chimney system installed correctly.
- ☐ Flue connector securely fastened.
- ☐ Appliance inspected before first firing.

- ☐ Air control operates correctly.
- ☐ Door seal inspected.
- ☐ Baffle assembly installed correctly.
- ☐ Firebricks correctly positioned.
- ☐ Owner instructed on safe operation.
- ☐ Owner provided with this manual.

Initial Commissioning

Date of First Fire

Initial Draft Verified

- ☐ Yes
- ☐ No

Appliance Operating Correctly

- ☐ Yes
- ☐ No

Comments

IMPORTANT

Retain this manual for the life of the appliance.

If the appliance is sold or transferred to another owner, this manual shall accompany the appliance.

Always operate and maintain the appliance in accordance with the instructions contained in this manual.

Manufacturer

Carbon Fired Technologies Inc.

LASQUETI Wood Stoves

Certified to EN 16510-2-1:2022

Revision 1.1

Copyright © 2025 Carbon Fired Technologies Inc.

