
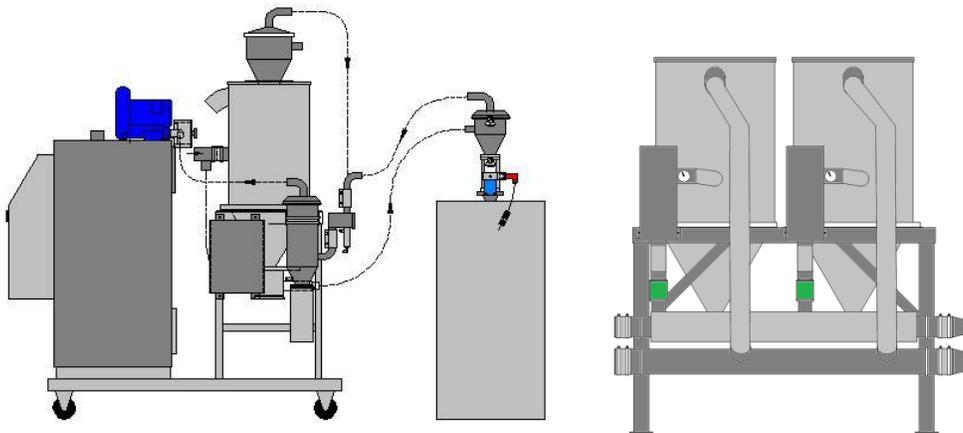


Thoreson-McCosh Inc

PROTEK DRYER CONTROLS

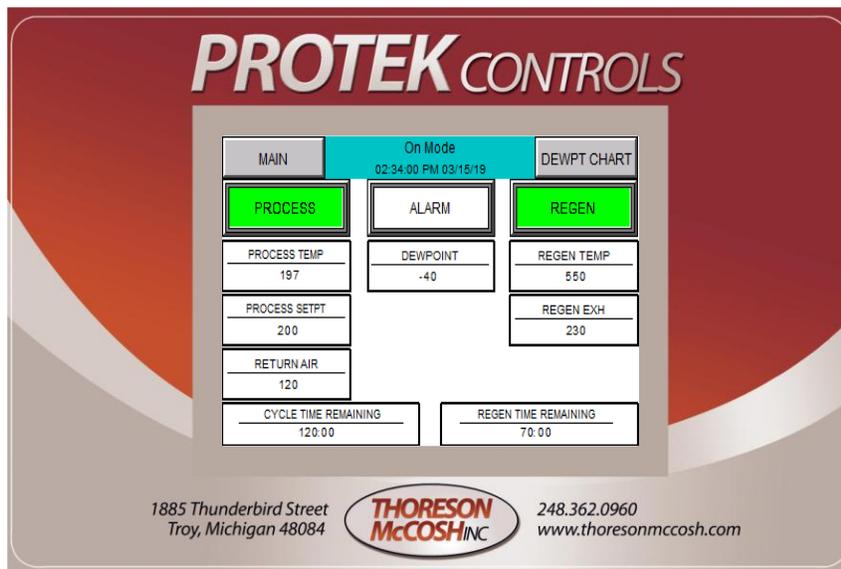

INSTRUCTION MANUAL IB201810

Thoreson-McCosh Inc.
1885 Thunderbird Street, Troy, Mi. 48084
Phone 248.362.0960 FAX 248.362.5270
www.thoresonmccosh.com
sales@thoresonmccosh.com

Thoreson-McCosh Inc

FORWARD

Installation, Operation and Maintenance manual for your
Thoreson-McCosh Inc. equipment.

Please complete the information below. When calling the Thoreson-McCosh Inc.
Service department, this information will be needed.

Model Name _____

Serial Number _____

Wiring Diagram _____

Insert _____

Program _____

Layout _____

Additional information can be found at:

Thoreson-McCosh Inc.
1885 Thunderbird Street
Troy, MI. 48084
Phone: 248.362.0960
FAX: 248.362.5270
www.thoresonmccosh.com
sales@thoresonmccosh.com

Thoreson-McCosh Inc

TABLE OF CONTENTS

SECTION 1:	THORESON-MCCOSH INC. PRODUCT WARRANTY	1
SECTION 2:	TD DRYER METHOD OF OPERATION.....	2
SECTION 3:	QUICK START	3
SECTION 4:	DRYER HMI INSTRUCTIONS.....	4
SECTION 4.1:	DISPLAYING THE PROGRAM # & CYCLE TIMES	4
SECTION 4.2:	MAIN MENU SCREEN	5
SECTION 4.3:	DRYER STATUS SCREEN	6
SECTION 4.4:	DRYER SETUP SCREENS (F/C).....	8
SECTION 4.5:	DRYER SETUP TIMERS SCREENS	10
SECTION 4.6:	BLOWER DELAYS SCREEN	11
SECTION 4.7:	SET CLOCK	12
SECTION 4.8:	7 DAY TIMER.....	13
SECTION 4.9:	CHART SCREEN	14
SECTION 4.10:	DRYER FAULTS SCREEN	15
	LIST OF DRYER FAULTS.....	16
SECTION 4.11:	DELTA-T	17
SECTION 4.12:	PLC I/O.....	18
SECTION 5:	OPTIONAL LOADER MODE	19
SECTION 5.1:	LOADER SETUP SCREEN	19
SECTION 5.2:	RECEIVER SETUP SCREEN	20
SECTION 5.3:	RECEIVER STATUS SCREEN	21
SECTION 5.4:	LOADER SETUP BLOWBACK SCREEN.....	22
SECTION 6:	OPTIONAL PRE-HEATER MODE.....	23
SECTION 6.1:	MAIN MENU PRE-HEATER MODE	23
SECTION 6.2:	PRE-HEATER SETUP SCREEN.....	24
SECTION 6.3:	HOPPER STATUS SCREEN	25
SECTION 7.0:	MAINTENANCE	26
SECTION 7.1:	REMOVING THE BEDS TD-12 THRU TD-360	27
SECTION 7.2:	REMOVING THE BEDS TD-480 THRU TD-2000	28
SECTION 7.3:	REPLACING THE DEW POINT SENSOR	29
SECTION 7.4:	DISPOSING OF MERCURY CONTACTORS.....	29
	COMMON TD DRYER SPARE PARTS.....	30
	GENERAL DRYER LAYOUT TD-12 THRU TD-360	31
	MANIFOLD LAYOUT TD-12 THRU TD-360	32
	GENERAL DRYER LAYOUT PARTS LIST TD-12 THRU TD-360.....	33
	BATTERY REPLACEMENT PLC1400	34
	BATTERY REPLACEMENT PLC1400	35
SUPPLEMENTAL:	
	WIRING DIAGRAMS	
	BLOWER MANUAL	

MSDS Information is available upon request. Contact Thoreson-McCosh Inc. or download the information from our website. www.thoresonmccosh.com

Thoreson-McCosh Inc

**** SECTION 1 ****

THORESON-MCCOSH INC. PRODUCT WARRANTY

Thoreson-McCosh warrants each product of its manufacture to be free from defects in material and workmanship for a period of 30 months (2-1\2) year from the date of delivery to the original purchaser. Thoreson-McCosh's obligation under this warranty is limited to repairing or replacing any part returned to the Thoreson-McCosh factory with transportation charges prepaid, and which, on examination by Thoreson-McCosh, shall disclose to Thoreson-McCosh's satisfaction to have been defective.

The purchaser must notify Thoreson-McCosh of such defects and promptly deliver the defective part(s) in accordance with Thoreson-McCosh's shipping instructions, delivery prepaid. Parts will be replaced F.O.B. Thoreson-McCosh factory, by Thoreson-McCosh, and will be invoiced to the purchaser with "credit on return of defective part", if the part is returned within fifteen (15) days after shipment of replacement part. Thoreson-McCosh is not liable for installation or cost to install the replacement part or removal of the defective part.

Thoreson-McCosh is not responsible for any failure of its product due to improper use, installation, or operation. Thoreson-McCosh shall not assume any expense or liability for repairs made to any Thoreson-McCosh unit or equipment outside Thoreson-McCosh's own factory unless specifically agreed to in writing by Thoreson-McCosh.

Equipment and accessories furnished by us, but manufactured by others, are guaranteed to the extent of the original manufacturer's guarantee to Thoreson-McCosh, if that guarantee exceeds one (1) year.

It is expressly understood that Thoreson-McCosh is not responsible for damage and/or injury caused to buildings, contents, products, or persons by reason of installation or use of any of our products. Thoreson-McCosh shall not be liable for loss, damage or expenses arising directly or indirectly from, or being consequential or incidental to, the use of its products or from any other cause.


The above warranty supersedes, and is in lieu of all other warranties expressed or implied; and no person, agent, representative or dealer is authorized to give any warranties on behalf of Thoreson-McCosh, not to assume for Thoreson-McCosh any other liability in connection with Thoreson-McCosh products.

Thoreson-McCosh Inc

** SECTION 2 **

TD DRYER METHOD OF OPERATION

The Thoreson-McCosh Inc., **Thermal Dynamic** or **TD** dryer, is a 3 Desiccant bed, closed looped drying system. The dryer has 2 separate air flow circuits. Each circuit has its own filter, blower and heater. The three bed positions are Process, Regen & Cool down.

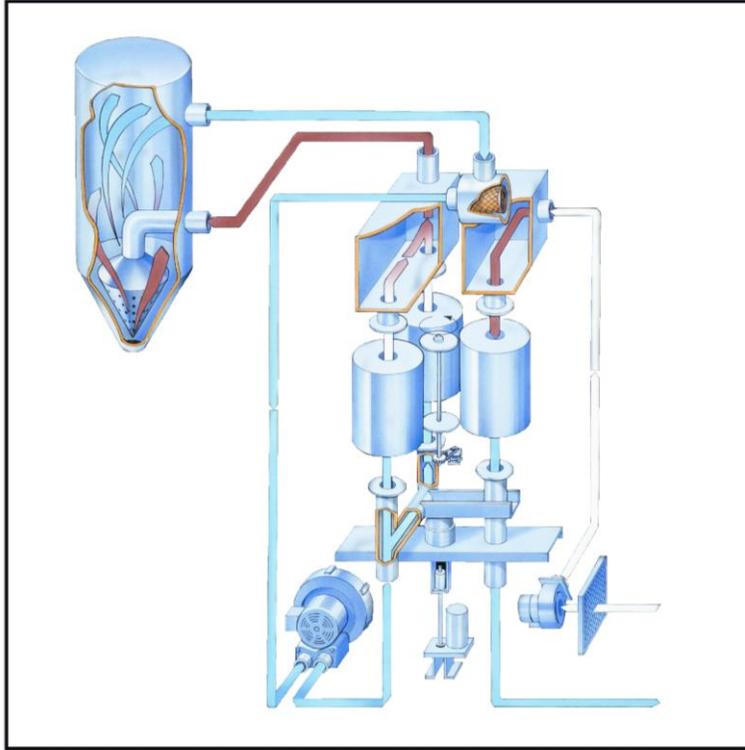

TD-DRYER AIR FLOW SCHEMATIC

The **PROCESS** air flow circuit blower, moves air through the dry desiccant bed that is in the process position, removing moisture from the air down to below a -40° dew point. The air then passes through the process heater box, then to the hopper. This heats the dry air to a precise temperature, to maximize the drying effect on the resin material in the hopper. The heated dry air then percolates through the resin material in the hopper, absorbing moisture in the resin. The wet air then returns to the dryer, to repeat the sequence. A process cycle timer will force the beds to rotate to the next position, so the bed in the Process position, can move to the Regeneration or **REGEN** position.

The **REGEN** air flow circuit blower, moves filtered air through the Regen heater box that heats the air up to 550° F. The hot air then passes through the bed, heating the desiccant beads. This causes the desiccant beads to release moisture instead of absorbing moisture. The water laden air exits the dryer carrying all the moisture with it.

The process cycle timer will force the beds to rotate to the next position, so the hot bed can cool down.

The **COOL DOWN** air flow circuit has an orifice that allows a small amount of the process air to flow through the desiccant bed to help cool the bed down, and adds the heat to the process air to conserve energy. When the process cycle timer times out, the beds will rotate again to repeat the cycle.

Thoreson-McCosh Inc

**** SECTION 3 ****

QUICK START

After uncrating your Thoreson-McCosh Inc. equipment, the unit should be inspected for damage that may have happened during transportation. If any damage is found, it should be reported to the carrier as soon as possible. Most dryers are held to the pallet with Z brackets. You must remove the side panels to remove these Z brackets. On larger dryers, there are wood supports inside the dryer to support the desiccant beds during transport. These must be removed before power or air is connected to the dryer. The dryer can be lifted off the pallet with a hi-low or Lift. Insure that the unit does not tip off the hi-low or lift

The dryer and material drying hopper can be placed on any reasonable flat surface and should be as close to each other as possible to prevent thermal and air flow losses. If the material is going to be dried at temperatures above 220°, then an after-cooler unit should be purchased and installed. If the material drying temperature is below 150°, then a pre-cooler should have been ordered with the unit. Both of these coolers will need a water supply of 3 to 4 GPM with a maximum of 100 PSI should be used.

Units requiring compressed air, will need a minimum of 65 PSI and a maximum of 120 PSI. The 3 phase power lines from the customers disconnect, should be connected to L1, L2 and L3. Check the serial tag for power information to select the proper wire and protection device. The unit must have proper grounding.

The hopper is coated with oil and will need to be cleaned before filling with material. Some hoppers are large enough to be transported in separate pieces, and will need some assembly. After cleaning the barrel, cone and diffuser, install the diffuser with the plate and bolts included. When connecting the hoses to the hopper, an insulated hose is recommended for the process air, and non-insulated hose or air tight metal duct work is preferred for the return, air.

When starting the dryer for the first time, the blower direction needs to be checked. Smaller units, (TD-12 thru TD-360), will give an alarm of “**Process Blower Direction Flt**”, if the process blower is going the wrong way. Switching any 2 incoming power wires, will change the direction of the blower.

Larger dryers, (TD-480 thru TD-2000), the direction of the blower will need to be verified visually, by removing a side panel and looking at the cooling impeller on the back of the blower motor.

Switching any 2 incoming power wires, will change the direction of the blower. Since some units have two, 3 phase blowers, never change the motor power wires, only the incoming power wires.

NOTE: RUNNING THE BLOWER IN REVERSE WILL DAMAGE THE DRYER!

Next, fill the hopper with material. When the material has covered the diffuser, the dryer can be turned on. Give the first batch of material sufficient residence time to dry. Usually this is 3 to 4 hours. Check with the manufacturer of the material resin for suggested residence time and temperature.

After starting the dryer, you will notice a visual alarm stack light. The green light will be on when the dryer is running. The green light will flash during the heater shut down period before a shift. The red light will be on when there is an alarm present. If the “Alarm light with buzzer” was purchased, this will have an audible alarm sound when there is an alarm present.

Thoreson-McCosh Inc


**** SECTION 4 ****

DRYER HMI INSTRUCTIONS

The Human Machine Interface or HMI, is a touch screen that enables the user to turn the unit Off and ON, and to monitor and modify the various set points associated with the unit.

SECTION 4.1: DISPLAYING THE PROGRAM # & CYCLE TIMES

When the dryer is first powered up, the First screen will display for a few seconds. This screen displays the Program # and the Dryer Process & Regen Cycle times. After a short delay, it will display the Main Screen. If it doesn't switch to the Main Menu screen, touch anywhere on the screen, and it should display the Main Menu screen.

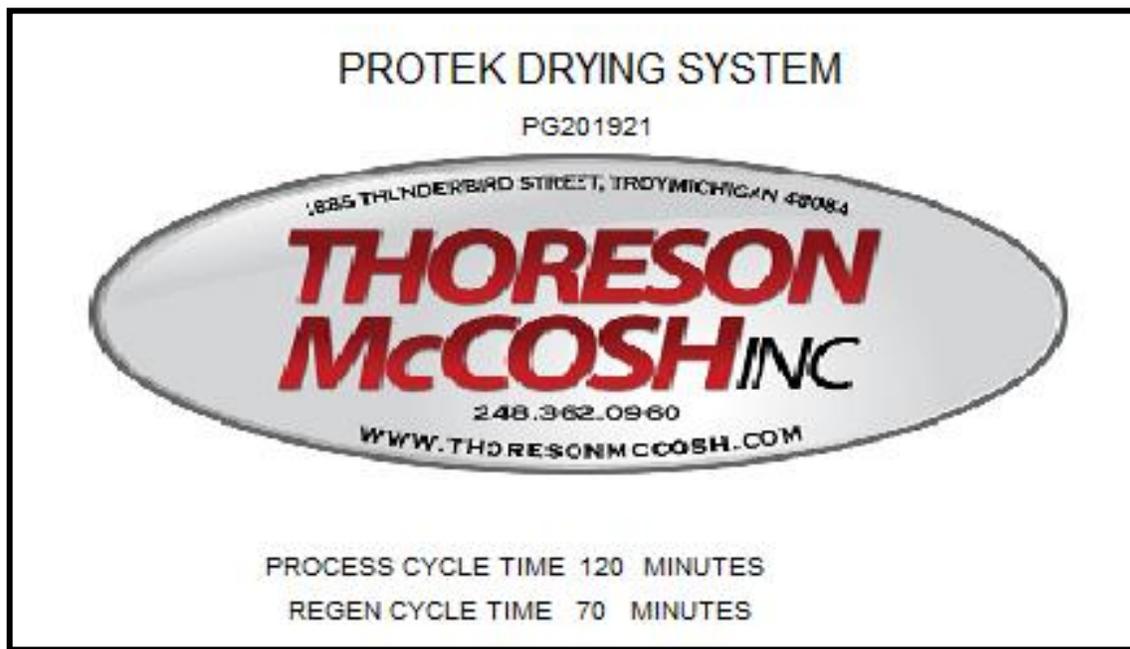

FIRST SCREEN

Thoreson-McCosh Inc

SECTION 4.2 MAIN MENU SCREEN

The Main Menu Screen consists of 2 sections. The upper section is the *Dryer Mode* and the bottom section is for the options *Loader Mode & Pre-Heater Mode*.

FIRST SCREEN: Press this button to return to the first screen to see the Program number.

TIME & DATE: Displays the current Time and Date.

HEATER STATUS: This indicates if the system heaters are in the *System Cool Down* or *Shift Cool Down* mode.

DRYER MODE:

7 DAY TIMER: Press this button to put the dryer into the *7 Day Timer Mode* & to display the *7 Day Timer* screen. This screen allows the user to monitor the dryer when it is in the *7 Day Timer Mode*.

OFF: Press this button to turn the dryer **OFF**.

ON: Press this button to turn the dryer **ON** and displays the Dryer Status screen.

DRYER STATUS: Press this button to display the *Dryer Status* screen. This screen has buttons that display the status of the dryer. Many displays are interactive to edit set points.

SETUP: Press this button to display the *Dryer Setup* screen and to edit all set points of the dryer.

ALARMS: Displays the *Dryer Faults* screen.

MONITOR: Displays a Graphical layout of the dryer screen, which is a flow chart of the dryer with interactive displays of the status of the dryer.


DRYER OPTIONS:

The bottom section could display the Loader Mode or the Pre-Heater Mode if either was purchased.

LOADER MODE: Two station loading system.

PRE-HEATER MODE: A one, two or three position Multi hopper drying system.

These options will be described later.

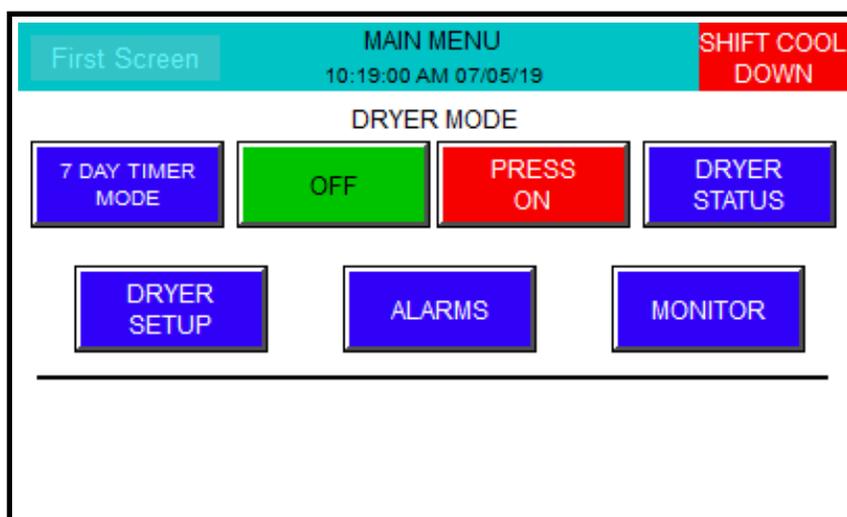

MAIN MENU SCREEN

Thoreson-McCosh Inc

SECTION 4.3 DRYER STATUS SCREEN

The *DRYER STATUS* Screen has 3 navigation buttons and several displays to monitor the dryer status. Many of these buttons are interactive, so the user can modify the dryer's set points.

NAVIGATION BUTTONS:

- MAIN:** Pressing this button will return to the *Main Menu* screen.
CHART: Pressing this button will display the Chart screen, where the Dew Point and some temperatures are displayed in chart form.


DISPLAYS:

- PROCESS HEATERS:** Indicates if the Process Heaters are *ON* or *OFF*. The indicator light will flash green when the heaters are on.
TD-480 & up may display a Bank 2 indicator.
- PROCESS TEMP:** Displays the Actual air temperature coming out of the process heater box.
- SETPT:** Displays the Process heater set point. Pressing the indicator button will display a keypad to adjust the Process temperature set point.
- ALARM:** Indicates the status of the dryer faults. Pressing this indicator button will display the *Dryer Faults* screen. (See page 15)
- DEWPOINT:** Displays the actual Dew point of the Process air that the dryer is producing. Pressing this indicator button will display the Dryer Setup Temps screen, where the Dew point set points can be adjusted.
- RETURN AIR:** Displays the actual temperature of the air returning from the Hopper(s).
- REGEN HEATERS:** Indicates if the Regen heaters are *ON* or *OFF*. The indicator light will flash green when the heaters are on.
- REGEN TEMP:** Displays the actual air temperature coming out of the Regen heater box, and entering the bed that is in the Regeneration position.
- REGEN EXH:** Displays the actual air temperature coming out of the bottom of the bed that is in the Regeneration position.
- HEATER COOL DOWN:** This indicator light only displays when the dryer has been turned OFF. All heaters will be disabled and the indicator will flash until the Blower Off Delay time has been achieved. Then the blowers will turn Off.
- SHIFT COOL DOWN:** This indicator light only displays when the dryer Cycle time has been achieved and the beds are preparing to shift or rotate to the next position. All heaters will be disabled and the indicator will flash until the Shift Delay time has been achieved. Then the blowers will turn Off and the dryer will start a bed rotation cycle, moving each bed into the next position.
- CYCLE TIME REMAINING:** Displays the Remaining Process Cycle Time. The Cycle time of each size dryer varies because of size and if the Dew Point shift is enabled or not. The cycle is long enough to allow the beds time to go through a Regeneration and a Cool down period.
- REGEN TIME REMAINING:** Displays the Remaining Regen Cycle Time. During this cycle, the air drying out the beds is heater to 550°F.


Both cycle times start after the Bed Rotation Cycle has finished.

Thoreson-McCosh Inc

DRYER STATUS SCREENS

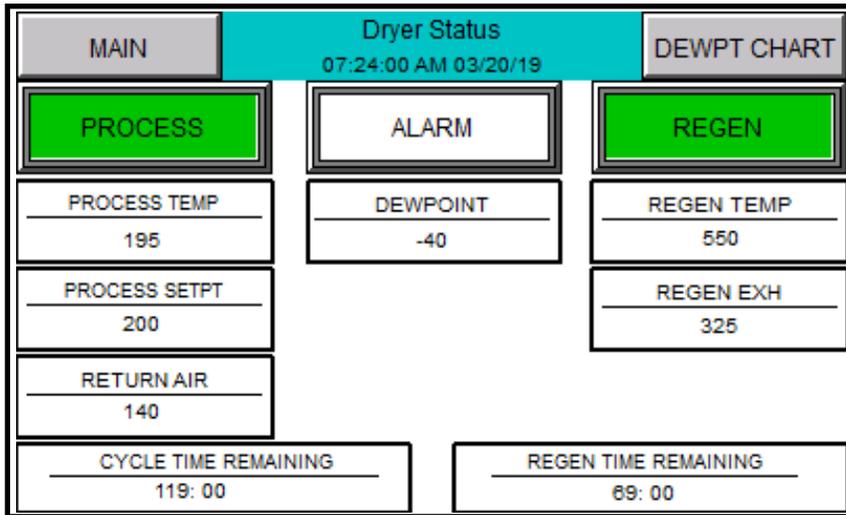

DRYER STATUS SCREEN

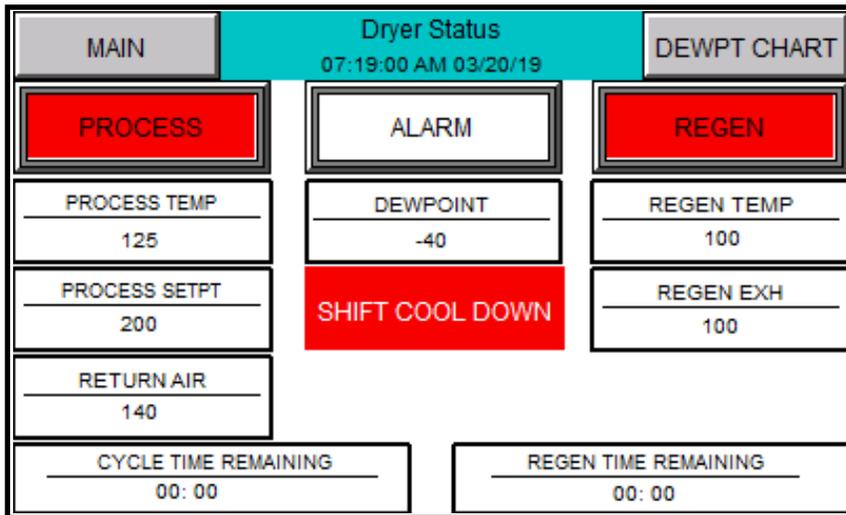

DRYER STATUS SCREEN DURING SHIFT COOL DOWN

Thoreson-McCosh Inc

SECTION 4.4

DRYER SETUP SCREENS


There are 2 Dryer Setup screens. TEMPS & TIMERS

DRYER SETUP TEMPS: FAHRENHEIT (DEG F) (CELSIUS DEG C)

- MAIN:** Pressing this button will return to the Main Menu screen.
NEXT: Pressing this button will display the Dryer Setup Timers screen.
- DEG F: DEG C:** Press this button to toggle the temperature displays from Fahrenheit to Celsius.
- PROCESS TEMP:** Press this button to edit the Process Temperature set point.
DEW POINT SHIFT: Press this button to Enable or Disable the Dew point Shift function.
- DEW POINT SHIFT SET POINT:** Press this button to edit the desired Dew point temperature that the dryer will shift. After the Process cycle timer has expired, the bed rotation cycle will be delayed until the dew point reaches this value.
- DEW POINT ALARM SET POINT:** Press this button to edit the desired Dew point temperature that the Dew point alarm will activate.
- PLC I/O:** Press this button to see a screen that shows all the PLC inputs and outputs.

DELTA-T: OPTION

- EXHAUST TEMPERATURE SET POINT:** If the Delta-T option is installed, the Exhaust Temperature Set point needs to be set. *SEE DELTA-T*. Page #
- DIFF RETURN TEMP SET POINT:** Differential return temp set point needs to be set. *SEE DELTA-T*. Page #

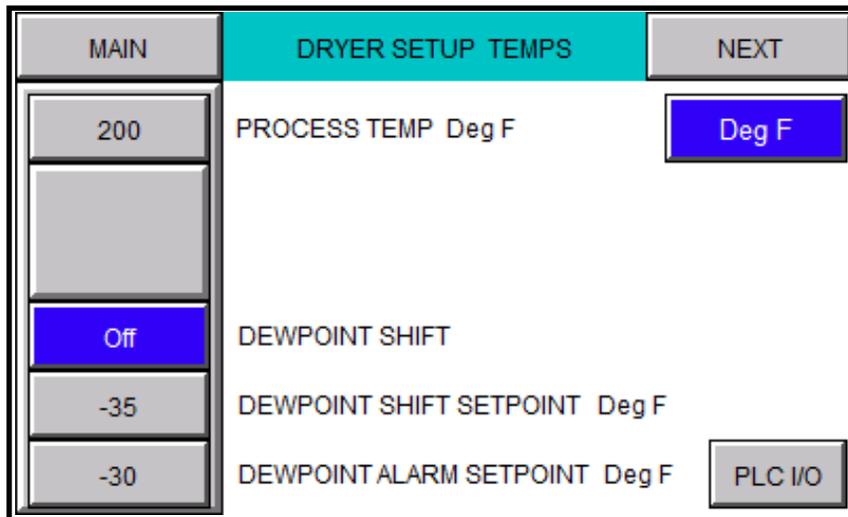


DEG F

DRYER SETUP TEMPS SCREEN

Thoreson-McCosh Inc

When the Deg C button is active, the button and the temperatures should be displayed in a teal color.

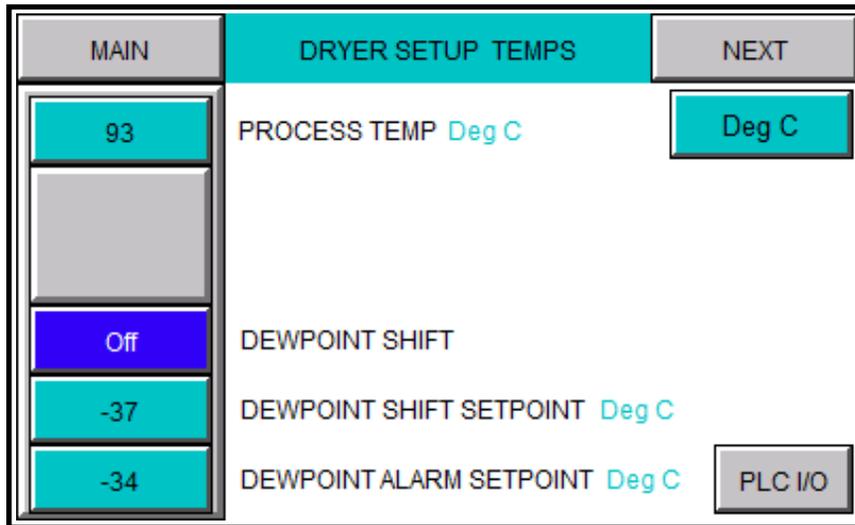


DEG C DRYER SETUP TEMPS SCREEN

Press the NEXT button to display Dryer Setup Timers screen.

Thoreson-McCosh Inc

SECTION 4.5: DRYER SETUP TIMERS SCREEN

- 7 DAY TIMER:** The dryer can be run unattended in the 7 Day Timer Mode. Press this button to edit the times and temperatures for the unattended use of the dryer
- SET CLOCK:** Press this button to display the Set Clock screen. Use this screen to change the current time and date.
- RESTART TIMERS:** Press and hold this button for 5 seconds to restart the Cycle, Regen and Alarm timers.
- FORCE BED SHIFT:** Press this button to force a bed shift. (Bed rotation)
CAUTION: *Shifting the beds early, can cause a spike in the Process temperature.*
- BLOWERS OFF DELAY:** Press this button to display the Blower Delays screen.
- DRYER PARAMETERS:** This button is reserved for Thoreson-McCosh.

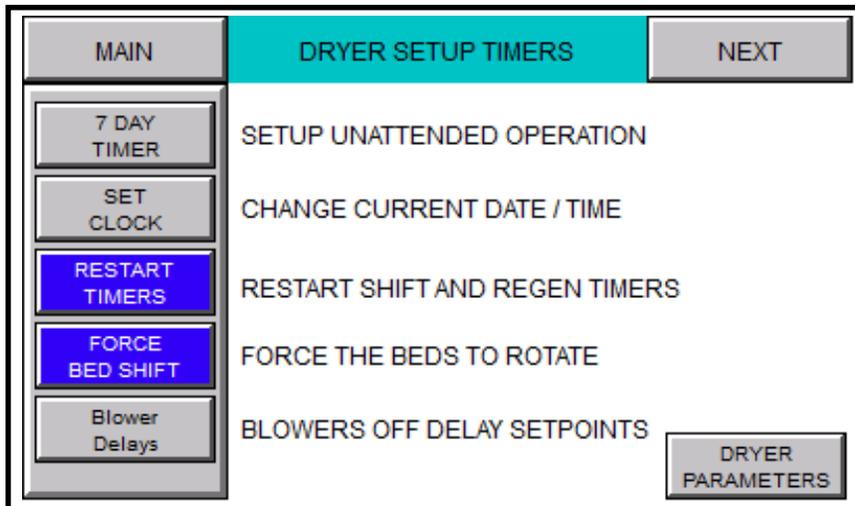


DRYER SETUP TIMERS SCREEN

Thoreson-McCosh Inc

SECTION 4.6: BLOWER DELAYS SCREEN

- REGEN BLOWER OFF DELAY:** Press the **REGEN BLOWER OFF DELAY** button to edit the Regen Blower OFF delay. The Regeneration cycle is controlled by a timer and also by temperature. If the Regen Cycle timer has expired, or the bed exhaust temperature has exceeded 350°, (Regen Power Saver Option only), then the Regen heaters will turn off, and the Regen blower will continue to run for the set point selected, to evacuate the heat and cool down the heaters.
- SHIFT DELAY:** Press this button to edit the Shift Delay set point. The Process Cycle is controlled by a timer and by Dew point. If the timer set point has expired, and the Dew point set point has been satisfied, (if on), then the shift delay time will shut off the process heaters and any Pre-heaters that are connected to this dryer. This will purge the heat from the heater boxes to prevent a temperature spike to the resin in the hopper and cool down the heaters.
- BLOWER OFF DELAY:** Press this button to edit the Blower Off Delay set point. When the dryer is turned Off or the 7 Day timer turns the dryer Off, the heaters in the dryer and the hoppers will turn off and the Process blower will continue to run for the value of the set point.

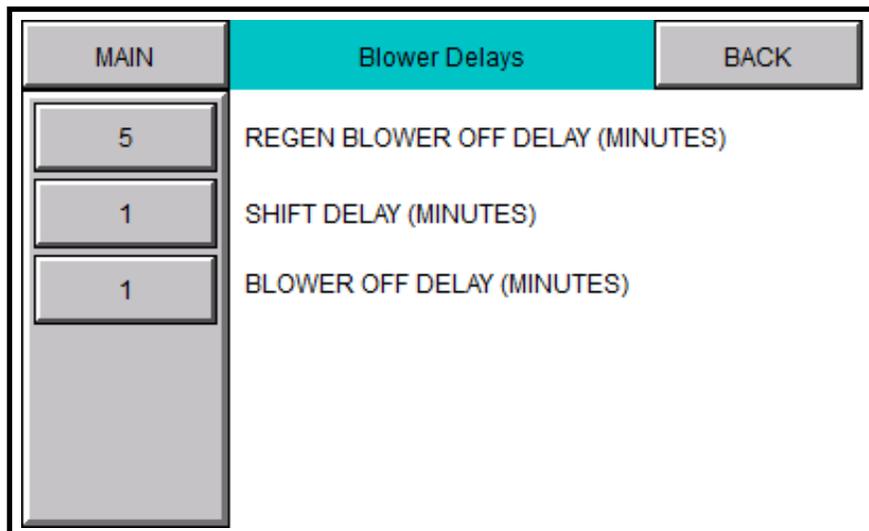


BLOWER DELAYS SCREEN

Thoreson-McCosh Inc

SECTION 4.7: SET CLOCK

Use the buttons to adjust the time and date. Then press the *SET* button to enter the new values into the PLC real time clock. Press the *SETUP* button to return to the dryer setup screen. All values displayed will be updated when the *SET* button is pushed.

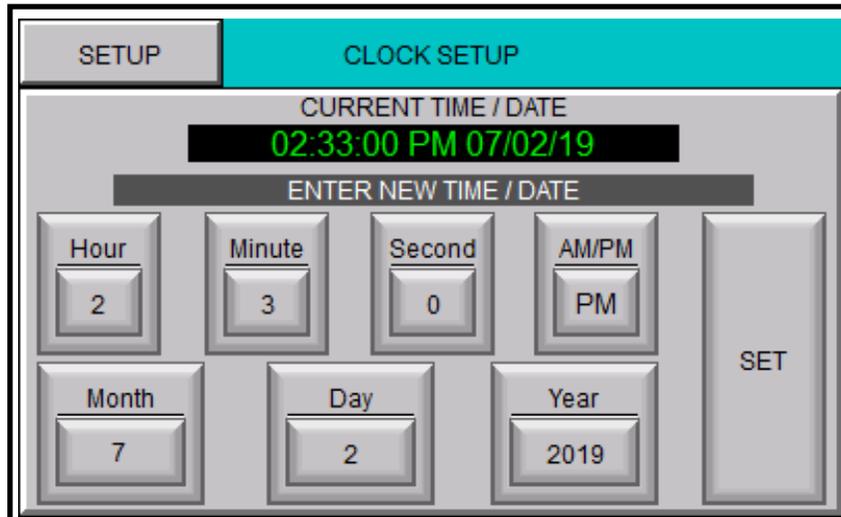

CLOCK SETUP SCREEN

Thoreson-McCosh Inc

SECTION 4.8: 7 DAY TIMER

The 7 DAY TIMER SETUP screens have 2 navigation buttons, a Date & Time display, and a multifunction screen, 1 for each day of the week.

SETUP: Press this button to return to the dryer setup screen

NEXT: Press this button to display the next day screen.

There is a separate screen for each day of the week, starting with Sunday.

ACTIVE: This enables/disables this line of settings.

HOUR: This sets the hour to make a change in the process temperature or to turn the dryer OFF or ON.

MIN: This sets the minutes.

A/P: This sets AM or PM.

DRYER ON/OFF: This selects if the dryer is OFF or ON.

TEMP: This sets the desired temperature to change to.

SETUP	7 DAY TIMER SETUP						NEXT
02:31:00 PM 07/03/19							
MONDAY							
ACTIVE	HOUR	MIN	A / P	DRYER	ON/OFF	TEMP	
On	3	30	AM	Off	On	100	
On	7	0	AM	Off	On	180	
On	4	30	PM	Off	On	0	
Off	0	0	AM	Off	On	0	
Off	0	0	AM	Off	On	0	

7 DAY TIMER SETUP SCREEN

The current screen shows:

The dryer comes on at 3:30 AM and sets the process temperature to 100°.


At 7:00 AM, the process temperature changes to 180°.

At 4:30 PM, the dryer turns OFF.


Thoreson-McCosh Inc

SECTION 4.9: CHART SCREEN

The CHART SCREENS display about a 8 hour period of the dew point and the actual temperature values of the dryer.

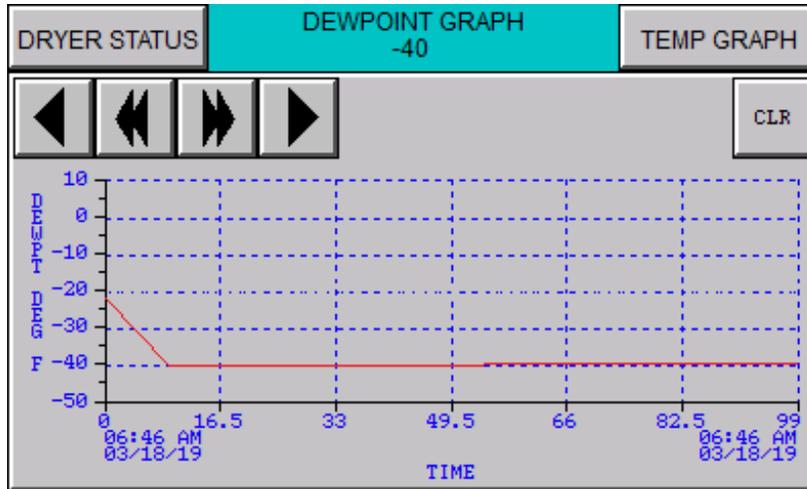

DEW POINT GRAPH

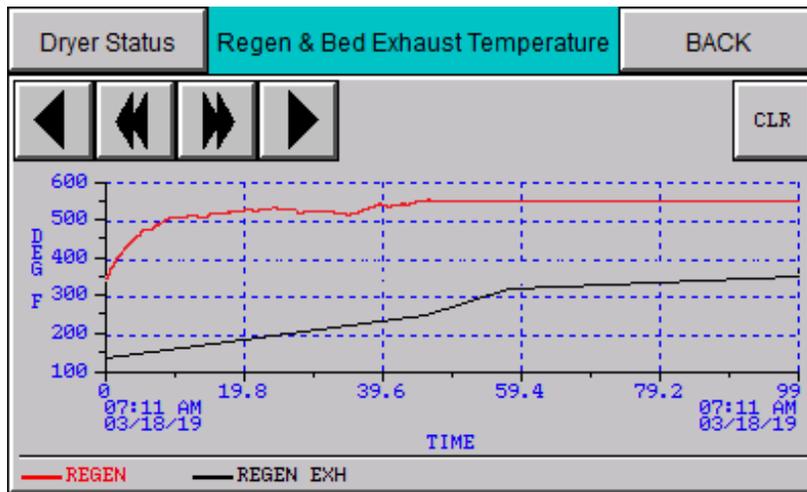

TEMPERATURE GRAPH

This graph shows:
Regen heater Temperature
Regen Exhaust Temperature

Thoreson-McCosh Inc

SECTION 4.10: DRYER FAULTS SCREEN

The Dryer Faults screen, has 3 buttons across the top.

MAIN: Press this button to return to the MAIN MENU screen.

FAULT ACK: Press this button to acknowledge the alarm. This will not clear the history.

ALARM SILENCE: This button will silence the audible alarm for 5 minutes. The visual alarm will stay on.

Alarms in Red have not been acknowledged. So these are still active alarms.

Pressing the Clear All button will clear the alarms in History that have been acknowledged.

MAIN		DRYER FAULTS		ALARM SILENCE		FAULT ACK					
Alarm Summary				Total of 4 Alarms							
▶ 1	Dew point High					02-JUL-19 02:33 PM					
2	HOPPER 1 TEMPERATURE LOW					02-JUL-19 02:33 PM					
3	HOPPER 2 INLET T/C FAULT					02-JUL-19 02:33 PM					
Page Up		Page Down		Line Up		Line Down		Detail		Clear All	

DRYER FAULTS SCREEN

Thoreson-McCosh Inc

LIST OF DRYER FAULTS:

PROCESS BLOWER STARTER FAULT:	The Process blower contactor is open when the Process blower should be on. The Process blower overload relay may be tripped, or contactor is malfunctioning.
PROCESS BLOWER DIRECTION:	The Process blower is rotating backwards.
PUSH-UP MOTOR FAULT:	The push-up motor failed to pull down the beds.
BED ROTATE FAULT:.....	The Desiccant beds failed to rotate within 3 minutes of starting a rotate cycle.
AIR CYLINDER FAULT:	The manifolds failed to open completely in less than 30 seconds.
DEW POINT HIGH:	The actual Dew Point is higher than the alarm set point for more than 3 minutes.
PROCESS BLOWER FILTER DIRTY:	The process filter is dirty.
PROCESS TEMP HIGH:	The Process air temperature is 30° over the set point.
PROCESS TEMP LOW:	The Process air temperature is 20° below the set point.
REGEN HEATER FAULT:	The Regen air temperature has not reached 450° in the first 10 minutes of the Regen cycle. (400° for TD-12/24)
REGEN BLOWER FAULT	The Regen blower is not blowing or has reduced air flow.
____T/C FAULT:.....	The ____ thermocouple is open. The temperature for this probe should display as 999°
PROCESS HEATER SAFETY OPEN:	The Process heater Safety Thermostat is open.
REGEN HEATER SAFETY OPEN:	The Regen heater Safety Thermostat is open.

The Safety Thermostat alarm needs to be acknowledged before the heaters will energize again.

LIST OF PRE-HEATER FAULTS:

T/C NO COM	There is no communications between the ADAM T/C module and the PLC serial port.
HOP # TEMP HIGH:.....	Hop1, Hop2,... Air temperature is 30° above the set point.
HOP # TEMP LOW:	Hop1, Hop2,... Air temperature is 20° below the set point.
HOP# T/C FAULT:	Hop1, Hop2,... thermocouple is open.

LIST OF LOADER FAULTS:


REC1 / 2:	Receiver 1 or 2 has not loaded any material for the No Load Set point value. This Alarm is self-clearing. Enter a set point of 0 (zero), to disable the alarm.
PUMP OVERLOAD OPEN	The pump thermocouple or overload relay is open.

Thoreson-McCosh Inc

SECTION 4.11: DELTA-T

The Delta-T function determines the material has achieved an acceptable dry level based on the idea that when the hopper air return temperature approaches the hopper air inlet temperature, the material is dry. Obviously, due to losses of energy in a drying environment, the air inlet and outlet will never be the same, but at some point, the difference is small enough to indicate that the material can be considered dry. At this point, the process air flow heaters will turn off, and the air flow valve, (*if equipped*), will close. The process blower will continue to cycle keeping positive dry air pressure in the drying hopper. This will prevent the material from being over dried and also keep it from being saturated with moisture. This also saves energy.

The **Inlet Temperature Set point** should be set to the drying temperature recommended by the material manufacturer or supplier. The **Outlet Temperature Set point** is determined by drying the material for the manufactures suggested residence time. (Typically 3 to 4 hours). Note the **Outlet Temperature Set point** at the end of the residence time and set the Hopper **Outlet Temperature Set point** at this temperature. If the Hopper **Outlet Temperature** falls below the **Differential Set point**, the heaters will come back on, and the air flow valve, (*if equipped*), will open.

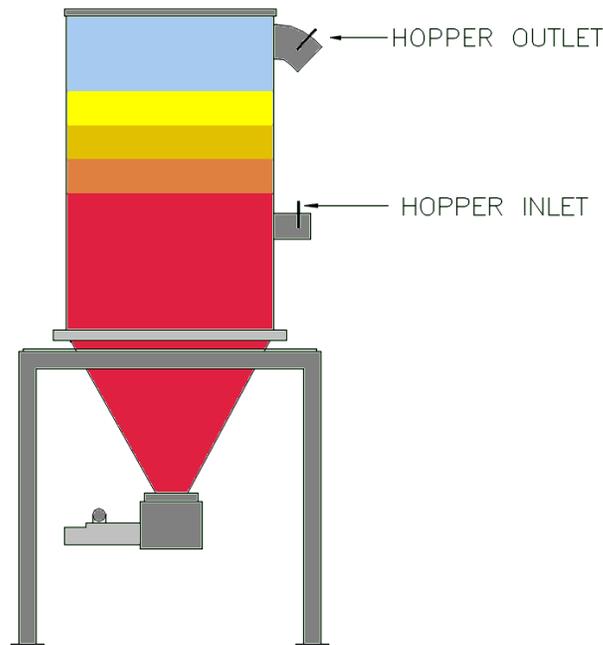

DELTA-T FUNCTION

Delta-T example:

Hopper Inlet: Resin Manufacture suggested drying temperature.**225°F (107°C)**

Hopper Outlet: Temperature after 3 hours:**195°F (91°C)**

Differential: Small hopper**11-15°**

Medium hopper.....**8-10°**

Large hopper.....**5-7°**

Inlet Set point**225°F (107°C)**

Outlet Set point**195°F (91°C)**

Differential Set point**9°F (5°C)**

Thoreson-McCosh Inc

PLC I/O SCREEN

The PLC I/O screen displays the status of the PLC inputs and outputs.

MAIN		PLC I/O			
<input type="radio"/> I:0/0	<input type="radio"/> I:0/10	<input type="radio"/> O:0/0	<input type="radio"/> O:0/8		
<input type="radio"/> I:0/1	<input type="radio"/> I:0/11	<input type="radio"/> O:0/1	<input type="radio"/> O:0/9		
<input type="radio"/> I:0/2	<input type="radio"/> I:0/12	<input type="radio"/> O:0/2	<input type="radio"/> O:0/10		
<input type="radio"/> I:0/3	<input type="radio"/> I:0/13	<input type="radio"/> O:0/3	<input type="radio"/> O:0/11		
<input type="radio"/> I:0/4	<input type="radio"/> I:0/14	<input type="radio"/> O:0/4			
<input type="radio"/> I:0/5	<input type="radio"/> I:0/15	<input type="radio"/> O:0/5			
<input type="radio"/> I:0/6	<input type="radio"/> I:0/16	<input type="radio"/> O:0/6			
<input type="radio"/> I:0/7	<input type="radio"/> I:0/17	<input type="radio"/> O:0/7			
<input type="radio"/> I:0/8	<input type="radio"/> I:0/18				
<input type="radio"/> I:0/9	<input type="radio"/> I:0/19				

Thoreson-McCosh Inc

****SECTION 5:****

OPTIONAL LOADER MODE:


SECTION 5.1: LOADER SETUP SCREEN

The loader can consist of up to two receivers.

OFF: Press this button to turn the loading system Off.

AUTO: Press this button to turn the loading system On.

LOADER STATUS: Press this button to display the Loader Status screen.

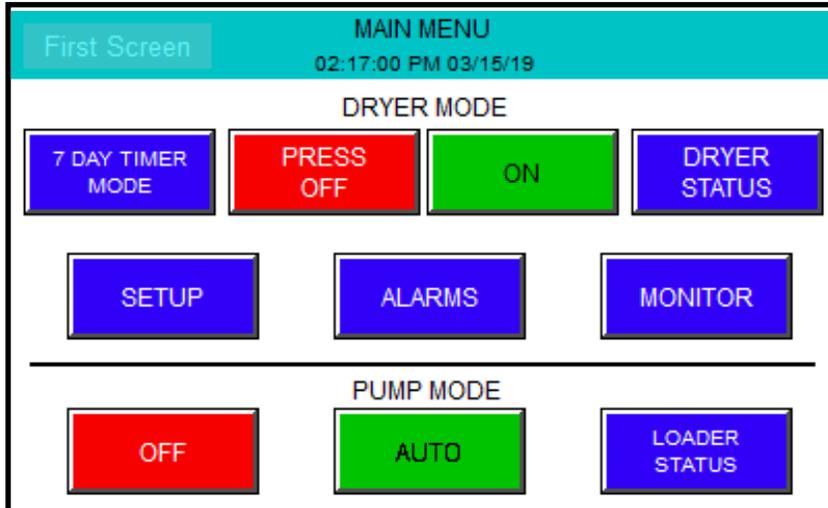


MAIN MENU SCREEN LOADER MODE

LOADER SETUP Screen has 3 navigation buttons and a PUMP MODE selector.

MAIN: Press this button to return to the Main Screen.

RECEIVERS SETUP: Press this button to display the Receivers Setup screen.

BLOW BACK SETUP: Press this button to display the Blowback Setup screen.

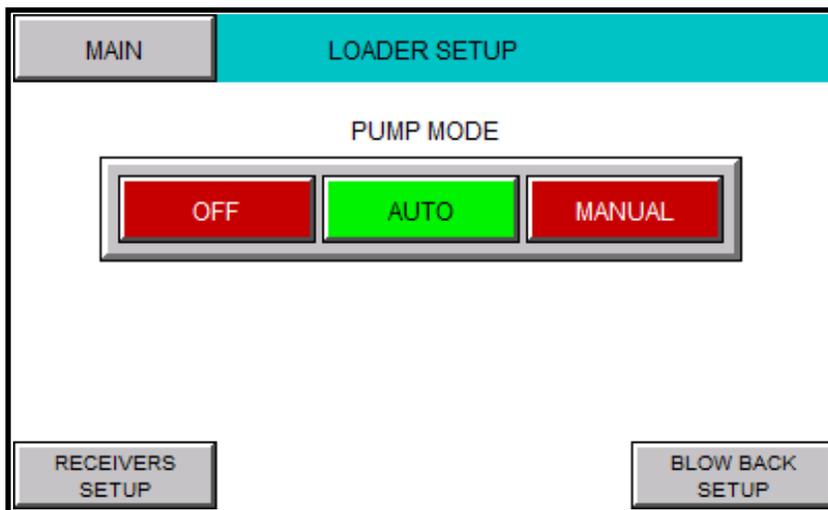

LOADER SETUP SCREEN

Thoreson-McCosh Inc

PUMP MODE SELECTOR: The Pump mode selector consists of 3 buttons:
OFF: Press this button to turn the pump off.
AUTO: Press this button to enable the loading system.
MANUAL: Press this button to do a manual load of a receiver. This is mostly used as a diagnostic tool.


SECTION 5.2: RECEIVER SETUP SCREEN

The receiver setup screen consists of 2 navigation buttons & 7 buttons for each receiver.

LOADER SETUP: Press this button to go back to the Loader setup screen.
LOADER STATUS: Press this button to go to the Loader status screen.

RECEIVER ENABLE: Press this button to go toggle the Receiver *Off* or *ON*.
LOAD TIME: Press this button to adjust the station load time set point.
DUMP TIME: Press this button to adjust the dump time set point.
NO LOAD ALARM: Press this button to adjust the no load set point. If the receiver goes through the selected amount of cycles without the limit switch changing state, a No Load alarm turns on. Selecting zero will disable the no-load alarm for that station.
REGRIND PERCENTAGE: Press this button to adjust the amount of regrind you want to mix with the virgin material. Selecting zero will pull only virgin material.

MANUAL LOAD ON: Press this button to initiate a manual load of the receiver selected. This only works if the pump mode selector is in *Manual*. The receiver will stop after 1 load cycle.
MANUAL LOAD OFF: Press this button to stop a manual load of the receiver selected.

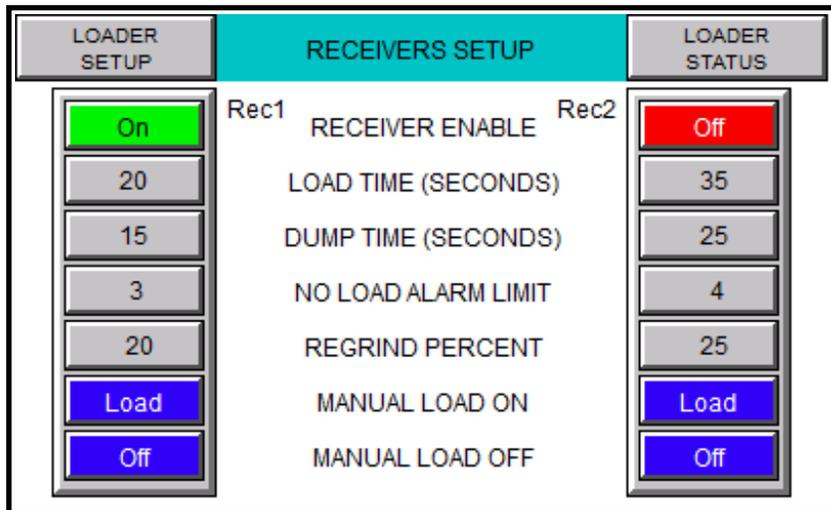


RECEIVER SETUP SCREEN

Thoreson-McCosh Inc

SECTION 5.3: LOADER STATUS SCREEN

The Loader Status screen consists of 2 navigation buttons & 6 indicator lights for each receiver.

- MAIN:** Press this button to return to the Main Screen.
LOADER SETUP: Press this button to go back to the Loader setup screen.
- REC ENABLED:** Displays whether the receiver is *Off* or *ON*.
LIMIT SWITCH: This indicates if the limit switch is open (bin empty) or closed (bin full).
REC STATUS: This indicates if the station is *Loading* or is *Idle*.
LOAD TIME REMAINING: Displays the remaining Load time.
DUMP TIME REMAINING: Displays the remaining Dump time.
NO LOAD ALARM: Displays when there is a No-Load Alarm

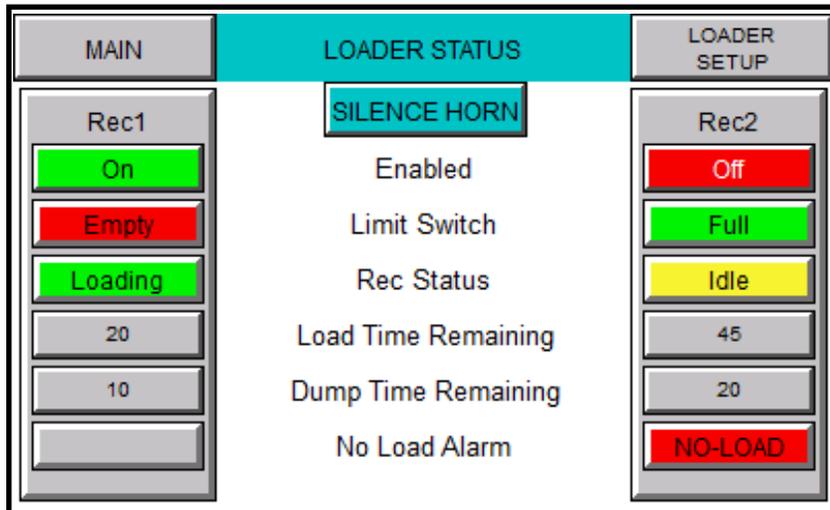


RECEIVER SETUP SCREEN

Thoreson-McCosh Inc

SECTION 5.4: LOADER SETUP BLOWBACK SCREEN

- MAIN:** Press this button to return to the Main Menu screen.
- NEXT:** Pressing this button will take you back to the Dryer Setup - Page1 screen.
- NUMBER OF PULSES:** Press this button to adjust the number of blowback pulses wanted.
- PULSE ON TIME:** Press this button to adjust how many seconds you want the pulse of Compressed air on to clean the filter.
- PULSE OFF TIME:** Press this button to adjust the number of seconds needed to recharge the tank.
- LOADS BEFORE BLOWBACK:** Press this button to adjust how many times the system will go thru a load cycle before the blowback cycle will run again.

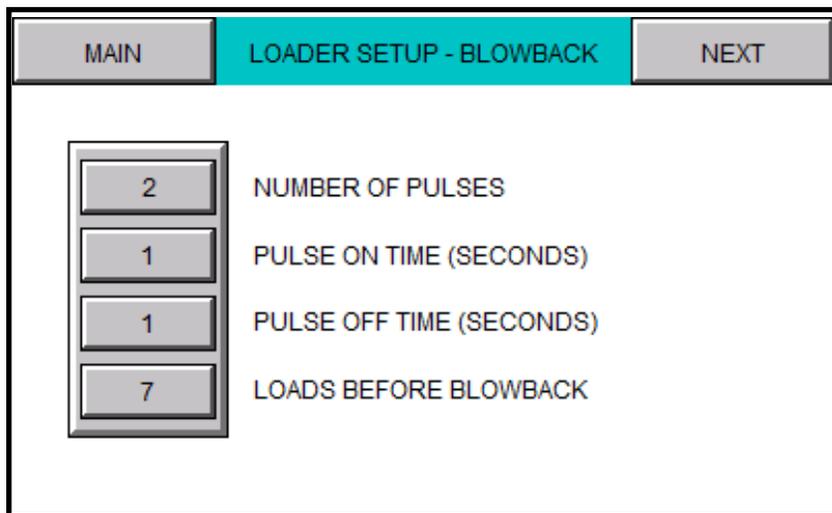

LOADER SETUP BLOWBACK SCREEN

Thoreson-McCosh Inc

****SECTION 6****


OPTIONAL PRE-HEATER MODE

SECTION 6.1: MAIN MENU PRE-HEATER MODE

The Pre-Heater option can control up to 3 multiple hoppers, with or without Delta-T.

HOPPER SETUP: Press this button to display the Hopper Setup screen.

HOPPER STATUS: Press this button to display the Hopper Status screen.

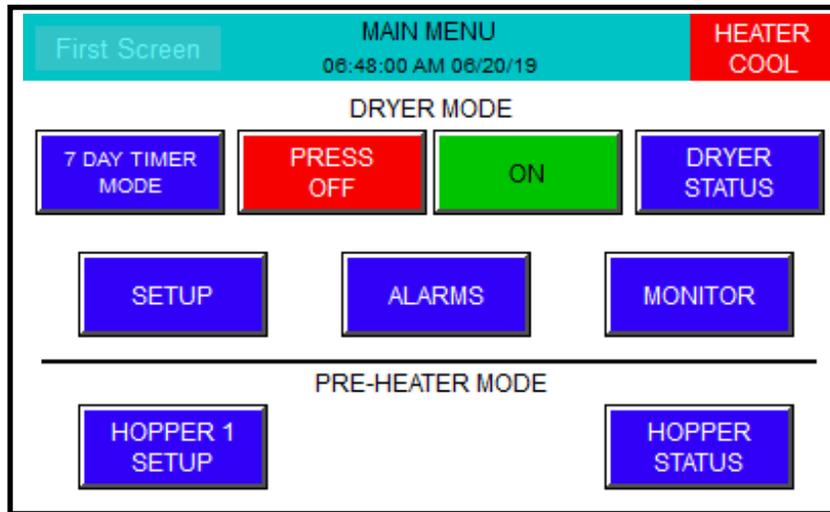


MAIN MENU SCREEN PRE-HEATERS MODE

Thoreson-McCosh Inc

SECTION 6.2: PRE-HEATER SETUP SCREEN

Each hopper has a setup screen that consists of 4 navigation buttons and 4 or 7 buttons to adjust & monitor hopper set points. This dryer package can only control up to 3 hoppers with the Delta-T option.

- MAIN:** Press this button to return to the Main Menu screen.
- HOPPER STATUS:** Press this button to display a graphical view of the hopper status.
- HOPPER (NEXT) SETUP:** Press this button to display the next hopper screen.
- HOPPER GRAPH:** Press this button to display a graph of the hopper.
- HOPPER OFF/ON:** Press this indicator button to turn the OFF or ON.
- HEATERS ON:** This indicates when the heaters are on.
- INLET TEMPERATURE SET POINT:** Press this to edit the Inlet temperature set point.
- INLET TEMPERATURE ACTUAL:** Displays the actual Inlet air temperature.
- OUTLET TEMPERATURE SET POINT:** Press this to edit the Exhaust temperature set point.
- OUTLET TEMPERATURE ACTUAL:** Displays the actual Exhaust air temperature.
- DIFF TEMPERATURE SET POINT:** Press this to edit the Differential Return Air set point.

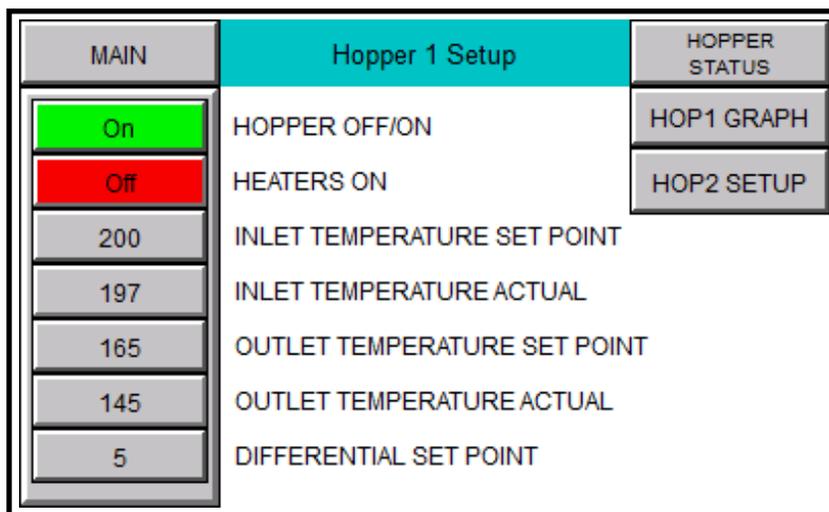

HOPPER SETUP SCREENS WITH DELTA-T


Thoreson-McCosh Inc

SECTION 6.3: HOPPER STATUS SCREEN


The hopper I/O screen displays information on all 3 hoppers on one screen.

Press the Main button to display the Main Menu screen.

Press the Hop# Setup screen to return to the hopper setup screens.

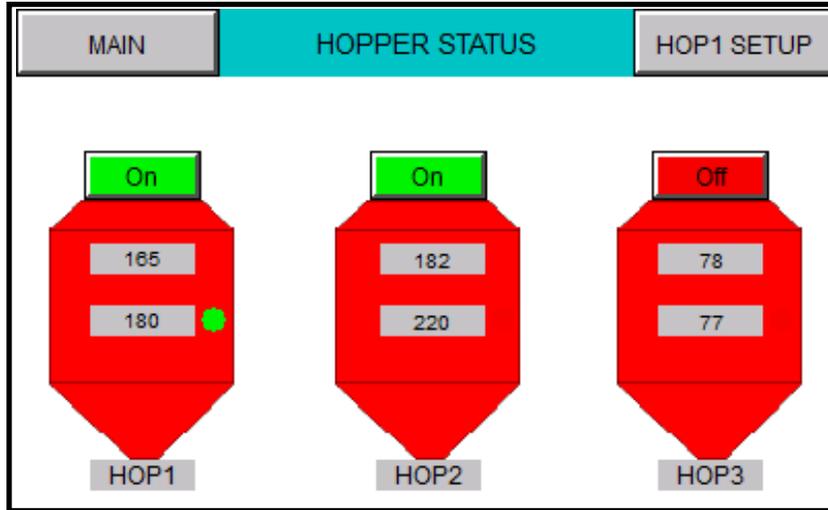

DELTA-T HOPPER STATUS SCREEN

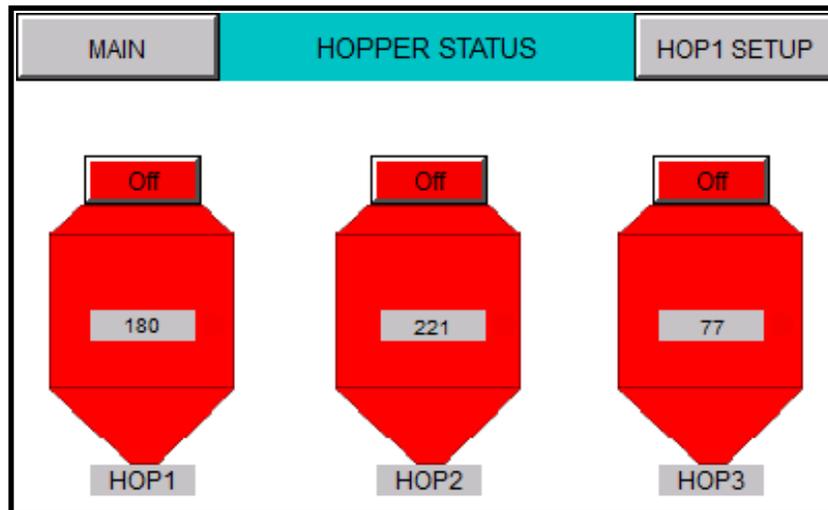

STANDARD HOPPER STATUS SCREEN

**** SECTION 7 ****

MAINTENANCE

BEFORE STARTING THE DRYER:

Visually Check The Drying System. Check that the delivery and return hoses are in good condition and are routed with a minimum of length and with no sharp bends. The hopper lid should be in place and well sealed. If a hopper loader is used, it should be mounted so that air leakage is minimized.

AFTER STARTING THE DRYER:

The drying temperature should match the recommended temperature specified by the material supplier. In general, as hot as possible without allowing thermal degradation or discoloration of the material being processed. If the hopper inlet temperature is lower than the dryer discharge, the dryer temperature set point should be increased to compensate for the temperature drop in the process air flow hose.

PRE-COOLER & WATER SAVER VALVE:

When drying a resin below 170°F (77°C), a pre-cooler will need to be installed on the dryer. A water saver valve can also be installed to control the water flow. This valve is temperature controlled and turns the water flow down when not in use.

FILTERS:

The process and regeneration filters should be checked weekly and cleaned with compressed air or replaced if necessary.

Remember to check the filter gasket and fix or replace as needed.

LUBRICATION:

The regeneration blower motor bearings may be lubricated every 6 months to extend blower life. A couple drops of S.A.E. 20 motor oil at each of the two motor bearings is recommended.

MOLECULAR SIEVE TEST:

When it is suspected that the molecular sieve needs replacement, there is a simple test that can be performed. A positive test does not ensure that the molecular sieve is in good condition. If there is a large percentage of broken pellets or dust, contamination from foreign matter, or most of the pellets are discolored, the desiccant should be replaced. New desiccant is light tan in color.

To test the desiccant's effectiveness, a sample should be regenerated in an oven at 600°F/ 316°C for about two hours. At the end of that period, place the desiccant into an air tight jar and allow it to cool down to room temperature for a minimum of 12 hours. Pour 30ml of water into a small glass. Determine and record the temperature of the water using a mercury thermometer. Into a similar dry glass, pour a quantity of desiccant that is 10% greater by volume than the water (33ml). Dry the thermometer and place it into the glass containing molecular sieve. With one quick motion, pour the water into the glass of desiccant. Observe the increase in temperature of the mixture while stirring with the thermometer and record the peak temperature. This will occur in about 20 to 30 seconds. Subtract the water temperature from peak temperature observed. If the temperature difference is 40°F/ 4°C or greater, the sieve is in satisfactory condition.

Thoreson-McCosh Inc

SECTION 7.1: REMOVING THE BEDS FOR TD-12 THROUGH TD-360

READ THE INSTRUCTIONS COMPLETELY BEFORE ATTEMPTING TO REMOVE THE BEDS!

Read instructions completely before attempting to remove the beds.

1. Remove the Fuses or turn OFF the circuit breakers for the process and regen heaters.
2. Remove side panels.
3. Power up the dryer and turn the dryer ON.
4. From the Main Menu screen, press the SETUP button.
5. Press the NEXT button to display the SETUP-DRYER (Page 2) screen.
6. Press the FORCE BED SHIFT button.
7. After the Manifold has pulled down, disconnect the power from the unit. DO NOT turn the dryer OFF with the controls. The manifold will go back up.
8. Loosen the band clamps that hold the bed tight up against the turret plates, and remove the bed from the unit. Secure the clamps so they don't catch on any thing in the unit.
9. Apply power and repeat items 6, 7 & 8 until all the beds have been removed.

Note: On some units, the bed turret assembly can be manually rotated if care is taken to rotate them slowly, and always in a left to right direction.

Inspect the center cavity at the top of the bed for any quantity of beads, which may indicate a damaged inner perforate screen.

Inspect the bottom part of the bed for the presence of any loose beads, which may indicate a damaged outer screen. If when the beds are refilled and there is evidence of bead leakage, the bed must be repaired or replaced.

To replace the desiccant:

- a) Remove the bed bead plate to gain access to the desiccant.
- b) Dump the desiccant beads out and vacuum the remaining beads out.
- c) Fill the beds with new desiccant - use only 4a type 8 x 12 size (0.080" diameter) desiccant beads. Fill beds as full as possible. Rock or vibrate the beds to promote settling of the beads. Add more desiccant to fill the beds and pack tight without breaking beads.
- d) Apply high temperature sealant (G.E. silicone RTV-106n sealant is recommended) and secure bed bead plates to beds.
- e) Reverse the bed removal procedure to replace the beds. Lift the beds into the dryer with bed bead plates up and positioned outward from the shaft. Make sure that the bolts for the band clamps are not strait out from the shaft. (The bolts can catch on frame parts and stall the rotate motor)
- f) Secure the beds tight against the turret plate with the band clamps.
- g) Start the dryer and let it operate for a few bed shift cycles while inspecting for leaks at the upper and lower bed seals.
- h) Shut off dryer and install side panels.
- i) After approximately 1-2 weeks of dryer operation check the bead level and add more desiccant if needed.

Thoreson-McCosh Inc

SECTION 7.2: REMOVING THE BEDS FOR TD-480 THROUGH TD-2000

READ INSTRUCTIONS COMPLETELY BEFORE ATTEMPTING TO REMOVE THE BEDS.

1. Remove the Fuses or turn OFF the circuit breakers for the process and regen heaters.
2. Remove side panels.
3. Power up the dryer and turn the dryer ON.
4. From the Main Menu screen, press the SETUP button.
5. Press the NEXT button to display the SETUP-DRYER (Page 2) screen.
6. Press the FORCE BED SHIFT button.
7. When the manifolds have pulled away from the beds, remove the rotate motor control relay from its socket. Place a 1" block inside of the upper and lower air cylinders. (2, side by side, if a single piston air cylinder). Remove the compressed air from the unit and make sure that the bed seals are far enough away from the beds to be able to slide the beds out of the turret plate. Remove power from the dryer.
8. Loosen the rotate motor bracket and remove the rotate chain. If there is not enough adjustment to remove the chain, use the master link to break the chain.
9. Using a HI-LO, place the forks on both sides of the manifold tube over the process blower. Lift the forks till just touching the beds. (DO NOT LIFT THE BED) Remove the bolts that hold the band clamps together and remove the bed by backing the HI-LO out of the unit.
10. Rotate the beds from left to right by hand so the next bed is in the same position as the first bed removed.
11. Repeat instructions 9 and 10 for the rest of the beds the bed from the unit. Secure the clamps so they don't catch on any thing in the unit.

Inspect the center cavity at the top of the bed for any quantity of beads, which may indicate a damaged inner perforate screen.

Inspect the bottom part of the bed for the presence of any loose beads, which may indicate a damaged outer screen. If when the beds are refilled and there is evidence of bead leakage, the bed must be repaired or replaced.

To replace the desiccant:

- a) Remove the bed bead plate to gain access to the desiccant.
- b) Dump the desiccant beads out and vacuum the remaining beads out.
- c) Fill the beds with new desiccant - use 4a type 8 x 12 size (0.080" diameter) desiccant beads only. Fill beds as full as possible. Rock the beds to promote settling of the beads. Add more desiccants to fill the beds and pack tight without breaking beads.
- d) Apply high temperature sealant (G.E. silicone RTV-106n sealant is recommended) and secure bed bead plates to beds.
- e) Lift the beds into the dryer with bed bead plates up and positioned outward from the shaft.
- f) Reverse the bed removal procedure to replace the beds. Make sure that the bolts for the band clamps are not strait out from the shaft. (The bolts can catch on frame parts and stall the rotate motor) and the lid clamp pads on the top of the bed don't touch the turret plate alignment bushings.
- g) Start the dryer and inspect for leaks at the upper and lower bed seals. Force a shift to check the seals on all beds in all positions.

Thoreson-McCosh Inc


SECTION 7.3: REPLACING THE DEW POINT SENSOR

The dew point sensor should be replaced once a year or when contaminated.

Note: *Never attempt to measure the resistance of the sensor. This will damage the sensor.*

To replace the sensor:

1. Remove power from the unit.
2. Locate the sensor manifold assembly. This is a manifold (block) with wires coming from the socket to the dew point board.
3. Remove the socket.
4. Unscrew the retaining nut.
5. Remove the sensor and insert from manifold.
6. Remove the insert from the sensor. Place the insert onto the new sensor.
7. Reverse steps 1-5.

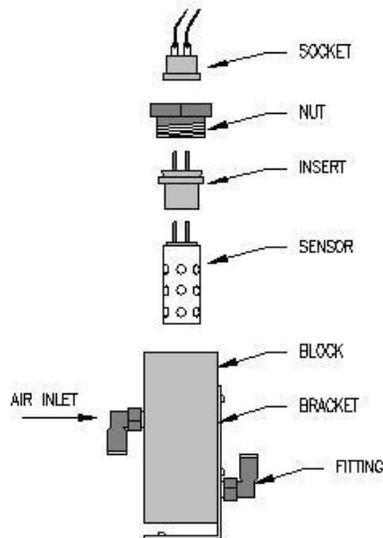

DEW POINT ASSEMBLY

SECTION 7.4: DISPOSING OF MERCURY CONTACTORS


When a mercury contactor needs to be replaced, care must be taken to properly dispose of the defective unit. Remove the contactor and place it in a plastic baggy and seal the bag. Then place the unit or units in a sealable 5 gallon steel drum. If the unit is under Thoreson-McCosh's factory warranty, ship to Thoreson-McCosh for warranty replacement credit. If the unit is no longer under warranty, please contact:

Bethlehem Apparatus
P.O. Box 890
Front St.
Hellertown, PA 18055
Ph: (215) 838-7034

Thoreson-McCosh Inc


TD DRYERS COMMON SPARE PARTS LIST							
MODEL	MANIFOLD UPPER SEAL	MANIFOLD LOWER SEAL	PROCESS FILTER	REGEN FILTER	DEW POINT SENSOR	MANIFOLD SEPARATION DEVICE	BED INDEX MOTOR
TD-6	413987 (3PCS)	413987 (3PCS)	404663	404663	-----	413989	410713
TD-12	413987 (3PCS)	413987 (3PCS)	410086	404663	411335	410213	410713
TD-24	413987 (3PCS)	413987 (3PCS)	410086	404663	411335	410213	410713
TD-40	413860 (3PCS)	413861 (3PCS)	409951	404654	411335	410213	410713
TD-60	413860 (3PCS)	413861 (3PCS)	409951	404654	411335	410213	410713
TD-90	413860 (3PCS)	413861 (3PCS)	409951	404654	411335	410213	410713
TD-120	413860 (3PCS)	413861 (3PCS)	409951	404654	411335	410213	410713
TD-150	413985 (3PCS)	413986 (3PCS)	410598	404654	411335	410213	410713
TD-180	413985 (3PCS)	413986 (3PCS)	410598	404654	411335	410213	410713
TD-240	413985 (3PCS)	413986 (3PCS)	410598	404654	411335	410213	410713
TD-360	413985 (3PCS)	413986 (3PCS)	410598	404654	411335	410213	410713
PRE-1997 TD-480	411204 (3PCS)	411204 (3PCS)	404656 404658	409951	411335	Call Factory	410713
PRE-1997 TD-600	411204 (3PCS)	411204 (3PCS)	404656 404658	409951	411335	Call Factory	410713
TD-800	411204 (3PCS)	411204 (3PCS)	404658	409951	411335	Call Factory	410713
TD-1000	410865 (3PCS)	410865 (3PCS)	404658 (2PCS)	409951	411335	Call Factory	413663
TD-1500	410865 (3PCS)	410865 (3PCS)	404658 (2PCS)	404656	411335	Call Factory	413663
TD-2000	411792 (3PCS)	411792 (3PCS)	404658 (3PCS)	404656	411335	Call Factory	413663

Thoreson-McCosh Inc

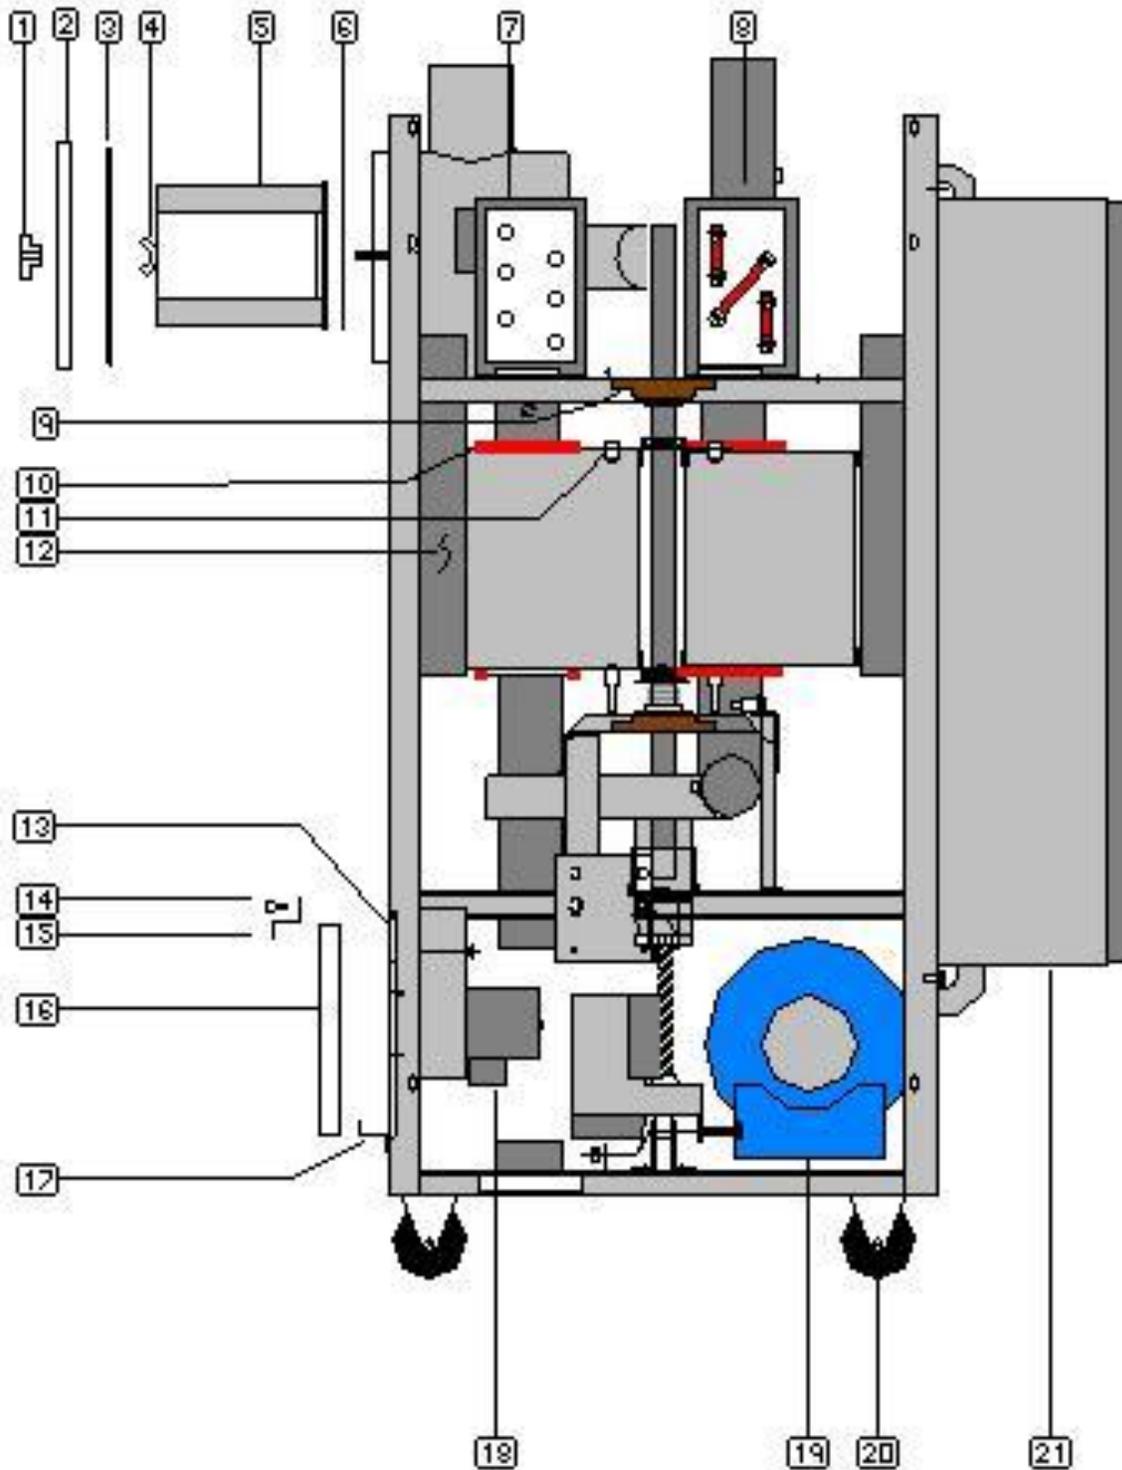

GENERAL DRYER LAYOUT TD12 THRU TD-360

Thoreson-McCosh Inc

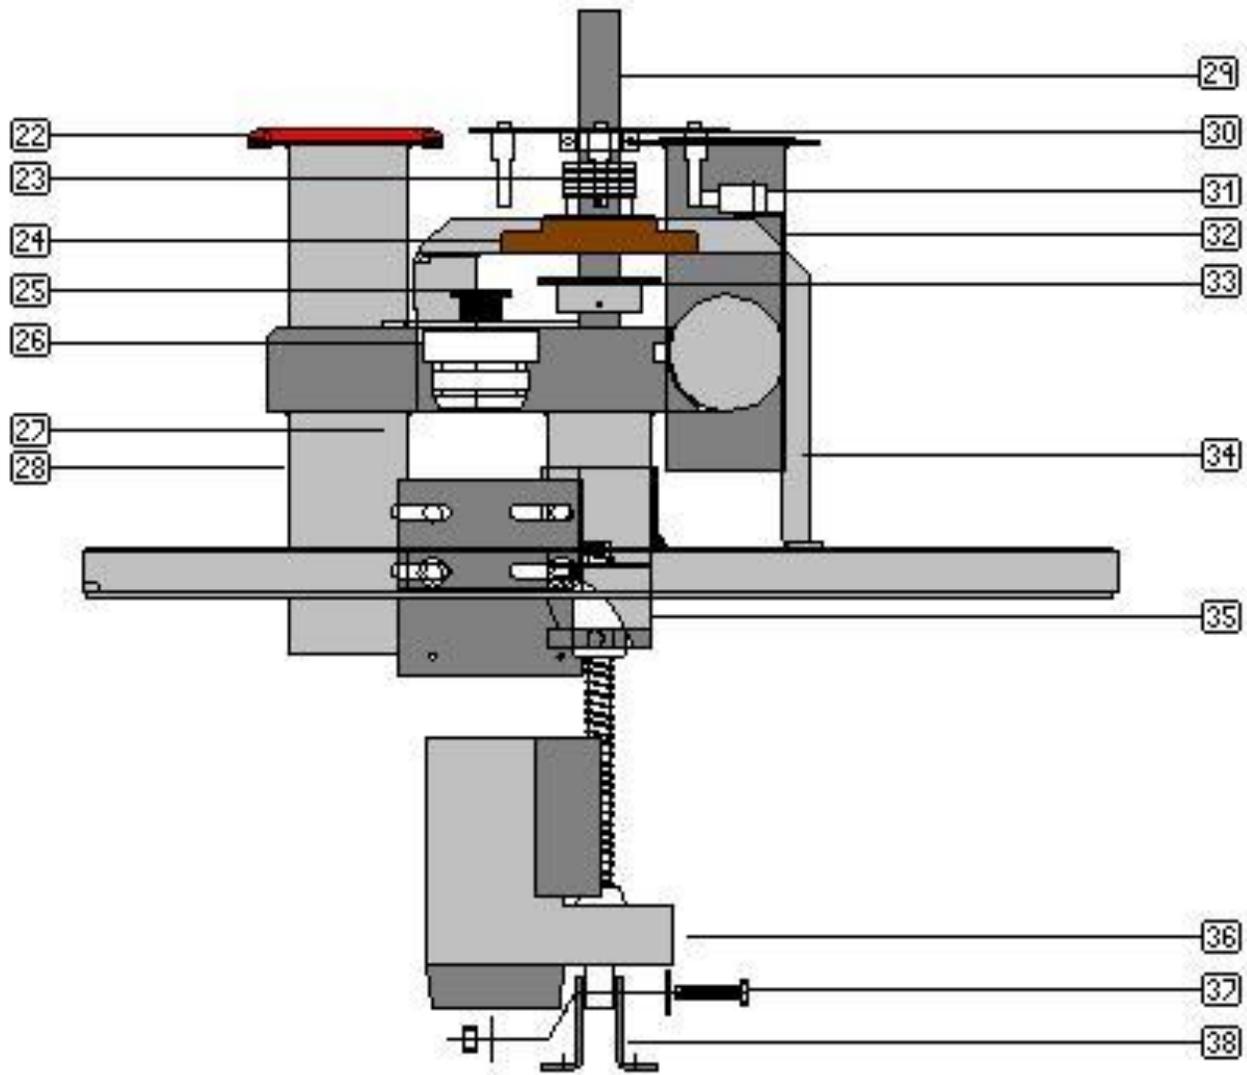

MANIFOLD LAYOUT TD-12 THRU TD-360

Thoreson-McCosh Inc

40	X	---
39	X	---
38	2	PUSH-UP MOTOR BRACKETS
37	1	SHOULDER BOLT, LOCK-NUT, 2 WASHERS
36	1	PUSH-UP MOTOR
35	1	PUSH-UP MOTOR NUT
34	1	LOWER BEARING SUPPORT ASSEMBLY
33	1	SHAFT GEAR
32	1	BED INDEX LIMIT SWITCH BRACKET
31	1	BED INDEX LIMIT SWITCH
30	1	LOWER TURRET PLATE
29	1	BED SHAFT
28	1	MANIFOLD
27	1	ROTATE MOTOR BRACKET
26	1	ROTATE MOTOR
25	1	ROTATE MOTOR GEAR
24	1	LOWER BEARING
23	X	SHIMMS, AM'T VARIES TO MAINTAIN MAX 3/8" GAP
22	3	LOWER BED SEAL
21	1	ELECTRICAL CONTROL ENCLOSURE
20	4	CASTERS, 2 SWIVEL, 2 RIDGID
19	1	PROCESS BLOWER
18	1	REGEN BLOWER
17	1	LOWER REGEN FILTER BRACKET
16	1	REGEN FILTER BRACKET
15	1	UPPER REGEN FILTER BRACKET
14	1	THUMB SCREW
13	1	REGEN FILTER GASKET
12	3	DESICCANT BED
11	1	UPPER TURRET PLATE
10	3	UPPER BED SEAL
9	1	UPPER BEARING
8	1	PROCESS HEATER BOX
7	1	REGEN HEATER BOX
6	1	PROCESS FILTER GASKET
5	1	PROCESS FILTER
4	1	WING NUT WITH FLAT WASHER
3	1	PROCESS FILTER COVER GASKET
2	1	PROCESS FILTER COVER
1	1	KNOB
SYM.	AM'T	DESCRIPTION

GENERAL DRYER LAYOUT PARTS LIST TD-12 THRU TD-360

BATTERY REPLACEMENT FOR PLC1400

Using the Battery

The MicroLogix 1400 controller is equipped with a replaceable battery (catalog number 1747-BA). The Battery Low indicator on the LCD display of the controller shows the status of the replaceable battery. When the battery is low, the indicator is set (displayed as a solid rectangle). This means that either the battery wire connector is disconnected, or the battery may fail within 2 days if it is connected.

IMPORTANT

The MicroLogix 1400 controller ships with the battery wire connector connected. Ensure that the battery wire connector is inserted into the connector port if your application needs battery power. For example, when using a real-time clock (RTC).

Replacing the battery when the controller is powered down will lose all user application memory. Replace the battery when the controller is powered on. Refer to the SLC 500 Lithium Battery Installation Instructions, publication [1747-IN515](#), for more information on installation, handling, usage, storage, and disposal of the battery.

WARNING

When you connect or disconnect the battery an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that the area is nonhazardous before proceeding.

For Safety information on the handling of lithium batteries, including handling and disposal of leaking batteries, see Guidelines for Handling Lithium Batteries, publication [AG 5-4](#).

Follow these steps to connect the replaceable battery.

1. Insert the replaceable battery wire connector into the controller's battery connector.

Thoreson-McCosh Inc

18 MicroLogix 1400 Programmable Controllers

2. Secure the battery connector wires so that it does not block the 1762 expansion bus connector as shown below.

