

CRICKET[®] SX3 Electric Sport Vehicle

CRICKET SX3 Electric Sport Vehicle Owner's Manual, Safety Guide, and Warranty Information

Thank you for the purchase of your new **CRICKET SX3 Electric Sport Vehicle**. This owner's manual is designed to furnish you with a basic understanding of the features and operation of this vehicle. *Important safety information and information about special techniques and skills needed to operate and ride your CRICKET SX3 are included*, as well as basic maintenance and inspection procedures, and warranty information.

CRICKET SX3 Electric Sports Vehicle

Rick's

Rick's Specialty Vehicles
748 N. Harbor City Blvd.
Melbourne, FL 32935

Toll-free ► 1-866-798-2227



Rick's Specialty Vehicles reserves the express right to make design adjustments, improvements, or changes without obligation to make these changes on units previously sold, and the information contained in this publication is subject to change without notice. Rick's Specialty Vehicles is not liable for inadvertent errors in this publication, or for incidental and consequential damages that result from the use of the material in this publication.

Please consult **Rick's Specialty Vehicles** (toll-free at **1-866-798-2227**, or via e-mail: **info@ricksesv.com**) if you have any questions regarding the operation or maintenance of your CRICKET.

For your safety, and the safety of all passengers:

- **Please read this addendum *and* the original CRICKET ESV owner's manual carefully and completely before operating your CRICKET. Make sure you understand all instructions.**
- **Take special notice of all warning and caution notices herein.**
- **Operate your CRICKET vehicle only after proper training or instruction.**
- **No one under 16 years of age should ever operate a CRICKET electric sport vehicle.**

NOTE: Whenever there is any doubt whatsoever about *anything* involved with the operation, maintenance, and safe operation of your CRICKET Electric Sport Vehicle, always call **FREE TECHNICAL SUPPORT** at **1-866-798-2227**, or e-mail us at **info@RicksESV.com**.

Table of Contents

| | |
|---|--------------|
| Notes | 2 |
| Table of Contents | 3 |
| Product Specifications | 4 |
| Safety and General Information | 5-8 |
| Installation and Set-up Instructions | 8-10 |
| Control Functions | 11 |
| Riding the Vehicle | 12 |
| Operational Instructions, Minor Adjustments, and Routine Maintenance | 12-14 |
| Warranty Information and Registration Form | 15-16 |

CRICKET SX3 Product Specifications

Model: Double-seat CRICKET SX3 Electric Sport vehicle – Four-wheel, electric-powered

Power: Single magnet DC 1,000-watt motor

Transmission: Direct drive through 16:1 reduction gearbox

Speed Control: Standard accelerator pedal on left side of floorboard

Directional Control: Forward/Reverse switch conveniently located on main control

Maximum Speed: Controlled from 0 to 12 mph in consideration of congested areas and terrain

Hill-climbing ability = 1:3 Gradient

Battery Charging: Permanent on-board charging unit underneath front seat

Frame: MIG-welded high-tensile steel with corrosion protection

Body: Molded in polymer-reinforced plastic

Brakes: Single regenerative electromagnetic braking

Batteries: 3 heavy-duty glass-mat U1, 12-volt 35-amp\hour in series (36-volt system)

Battery charger: 10-amp, automatic cut-off when fully charged

Tires: 13" x 6.50 x 6" Tubeless - Recommended air pressure at 12-15 psi

Turning Radius: 102"

Overall Length with Rear Passenger Step Plate Installed: 78"

Adjusted Overall Length for Storage and Transport: 58" (with floorboard extension removed)

Overall Width: 32" (including utility box)

Overall Height: 28" (with seat back removed, steering wheel folded down, and rear passenger safety bar removed)

Load Capacity: 600 lbs.

Vehicle Curb Weight: 313 lbs

NOTICE: CRICKET SX3 specifications, safety, and performance features are subject to change as we continue to improve the vehicle.

General Information

This guide is provided to assist the owner or operator of this CRICKET SX3 in the safe operation and maintenance of the vehicle.

Safety

General Safety Information

This guide is provided to assist the owner or operator of this Rick's Specialty Vehicles product in the maintenance and safe operation of the vehicle. The warnings in this manual are not a replacement for good common sense and safe driving practices. Your CRICKET SX3 is designed and manufactured for off-road use. It does not conform to Federal Motor Vehicle Safety Standards and is not equipped for operation on public streets. Operators of the CRICKET SX3 should have a valid motor vehicle driver's license. No one under 16 years of age should be allowed to operate a CRICKET SX3.

Operating Safety

- 1) Always use your CRICKET in a responsible manner and maintain the vehicle in safe operating condition.
- 2) Always read and observe all warnings and operation instruction labels affixed to the CRICKET vehicle.
- 3) Always follow all safety rules established in the area where you are operating the CRICKET vehicle.
- 4) Always use extreme caution when making sharp or blind turns.
- 5) Always release throttle gradually (rotate forward, away from yourself) to control speed and stability on steep grades.
- 6) Always use extreme caution when traveling:
 - a) In wet areas
 - b) In blind spots
 - c) Along loose terrain
 - d) On uneven roads
 - e) In traffic with other vehicles
 - f) Near pedestrian areas.

Notes, Cautions, and Warnings

The following notations indicate important information. Failure to follow the warnings contained in this owner's manual could result in serious injury or death.

NOTE

Condition that should be observed. This provides key information that makes procedures easier or clearer.

CAUTION

Condition that may result in damage to the vehicle. Special precautions must be taken to avoid damage to the vehicle.

!WARNING!

Hazardous condition that could result in **severe injury or death** to the machine operator, a bystander, or a person inspecting and/or repairing the vehicle.

(continued)

General Safety Practices

Steep Grade ▶ ! WARNING !

In areas where steep grades exist, vehicle operations should be restricted to the designated vehicle pathways wherever and whenever possible. Such potential hazards should be identified with a suitable warning giving the following information: “Warning: STEEP GRADE – Ascend or descend slowly, and proceed with due caution.”

Wet Areas ▶ ! WARNING !

Wet grassy areas may cause a vehicle to lose traction and may affect stability. Wet areas should be chained or roped off to prevent access and potential accidents with injury.

Sharp Turns, Blind Corners, Bridge Approaches ▶ ! WARNING !

Sharp turns, blind spots, bridge approaches and other potentially hazardous areas shall be either chained or roped off to prevent vehicle operations or identified with a suitable warning to the operator of the nature of the hazard and stating the proper precautions to be taken to avoid the hazard.

Loose Terrain ▶ ! WARNING !

Loose terrain may cause a vehicle to lose traction and may affect stability. Areas of loose terrain should be repaired if possible, or chained or roped off to prevent vehicle operation, or identified by a suitable warning to operators not to operate vehicles in this area due to loose terrain or possible hazardous conditions.

Pedestrian Areas ▶ ! WARNING !

Areas where pedestrians and vehicles interfere shall be avoided whenever possible by rerouting the vehicle traffic or the pedestrian traffic to eliminate the interference. If elimination of the interference is not possible or is highly impractical, signs should be erected warning pedestrian traffic and to drive slowly and use extreme caution.

Ventilation ▶ CAUTION

Never charge a vehicle in an area that is subject to flame or spark. Pay particular attention to natural gas or propane gas water heaters and furnaces.

Safety

On steep hills it is possible for vehicles to coast at greater than normal speeds encountered on a flat surface. To prevent loss of vehicle control and possible serious injury, speeds should be limited to no more than the maximum speed on level ground. Limit speed by reducing or eliminating pressure on the accelerator pedal, which engages the automatic brake function.

Catastrophic damage to the drive train components due to excessive speed may result from driving the vehicle above specified speed. Damage caused by excessive speed may cause a loss of vehicle control and is costly. This is considered abuse and will not be covered under warranty. **Use extra caution when towing the vehicle.**

(continued)

Safety (continued)

If the vehicle is to be used in a commercial environment, signs should be used to warn of situations that could result in an unsafe coasting condition.

Keep this manual as part of the permanent service record in case the vehicle should be resold.

Your CRICKET vehicle is intended for **off-road use only**. The owner should check local and other applicable laws and regulations before operating.

SEVERE INJURY OR DEATH can result if you do not follow these instructions:

- Read this entire manual carefully and follow the operating procedures described.
- Operate a CRICKET SX3 only if you have had proper training or instruction.
- Follow these age recommendations:
No one under 16 years of age should operate a CRICKET vehicle or be left without adult supervision.
- Be wary of the safety of passengers and pedestrians.
- Do not operate a CRICKET vehicle on a highway.
- Do not consume alcohol or drugs before, or while operating, this machine.
- Never operate at speeds too fast for your skills or the outdoor conditions. Always operate at a speed that is suitable for the terrain, visibility and operating conditions, and your experience.
- Never attempt wheelies, jumps, or other stunts.
- Inspect your vehicle every time it is used to make sure it is in safe operating condition. Follow the inspection and maintenance procedures and schedules described in this manual.
- Always keep both hands on the steering wheel during operation.
- Always drive at slower speeds and be cautious when operating on unfamiliar terrain. Be alert to changing terrain conditions at all times when operating a CRICKET vehicle.
- Do not operate your vehicle on excessively rough, slippery or loose terrain until you have learned and practiced the skills necessary to control the vehicle on such terrain. Be especially cautious of these kinds of terrain.
- Always follow proper procedures for turning as described in this manual. Practice turning at low speeds before attempting to turn at faster speeds. Do not turn at excessive speed.
- Do not operate the vehicle on hills too steep for the vehicle or for your ability. Practice on smaller hills before attempting larger ones.
- Always follow safe procedures for climbing hills. Check the terrain carefully before you start up any hill. Never climb hills with excessively slippery or loose surfaces. Shift your weight forward. Never press down on the accelerator suddenly. Never go over the top of a hill at high speed.
- Always follow safe procedures for going down hills and for braking on hills. Check the terrain carefully before you start down any hill. Shift your weight backward. Never go down a hill at high speed. Avoid going down a hill at an angle that could cause the vehicle to lean sharply to one side. Go straight down the hill wherever possible.
- Always follow proper procedures for crossing the side of a hill as described in this manual. Avoid hills with excessively slippery or loose surfaces. Shift your weight to the uphill side of the vehicle. Never attempt to turn the vehicle around on any hill until you have mastered the turning technique on level ground. Avoid crossing the side of a steep hill if possible.
- Use proper procedures if you stall or roll backwards when climbing a hill. To avoid stalling, use proper gear and maintain a steady speed when climbing a hill. If you stall or roll backwards, follow the special procedure for braking. Dismount on the uphill side or to a side if pointed straight uphill. Turn the vehicle around and remount.
- Always check for obstacles before operating in a new area.

(continued)

Safety (continued)

- Never attempt to operate over large obstacles, such as large rocks or fallen trees.
- Be careful when skidding or sliding. Learn to safely control skidding or sliding by practicing at low speeds and on level, smooth terrain. On extremely slippery surfaces, such as ice, go slowly and be very cautious in order to reduce the chance of skidding or sliding out of control.
- Never operate a CRICKET in fast-flowing water or excessively deep waters. Contact with water may affect the batteries and may reduce stopping ability. Test your stopping ability after leaving water by removing pressure from accelerator pedal rapidly several times in a row.
- Always use the size and type tires specified in this manual.
- Always maintain proper tire pressure as described in this manual. (8-15 PSI)
- Never modify a CRICKET vehicle through improper installation or use of accessories.
- Never exceed the stated load capacity for a vehicle. Cargo should be properly distributed and securely attached. Reduce speed and follow sound procedures for carrying cargo or pulling a trailer. Allow greater distance for braking.

CRICKET Installation and Set-up Instructions

Once you have safely and completely removed your vehicle from its shipping crate, you are ready to perform the basic installation and set-up procedures prior to the initial operation of your new CRICKET SX3.



First, remove the rear step plate, the front seat back, and the protective barrier on the front seat. Put these items aside (out of your way) until you're ready to install them.*

**You may dispose of the protective barrier.*

Steering Wheel Removal Instructions

- Unscrew large nut until it is loose, pull complete steering wheel and steering shaft up and off to store for transit.**

(continued next page)






- b. To reinstall make sure steering wheel is straight for driving because it will fit in four different positions, line up square steering shaft with square tube and screw large nut on until it is finger tight.

Installation of Floorboard Extension

- a. Use your hand to pull up the spring-loaded T-lever in the center of the permanent floorboard, just in front of the engine compartment cover.
- b. While still holding T-handle up and unlocked, gently pull front of vehicle chassis forward* until it "clicks" into extended lock position.
- c. Then push T-handle back down securely to lock chassis in position.

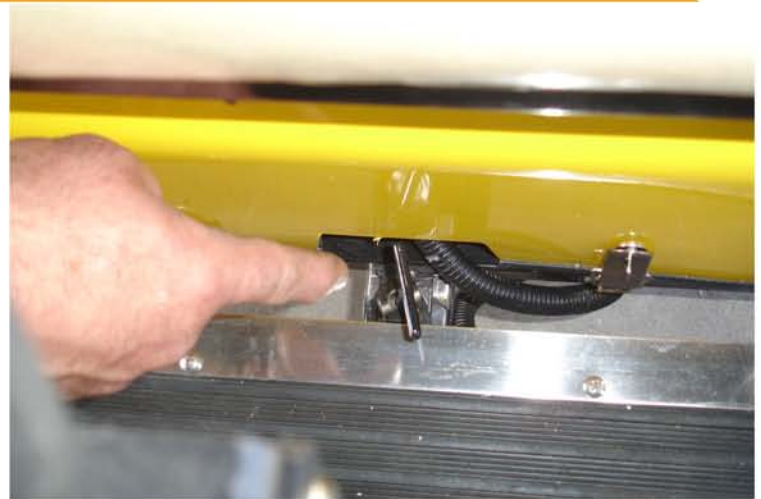

* To make this step easier, have another adult applying moderate pressure on the rear of the vehicle.



- d. Remove the locking knob bolts from both sides of the chassis (just under the front seat).
- e. Slide the floorboard extension underneath the stainless steel flashplate of the permanent floorboard assembly.

- f. Make sure both sides of the floorboard extension are lined up and securely fitted underneath the stainless steel flash plate (at the front) and onto the chassis (at rear, next to engine compartment cover).



(continued next page)



g. Finally, replace and tighten both left and right locking knob bolts to secure floorboard extension securely to vehicle chassis.

Front Seat Back Installation

Gently guide both seat back support arms into metal slots at back of front seat frame until they fit securely.



Rear Passenger Step Plate Installation

a. Loosen both locking nuts on rear frame, below back seat and rear carrier rack.

b. Insert both step plate bars into rear chassis frame tubing and gently guide both bars all the way in, until secured firmly. (Use step plate safety bar to help complete this installation procedure.) Then just hand-tighten both locking nuts.



(continued next page)

Control Functions

CRICKET SX3 CONTROL PANEL

Functions of the respective switch positions:

ON: One click of key clockwise activates power and makes engine ready for operation. One more click clockwise turns on the headlight and taillights.

OFF: In the totally vertical OFF position, all electrical circuits are switched off. The key may now be removed.

CHARGE: “1” signifies **full charge**. “0” signifies **no charge**.



DIRECTIONAL TOGGLE SWITCH: Up (**0**) for forward - Down (**1**) for reverse.

Entering the Vehicle

All passengers (including driver) must be seated at all times while the CRICKET vehicle is in use.

Turning the Vehicle On ► Switch on key switch and select the desired direction (Forward or Reverse).

One click forward (up) automatically engages the engine and drive train of the CRICKET.

Driving the Vehicle

After making the desired directional selection, depress the floorboard-mounted accelerator pedal with your right foot to engage the vehicle’s power train.

Always be aware of surrounding terrain and use caution. Judge speed accordingly. Be cautious when encountering loose or wet terrain. Do not attempt steep grades.



Stopping the Vehicle

Slow down by gradually lifting your right foot off of the accelerator pedal. Once you reach **zero forward speed**, the automatic electronic braking system turns your CRICKET off.

Turning the Vehicle Off

After taking your right foot completely off of the accelerator pedal and automatically stopping the vehicle, switch the key to the Off position.

Exiting the Vehicle

Once the vehicle has come to a complete stop, and the key switch is turned to the Off position, all passengers may carefully exit the vehicle. **Never attempt to exit the vehicle while it is still moving.** *This could lead to severe injury.*

Storing the Vehicle

Store your CRICKET vehicle with the key switch in the Off position. Do not store vehicle for more than one day with the battery charger hooked up.

(continued)

Riding the Vehicle

Ride with Care and Good Judgment. Get Training If You Are Inexperienced.

This CRICKET vehicle should only be used by experienced operators. This vehicle requires special skills obtained through practice. Take your time to fully learn techniques before attempting more difficult maneuvers.

You should familiarize yourself with the operation of the vehicle to achieve the skill necessary to enjoy riding safely. Be sure you have read this entire guide and understand the operation of the controls before you begin to ride. Pay particular attention to the safety information.

Beginners should get training from a certified instructor. Become familiar with this vehicle at slow speeds first, even if you are an experienced operator. Do not attempt to operate at maximum performance until you are totally familiar with the vehicle's handling and performance characteristics.

***Passenger and Driver Safety* ► ! WARNING !** **During Operation**

Always keep your feet inside the vehicle during operation. Otherwise, your feet may contact the rear wheels. Removing even one hand or foot can reduce your ability to control the vehicle or could cause you to lose your balance and fall out of the vehicle. If you remove a foot from inside the vehicle, your foot or leg may come into contact with the rear wheels or objects outside the vehicle, which could r
We repeat: *Always keep both hands on the steering wheel and both feet inside the vehicle during operation.*

CRICKET Operational Instructions, Maintenance, and Adjustments



Tires and Tire Air Pressure

Operating this vehicle with improper tires, or with improper or uneven tire pressure, may cause loss of control, thereby increasing your risk of an accident.

Always use the size and type tires specified in this manual for this vehicle.

Always maintain proper 8-15 PSI tire pressure as described in this manual, adjusting periodically for conditions, load, and terrain.

Check tire pressure and adjust accordingly by removing custom full wheel cover from each wheel and removing cap from valve stem, just as with any automobile using pneumatic tires. Always replace valve stem cap and wheel cover after each tire pressure check operation.

(continued)

Charging the Batteries



- a. Simply raise the hinged front seat with the convenient lift strap for easy access to the new on-board permanent charging system.

- b. Insert the plug (it will fit only in one direction) attached to the battery-charging unit into any convenient 110-volt electrical outlet. (Also works with Coach and other portable generators.)

- c. Charge light turns **GREEN** when CRICKET is fully-charged, and the unit cuts off automatically. Just unplug the cord, replace it in the underseat compartment, and return the seat to its secure driving position.



Adjusting the Free-Wheel Lever

- a. The free-wheel lever is conveniently located just underneath the left rear of your SX3.

- b. Pull the free-wheel lever toward rear of vehicle “out-of-gear” condition for free-wheeling operation; when you hear the “click”, you’ve engaged the free-wheeling function. (This makes pushing, rolling, and/or loading the vehicle much easier.)

- c. Remember to push the free-wheel lever back in, toward the front of the vehicle, prior to normal operation.

(Listen for another “click” to indicate you have returned to regular driving configuration.)



Replacing your CRICKET SX3 Batteries

- a. To remove battery cover, unhinge two latches at front of engine compartment (beneath the front portion of the seat) and slowly, carefully slide the cover forward to reveal both batteries.

- b. Use 13mm wrench or pliers to turn bolts counter-clockwise to loosen and remove batteries with built-in, convenient rope handles.

- c. Install new batteries by reversing procedure in step “b”, above. (Replace and secure cover.)

NOTE: Batteries are hermetically sealed and require
NO MAINTENANCE
for the life of the battery.
No acid. No acid odor. No leakage.

(continued)

Operating the Convertible Rear Passenger Seat

a. If you need non-passenger load-carrying capacity, simply grab the rear frame of the rear passenger seat and flip it rearward and down.



b. You now have a spacious, sturdy, rugged rear cargo carrier. (Simply reverse the procedure to return to the rear passenger seat mode.)



Adjusting Chassis Rigidity for Heavy Loads or Rough Terrain

a. Your fully-assembled SX3 is delivered with the chassis secured in a safe, yet somewhat flexible chassis configuration--- basically perfect for normal, everyday operating conditions.

If you should need to haul a heavier payload (up to 600 pounds maximum) or drive your SW3 over moderately rough terrain, you may elect to tighten the two under-chassis frame bolts (shown here, to your right) to provide a more rigid, firmer ride.



b. Use a 17mm wrench (or an adjustable wrench) to turn nuts on both bolts clockwise until they fit snugly---but not too tightly.

c. To return chassis rigidity to normal operating configuration, simply turn the nuts on both bolts counter-clockwise until both return to their original position on the bolt.

NOTE: Whenever there is any doubt whatsoever about *anything* involved with the operation, maintenance, and safe operation of your CRICKET SX3, always call **FREE TECHNICAL SUPPORT** at **1-866-798-2227**, or e-mail us at info@RicksESV.com.

(continued)

Warranty Information

Limited Warranty

Rick's Specialty Vehicles hereby warrants that new CRICKET vehicles purchased from an authorized CRICKET dealer, or direct from Rick's Specialty Vehicles, in the continental United States will be free from defects in material and workmanship for the period of time stated herein, subject to certain stated limitations. Rick's Specialty Vehicles is not responsible for any abuse, negligence, vandalism, or acts of nature.

The Period of Warranty

All CRICKET vehicles shall have a warranty period of six months from the date customer takes possession, or upon verified delivery of vehicle to customer's designated delivery address.

During the Period of Warranty

Rick's Specialty Vehicles, will, free of charge, repair or replace, at its option, any part adjudged defective by Rick's Specialty Vehicles during the warranty period due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the product's warranty period. All parts replaced under warranty become property of Rick's Specialty Vehicles.

General Exclusions

Exclusions from this warranty shall include any failures caused by:

- a. Competition or racing use.
- b. Installation of parts or accessories that are not qualitatively equivalent to genuine Rick's Specialty Vehicles manufacturer parts or accessories
- c. Abnormal strain, neglect, or abuse
- d. Lack of proper maintenance
- e. Accident or collision damage
- f. Modification to original parts
- g. Damage due to improper transportation
- h. Overfilling batteries

Specific Exclusions

Exclusions from this warranty shall include parts replaced due to normal wear or routine maintenance, such as upholstery, light bulbs, and brake shoes.

The Customer's Responsibility

Under this limited warranty, the customer's responsibility shall be to:

- a. Operate and maintain the vehicle as specified in the appropriate owner's manual.
- b. Give notice to Rick's Specialty Vehicles, or an authorized CRICKET dealer, of any and all apparent defects within ten (10) days after discovery, and make the vehicle available at that time for inspection and repairs at such dealer's place of business, or at Rick's Specialty Vehicles in Augusta, Georgia..

Warranty Transfer

To transfer the warranty from the original purchaser to any subsequent purchaser(s), the vehicle must be inspected and registered for warranty by an authorized CRICKET dealer or duly-appointed representative of

(continued)

Rick's Specialty Vehicles. In order for this warranty to remain in effect, this inspection and registration must take place within ten (10) days after transfer. (An inspection and registration fee will be charged for this service.)

Rick's Specialty Vehicles makes no other warranty of any kind, expressed or implied. All implied warranties of merchantability and fitness for a particular purpose which exceed the obligations and time limits stated in this warranty are hereby disclaimed by Rick's Specialty Vehicles and herewith excluded from this warranty.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Also excluded from this warranty are any incidental or consequential damages, including loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CRICKET WARRANTY Registration Form

Please fill out this form completely (please print legibly or type) and mail it to:

RICK'S SPECIALTY VEHICLES
748 N. Harbor City Blvd.
Melbourne, FL 32935

Customer Name: _____

Delivery Address: _____

Vehicle Identification Number: _____

Date of Purchase: _____ **Date of Delivery:** _____