

12x8 Multi-sports 6-in-1

Le manuel en français se trouve sur le site Web ezgoal.net. Vous y aurez accès en recherchant le but 63071.

For French Manual, please visit website at ezgoal.net. Search Goal 63071 for French Manual.

Work on a smooth, flat surface. Lay out all components so they are in easy reach.
Read assembly instructions completely to familiarize yourself with the components.

NO.	Drawing	Description	Part #	Qty.
1		Top, bend front 2" tube	S-01	1
2		2" Top, bend tube with swedge	S-02	1
3		2" Front, Top, base tube with swedge.	S-03	4
4		Folding section	S-04 S-05	2
5		Telescoping Upright Side Frame	S-06 S-07	2
6		1.25" Back Base Bend	S-08	1
7		1.25" Back Base Bend with swedge	S-09	1
8		1.25" Back Base Extension with swedge	S-10	2
9		2" Rebounder Bottom tube with swedge and hook	S-11	1
10		2" Rebounder Bottom tube with hook	S-12	1
11		Side Bar Assembly	S-14 S-13	2
12		Side Bar Bent tube	S-15	2
13		2" Bottom Side Base tube with slot	S-16	2

Installation Instructions

Please read instructions
COMPLETELY
before assembly.



**DO NOT RETURN
PRODUCT TO THE
STORE**

Missing Parts,
Need Replacements, or
Help With Assembly

Please Contact
Customer Service:

203 933 4442
West Haven, CT 06516



LACROSSE GOAL ASSEMBLY

STEP 1

Starting with the soccer goal set-up, remove the 2 center connector poles S03 on the top (blue). Now remove the entire bottom back-bar. (S08, S09 and S10).

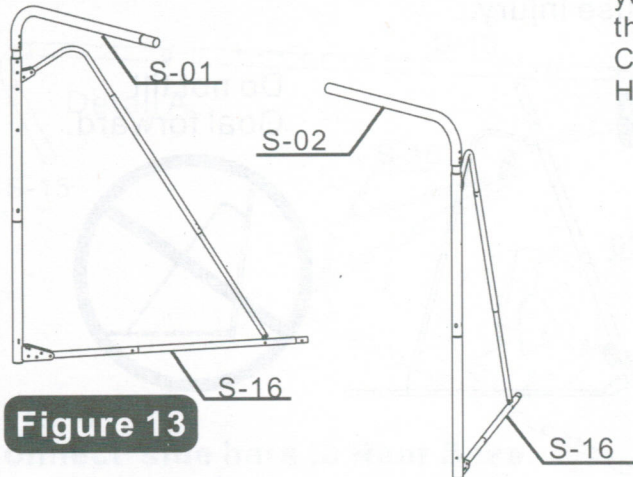


Figure 13

STEP 2

Move pieces together, snap blue piece together (S-01 and S-02).

Swing the white side frame inward and start to form a "V", Then use two S-10 Bars you removed in STEP 1, reconnect them to the back of Bottom side base S-16. Connect two Bases (S10) with one Horseshoe tube S17.

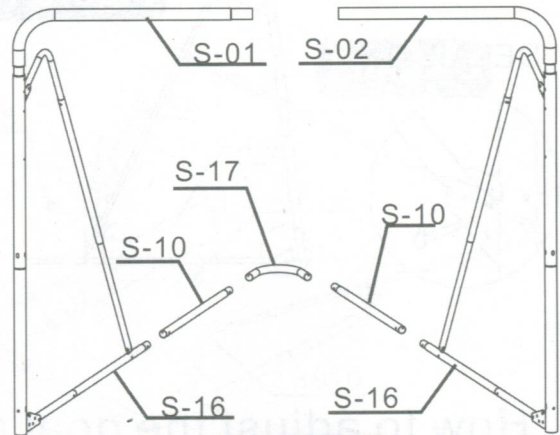


Figure 14

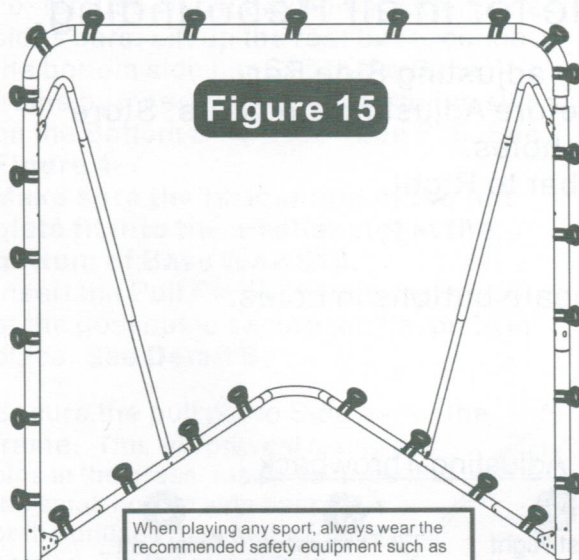


Figure 15

STEP 3

Drape net 7004 (Golf net/sports net) over the outside of frame. Attach top of net with bungees. Allow net to hang down evenly over sides. Finish attaching front of net with bungees. Roll excess netting under and around bottom bar.

See left figure for bungees layout.

When playing any sport, always wear the recommended safety equipment such as helmets, pads, face and chest guards.



WARNING

this net to the frame. The bungee cords will be under extreme tension and must be attached carefully. Adult assembly is strongly recommended.





STORAGE

STEP 1

Lift up Upright Post off the ground, remove Pitchback bar from the folding section, turn it upside down, clip it on the top of folding bracket. See Detail D.

Remove the Pull pins from the Base S-16, See detail G, Press button on the adjusting bar, right turn, slide bottom part of side bar S-14 up to adjusting bar S-13.



Note: Make sure the Pull pin in the folding section is locked in place before or when you remove the side bars from the Base. See detail E.

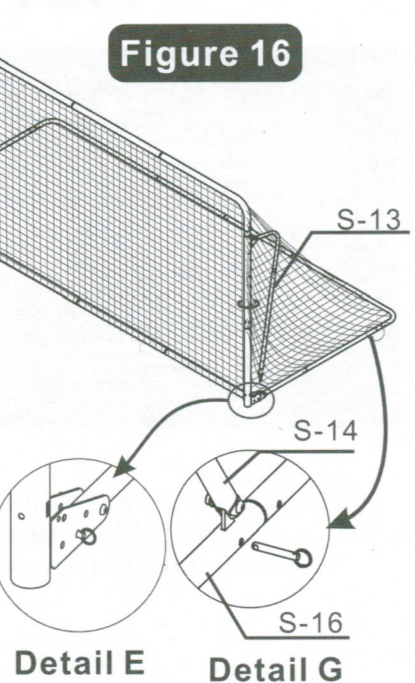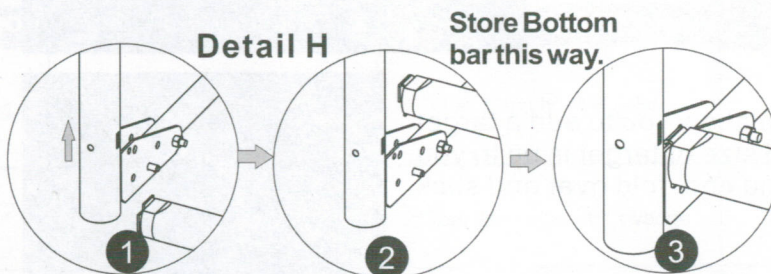

STEP 2

Push the button as shown in the detail F, swing the side bar inward till it is engaged in another pair of holes. Now the side bar should be parallel to the front face as shown in right figure.



Extend side bar to proper length, insert the flat plate at the bottom of side bar to the slot on the folding section, from inside out, and secure it with the pull pin just removed in Step 1.

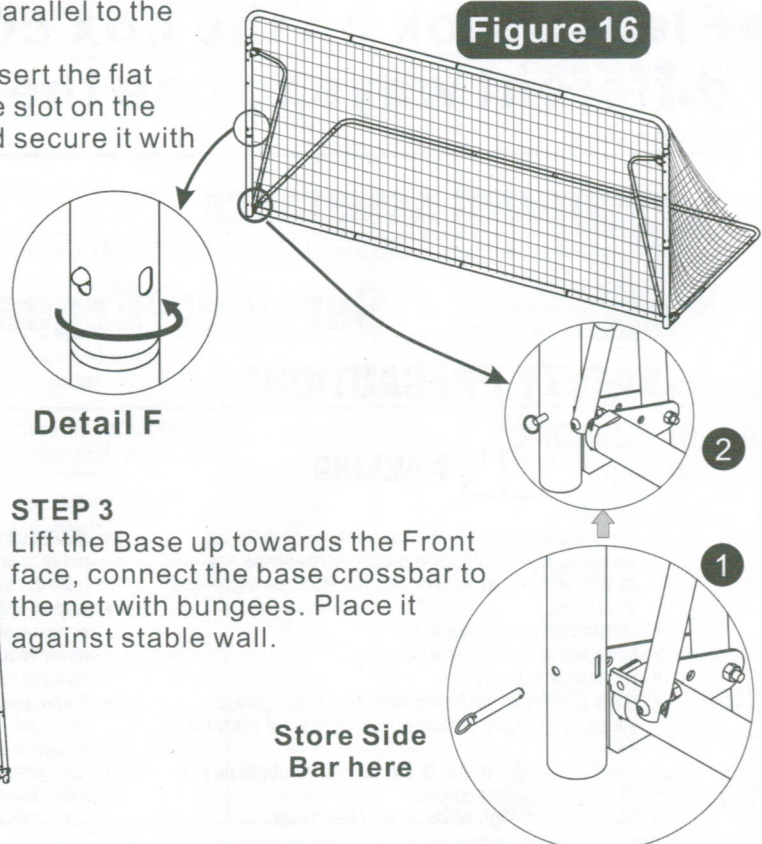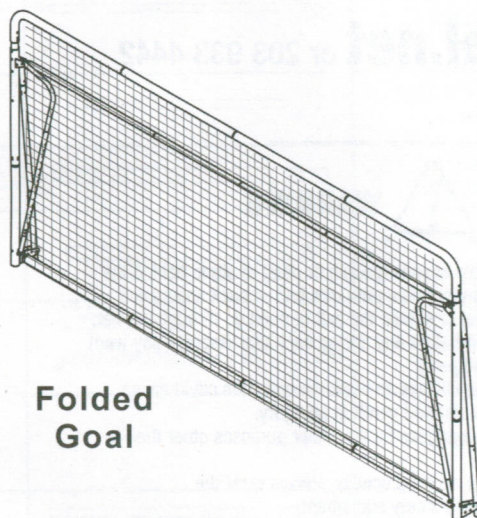


STEP 3

Lift the Base up towards the Front face, connect the base crossbar to the net with bungees. Place it against stable wall.

MOVABLE TARGETS

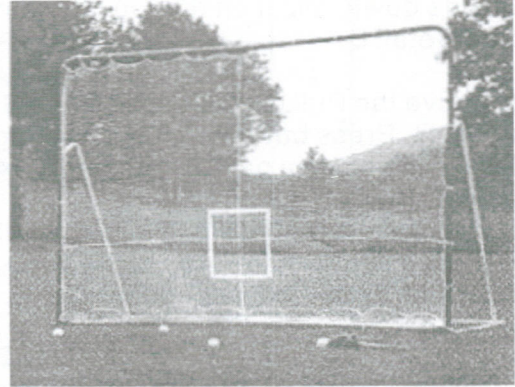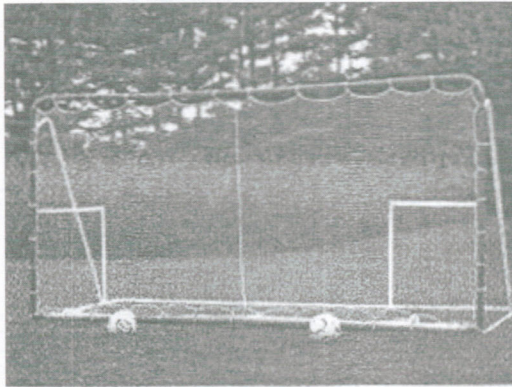

4 strips of velcro are included to allow you to add a target.
Placement and size of target is up to you.
To attach velcro, weave the end, fold over and stick.

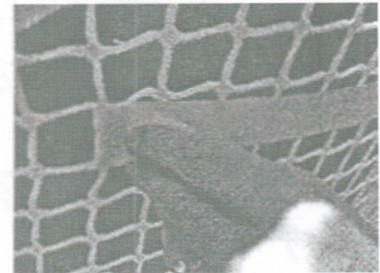

**Please look on the box cover to see
different ways to use the Goal Backstop.**

CUSTOMER ASSISTANCE

For help, replacement parts, questions or concerns about your EZ Goal Products, EMAIL or Call

EZ Goal Sports
Customer Service:
West Haven, CT 06516

Service@Ezgoal.net or 203 933 4442

SAFETY PRECAUTIONS






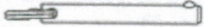








WARNING


- Manufacturer suggests wearing safety goggles for net assembly, to protect against bungee cords hitting eye.
- As with any play equipment, children **MUST** be supervised at all times.
- Use product on a level surface.
- Never use near steps or stairs.
- For outdoor use only.
- Allow 8 feet from structures such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Use common sense, and all the same precautions as you would when playing sports.
- Secure unit, so high winds do not blow it over.

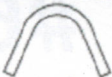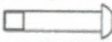

WARNING

- **NEVER** allow anyone (people or pets) to stand behind the net or in any possible path of a ball or puck should you miss the net or should the ball or puck go through the net.
- Inspect unit before and during each use. Replace any worn or damaged parts.
- Never allow children to stand on unit. This could cause damage to unit and result in an injury.
- Do not use bungees for any other purposes other than to apply net.
- As with any sporting activity, always wear the recommended safety equipment.
- Never leave children unattended.
- Use protective eyewear when securing bungees.

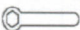NO.	Drawing	Description	Part #	Qty.
14		1.25"Horseshoe tube For Lacrosse	S-17	1
15		8mm Allen bolt	3810	2
16		8 mm Self Locking nut	008 Spar	4 1
17		Pull Pin 65 mm 25/8	5265	4
18		Velcro for targets	V-21	4
19		5mm Black	9154 Spar	30 2
20		5mm Black bungees with	9155 Spar	10 2
21		Backstop	69223	1
22		12 x 6 Soccer Net	69222	1
		Allen Wrench	018	1
		Wrench	017	1
		15" Rope	9144	1

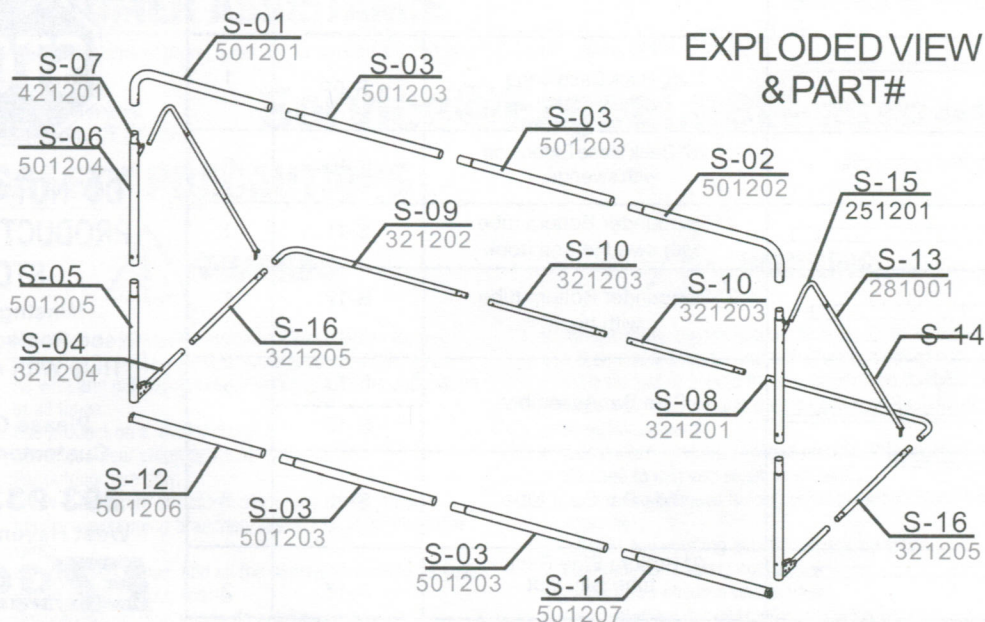

INITIAL FRAME ASSEMBLY

Note: Precision Connections will fit snugly. Use a rubber mallet or block of wood if needed.

STEP 1

Connecting Front face parts together.

Lay out parts for Front face (blue pieces) on a large flat surface. Snap pieces together. See figure 1.

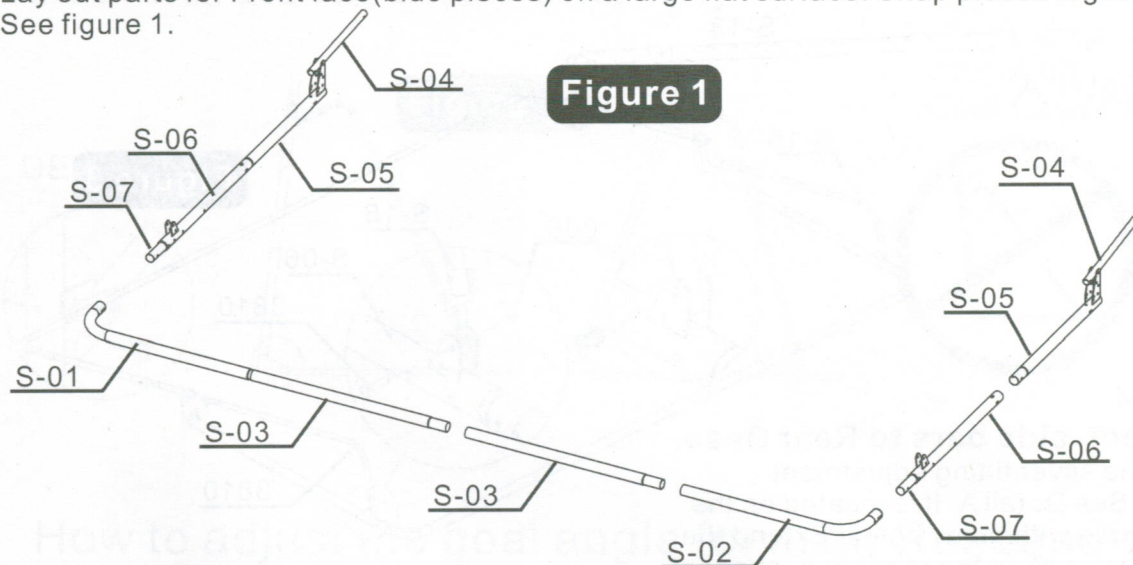


Figure 1

STEP 2

Assembling base parts and connecting it to the Front frame. See Figure 2.

Lay out parts for the Base on the flat ground. Snap pieces together. Make sure the big slot on the Bottom Side Base tube S16 is facing up and to the back.

Then snap assembled base to the folding section S04.

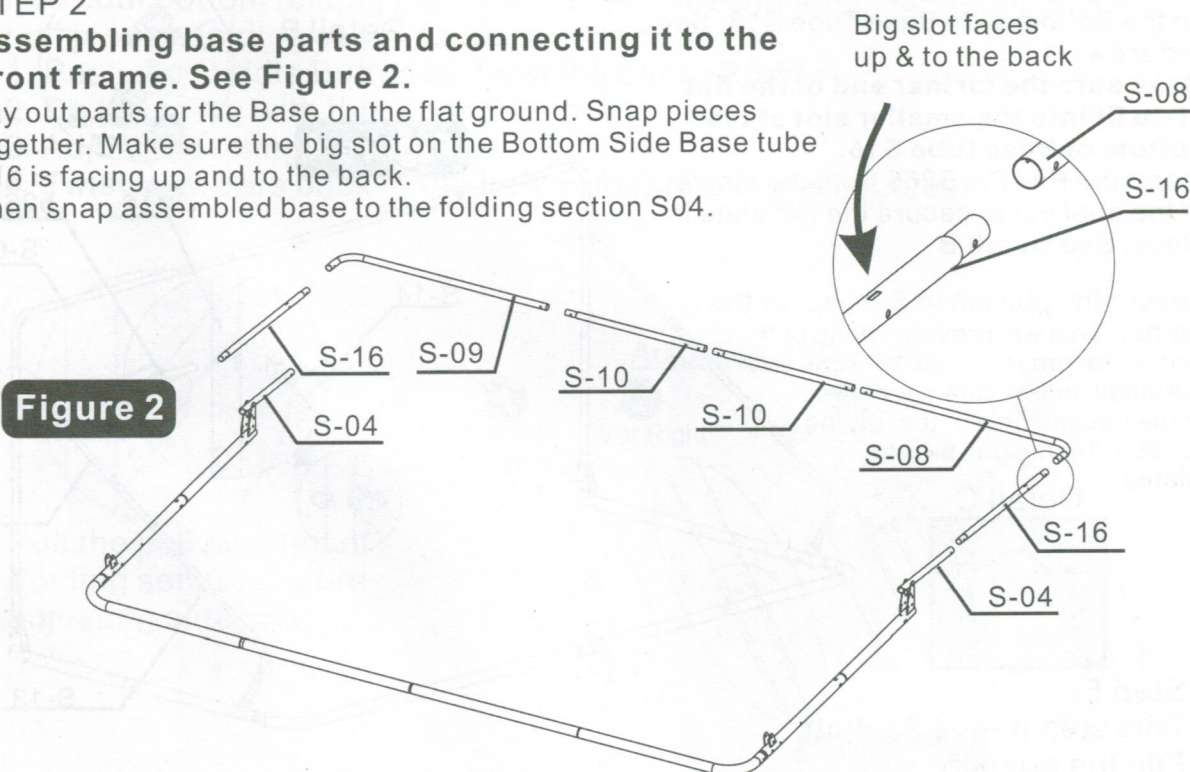



Figure 2

INITIAL FRAME ASSEMBLY

STEP 3

Attaching side bars/Side Tilting Assembly

Connect Side Bent tube part S-15 to the side bar part S-13; Connect the Side Bent tube S15 to the front tube S-06, using the bolts 3810, and Nuts 008. See **Figure 3**. Face the side part S-13 so the holes are on top.

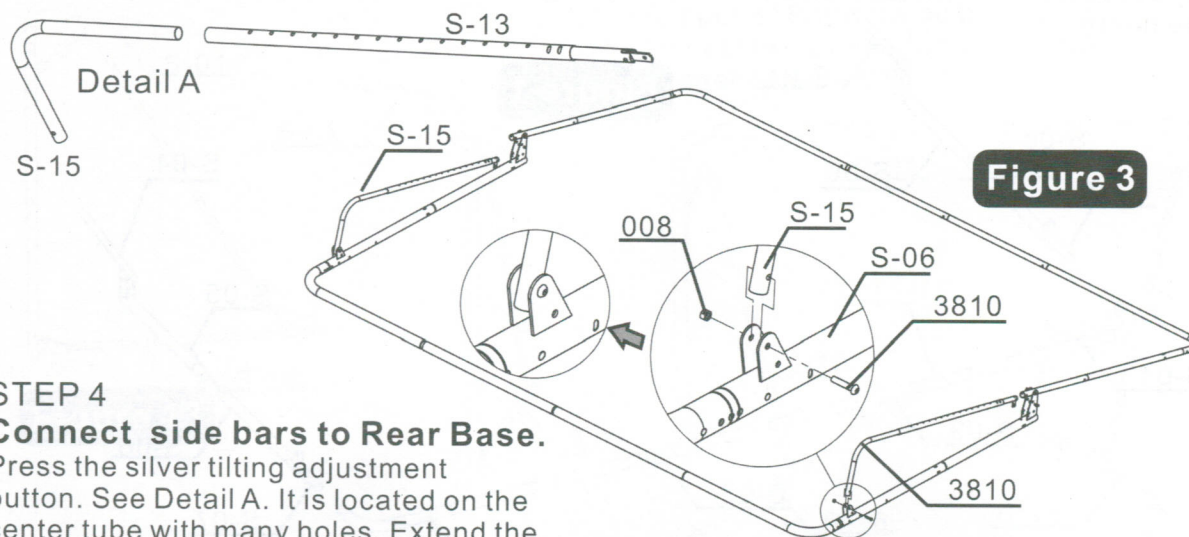

STEP 4

Connect side bars to Rear Base.


Press the silver tilting adjustment button. See Detail A. It is located on the center tube with many holes. Extend the sides bars. Lift up the rear base, connect the bottom side bar S13 to the Base frame by inserting the plate into the slot on the Bottom Side Base Tube S16. See **Figure 4**

Make sure the farther end of the flat plate fit into the smaller slot at the bottom of Base tube S16.

Insert the Pull Pin 5265 from the inside of the goal out to secure the flat plate in place. See **Detail B**.


Secure the pull pin to Side bar or the frame. This will prevent losing pull pins in the grass. Insert 15" rope thru the small hole in side bar plates, or the unused hole in the folding section. Tie the pull pins to plates.

Detail C

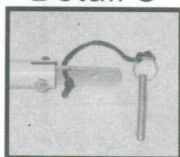

Step 5


This step needs 2 adults
Flip the goal up,

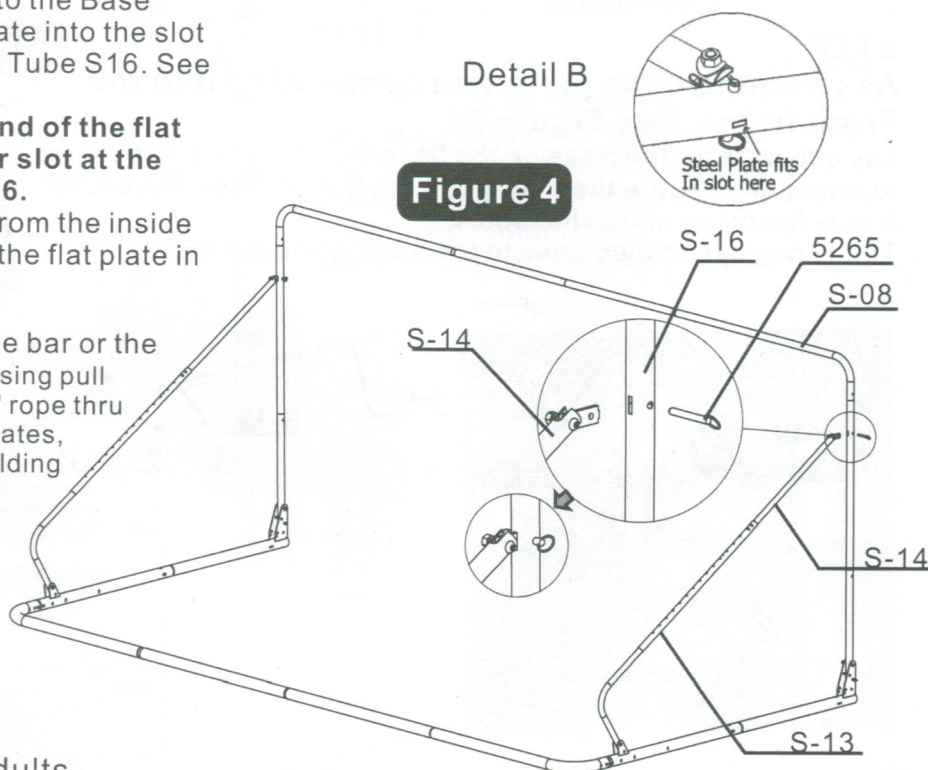


INITIAL FRAME ASSEMBLY

STEP 6

Flip the goal up.
Insert the pull pin 5265
thru bracket at the bottom
of Folding section S05
and Base tube S04.

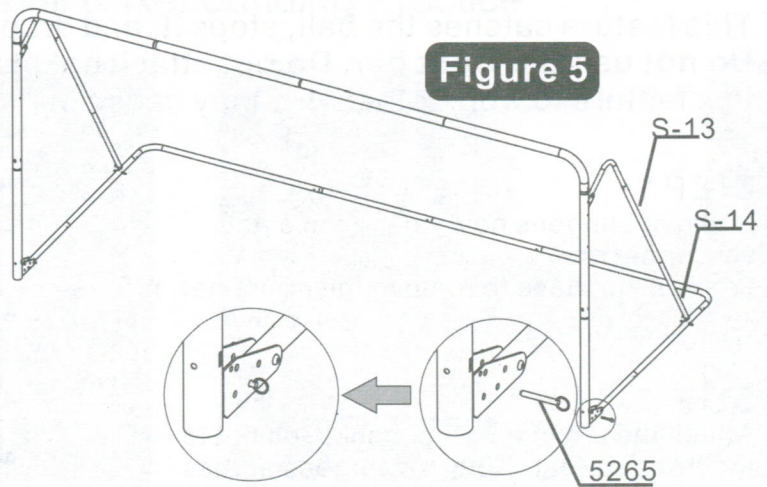


FRAME ASSEMBLY COMPLETE

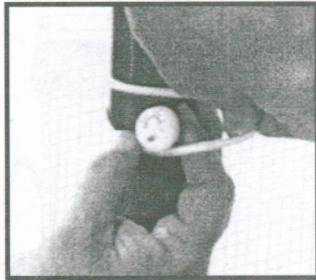


GOAL ASSEMBLY

For backyard soccer, Hockey and Kickball

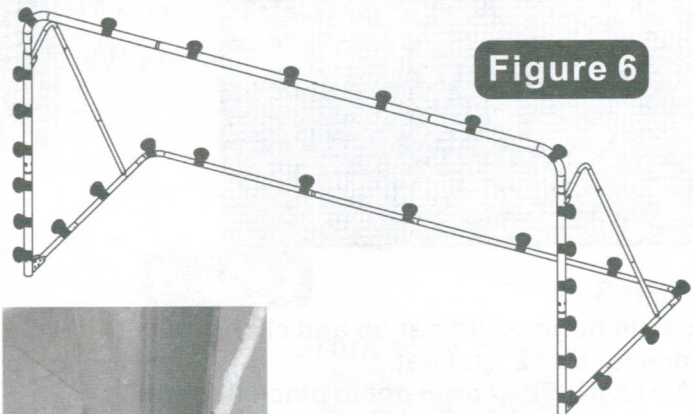

WARNING

Use extreme caution when assembling this net to the frame. The bungee cords will be under extreme tension and must be attached carefully. Adult assembly is strongly recommended.

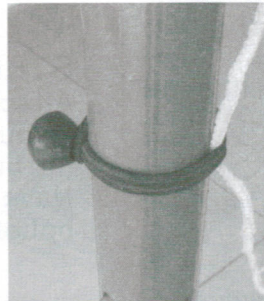


When playing any sport, always wear the recommended safety equipment such as helmets, pads, face and chest guards.

STEP 1

Drape net over top portion as shown.
Allow net to hang down each side evenly. Drape net over rear support bars to the ground.

STEP 2

Attach net with bungees using this bungee location layout. Line bungees up from top to bottom and side to side. Improper net attachment could result in damage or injury.

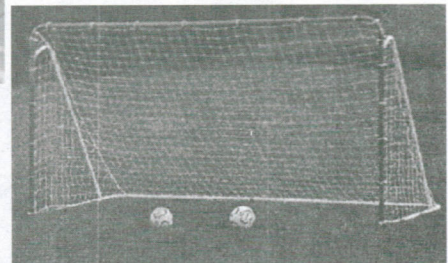

GOLF AND BACKSTOP NET ASSEMBLY

This feature catches the ball, stops it, and drops it to the ground.

Do not use the front bar. Do not attach net at bottom. Net must be loose for this feature to work, otherwise may cause injury.




STEP 1

Remove bungees holding the top of the soccer net on.

(You will not have to remove the entire net.)

STEP 2

Attach the top of the Pitchback/Golf net to the front of Goal using 10 bungees across the top. (5 on each side of center line).

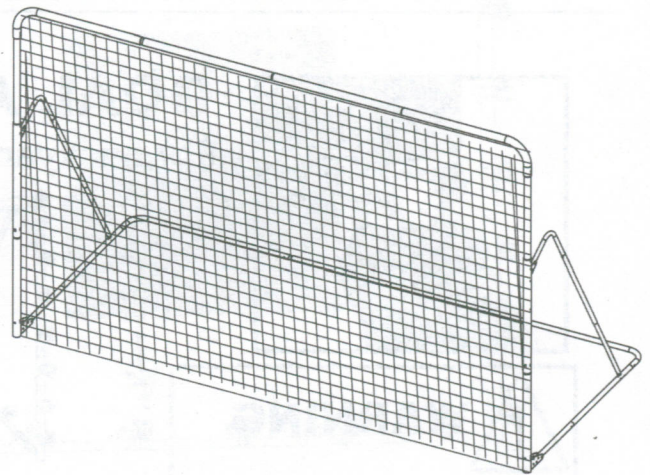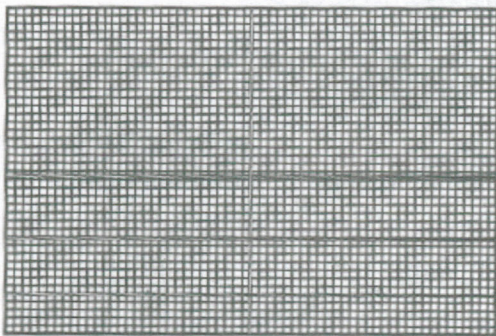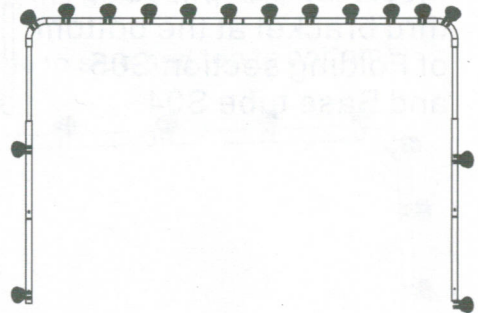

STEP 3

Push in buttons, lift bar up and click into place for 6'x12' golf net.

CAUTION: Be careful not to pinch fingers.

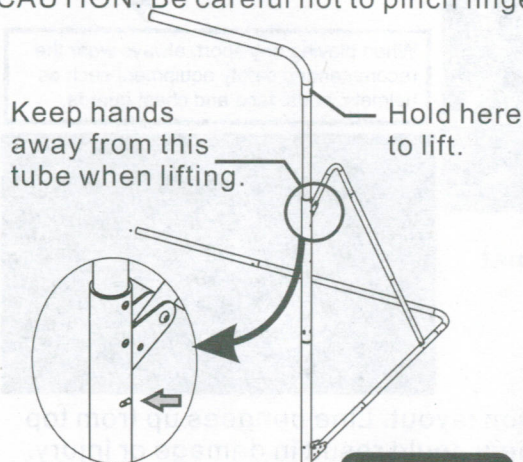



Figure 7

STEP 4

Attach bungees as Bungees location layout. Be sure to locate (from side to side) the bungees exactly in line with each other. Have bottom bungees connected into bottom line on net.

**WARNING**

Use extreme caution when assembling this net to the frame. The bungee cords will be under extreme tension and must be attached carefully. Adult assembly is strongly recommended.

PITCHBACK/REBOUNDER ASSEMBLY

For Tennis, Baseball & Rebounding Practice

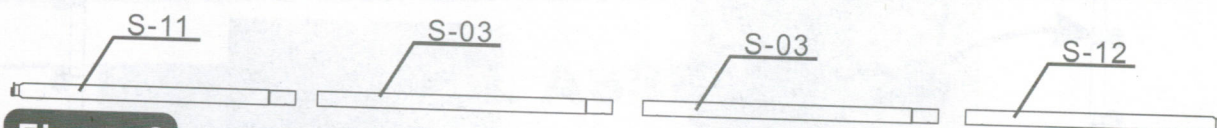
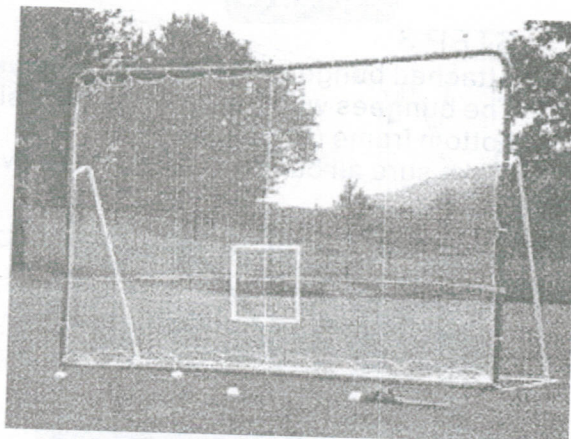
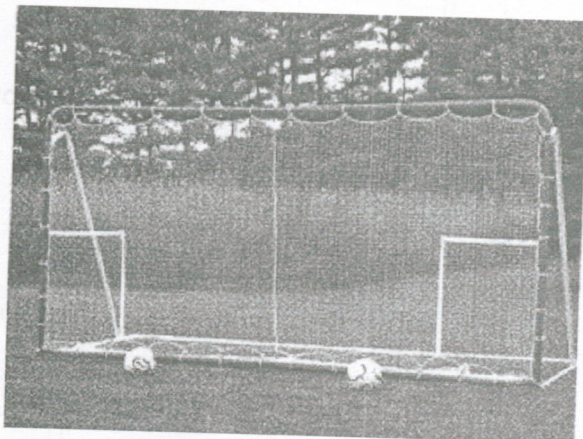


Figure 8

WARNING
BAR TO BE USED FOR PITCHBACK
ONLY, NOT TO BE USED WITH GOLF
OR CATCHING FEATURE.

STEP 1



Layout parts for Pitchback bar. Snap together. (Front bar should be only used when you want the ball to return to you.)

STEP 2

Attached 10 bungees with hook to the pitchback bar. Be sure to locate bungees evenly on the bar. Lift Base and snap in the Bar.

Figure 9

Front bottom bar.

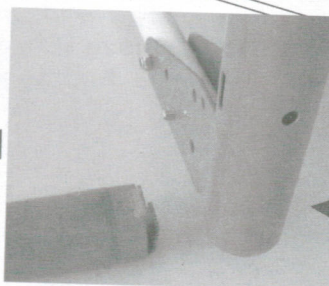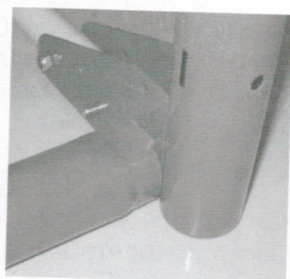

Front bottom bar.

PITCHBACK/REBOUNDER ASSEMBLY

For Tennis, Baseball & Rebounding Practice

STEP 3

Attached bungees to the Front face using this bungees location layout.

The bungees with ball go to top and side frame, and the one with hook and ball go to bottom frame (Pitchback bar).

Make sure all bungees are located evenly (from side to side and top to bottom).

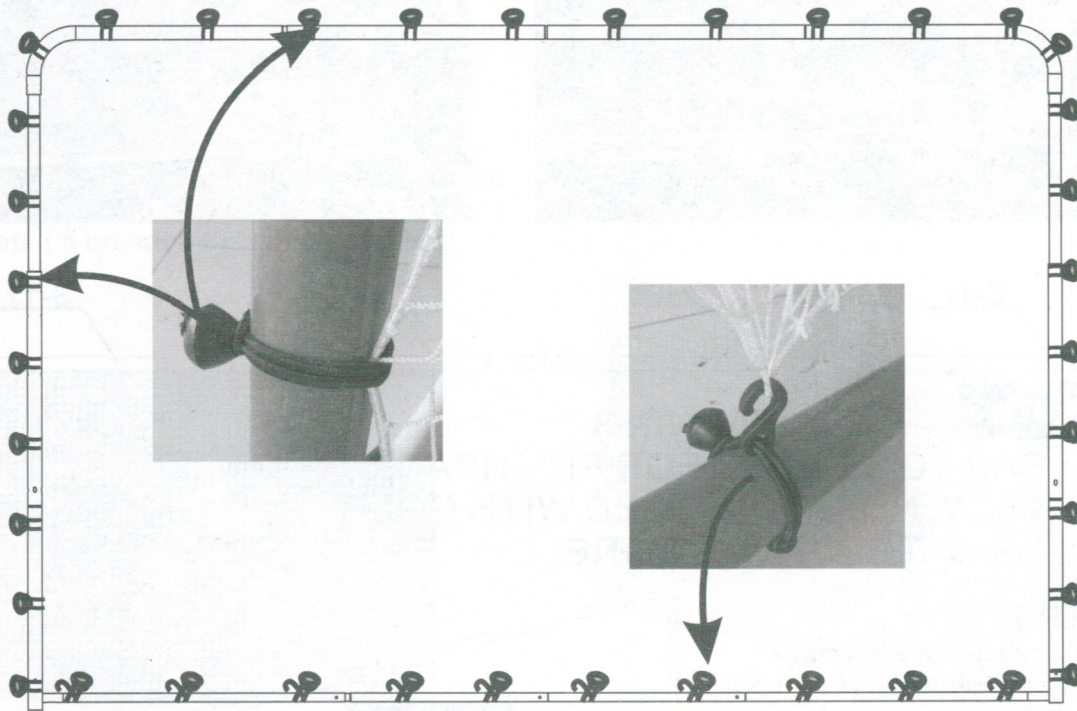



Figure 10

Adjustment of goal angle for different purpose.

Your goal can be adjusted to various angle for different games.

Note:

1. The bottom Pull Pin Must Not Be In while adjusting. See Detail D.
2. Do not tilt Goal forward. Can cause injury.

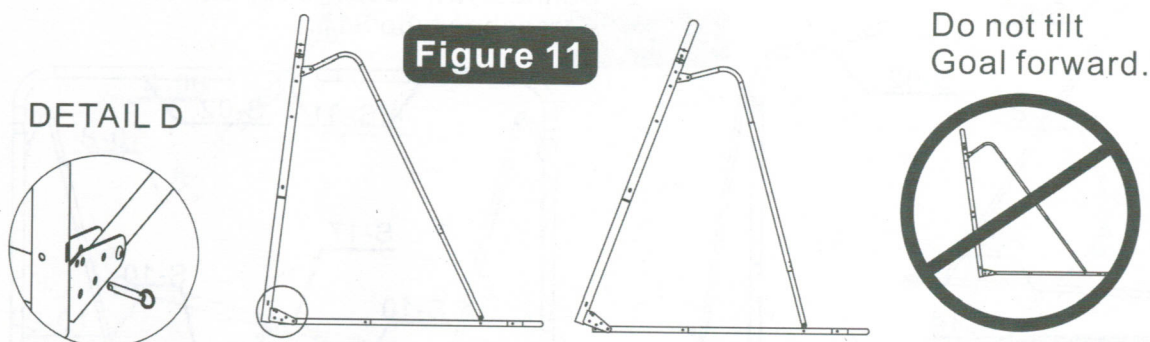

How to adjust the goal angle for in air Rebounding.

You can adjust the angle of your goal by adjusting Side Bar. Pull both bottom folding pull pins out before Adjusting side bars. Store pull pins on folding sections front extra holes.

1. Push the middle Button in, twist the bar to Right.
2. Do the same with the other Side bar.
3. Adjust the tilting Angle.
4. Twist both bars back to the Left, relocate buttons in holes.

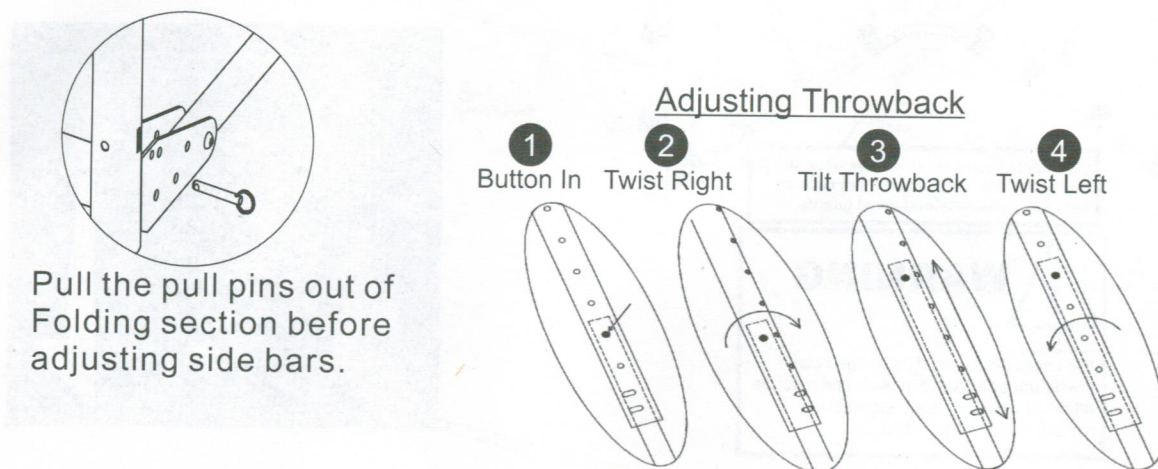


Figure 12