

PH Aviation Services, Inc.
RV Max Flap Actuator
(Suitable for the RV-6, -7, -8, -9, -10 & -14)
Installation & Operating Instructions


SPECIFICATIONS:

Input Voltage: 12 VDC
Current: 4A at full load
Load Capacity: 270 pounds
Stroke length: 5 inches
Speed: Approximately 0.4 inch per second
Internal Limit Switches: Full stop at ends
Potentiometer: Built in position sensing, 10K pot
Hole to Hole Length: 11 3/4" (Retracted)
Weight: 2 lbs. 15 oz. (+1 lb. 5 oz. over stock actuator)

Overview – The RV Max Flap Actuator was developed to be an improvement over the standard actuator found in many of the RVs. It has the same stroke and speed as the stock RV-10 and -14 flap motors; however, it has built-in stops and an internal potentiometer that can transmit the flap position to an indicator or EFIS display. Because it comes to a complete stop at both extremes, there is no need for the safety-wire bulletin that is mandatory in the stock actuators. Furthermore, external flap limit switches are not necessary to stop the flap motor, so you can use a locking control switch for the UP position thus avoiding the use of the spring-loaded position to raise the flaps. You can just flip your flap switch to the UP position and forget about it! It is also possible to easily use the actuator with a flap positioning system such as the Garmin GAD 27.



It is a very robust and reliable unit. We have installed two test units in RV-10s and are pleased with the results we've seen. These actuators are made for us by a reputable manufacturer to our spec and we believe them to be top quality. Recently, we have installed the RV Max in RV-6s, -7s, -8s, and -9s with good results so we are revising these instructions to include the single-digit RVs.

Installation in the RV-10 – the RV Max actuator is not a drop-in replacement for the stock RV actuator. It is actually about 1.5" longer and a little taller, so it will require some modification to your current installation. We consider the changes to be minor, however. Following is a detailed description of the installation of the RV Max actuator in one of our test RV-10s. Your airplane may vary.

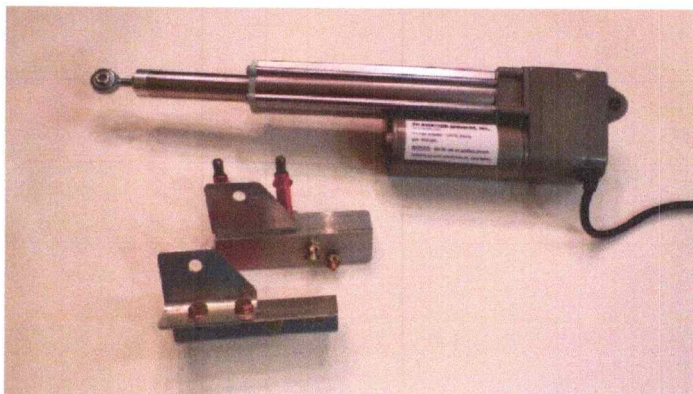


In the picture above, we show you the brackets that we fabricated next to the new RV Max flap actuator. We made these brackets out of 1 ½ X 1 ½ X 0.063", 2024 T3 as shown in the drawing on the next page. The idea is to be able to mount the new actuator about 1 ½" forward of the stock position to allow for the additional length of the new actuator. These brackets mount on top of the existing brackets to allow the new mount position to move forward sufficiently. Make sure that the rod end bearing is adjusted properly so that the actuator does not interfere with the flap weldment at the rear attach point. You may need to adjust the new mounts slightly to allow for differences in your particular airplane. Best to trial fit everything with clecos prior to drilling the final holes. We replaced the existing left-hand bracket with the more robust one shown in the picture above.

We used a 1/8" round file to slot the forward flange of the existing mount where the new brackets would otherwise interfere with this flange. We used an AN5-23 bolt to mount the new actuator. This bolt is the proper length for the new brackets. You will have to make up some spacers for this bolt as shown in the attached photos.

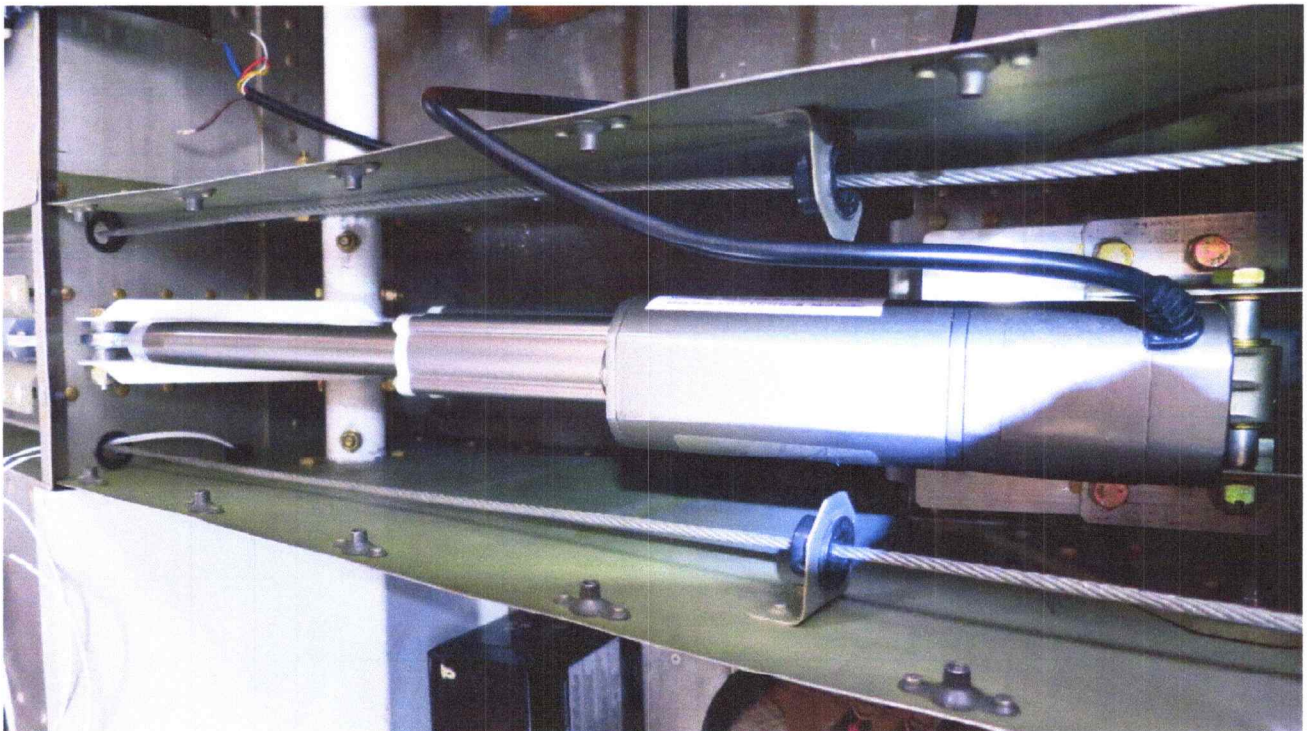
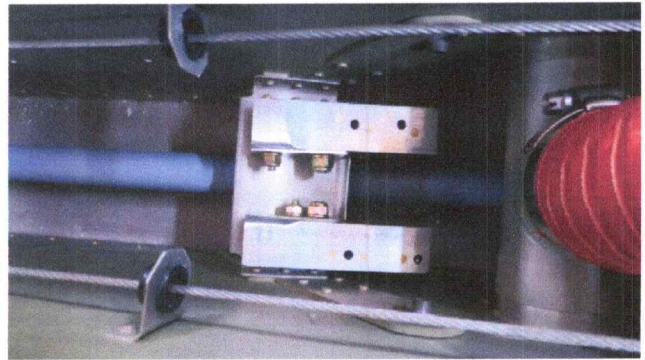


Following is a drawing detailing the new brackets that we made for the RV-10:

RV-10 Add-on Bracket for RV-10/-14 Flap Actuator

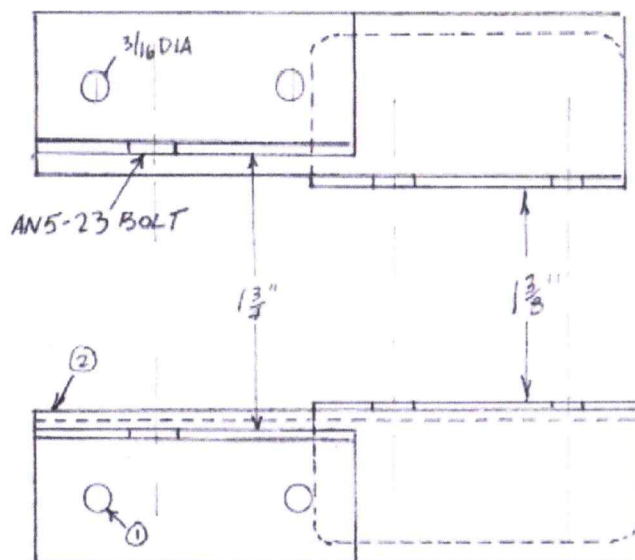

TOP VIEW

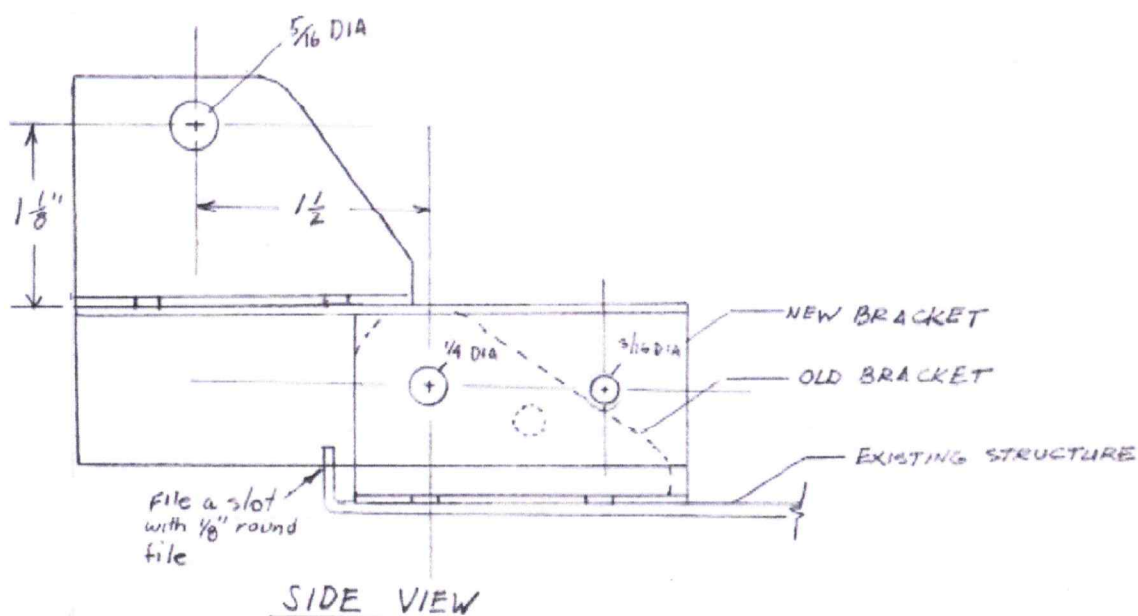

SIDE VIEW

NOTES:

- ① install #10 nutplates - 4 places
- ② relieve bracket corner as necessary. (See photos)

Drawn to Scale

Installation in the Single-Digit RVs (RV-6, -7, and -9):

We have a new, improved bracket kit for the side-by-side RVs. We developed a separate installation guide for this new kit that is available on our website.

Some pictures of the RV Max Retro Install Kit:




Installation in the RV-8:

We recently began offering a kit to install the RV Max in an RV-8. So, for those who just want a replacement for the original flap motor, we have been recommending the PHA-01 as a same-size, drop-in alternative. However, for those who require position sensing for use with a flap positioning system or simply to have a flap indicator on your PFD, the RV Max is your perfect solution.

As with the PHA-01, this will require enlarging the hole in your left, rear-seat armrest, as well as repositioning the upper attach bracket on the baggage compartment bulkhead. We provide an optional kit for this which includes a template for both locating the new position of the upper bracket and for enlarging the hole in the left armrest. We recommend that some sort of closeout panel be installed over the armrest to cover the actuator, and we provide examples of how we have done this in our airplanes.

Here are a few pictures:

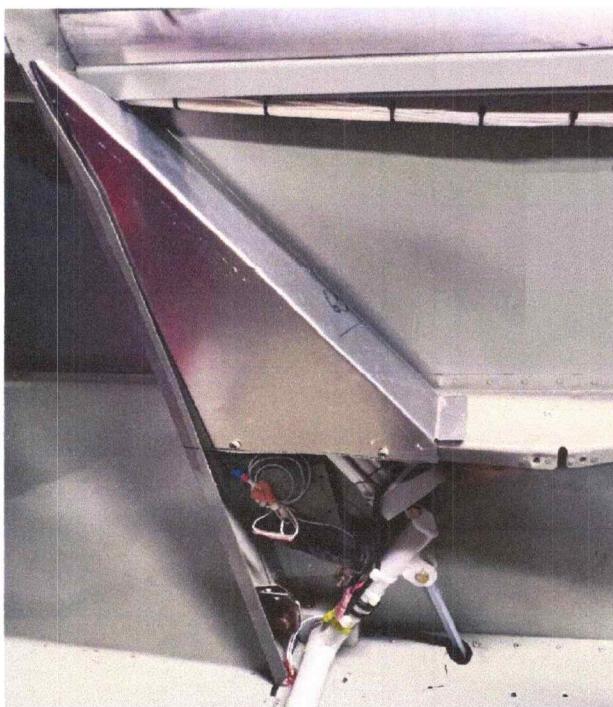

CAUTION – CAUTION – CAUTION

To protect your actuator from damage please observe the following precautions: do not allow your motor to stall for any reason—internal damage may result! Make sure your flap assembly moves smoothly throughout its range without binding. Make sure that there is no interference between the actuator and its bracket or any part of the airplane structure. And, finally, make sure that the flaps don't reach the end of their travel before the motor stops—to do so will cause the motor to stall and possibly strip internal gears. Adjust the flaps so that the actuator reaches its stops just prior to, or simultaneously with, the flaps' physical stops; for example, the actuator should stop just prior to (or simultaneously with) the flaps touching the bottom of the fuselage while retracting.

Electrical Hookup – The preferred wiring method for the RV Max Flap Actuator is through a relay deck. However, the existing wiring in your airplane will work just fine. The advantage of using relays is that only a few milliamps go through your flap switch, which will allow you're switch to last a very long time. Otherwise, if the full load of the flap motor goes through your switch (up to 5 amps), it will result in a diminished switch life. You will probably want a switch that locks UP and spring loads DN. When the flap actuator gets to the end of its stroke, the flaps stop. The brown and blue wires are the motor power inputs. We recommend a 10 amp breaker.

Flap position indicators – the pot inside the actuator is a standard setup much like is found in the conventional trim actuators in your airplane. There are two reference wires (white and yellow), and the red wire is the signal (wiper). In our Garmin GEA 24 hookup, the yellow wire connects to the 5v excitation voltage, the white wire to LO, and the red wire to the signal input. Be sure to recalibrate your indicator for the new sensor.

If you have any questions, please email us at pat@phaviation.com.

Thanks for purchasing our product!

Disclaimer & Warranty:

This part was manufactured by PH Aviation Services, Inc. and should NOT be installed in Certified Aircraft. It is intended for use only in Experimental Aircraft and to be installed by the builder. There are no warranties expressed or implied and purchaser assumes all risk for the operation of this part. However, the purchaser may return this part for repair, replacement, or a full refund if it fails to operate as intended at any time during the first 12 months after the date of purchase.


Return Policy

Normally we accept returns only if the part fails to perform as advertised. We will consider a request for a return on an individual case basis, and, if we agree to accept a return, we will charge for shipping costs and a 10% restocking fee.

FLAP ACTUATOR WIRING DIAGRAM

(Garmin G3X Panel Example)

PHA-09P Flap Actuator

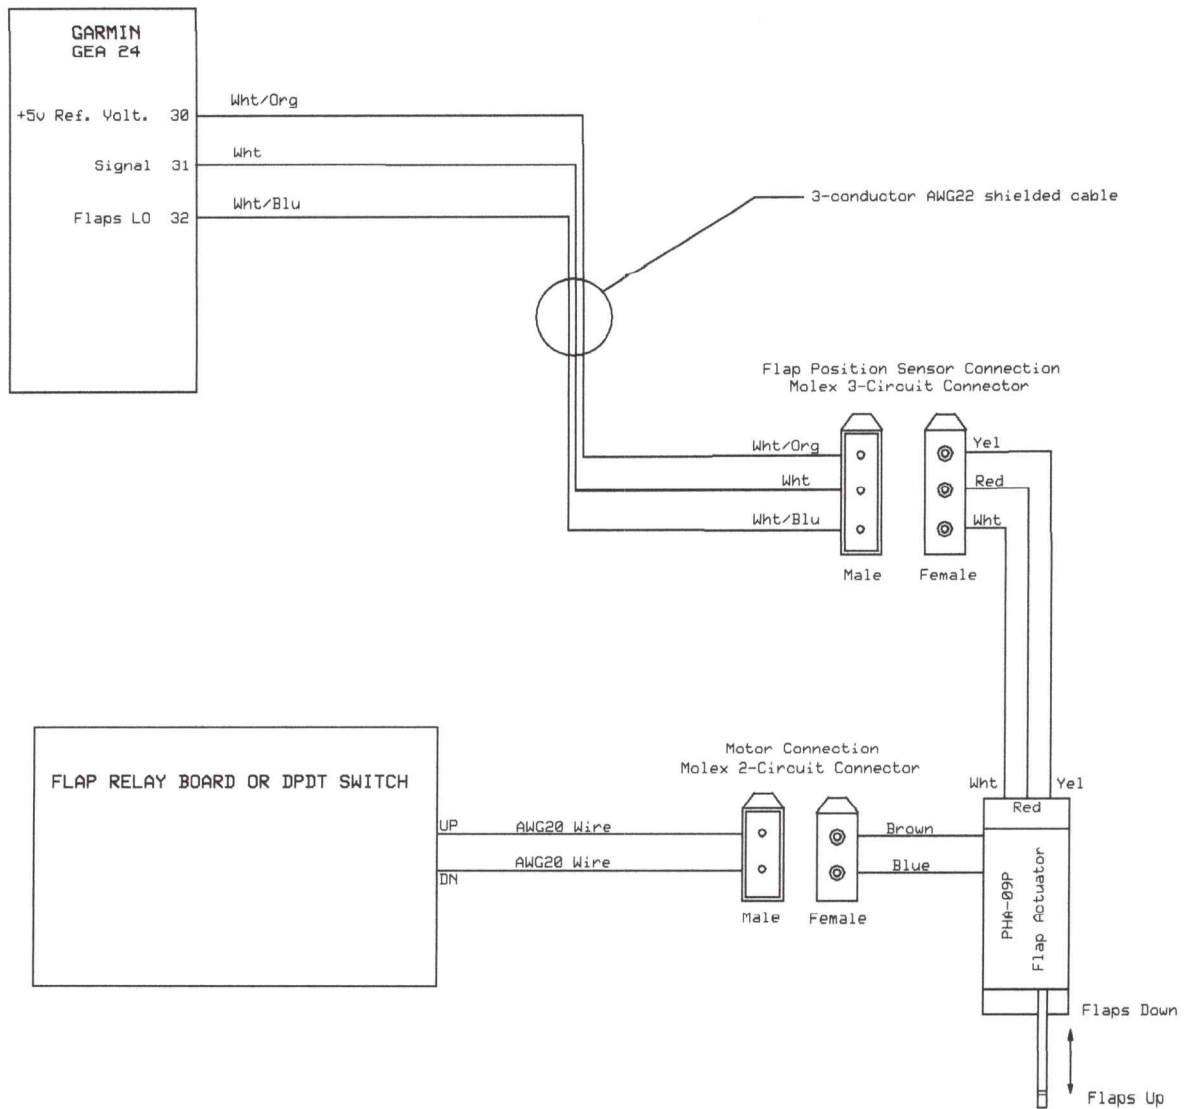

NOTES: DISREGARD EXTRA GREY WIRE IN BUNDLE FROM FLAP ACTUATOR

ANY SMALL (9 TO 12V) BATTERY MAY BE CONNECTED TO MOTOR WIRES FOR TESTING

PH AVIATION SERVICES, INC.

PHA-09P WIRING DIAGRAM

Pat Hatch

Original

7/10/2020

Flap Actuator Schematic