


## REMOVAL

1. REMOVE GENERATOR (See page [CH-6](#))
2. DISCONNECT CRANKSHAFT POSITION SENSOR CONNECTOR

(a) Disconnect the sensor connector.

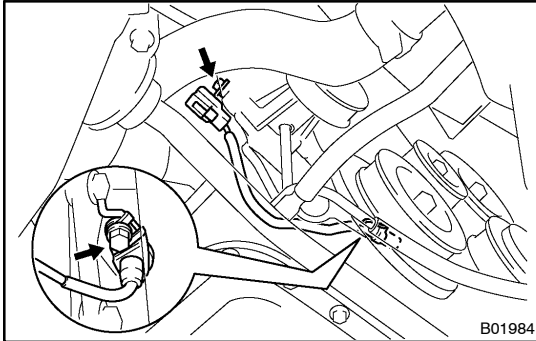

(b) Remove the bolt holding the connector bracket to the water pump.

3. REMOVE CRANKSHAFT POSITION SENSOR

(a) Remove the bolt and crankshaft position sensor.

**Torque: 9.0 N·m (90 kgf·cm, 80 in·lbf)**

(b) Remove the connector bracket from the connector.