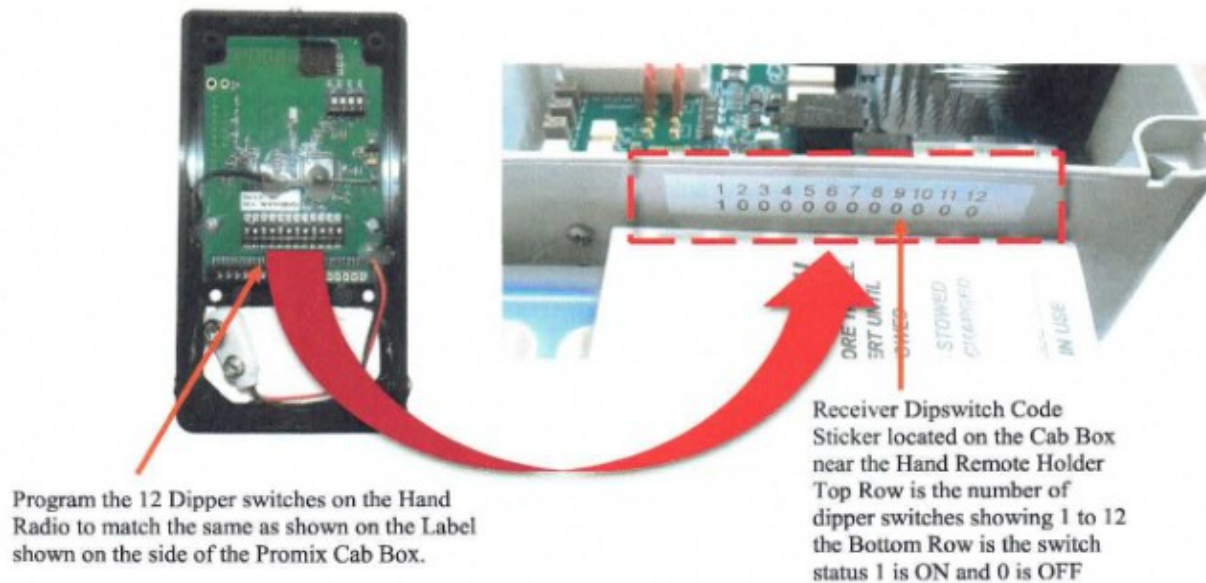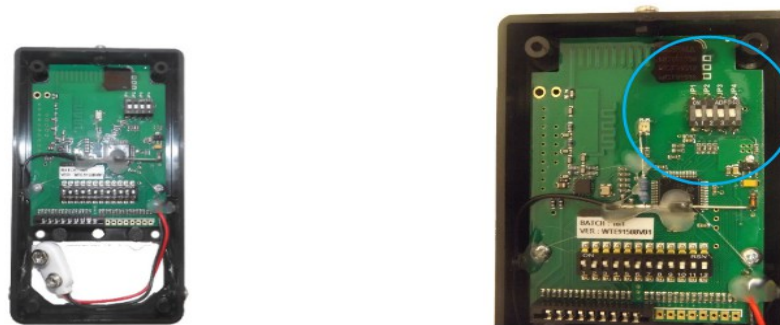# Pairing Remotes with Woodtech Control Systems (SD Systems)

(A) Setting the 12 Way switch bank

Figure 1 – Remote Control Transmitter and Receiver

Program the 12 Dipper switches on the Hand Radio to match the same as shown on the Label shown on the side of the Promix Cab Box.

Receiver Dipswitch Code Sticker located on the Cab Box near the Hand Remote Holder Top Row is the number of dipper switches showing 1 to 12 the Bottom Row is the switch status 1 is ON and 0 is OFF

(B) Setting the 4 way switch

This version supercedes 915 hand remotes for all Promix transit mixer control systems manufactured by WoodTech Electronics since 2007. The model can be determined externally by a label with the first 4 digits representing a manufacture date code and the remaining digits/letters determining the type.

Remote Type	SW1	SW2	SW3	SW4
xxxx-915	OFF	OFF	OFF	OFF
xxxx-915B	OFF	ON	OFF	OFF
xxxx-915LCD	OFF	OFF	ON	OFF
xxxx-915LCDB	OFF	ON	ON	OFF
Promix SD	OFF	OFF	OFF	ON
Promix SD "C"	OFF	OFF	ON	ON
Promix SD "D"	OFF	ON	ON	ON